



















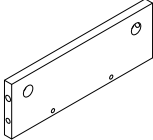
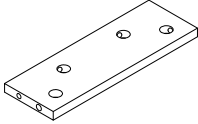
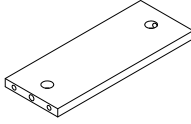



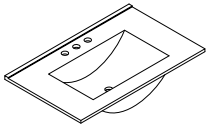


CXY2370-01
CXY2370-02




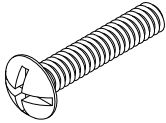

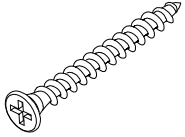





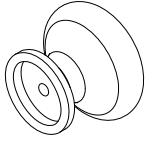




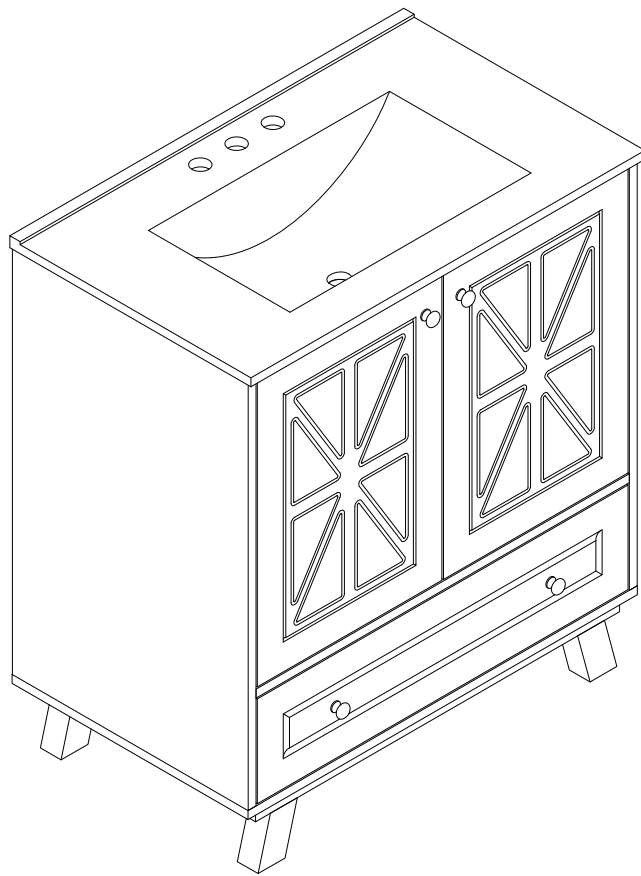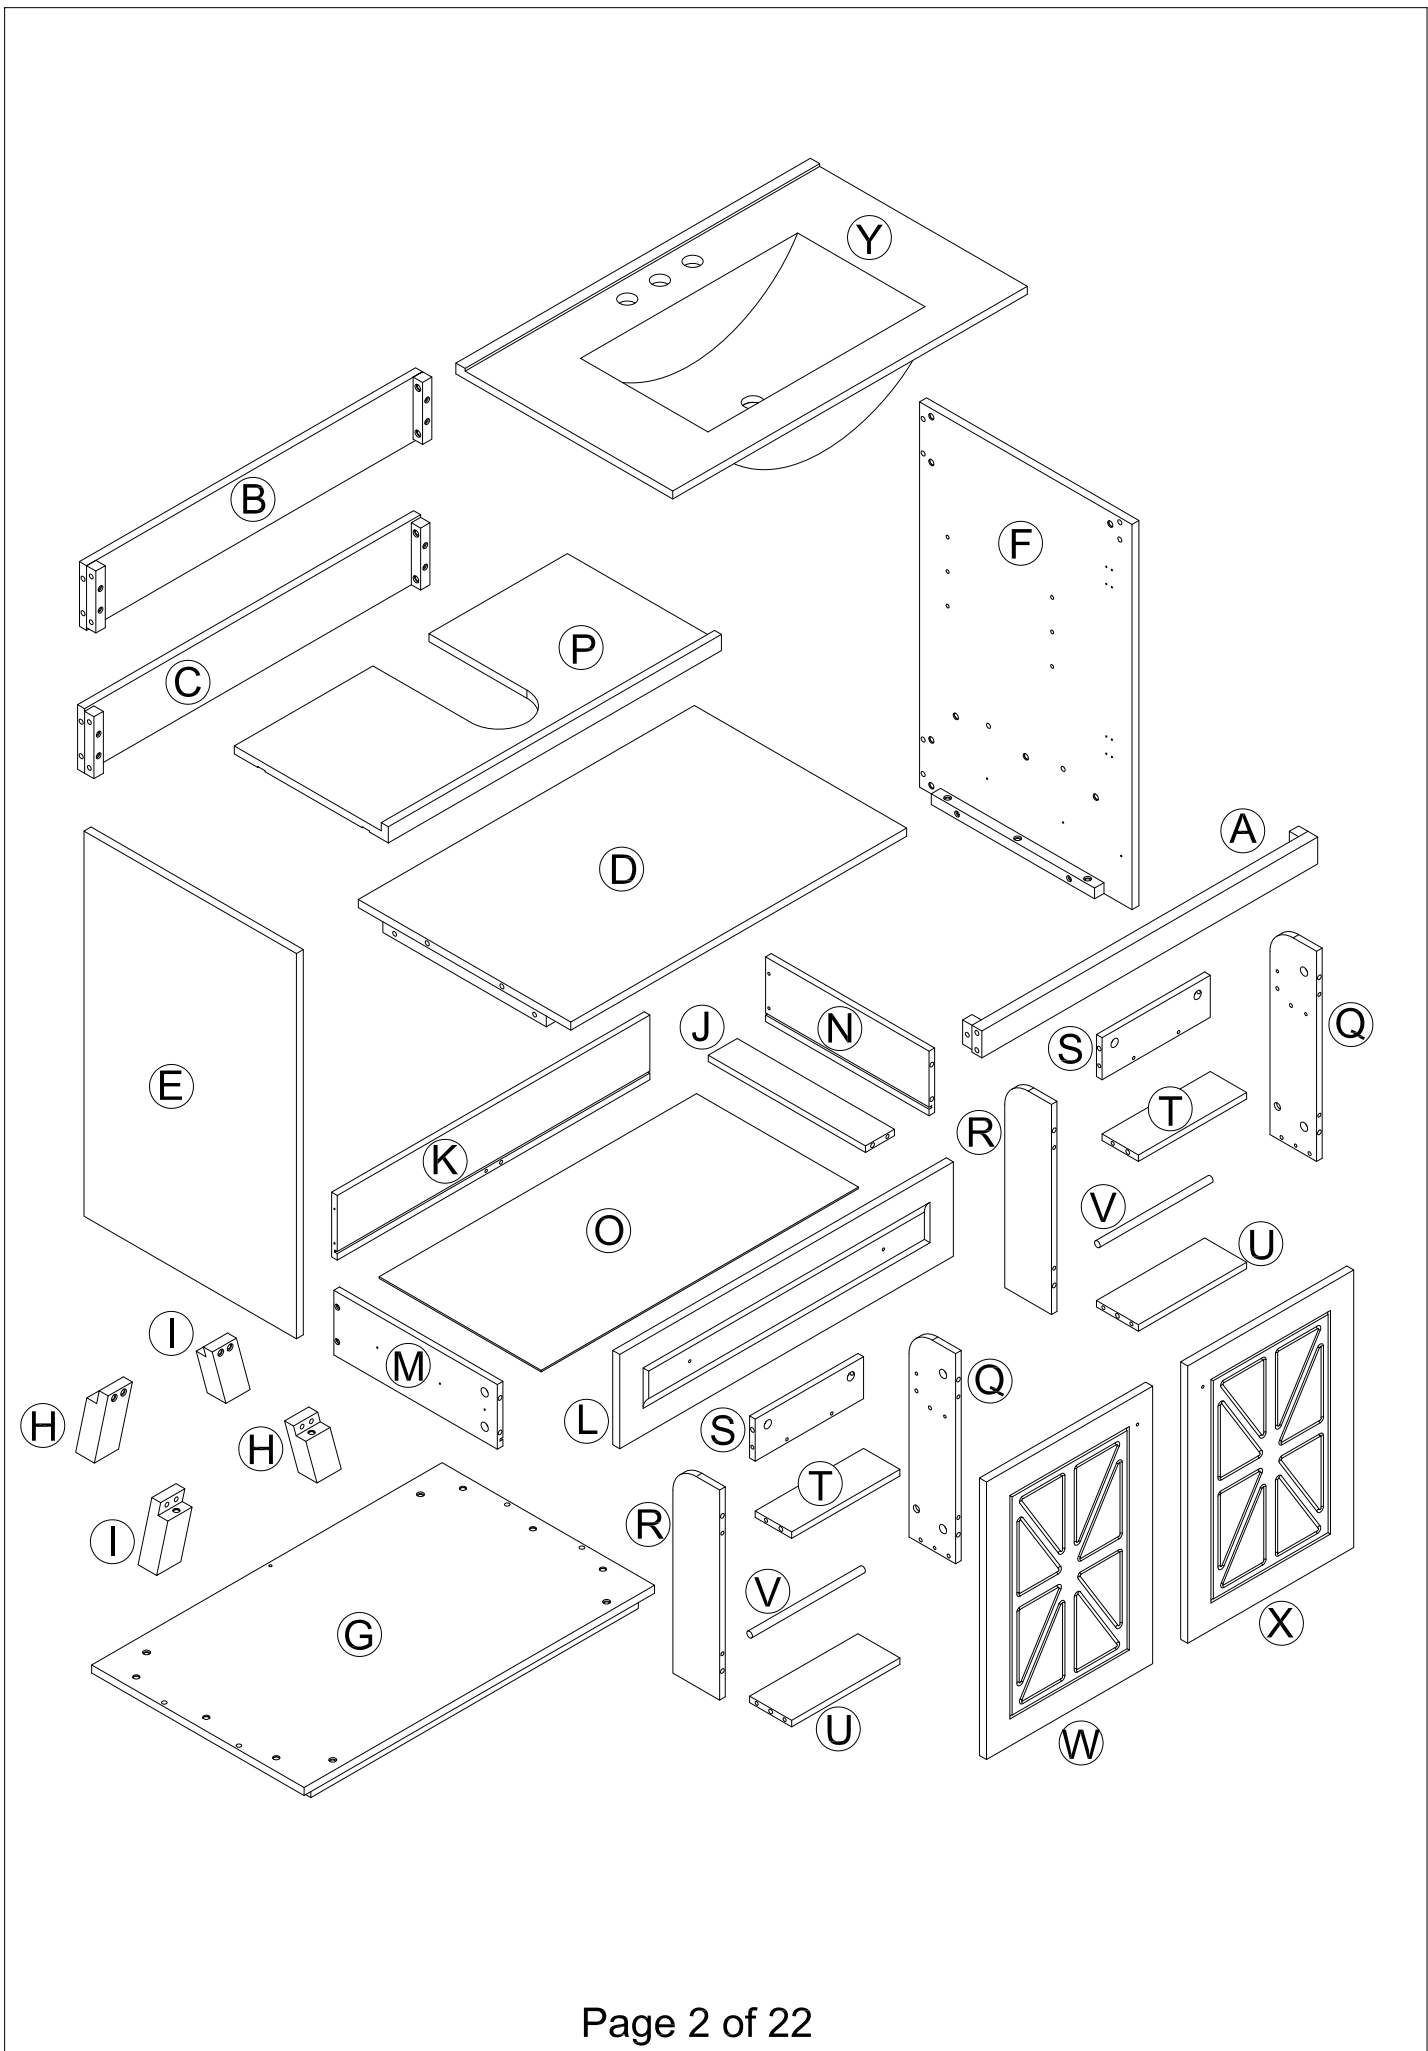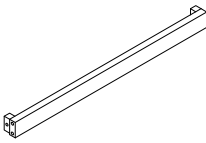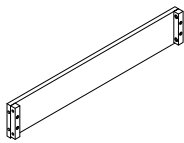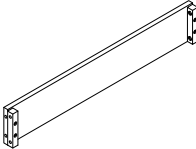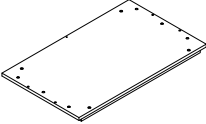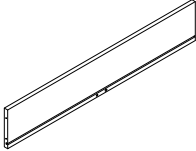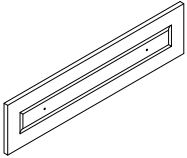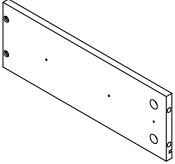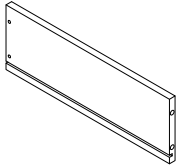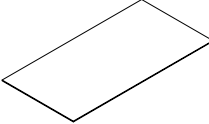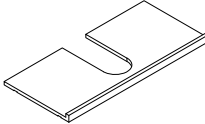



PRODUCT PARTS:


<p>A</p> 	<p>B</p> 	<p>C</p> 	<p>D</p> 	<p>E</p> 	<p>F</p> 
<p>1PC</p>	<p>1PC</p>	<p>1PC</p>	<p>1PC</p>	<p>1PC</p>	<p>1PC</p>
<p>G</p>	<p>H</p>	<p>I</p>	<p>J</p>	<p>K</p>	<p>L</p>
					
<p>1PC</p>	<p>2PCS</p>	<p>2PCS</p>	<p>1PC</p>	<p>1PC</p>	<p>1PC</p>
<p>M</p>	<p>N</p>	<p>O</p>	<p>P</p>	<p>Q</p>	<p>R</p>
					
<p>1PC</p>	<p>1PC</p>	<p>1PC</p>	<p>1PC</p>	<p>2PCS</p>	<p>2PCS</p>
<p>S</p>	<p>T</p>	<p>U</p>	<p>V</p>	<p>W</p>	<p>X</p>
					
<p>2PCS</p>	<p>2PCS</p>	<p>2PCS</p>	<p>2PCS</p>	<p>1PC</p>	<p>1PC</p>
<p>Y</p>					
					
<p>1PC</p>					

HARDWARE:

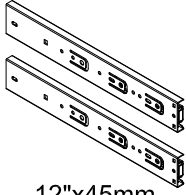
①	②	③	④	⑤	⑥
					
Ø8x30mm	12"x45mm	Ø3x10mm	1/4"x25mm	1/4"x40mm	Ø4x35mm
20+2 PCS	1 SET	12+1 PCS	30+2 PCS	4PCS	1 PC
⑦	⑧	⑨	⑩	⑪	⑫
					
Ø6x30mm	Ø6x33mm	Ø4x25mm	Ø15x9mm	5/32"x18mm	
26+2PCS	30+2PCS	4PCS	30+2PCS	4PCS	4PCS
⑬	⑭	⑮			
					
		Ø4x12mm			
4PCS	4PCS	24+2PCS			


STEP 1

①  4pcs
Ø8x30mm

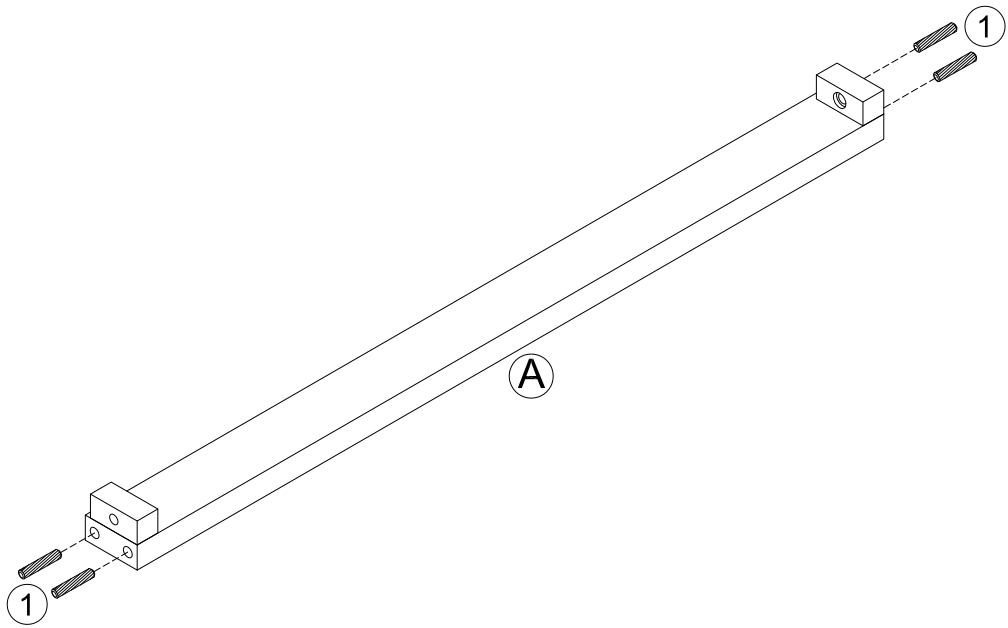



STEP 2

①  4pcs
Ø8x30mm

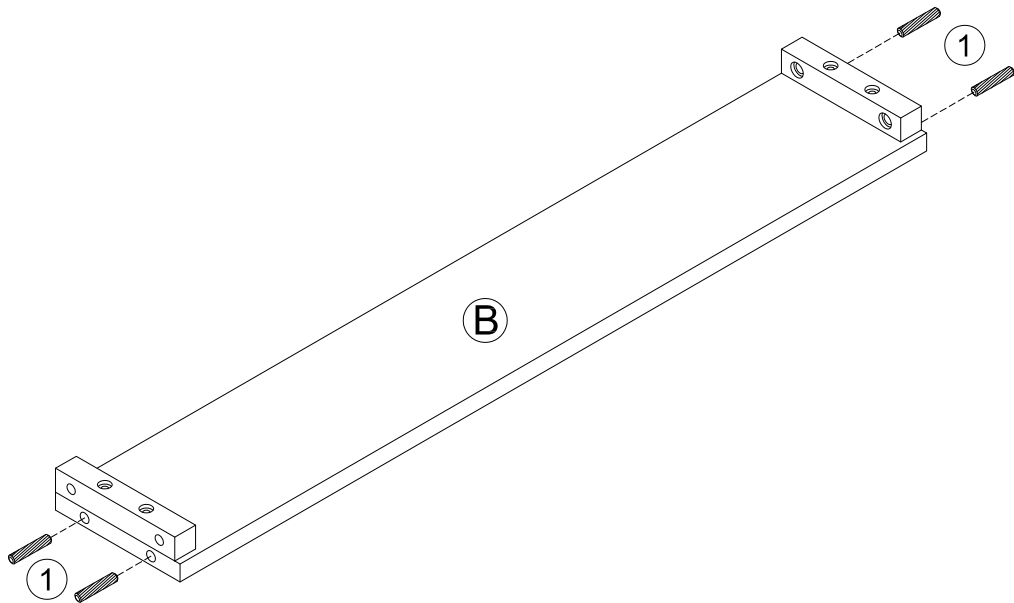



STEP 3

①  4pcs
Ø8x30mm

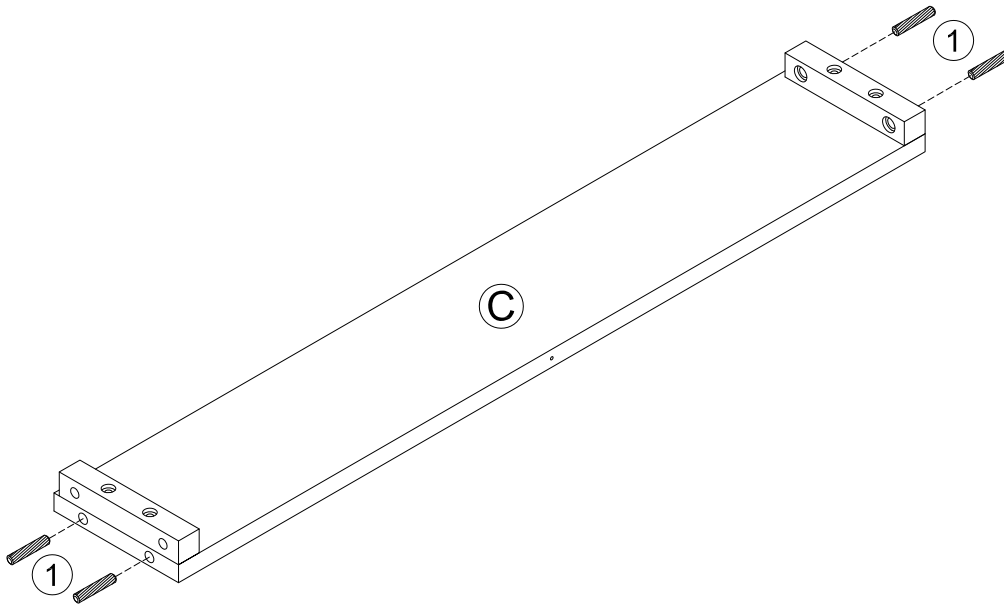


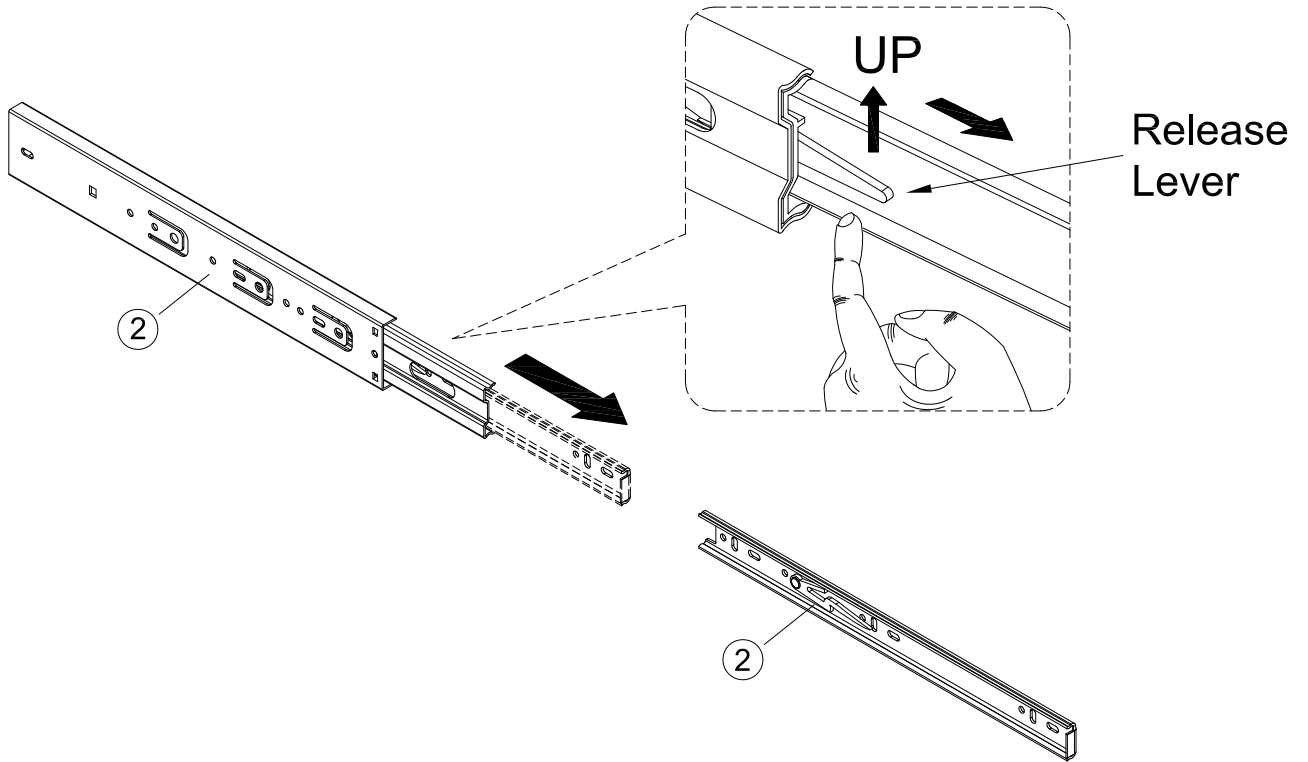
STEP 4

①  4pcs
Ø8x30mm

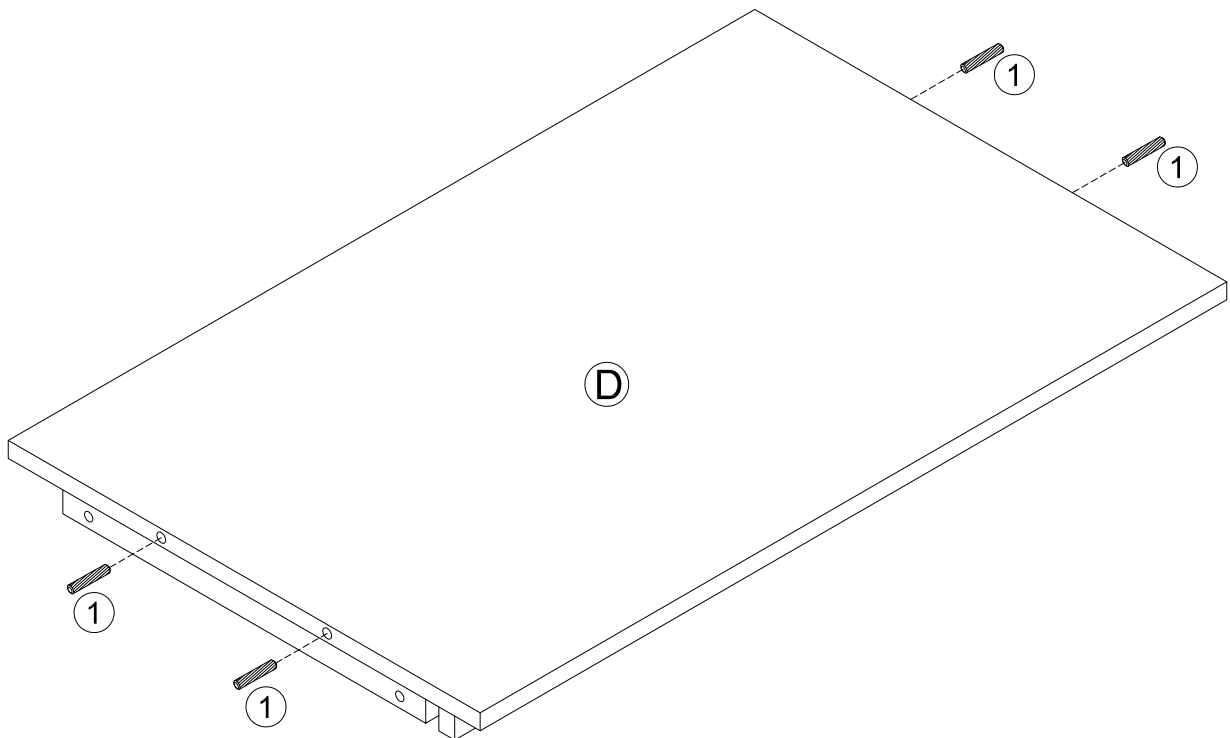





STEP 5

- ②  1SET
12"x45mm




STEP 6



- ③  3pcs
Ø3x10mm
- ②  1pc
12"x45mm
- ①  2pcs
Ø8x30mm

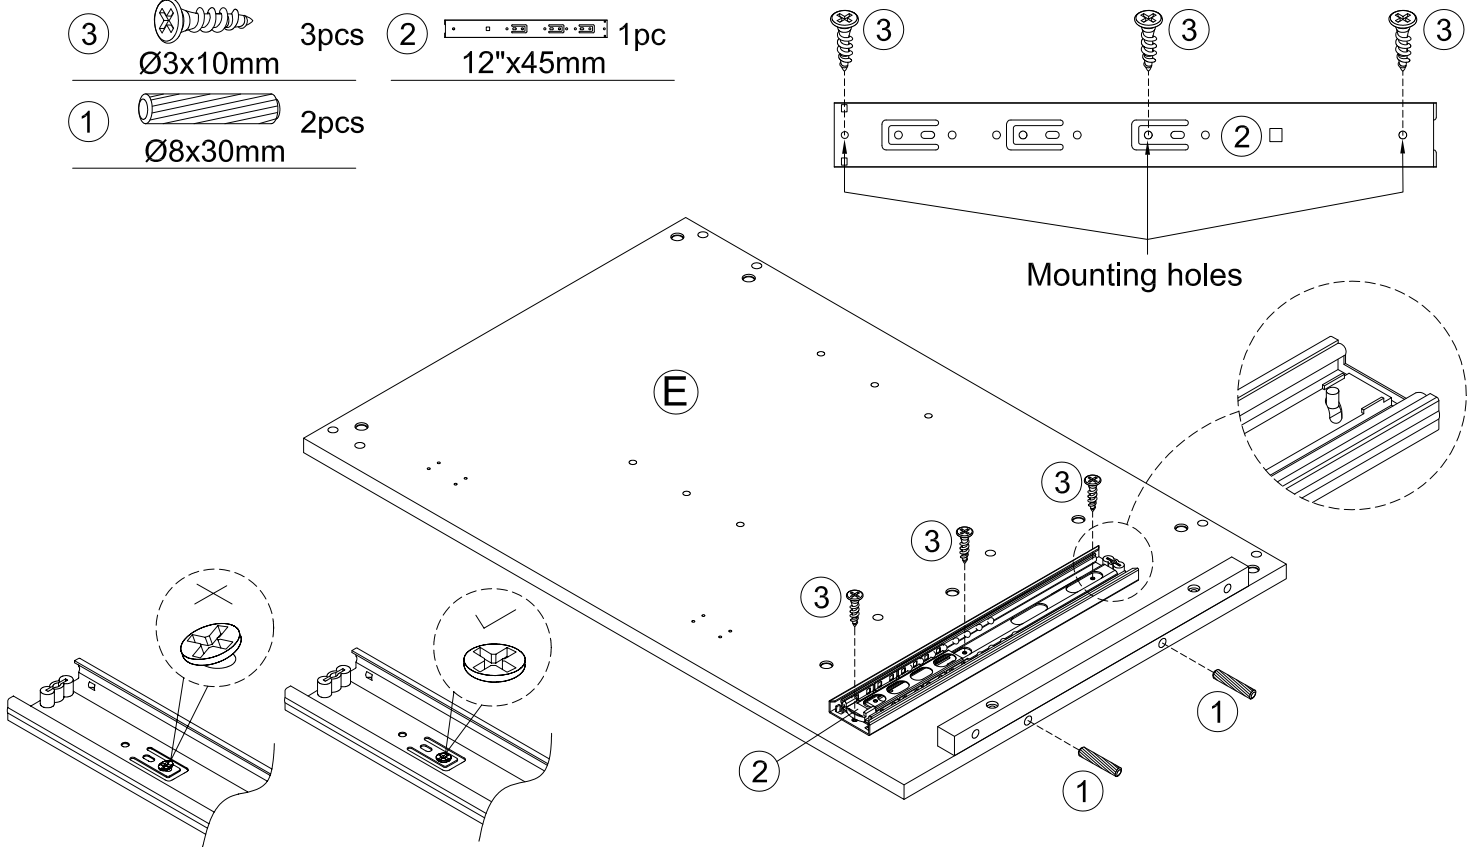

Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

STEP 7


- ③  3pcs
Ø3x10mm
- ②  1pc
12"x45mm
- ①  2pcs
Ø8x30mm

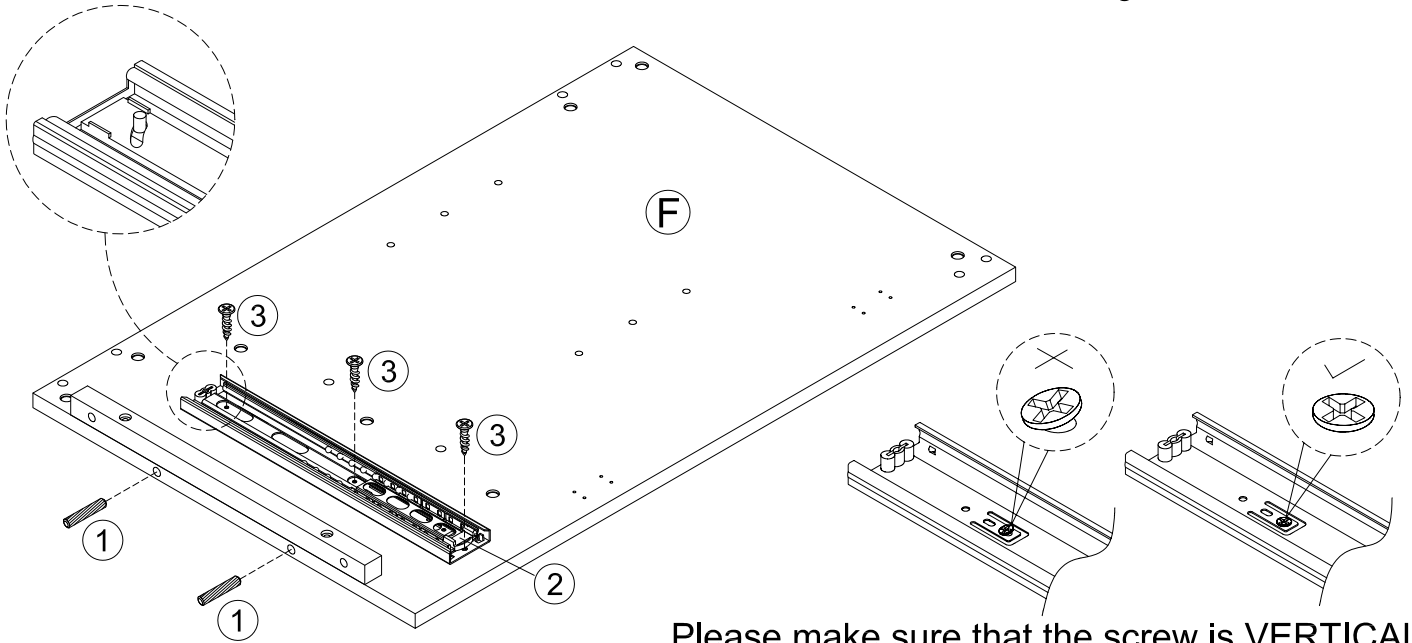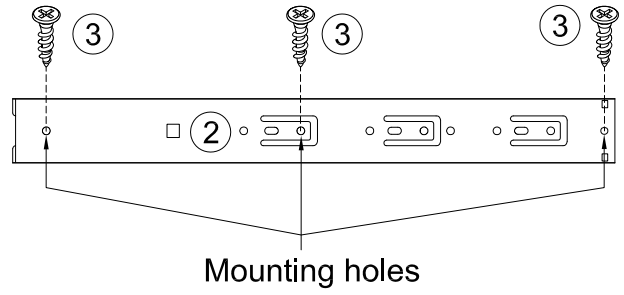


Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.



STEP 8

- ④  16pcs
1/4"x25mm

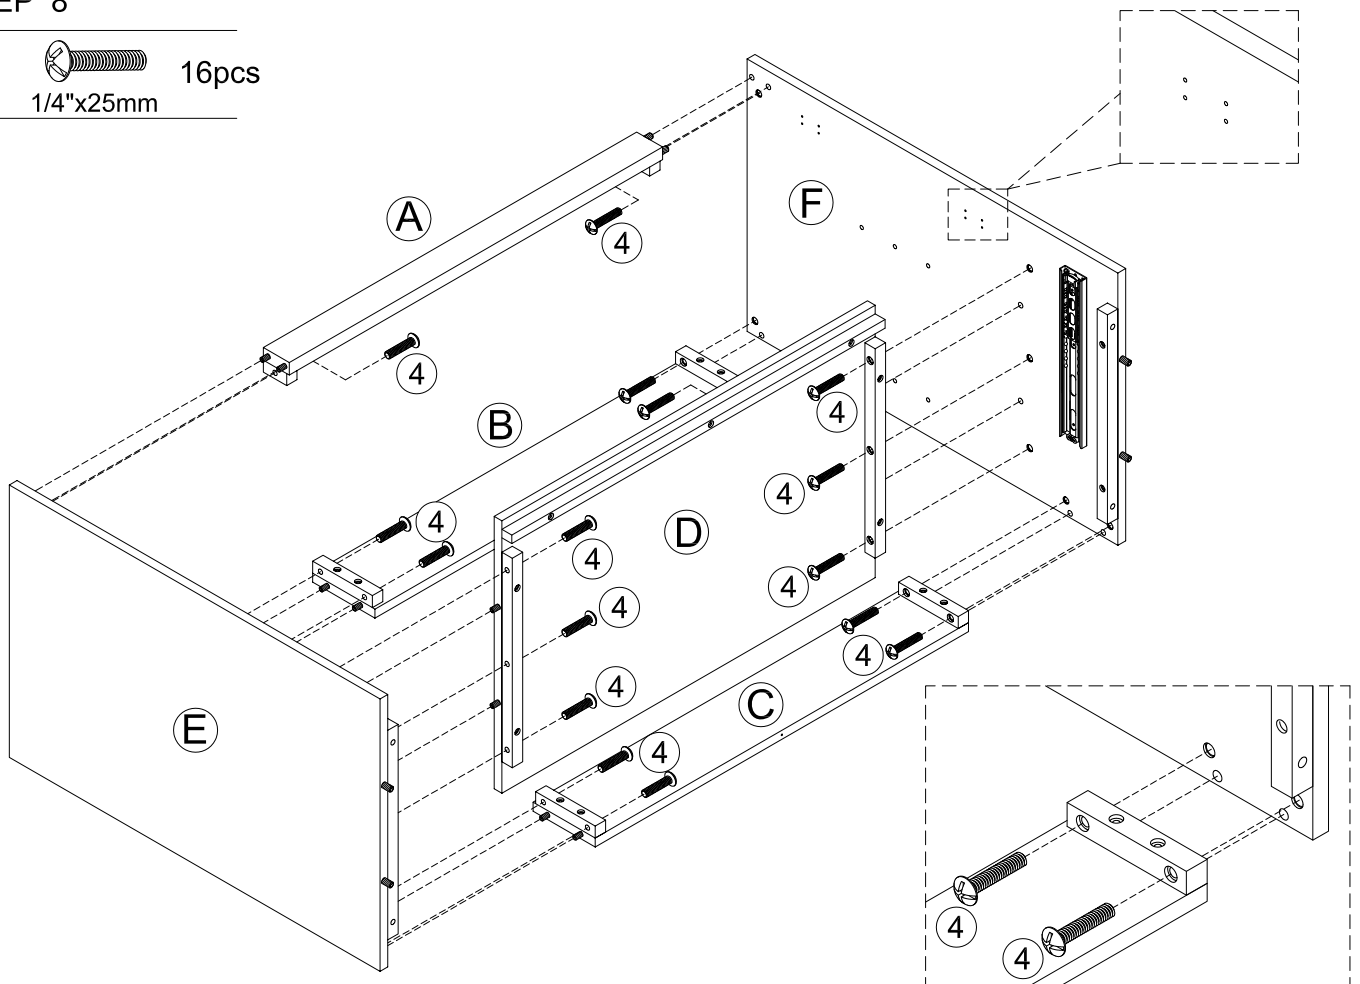


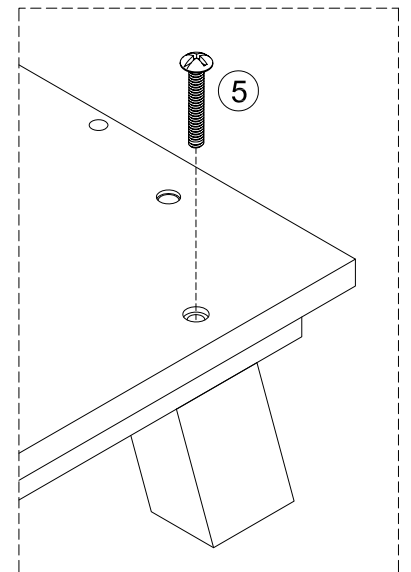
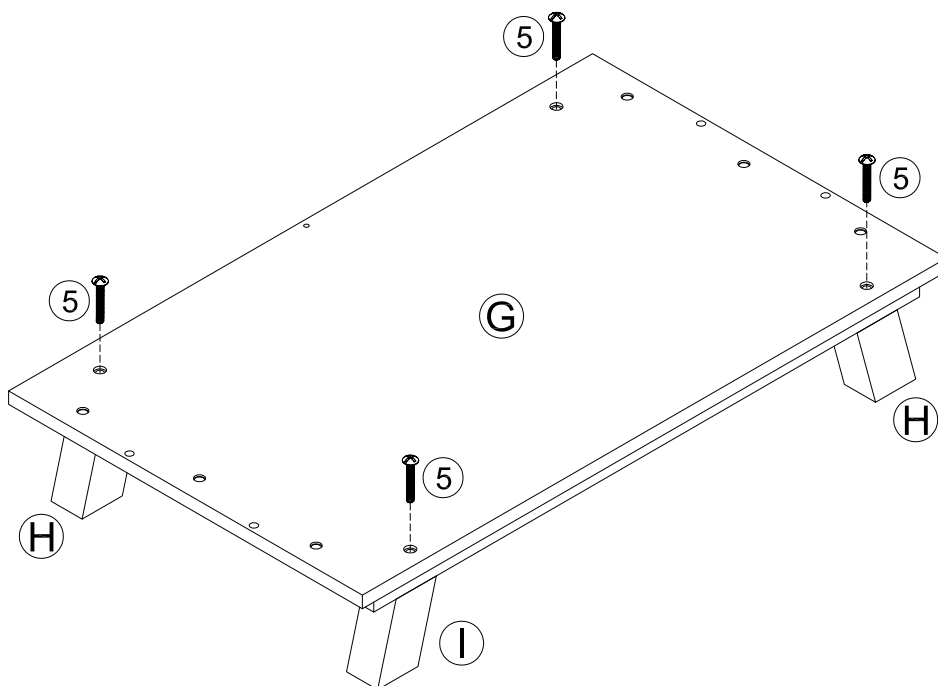
STEP 9

④  8pcs
1/4"x25mm

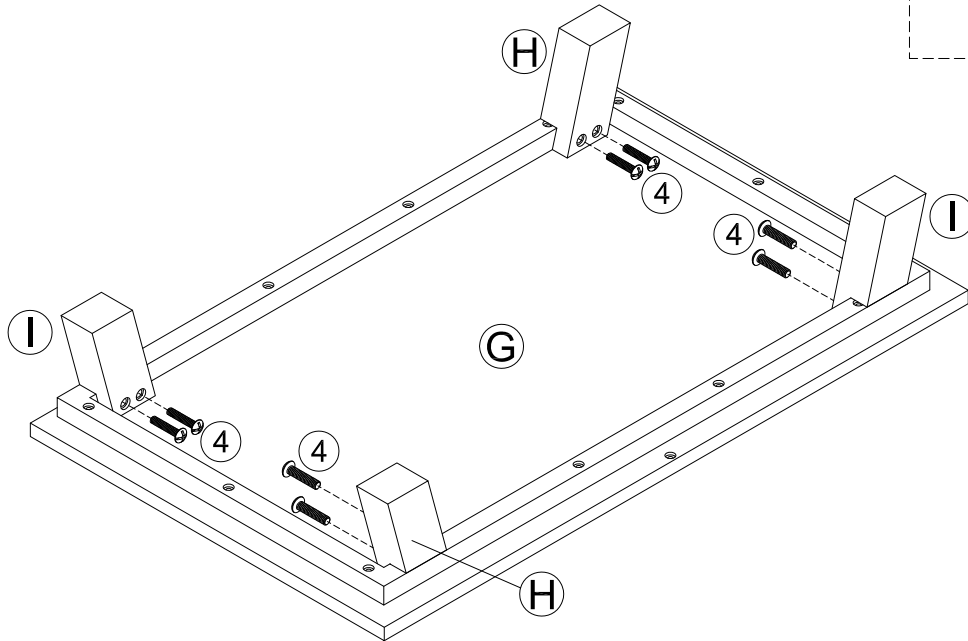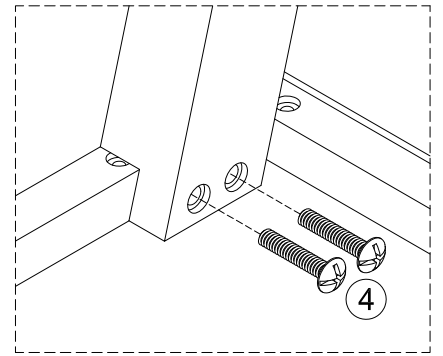


STEP 10


⑤  4pcs
1/4"x40mm




STEP 11


④  6pcs
1/4"x25mm

⑥  1pc
Ø4x35

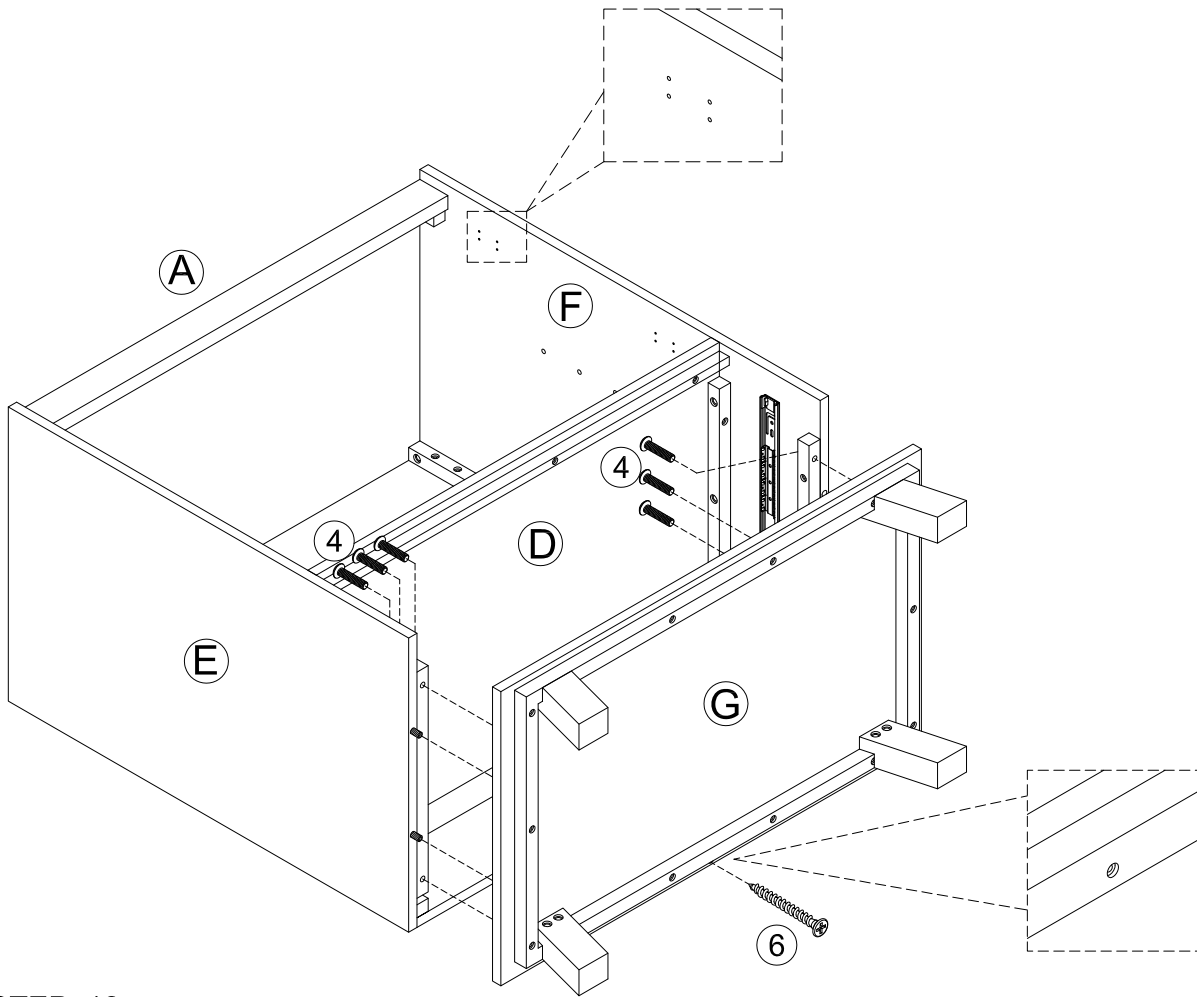




STEP 12

⑦  2pcs
Ø6x30mm

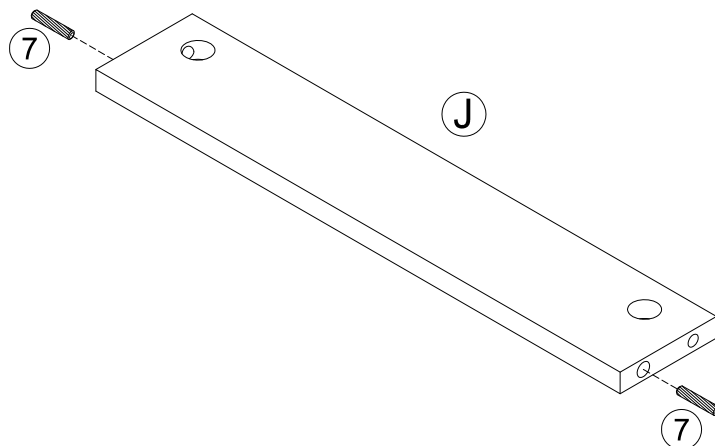


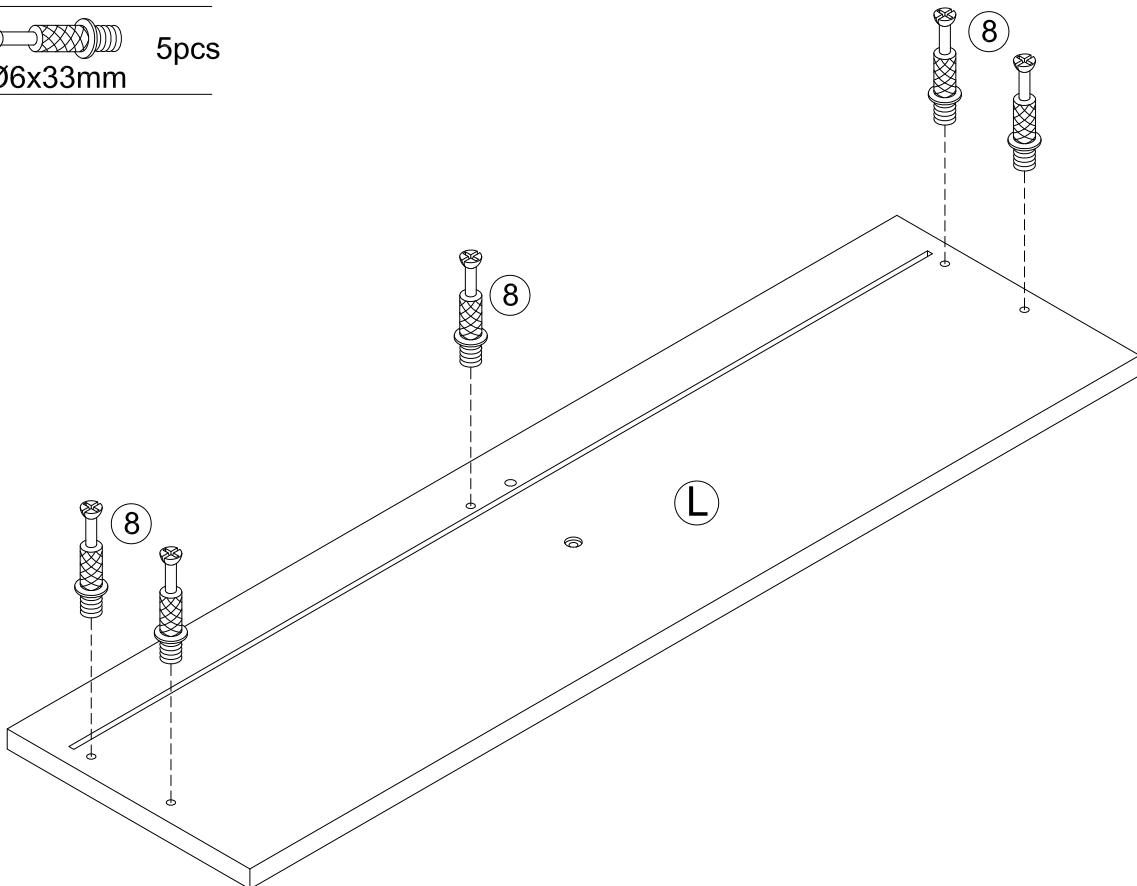
STEP 13

8  1pc
Ø6x33mm

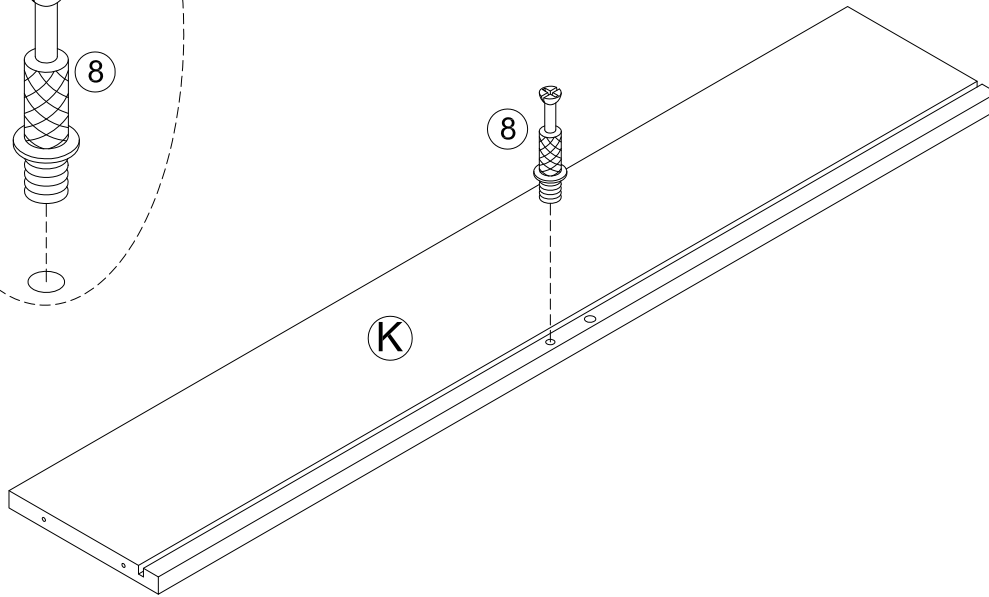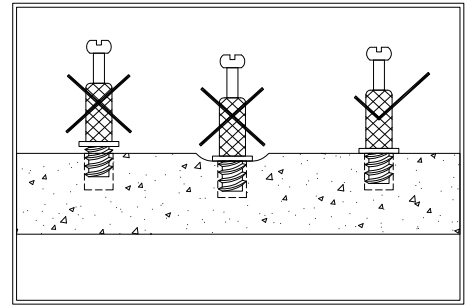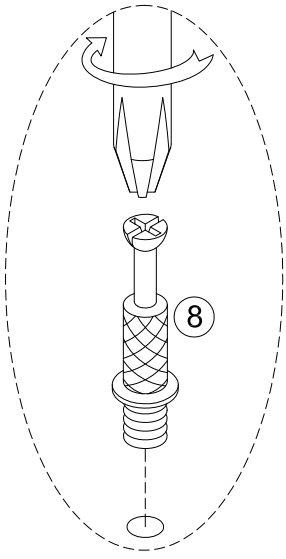


STEP 14

8  5pcs
Ø6x33mm




STEP 15


9  4pcs
Ø4x25


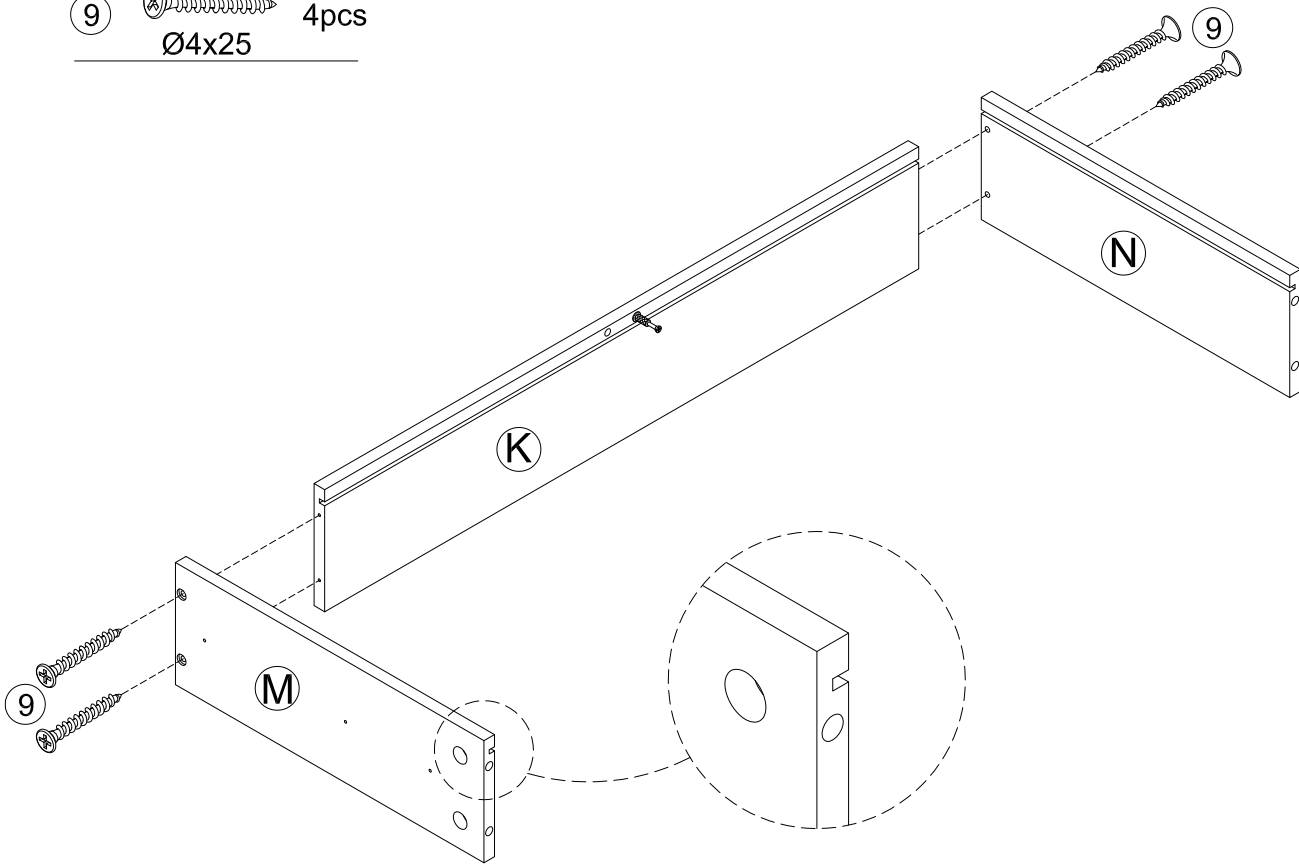


STEP 16

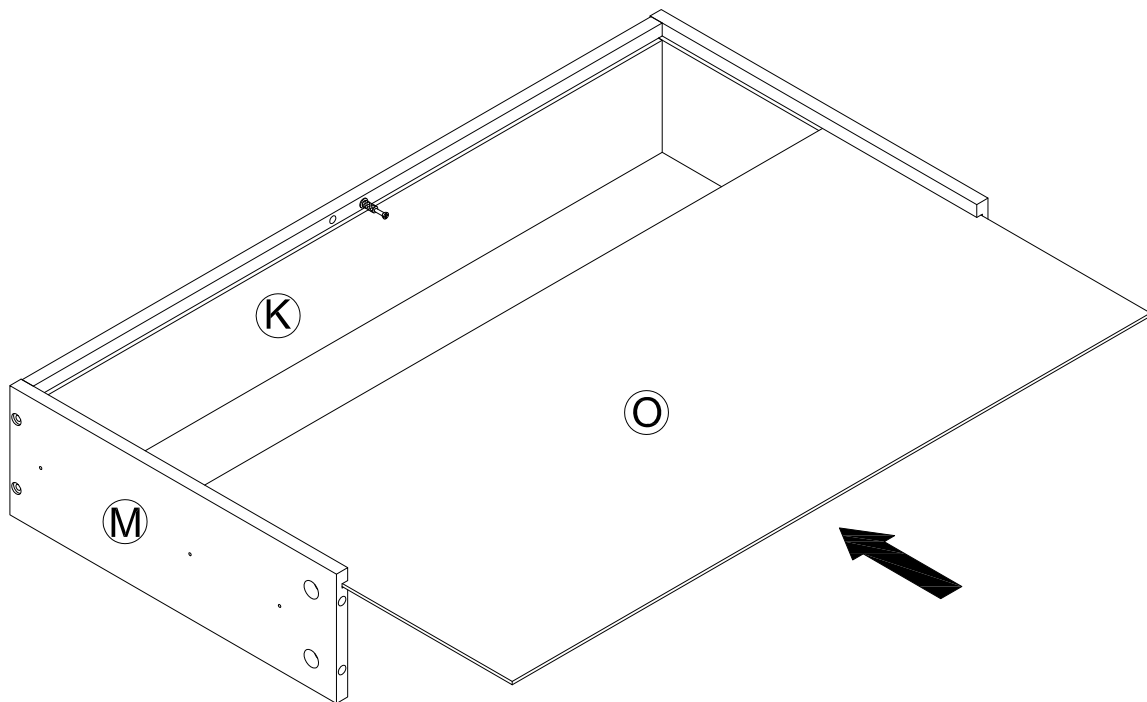


STEP 17

⑩  1pc
Ø15x9mm

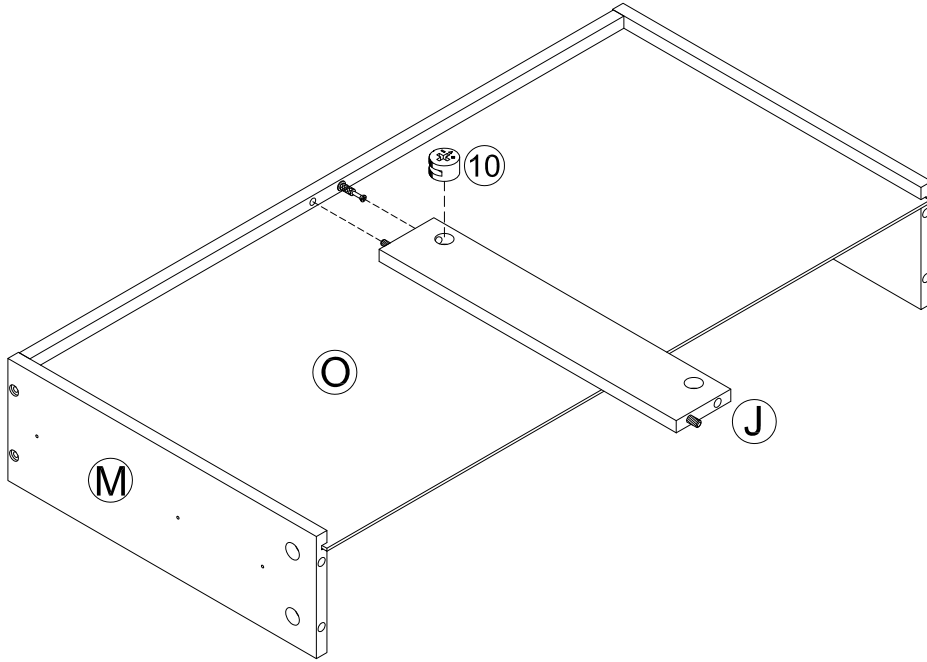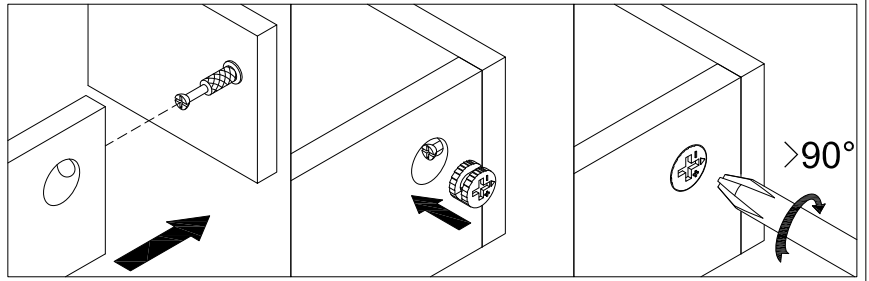





STEP 18

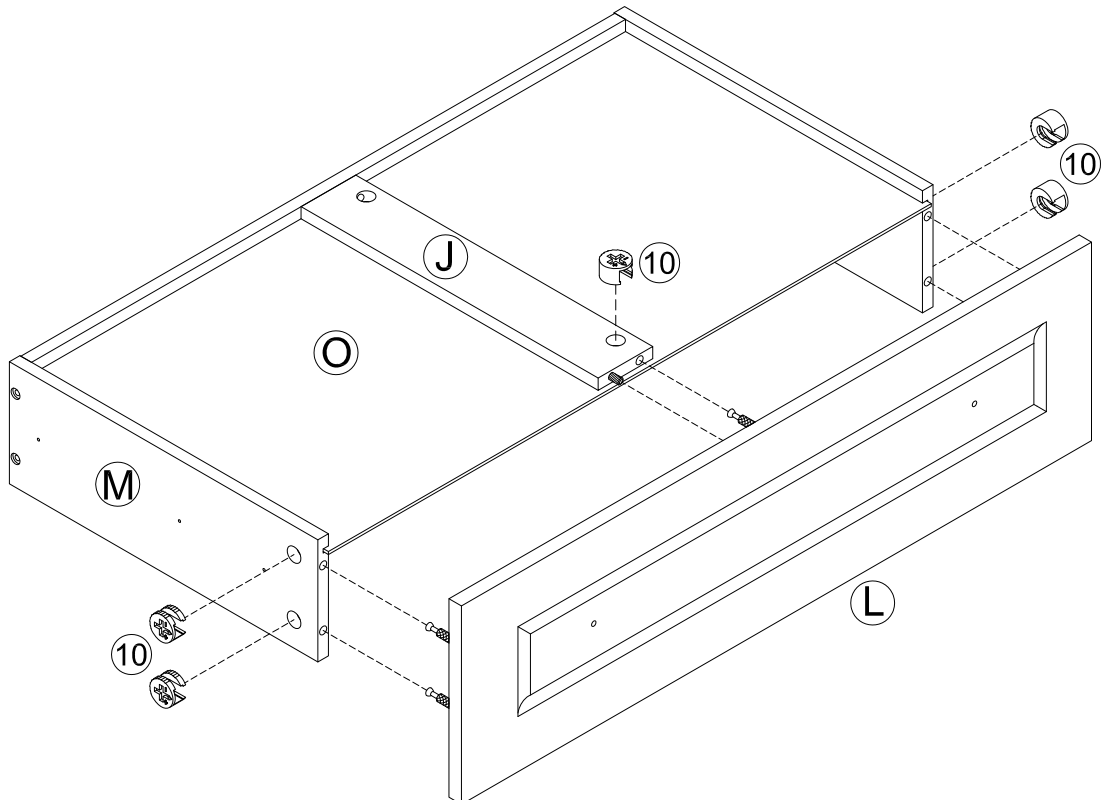⑩  5pcs
Ø15x9mm





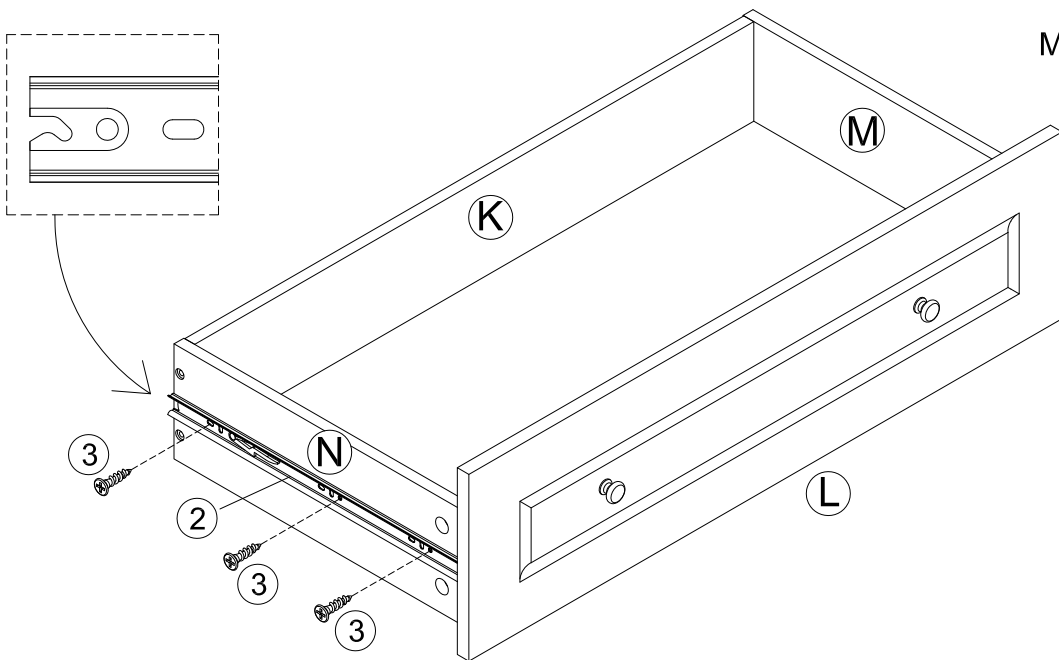
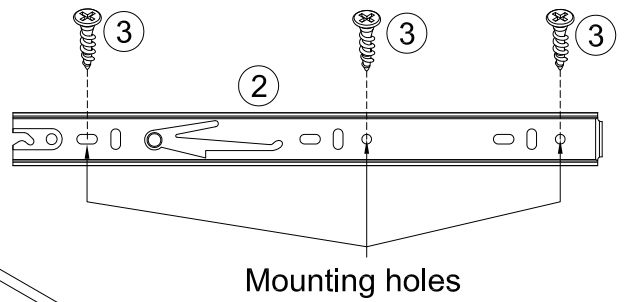
STEP 19

- ①①  2pcs ①②  2pcs
5/32"x18mm

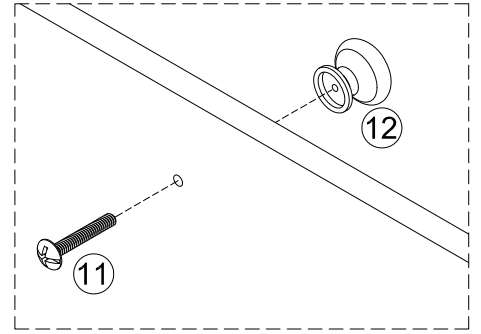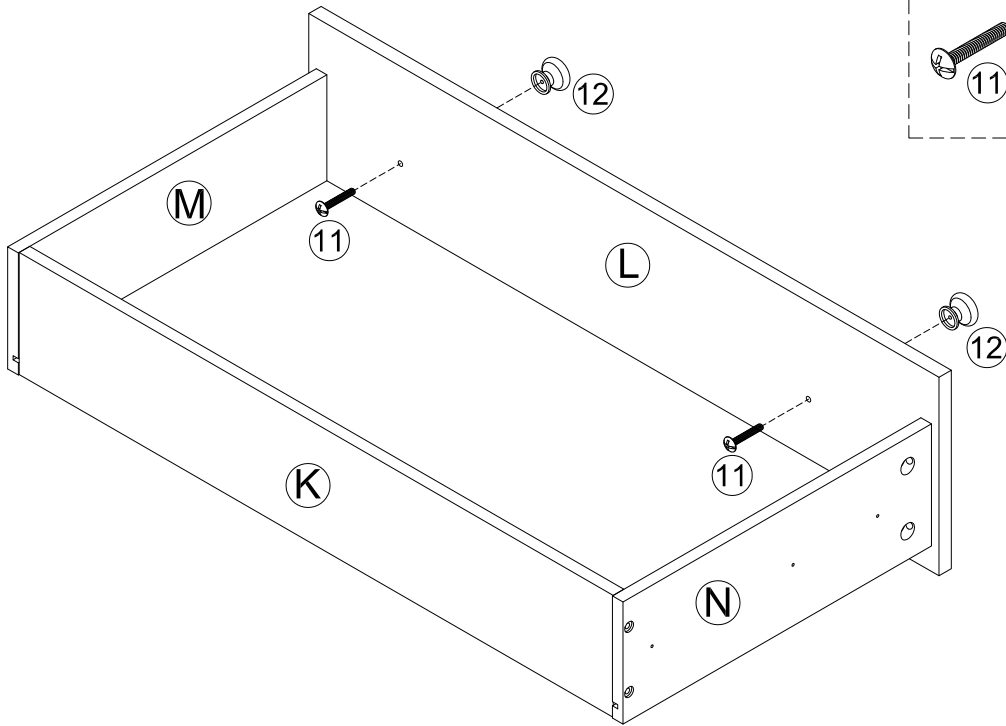



STEP 20


- ②  1pc ③  3pcs
Ø3x10mm




STEP 21

②  1pc





④  3pcs
Ø3x10mm

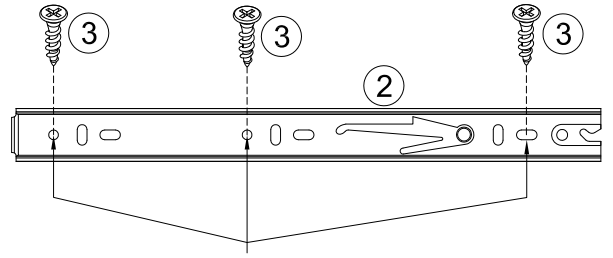

Mounting holes

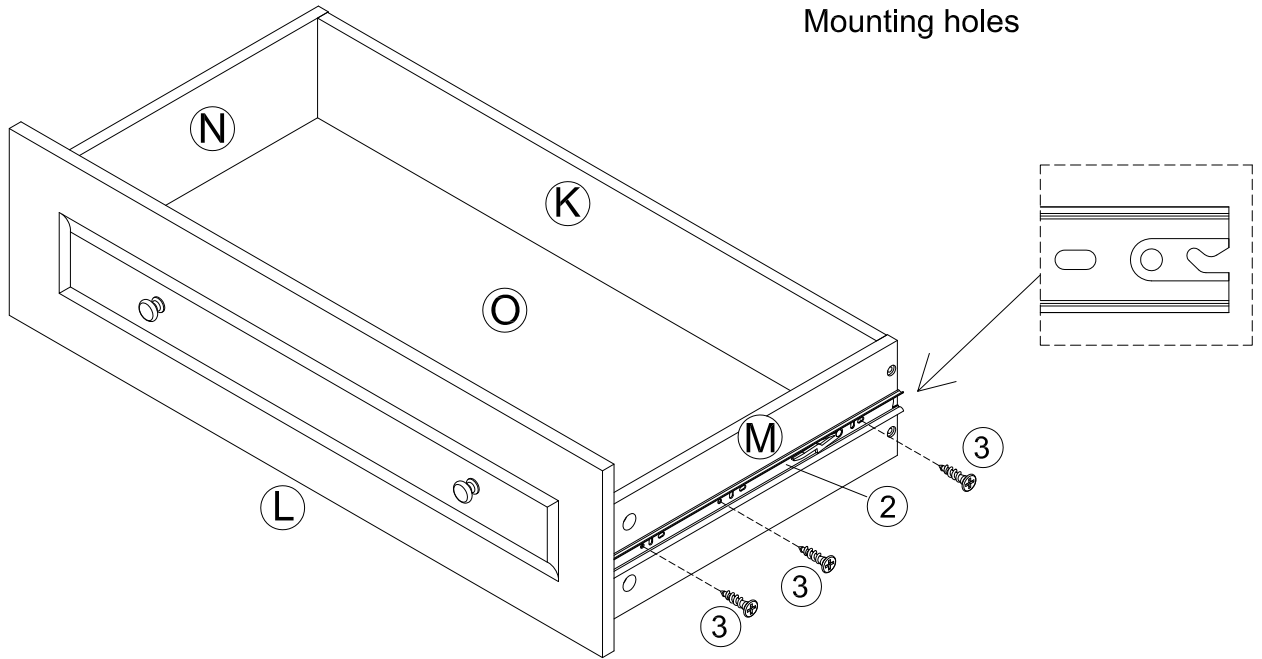

STEP 22

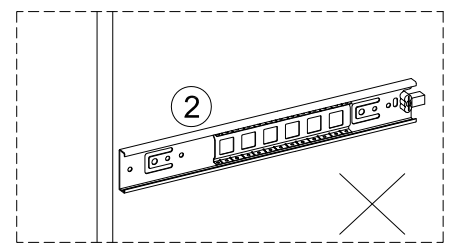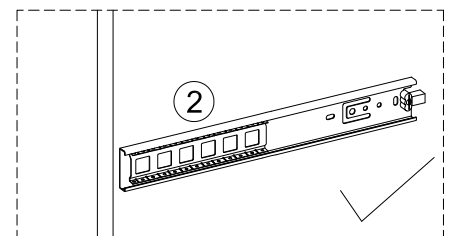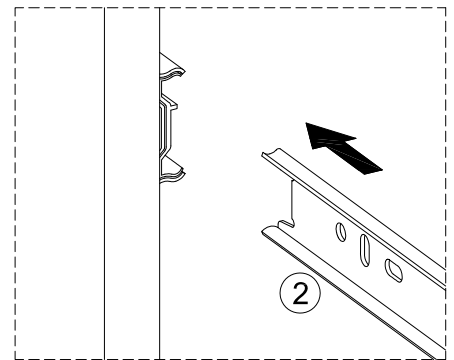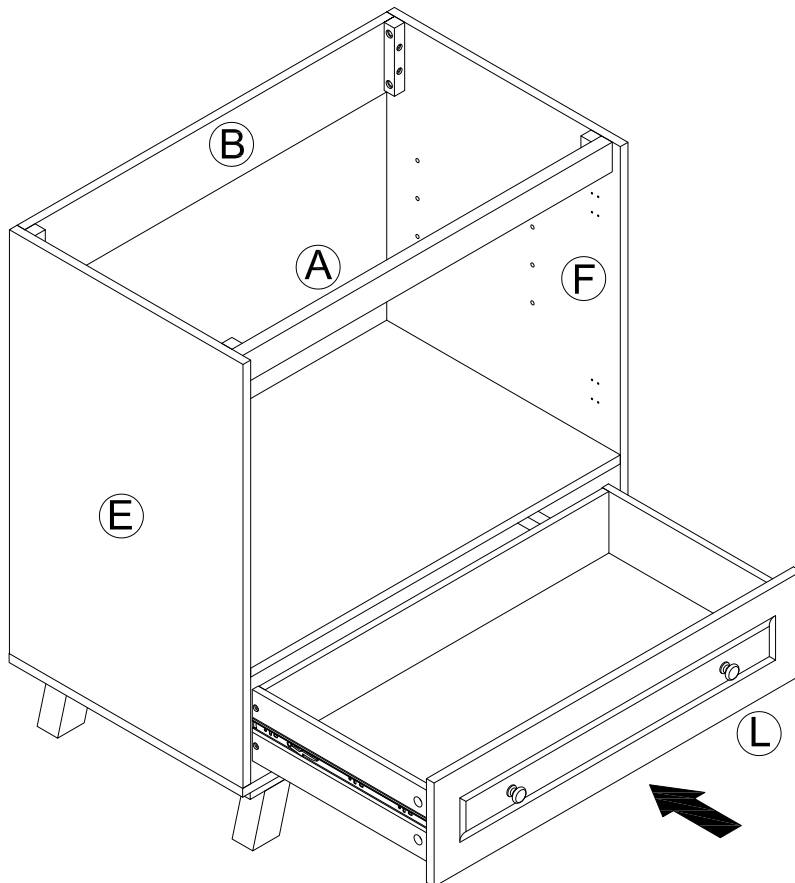


STEP 23


13




4pcs

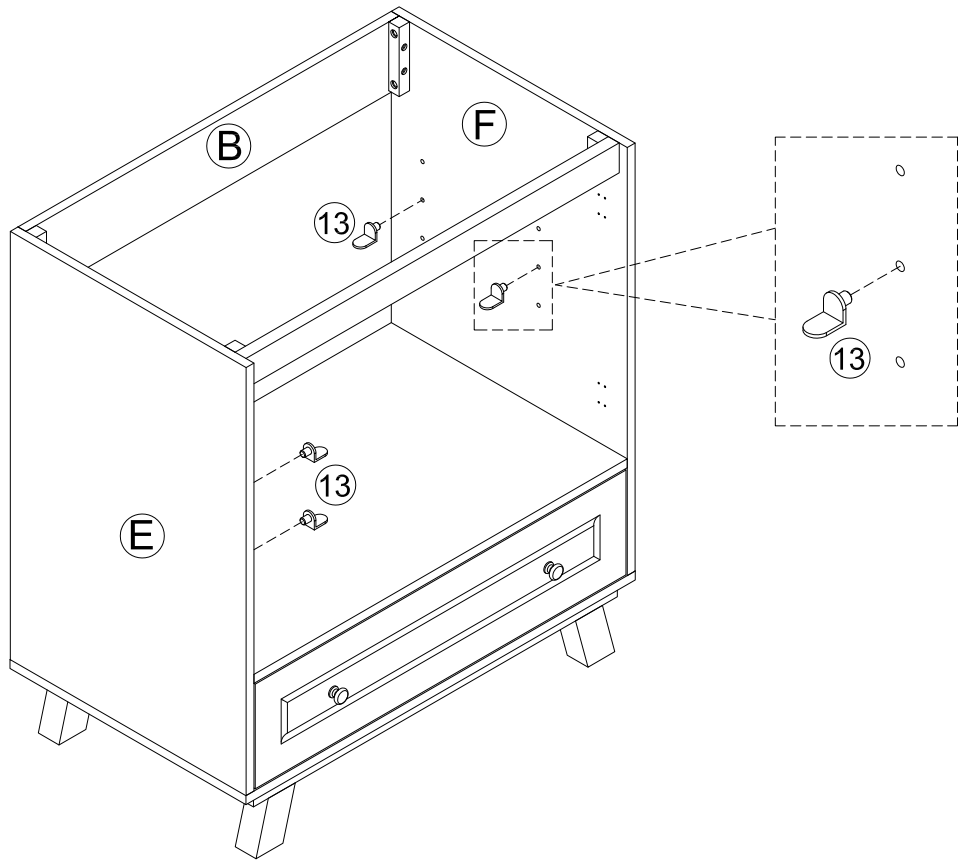


STEP 24

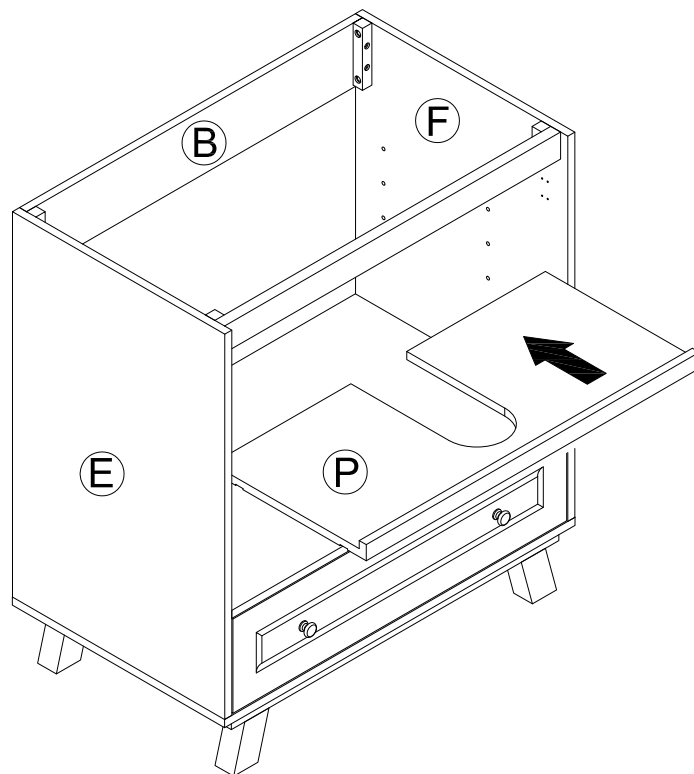



STEP 25


⑧  12pcs
Ø6x33mm

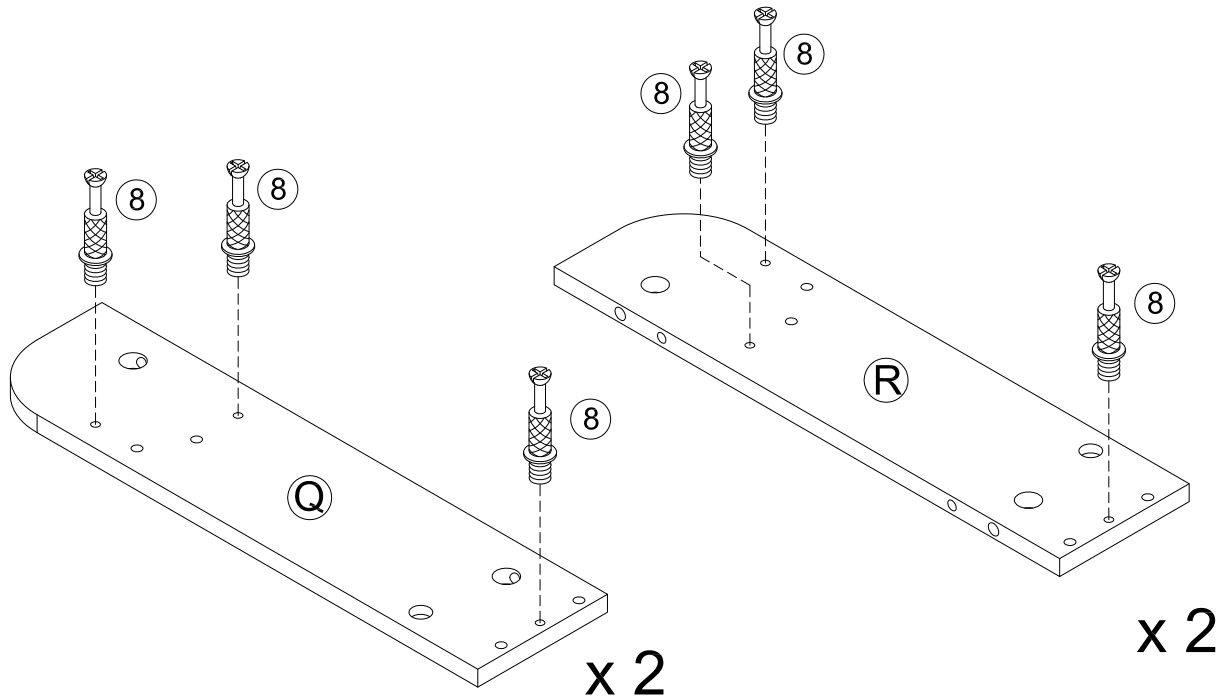

STEP 26


⑦  16pcs
Ø6x30mm

⑧  4pcs
Ø6x33mm

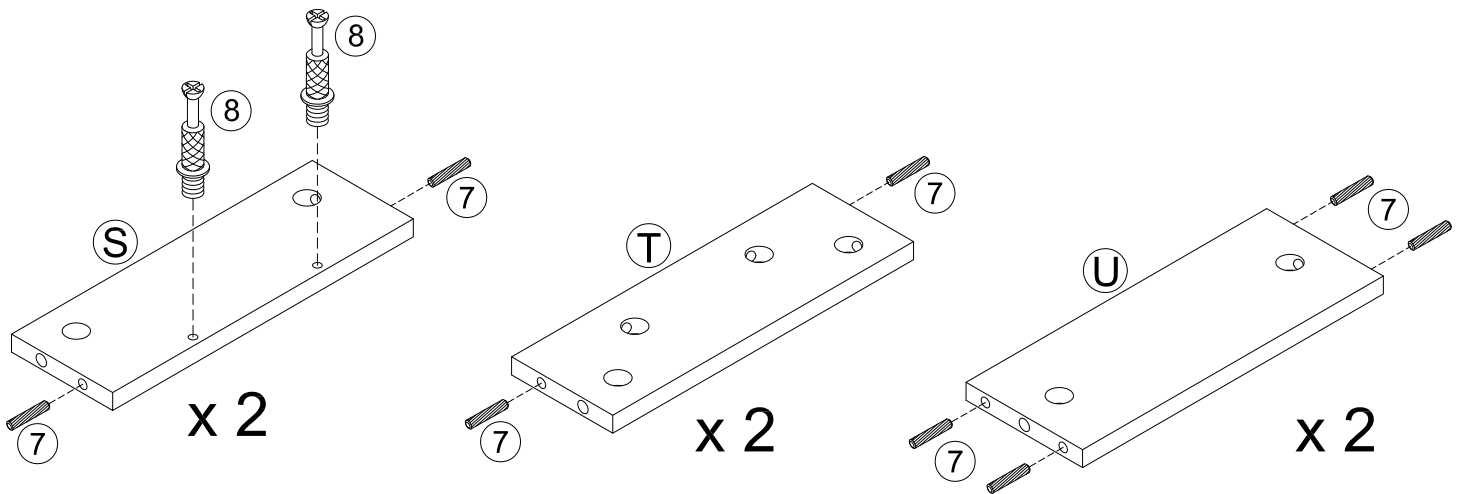


STEP 27

⑩  4pcs
Ø15x9mm

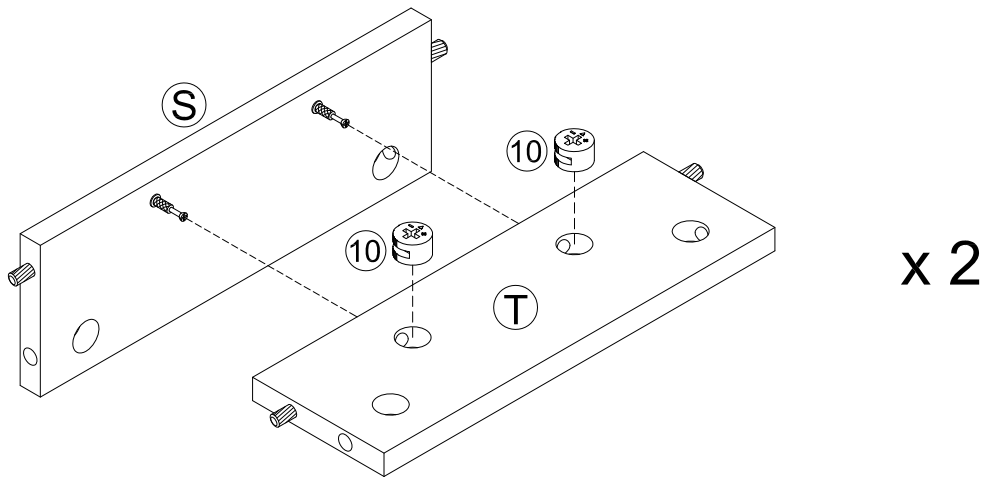






STEP 28

⑩  12pcs
Ø15x9mm

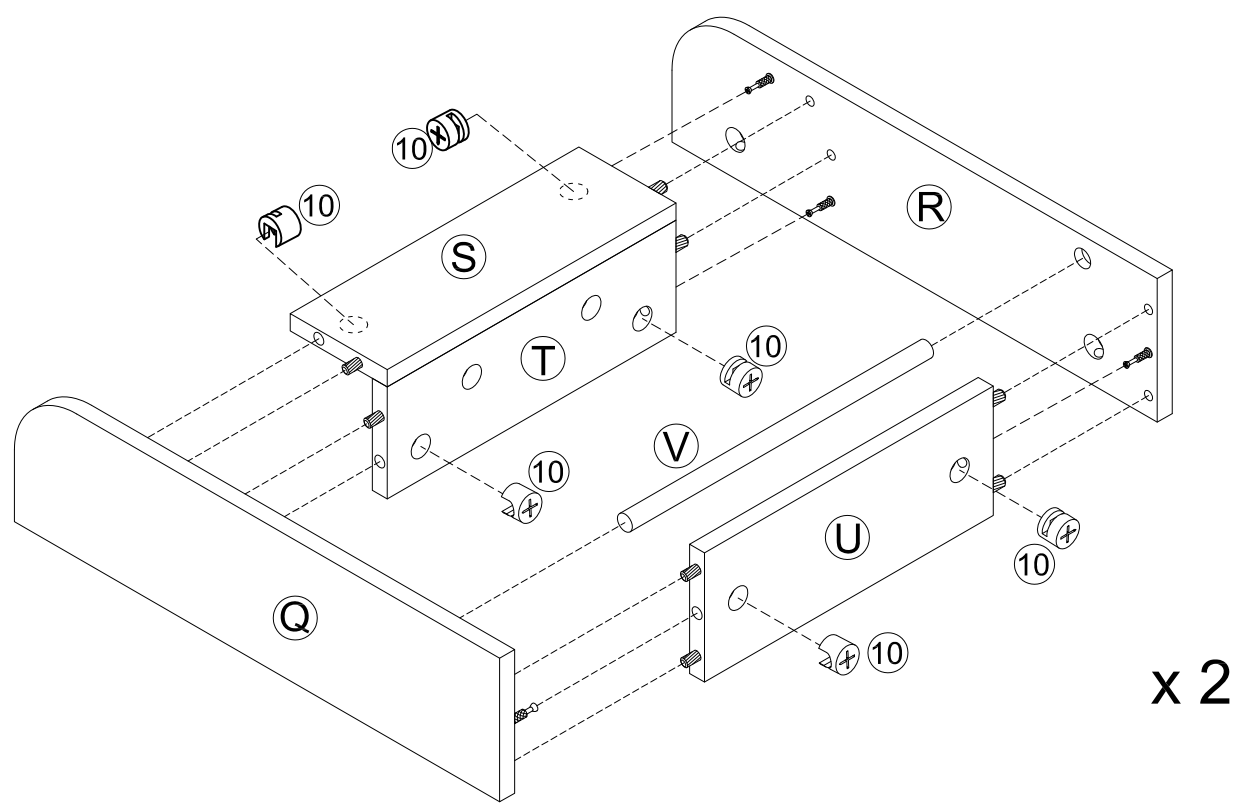




STEP 29

- ⑮  8pcs
Ø4x12mm
- ⑭  4pcs

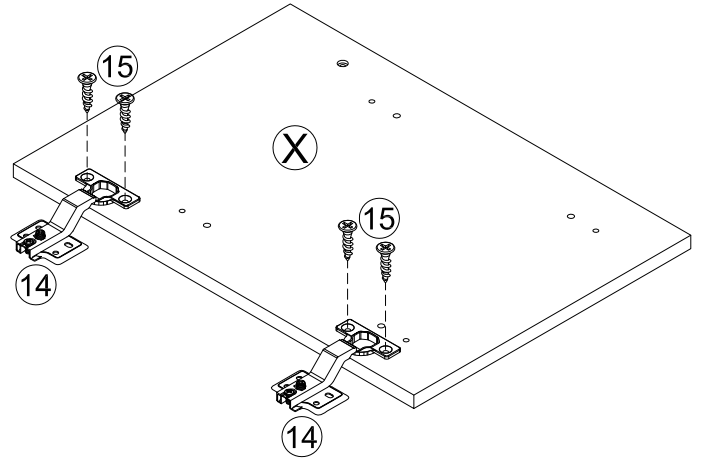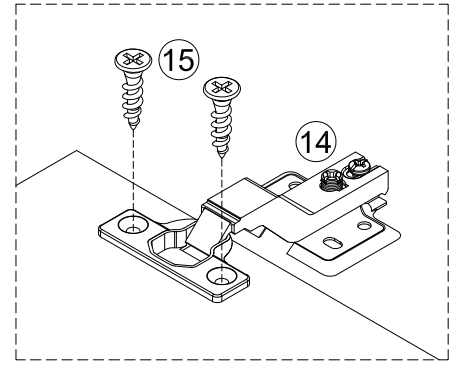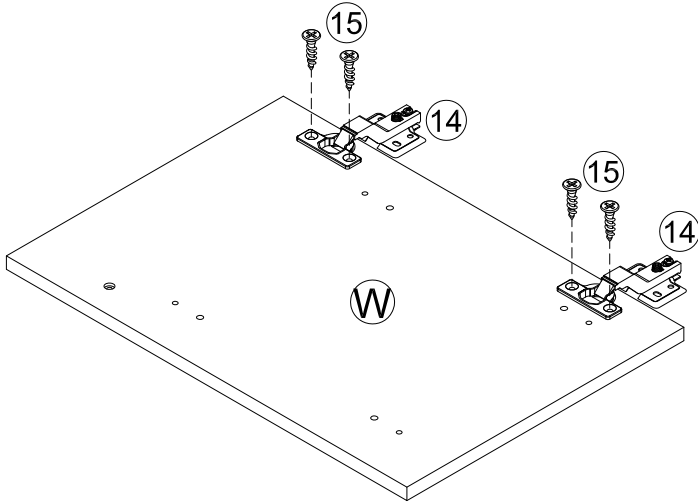


STEP 30


- ⑧  8pcs
Ø6x33mm

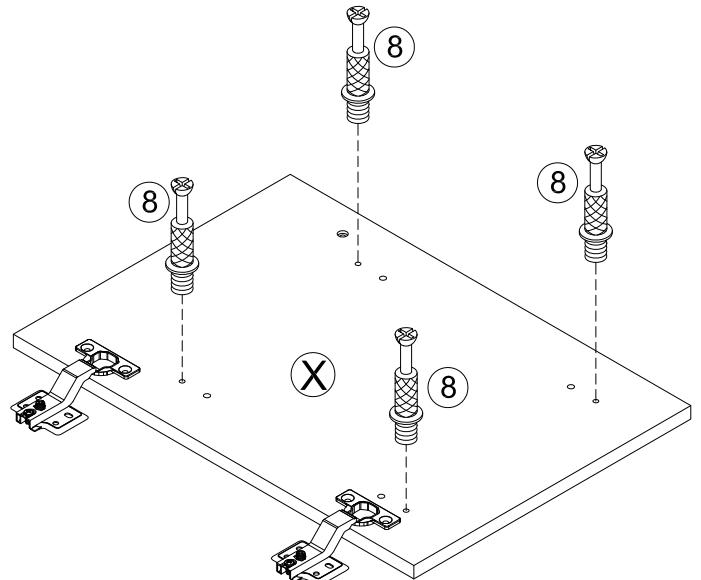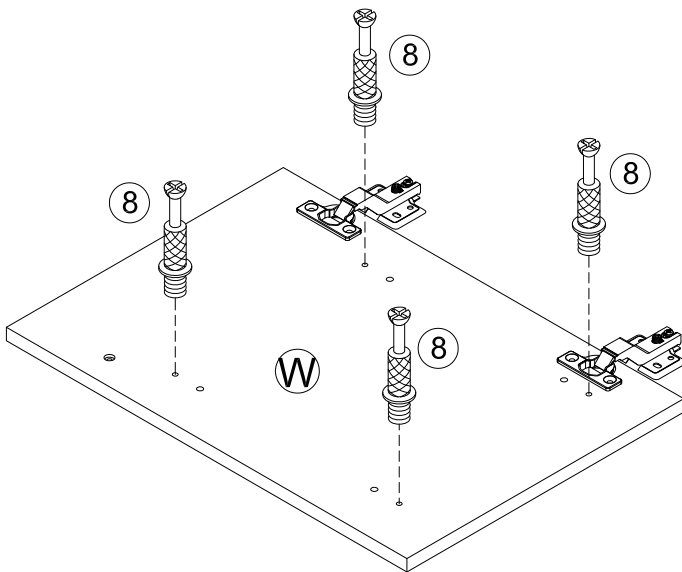


STEP 31

7  4pcs
Ø6x30mm


10  4pcs
Ø15x9mm

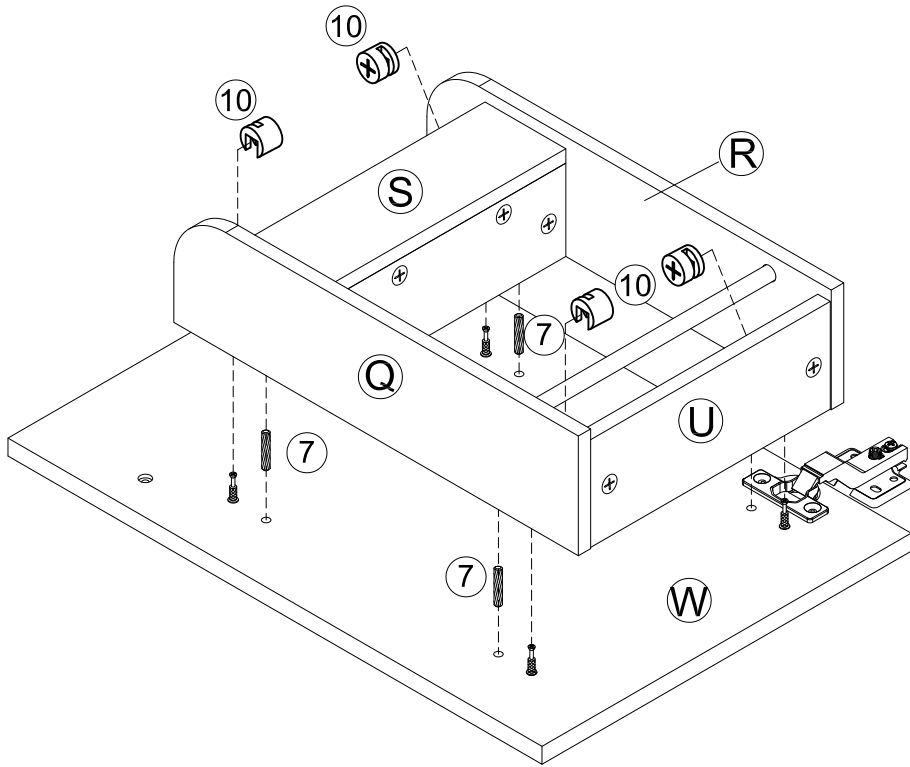

STEP 32

7  4pcs
Ø6x30mm

10  4pcs
Ø15x9mm


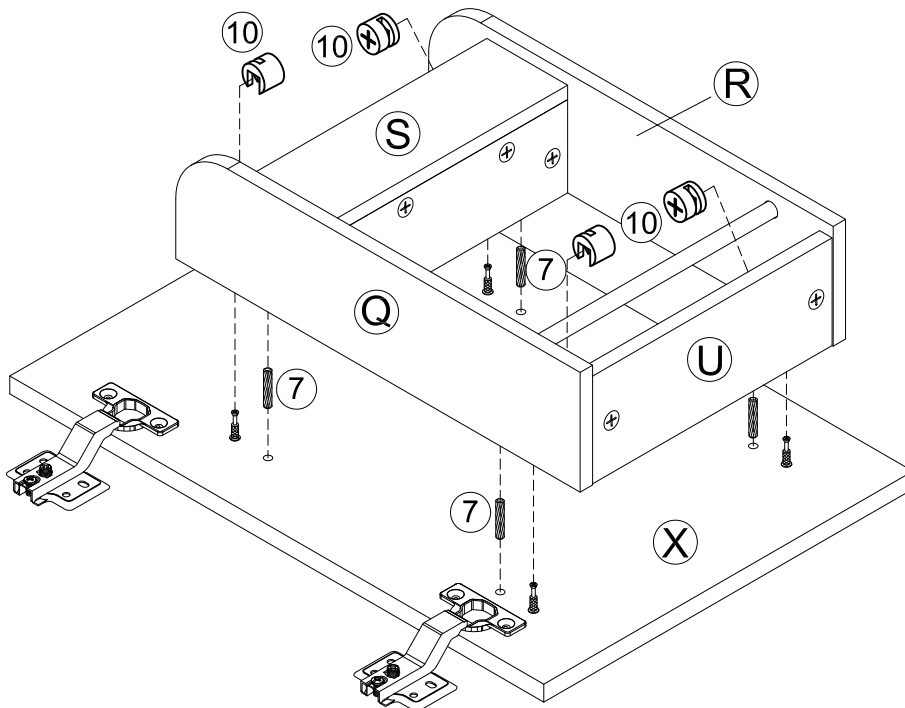


STEP 33

⑮  16pcs
 Ø4x12mm


Three-way adjustable hinge for perfectly aligned doors

1. TO ADJUST DOOR FORWARD OR BACKWARD.
2. TO ADJUST DOOR TO RIGHT OR TO LEFT.
3. TO ADJUST DOOR UP OR DOWN.

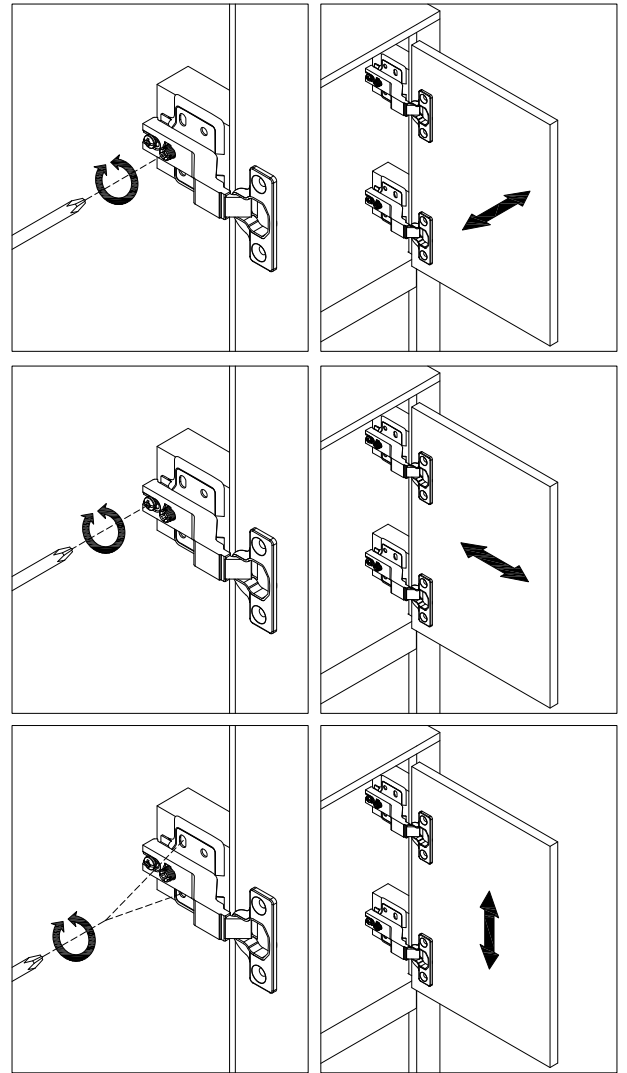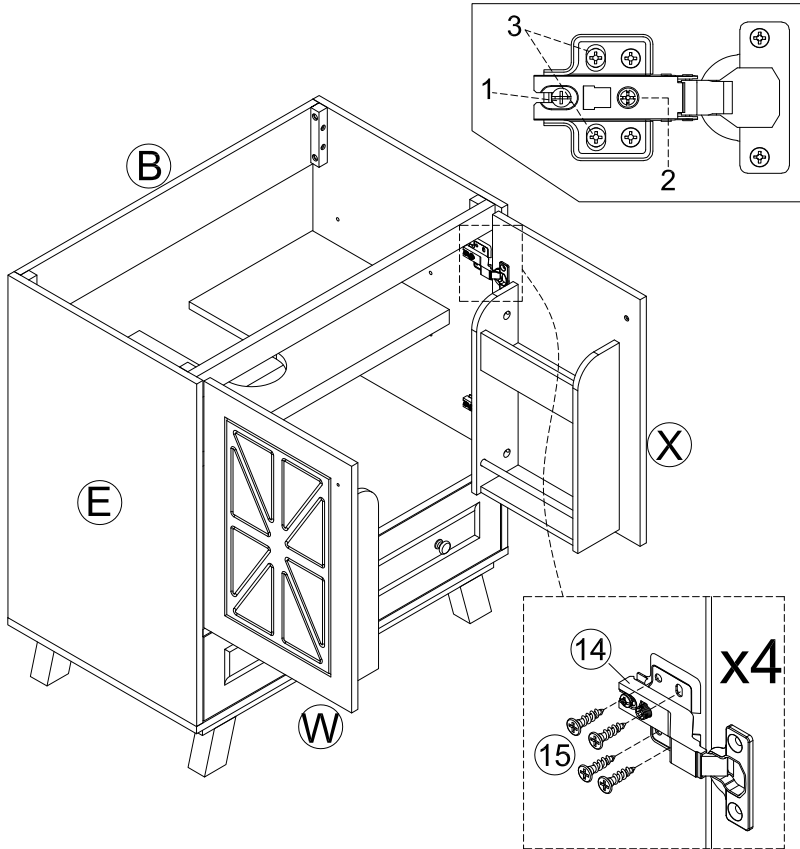


STEP 34

⑪  2pcs 5/32"x18mm
 ⑫  2pcs

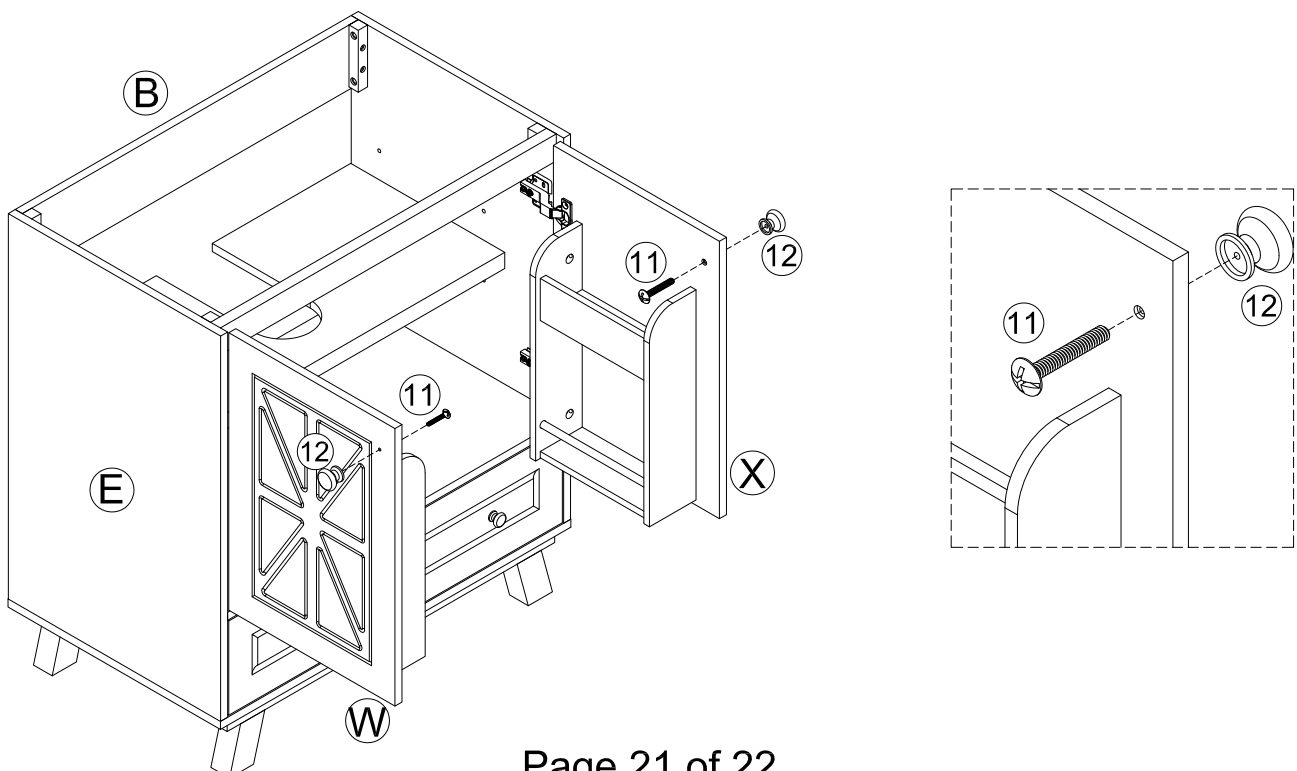

STEP 35

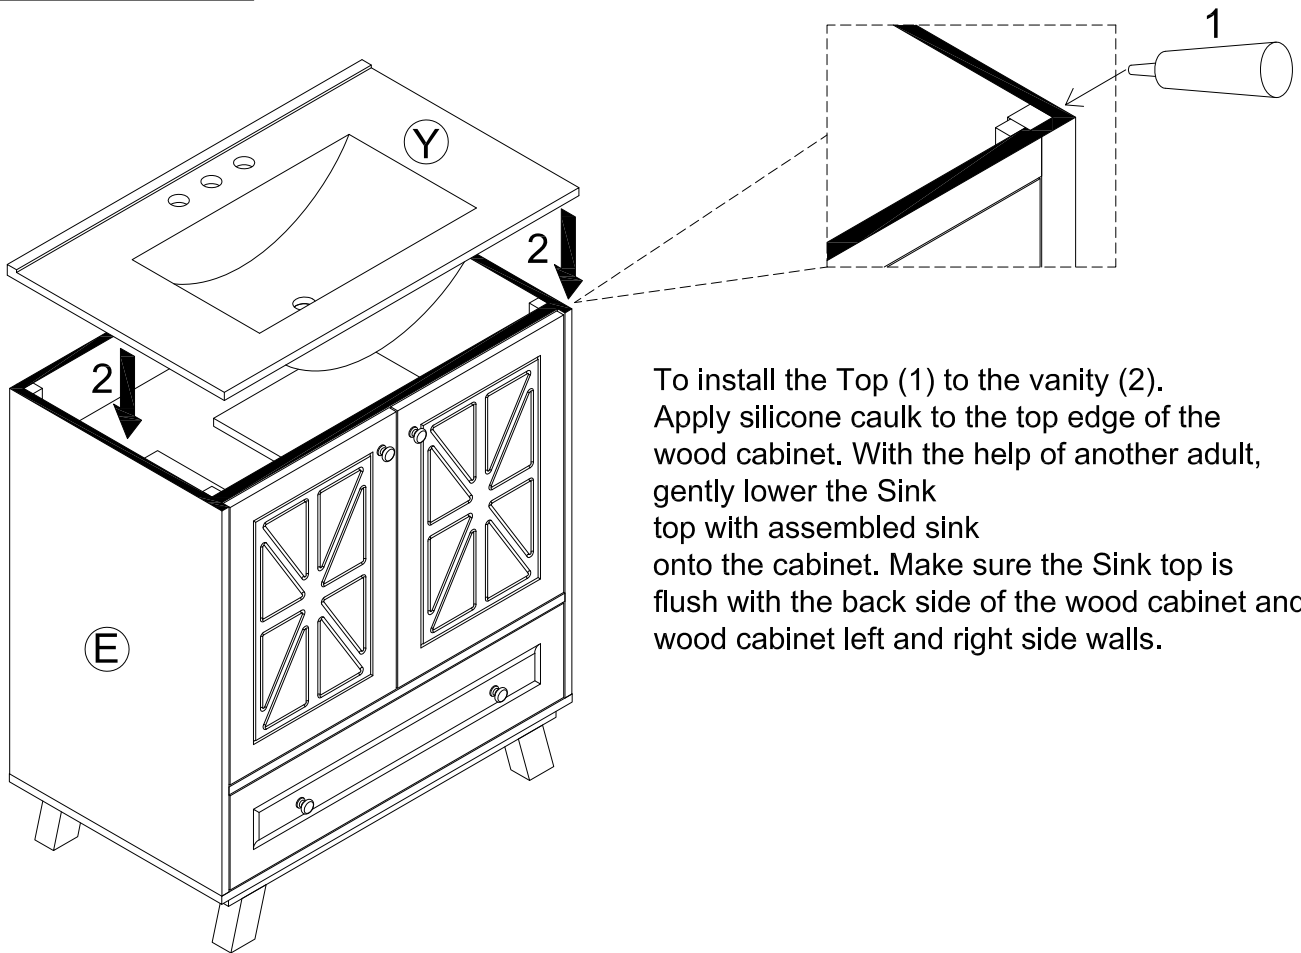

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

STEP 36

