

## ASSEMBLY INSTRUCTION

SRN 5806

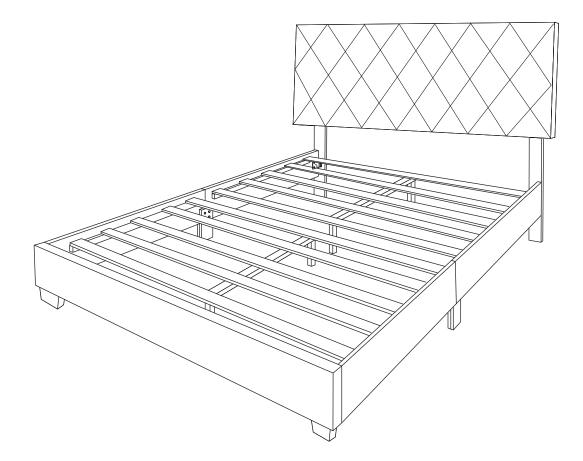

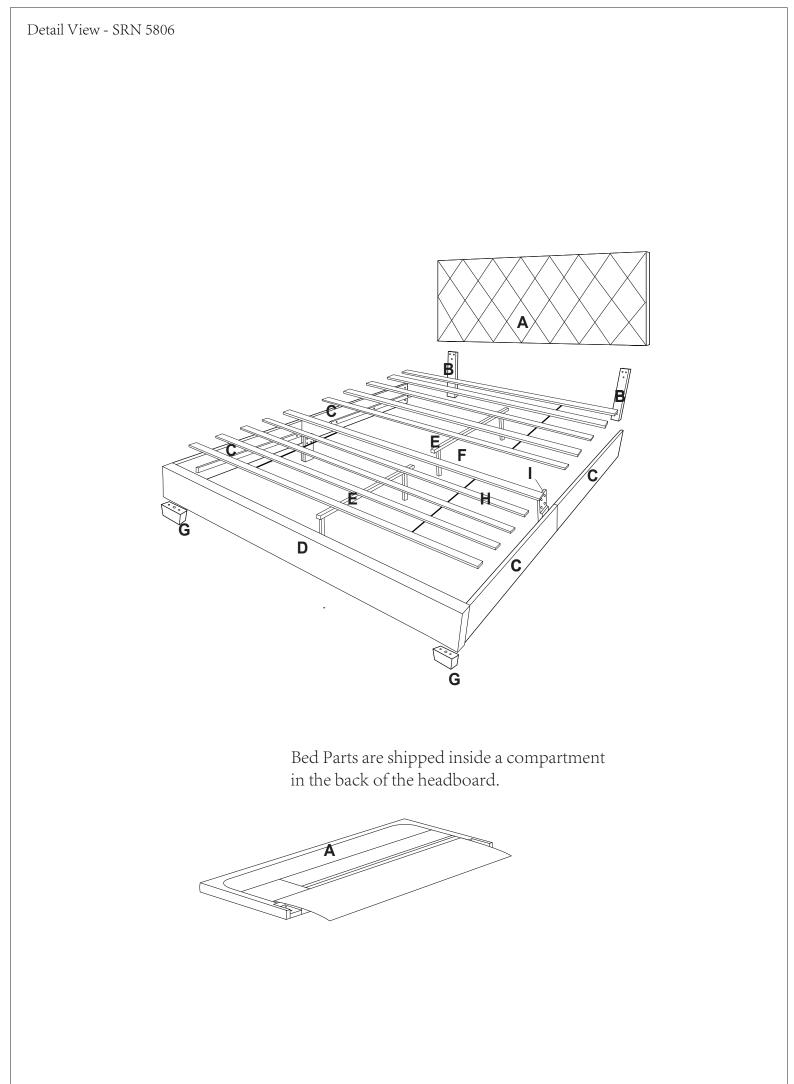

NO		PART LIST	QTY
А	Headboard		1 pc
В	Headboard Leg		2 pcs
С	Side Rail		4 pcs
D	Footboard		1 pc
E	Center Support Rail		2 pcs
F	Center Support Leg		4 pcs
G	Bed Leg		2 pcs
Η	Bed Slat		10 pcs
Ι	Side Rail Support		2 pcs

NO	HARDWARE LIST	QTY
1	JCBB M8 x 20mm	8 pcs
2	JCBC M6 x 60mm	4 pcs
3	JCBC M6 x 40mm	6 pcs
4	JCBB M6 x 25mm	8 pcs
5	Spring Washer M6	6 pcs
6	Flat Washer M6	14 pcs
7	Allen Key M4(100mm)	1 pcs
8	Allen Key M5	l pcs
9	Adjuster M6	4 pcs
10	CSK M4 x 30mm	20 pc
11	JCBC M6 x 70mm	2 pcs
12	Wood Dowel M8 x 30mm	4 pcs

Read this instruction carefully. Remove all wrapping material, staples and straps from the carton. See hardware and furniture part list for guidance. Be sure you have all wooden furniture parts on a clean and flat surface, such as carpet or rug, to prevent from being scratched.

## CAUTION :

- 1. Do not Full Tighten the nut or screw until all ready to assemble.
- 2. Do not Over Tighten the nut or screw to avoid causing damages to the thread.
- 3. Keep all hardware part out reach of children.



X 2 People

