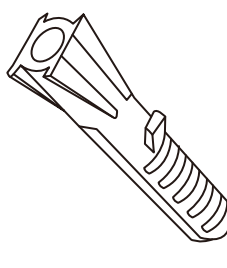
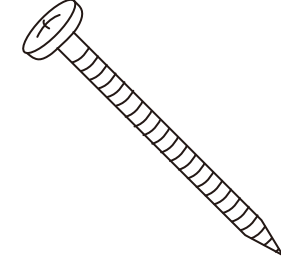


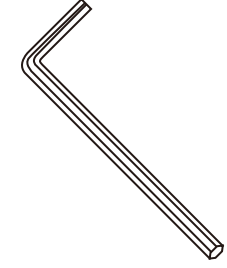
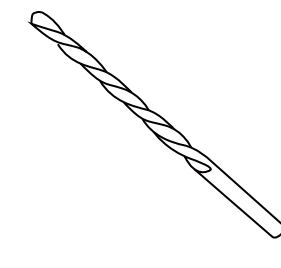
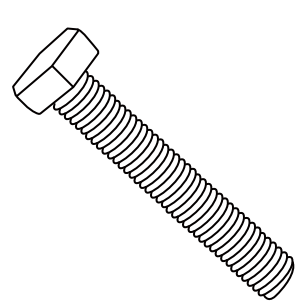
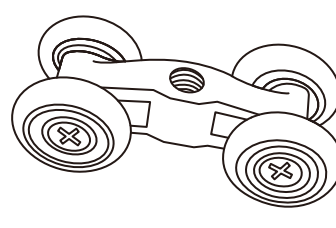
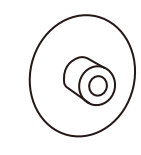
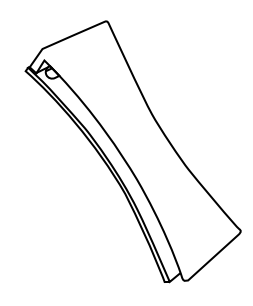
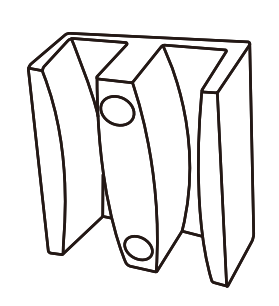

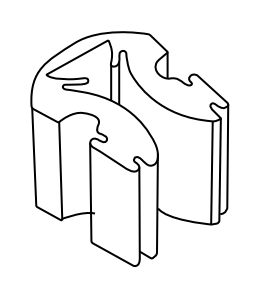
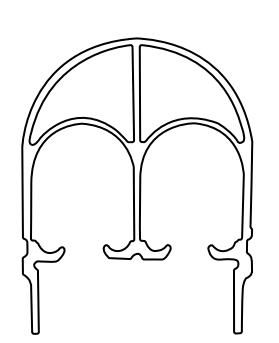
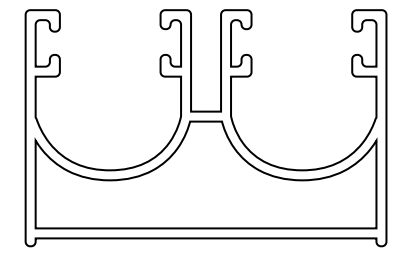
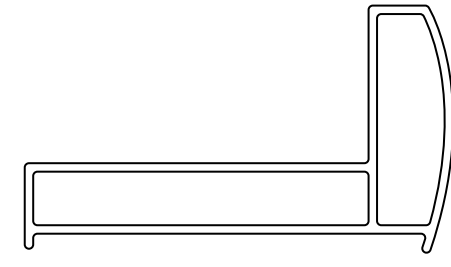

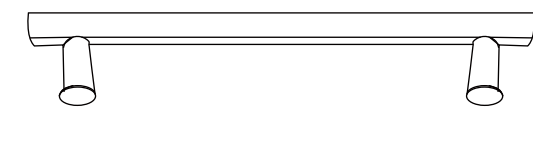











Shower Door 24D212

Check carefully after opening the box. Make sure there are no missing pieces and the shower doors do not have any cracks. During installation, please be careful with the corners of the glass doors. They are very fragile. After the shower doors are installed, the sliding doors should be parallel to each other to open and close smoothly, without gaps or water seepage, and the shower and the bottom basin should be sealed with silicone between them.


Parts list

 <p>A×8 Internal accessories length: 29mm</p>	 <p>B-1×8 Internal accessories length: 52mm</p>	 <p>B-2×6 Internal accessories length: 15mm</p>	 <p>B-3×2 Internal accessories length: 13mm</p>	 <p>C×1 Internal accessories Nail bit</p>	 <p>D×1 Internal accessories length: 58mm</p>	 <p>E×4 Internal accessories length: 39mm</p>
 <p>F×4 Internal accessories length: 55mm</p>	 <p>G×8 Internal accessories Diameter: 12mm</p>	 <p>H×4 Internal accessories size: 100*33*17mm</p>	 <p>I×3 Internal accessories size: 60*50*22mm</p>	 <p>J×6 Internal accessories Diameter: 9mm</p>	 <p>K×8 Internal accessories Nail bit</p>	 <p>L×1 Internal accessories Frame Accessories</p>
 <p>M×2 Internal accessories Frame Accessories</p>	 <p>N×1 Internal accessories Frame Accessories</p>	 <p>O×2 Internal accessories Glass</p>	 <p>P×2 Internal accessories Handle</p>			

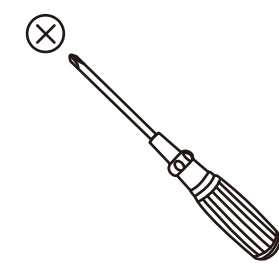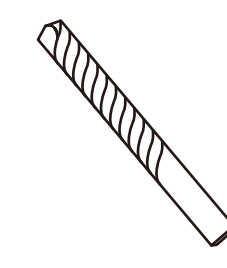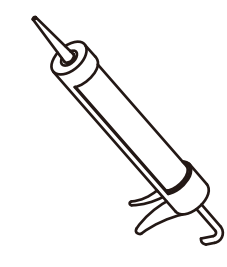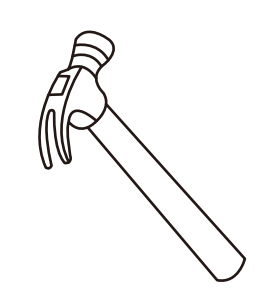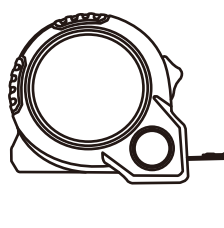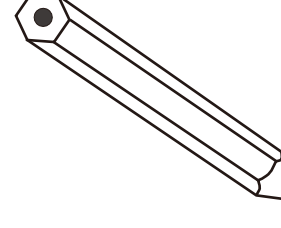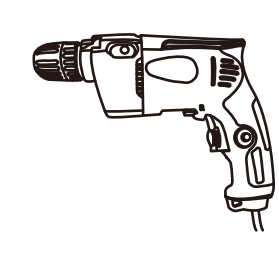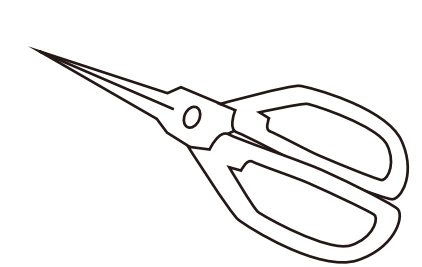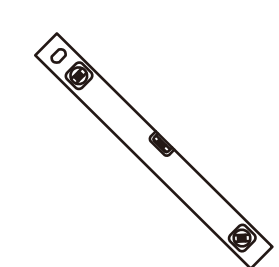Tools Not Included

 <p>Phillips screwdriver Tools needed</p>	 <p>Assorted Drill Bits Tools needed</p>
 <p>Glue gun Silicone Nail bit</p>	 <p>Adjustable Wrench Nail bit</p>
 <p>Internal accessories Tools needed</p>	 <p>Internal accessories Tools needed</p>
 <p>Percussion Drill Tools needed</p>	 <p>Internal accessories Tools needed</p>
 <p>Level Tools needed</p>	

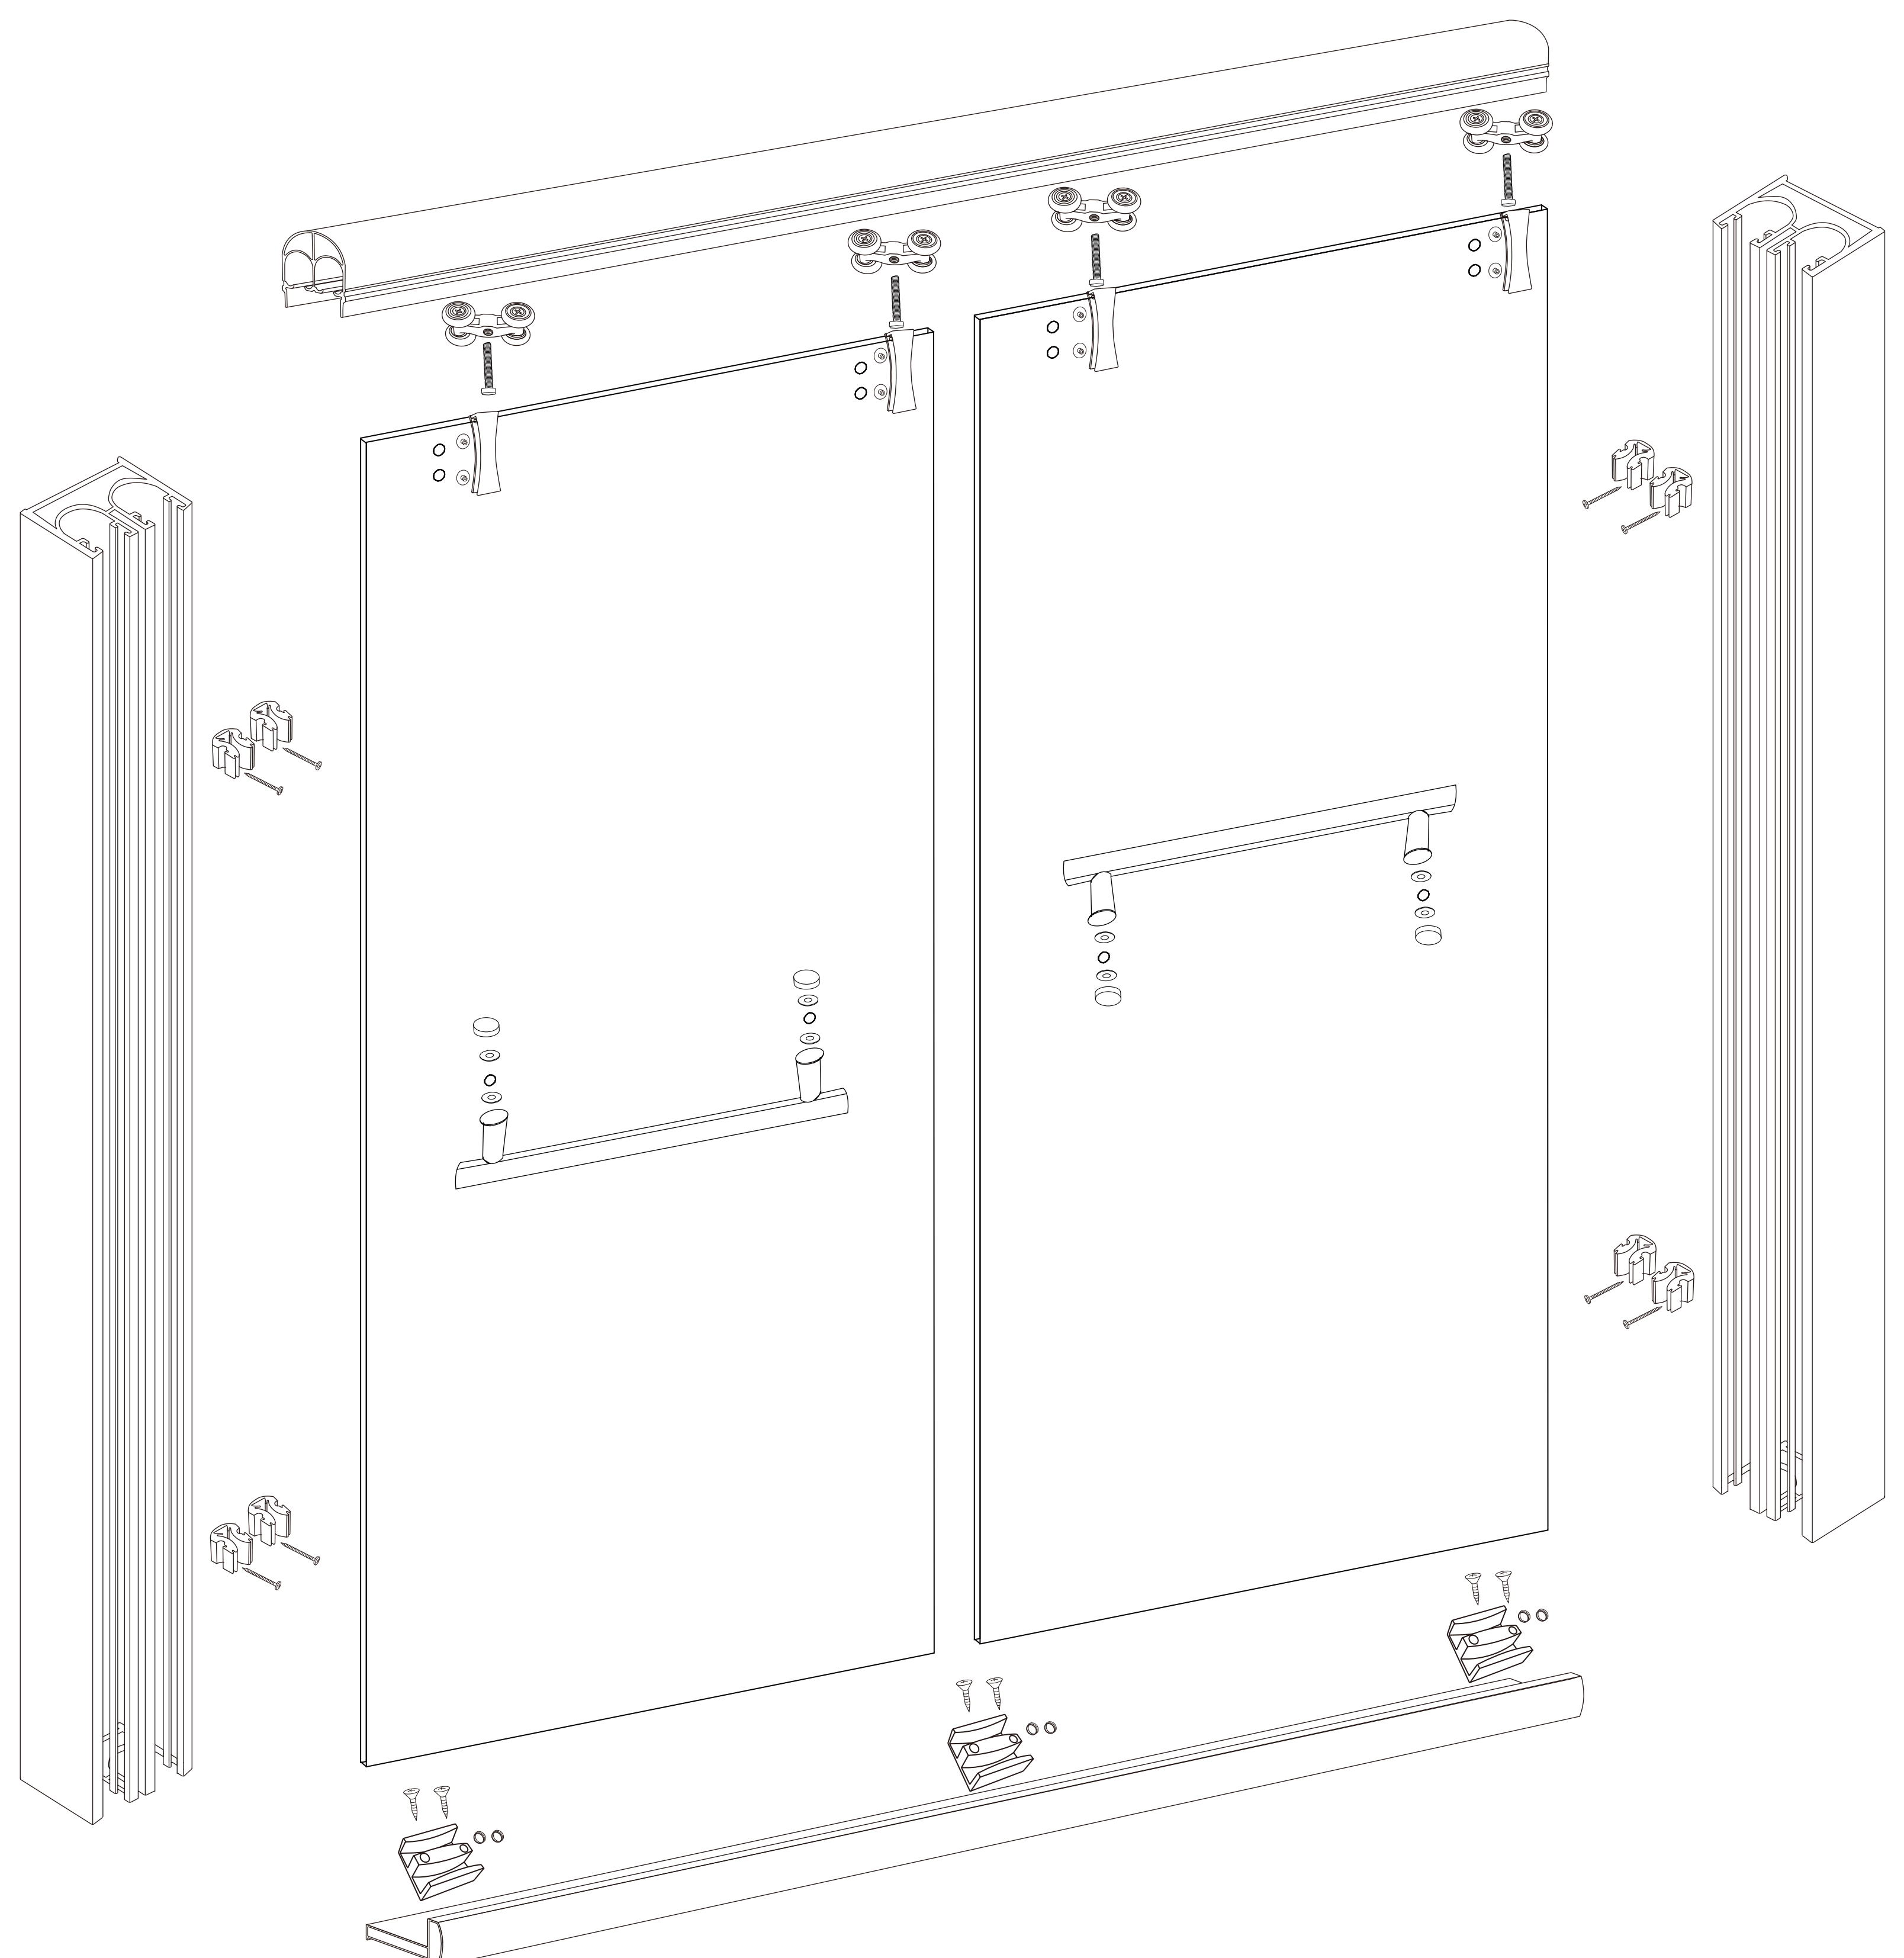
Package contents



The following instructions will guide you through the installation of a sliding shower door.


*Glass doors can be installed on either side.
Frame parts will need to be flipped over to install the sliding door on the left or right side.

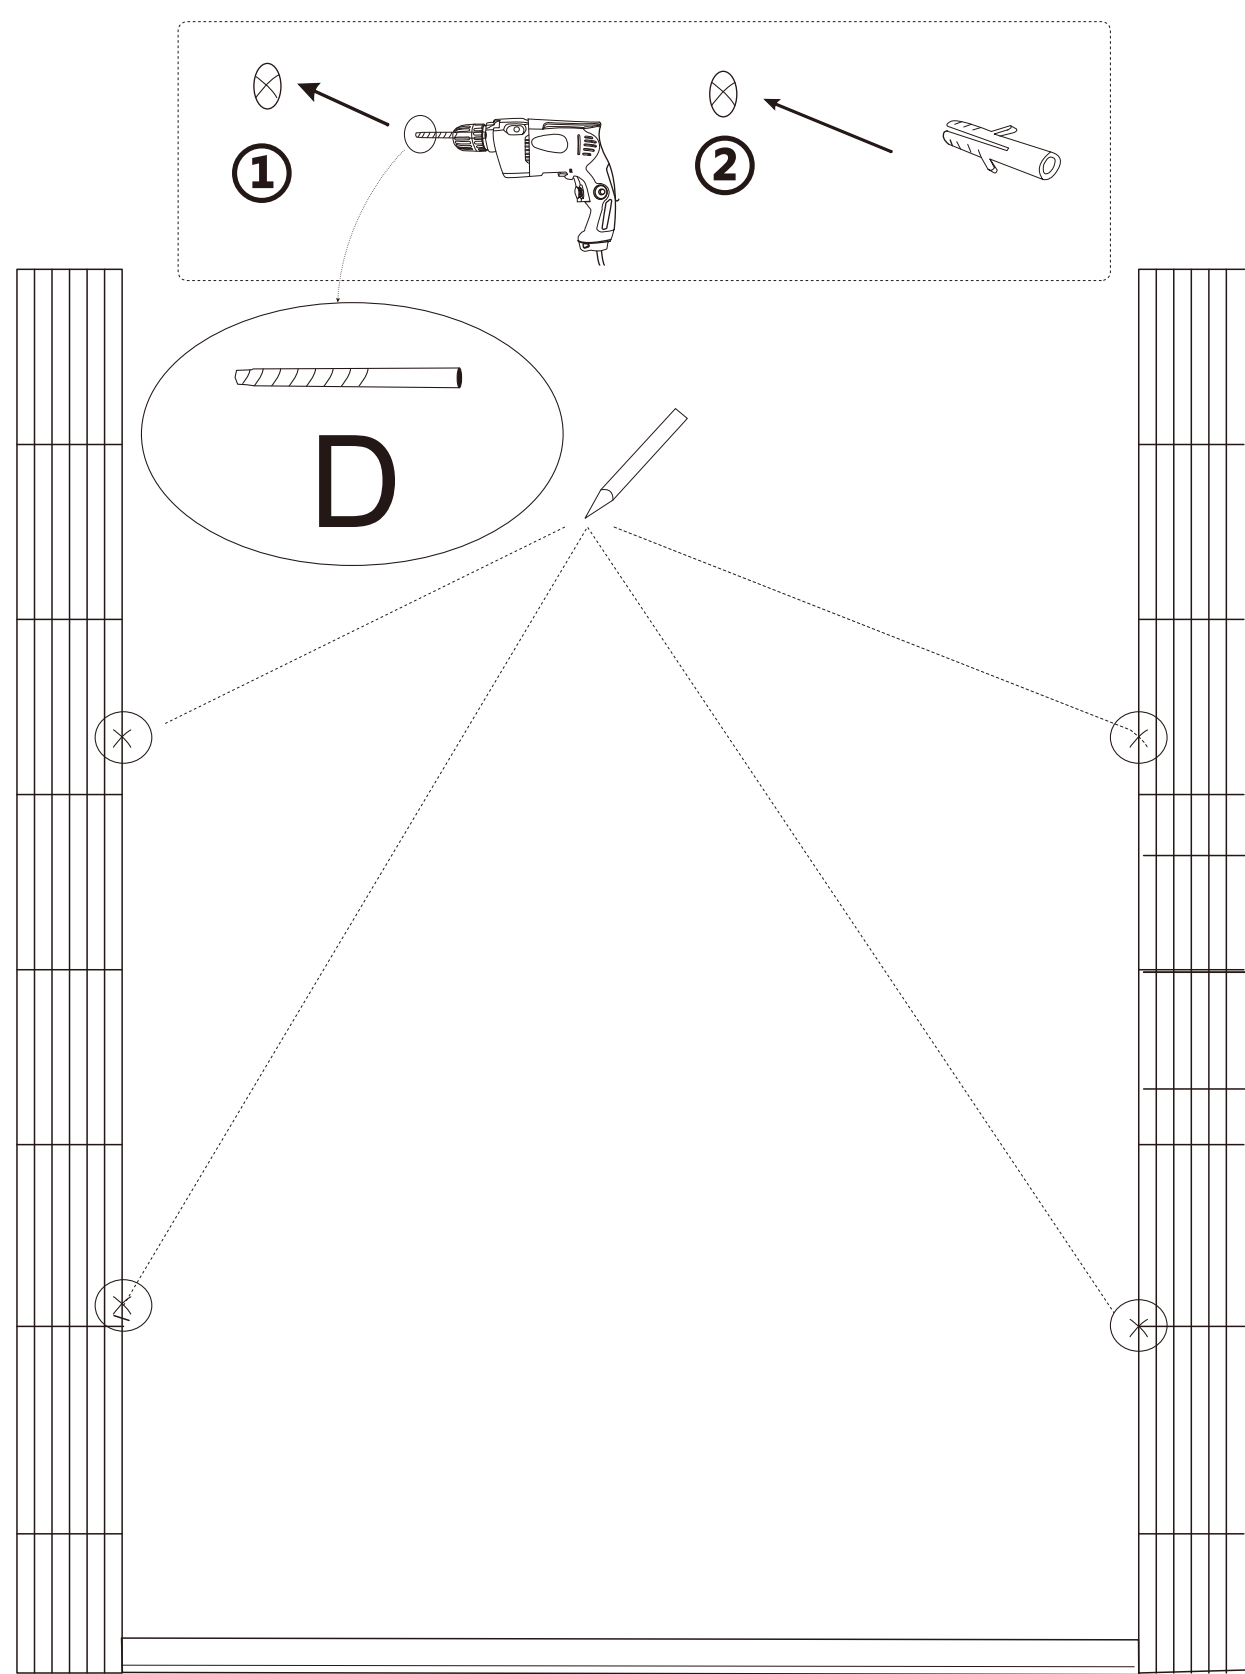Step 01




Mark 4 holes for fixing vertical frames, Match D on electric drill to punch 8 holes, Insert 8 expansion bolts

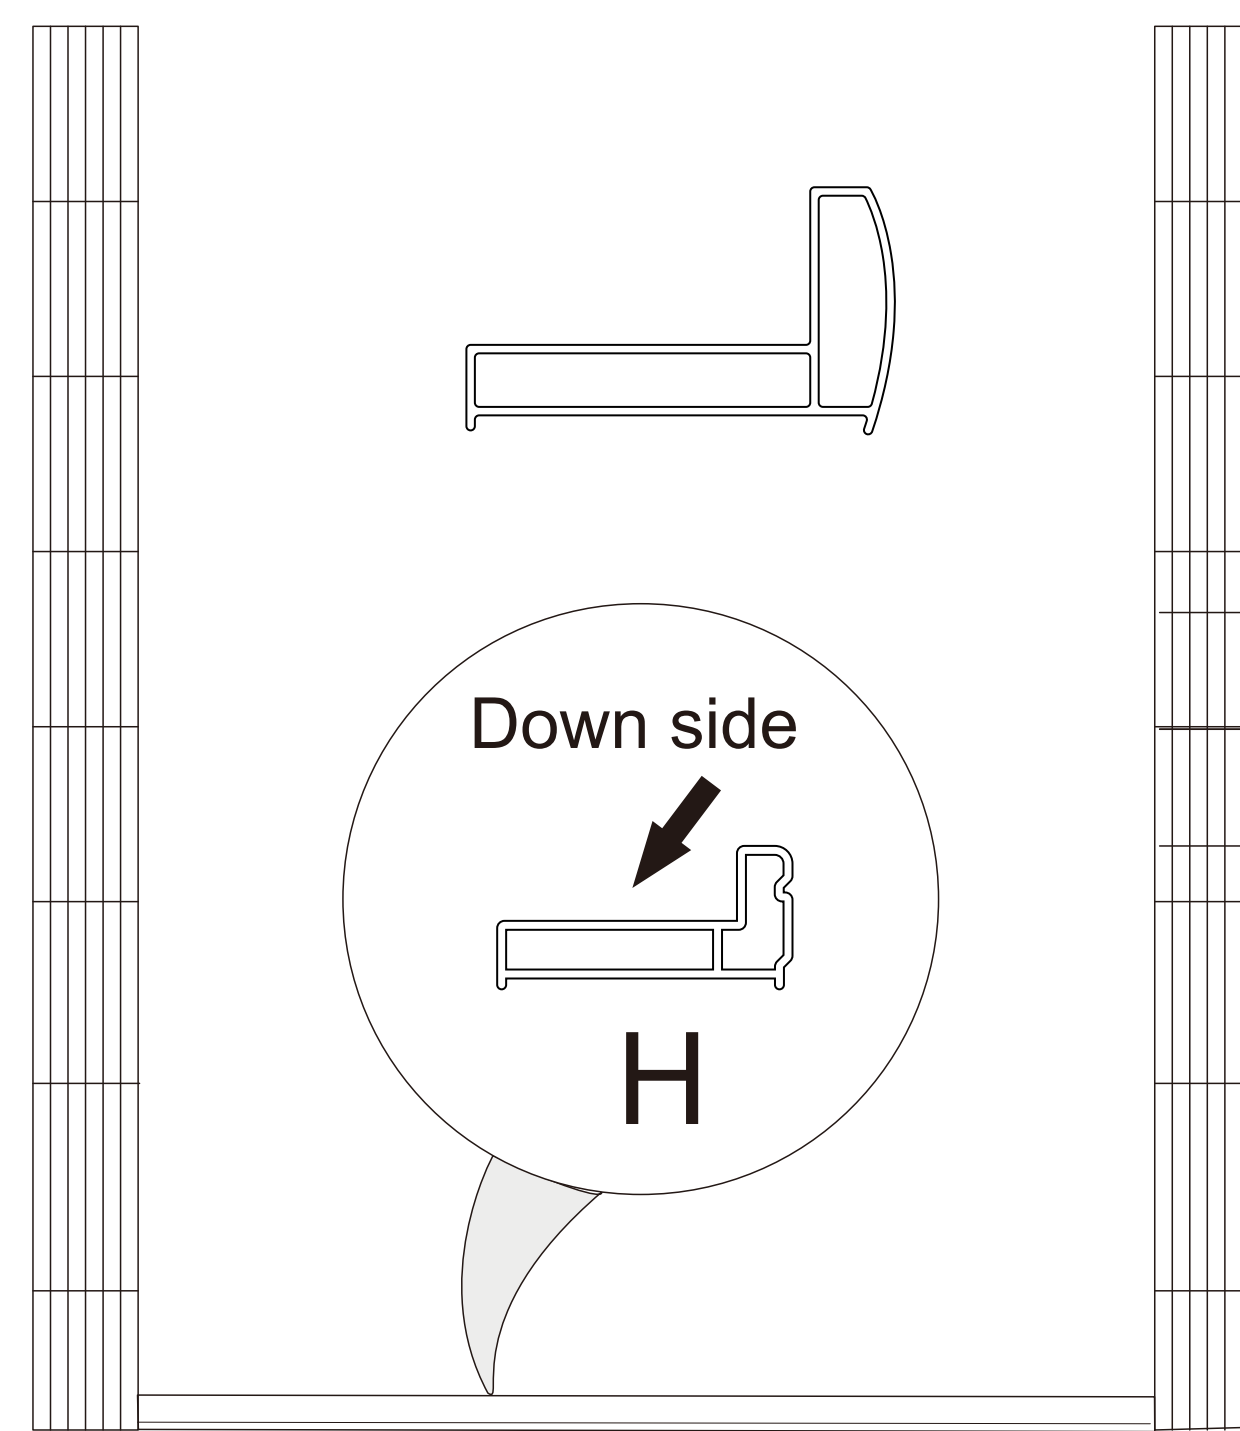Step 02




Mark 4 holes for fixing vertical frames

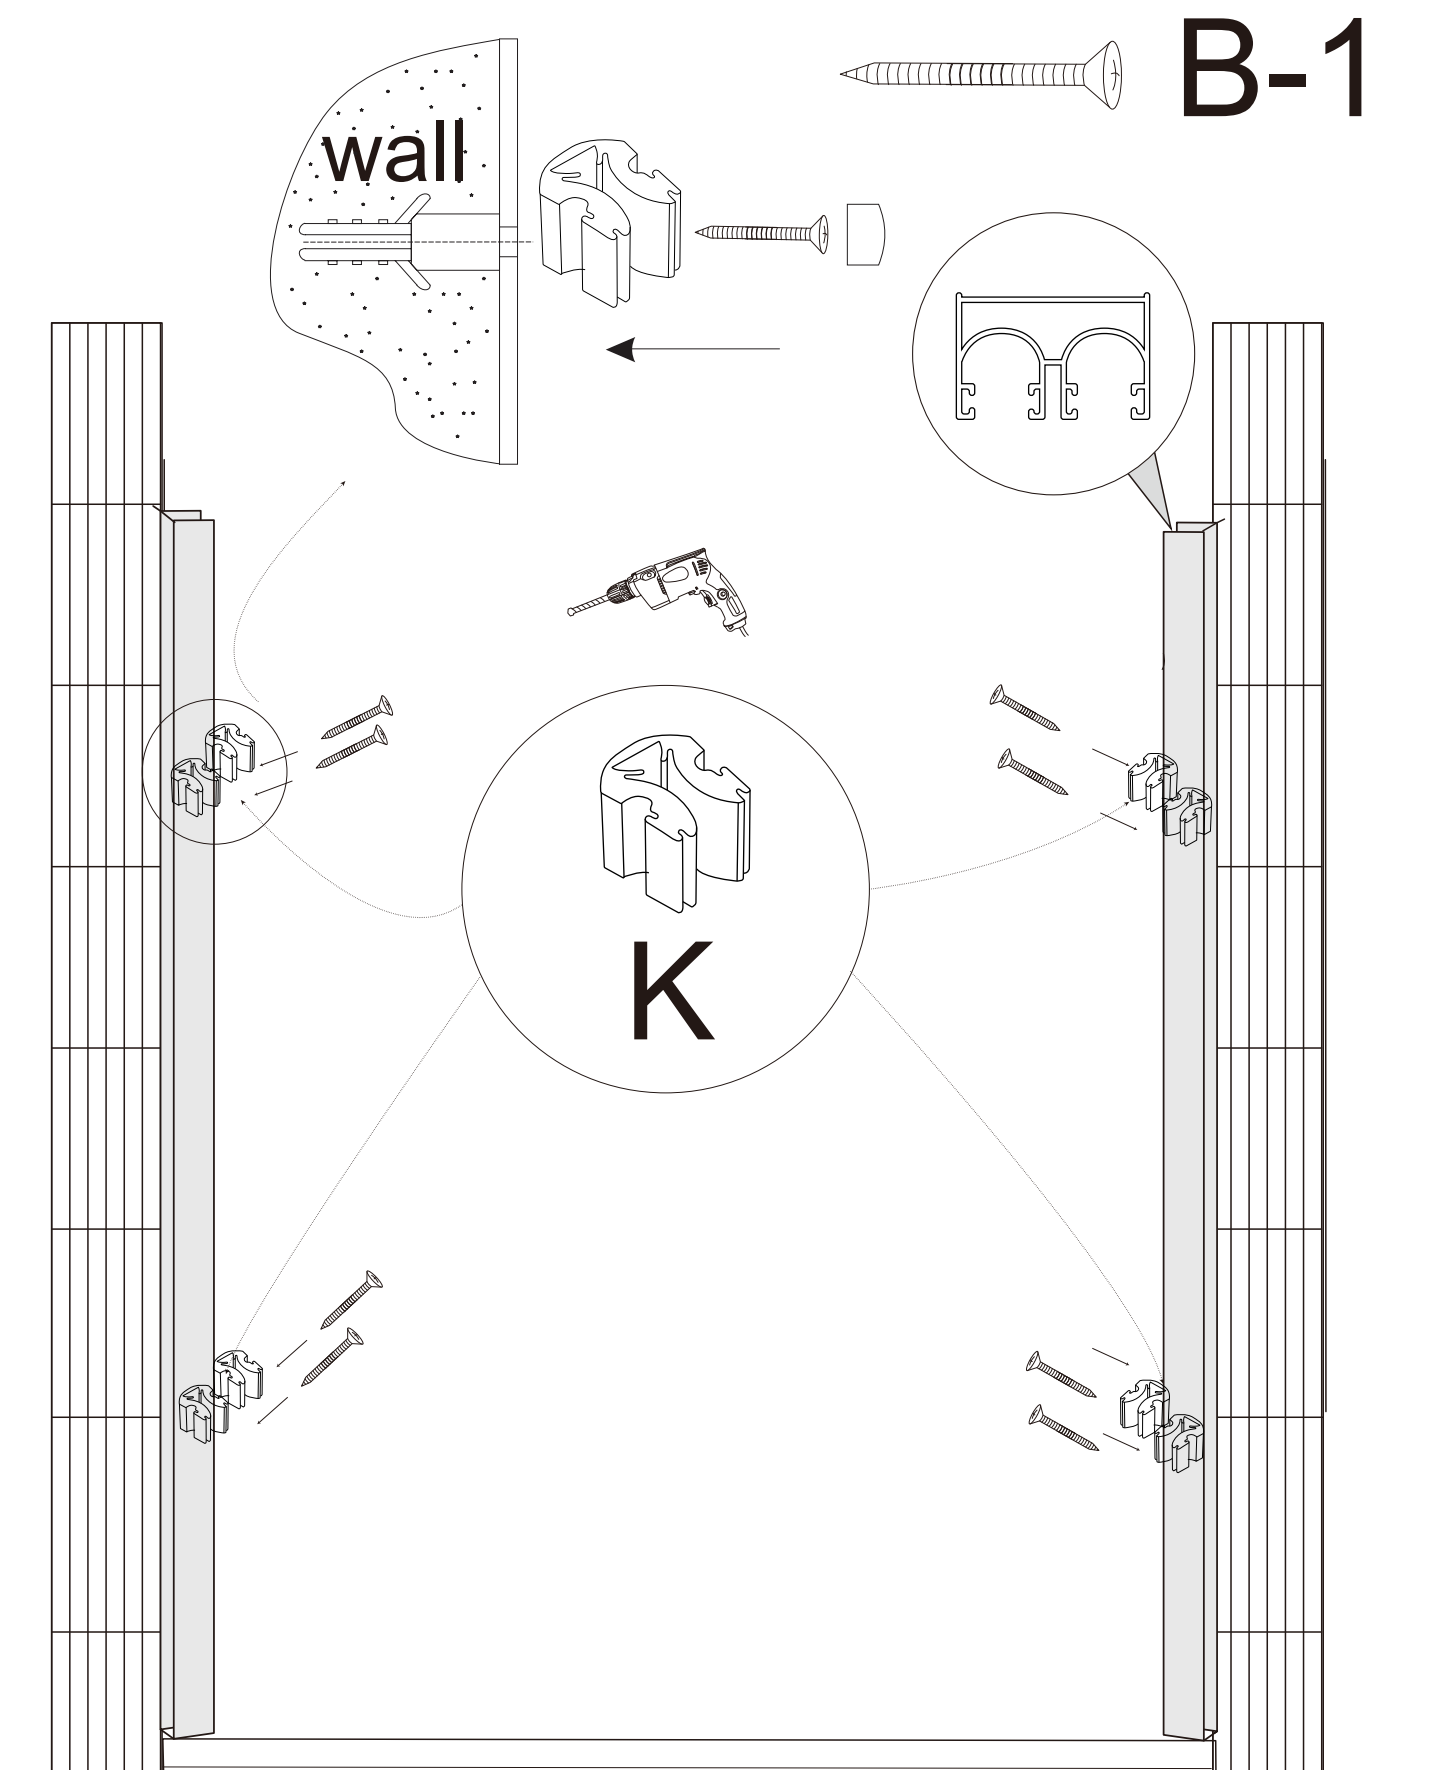Step 03




Change a cross bit on electric drill, Match holes on K with holes on wall, Use A-1 to fix (1*B-1 for each hole)

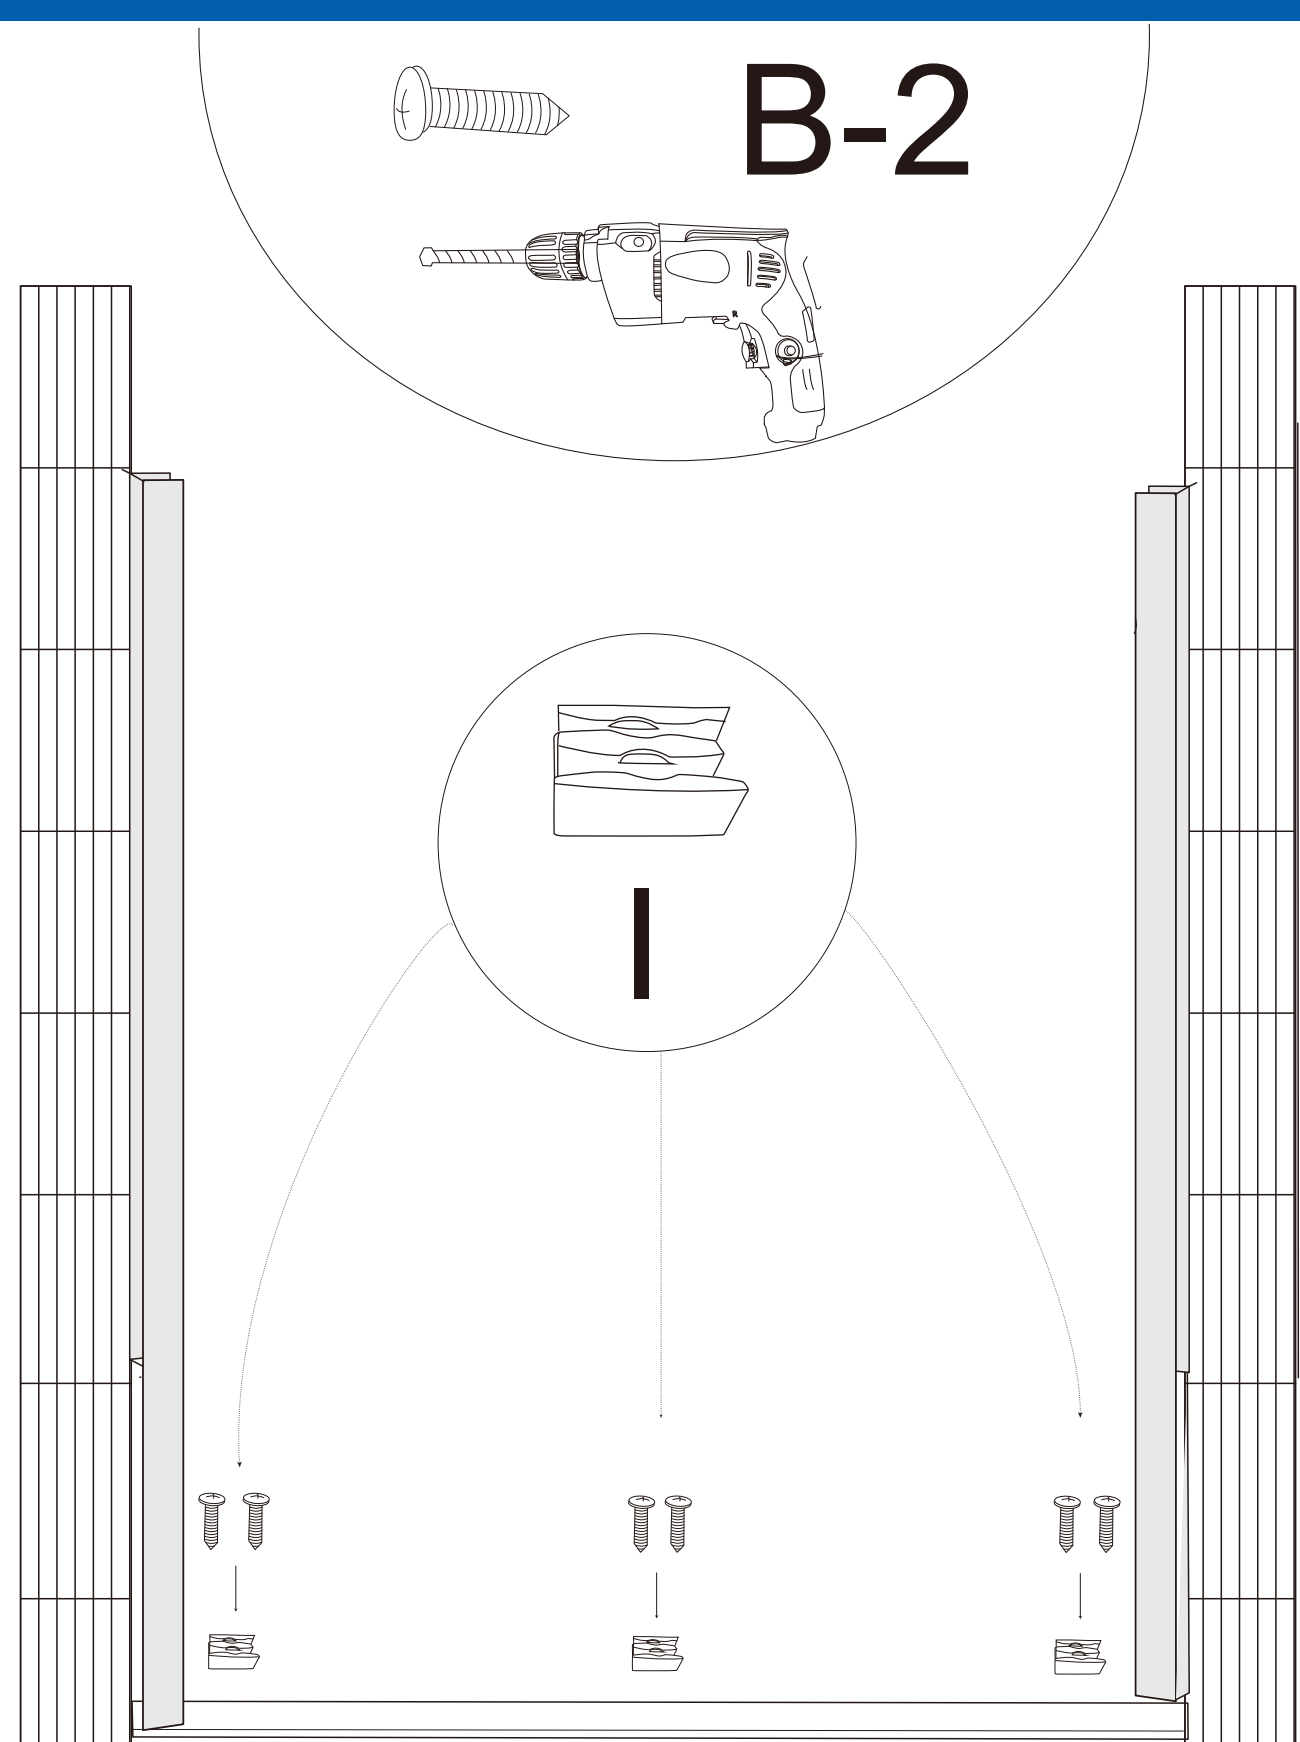Step 04




Put 3*I on exact places shown on picture Use A-2 to fix (there are no holes on down track, 2*B-2 for each I)

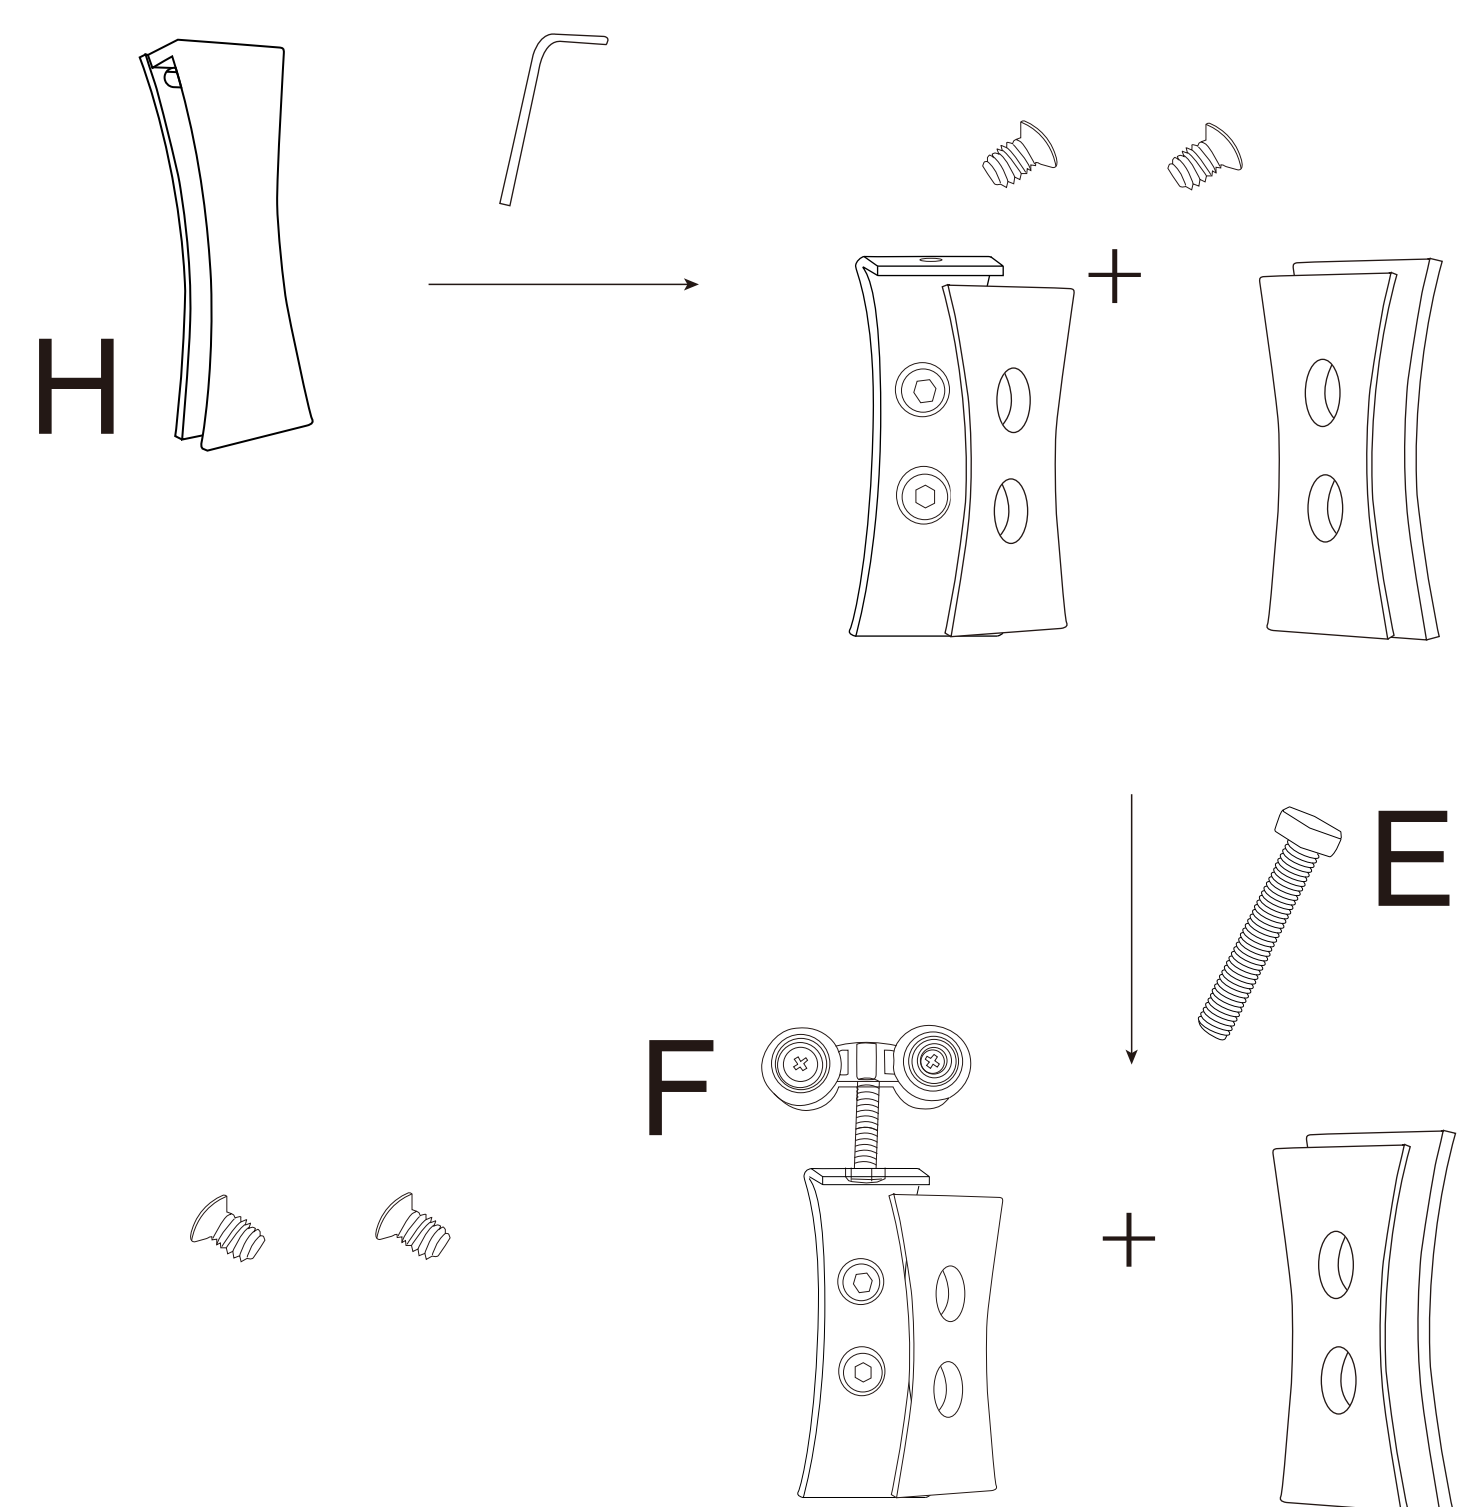Step 05




Here are 2 paths on up track, put 2 roller sets in each path, do not lock these 2 screws at the end of this step

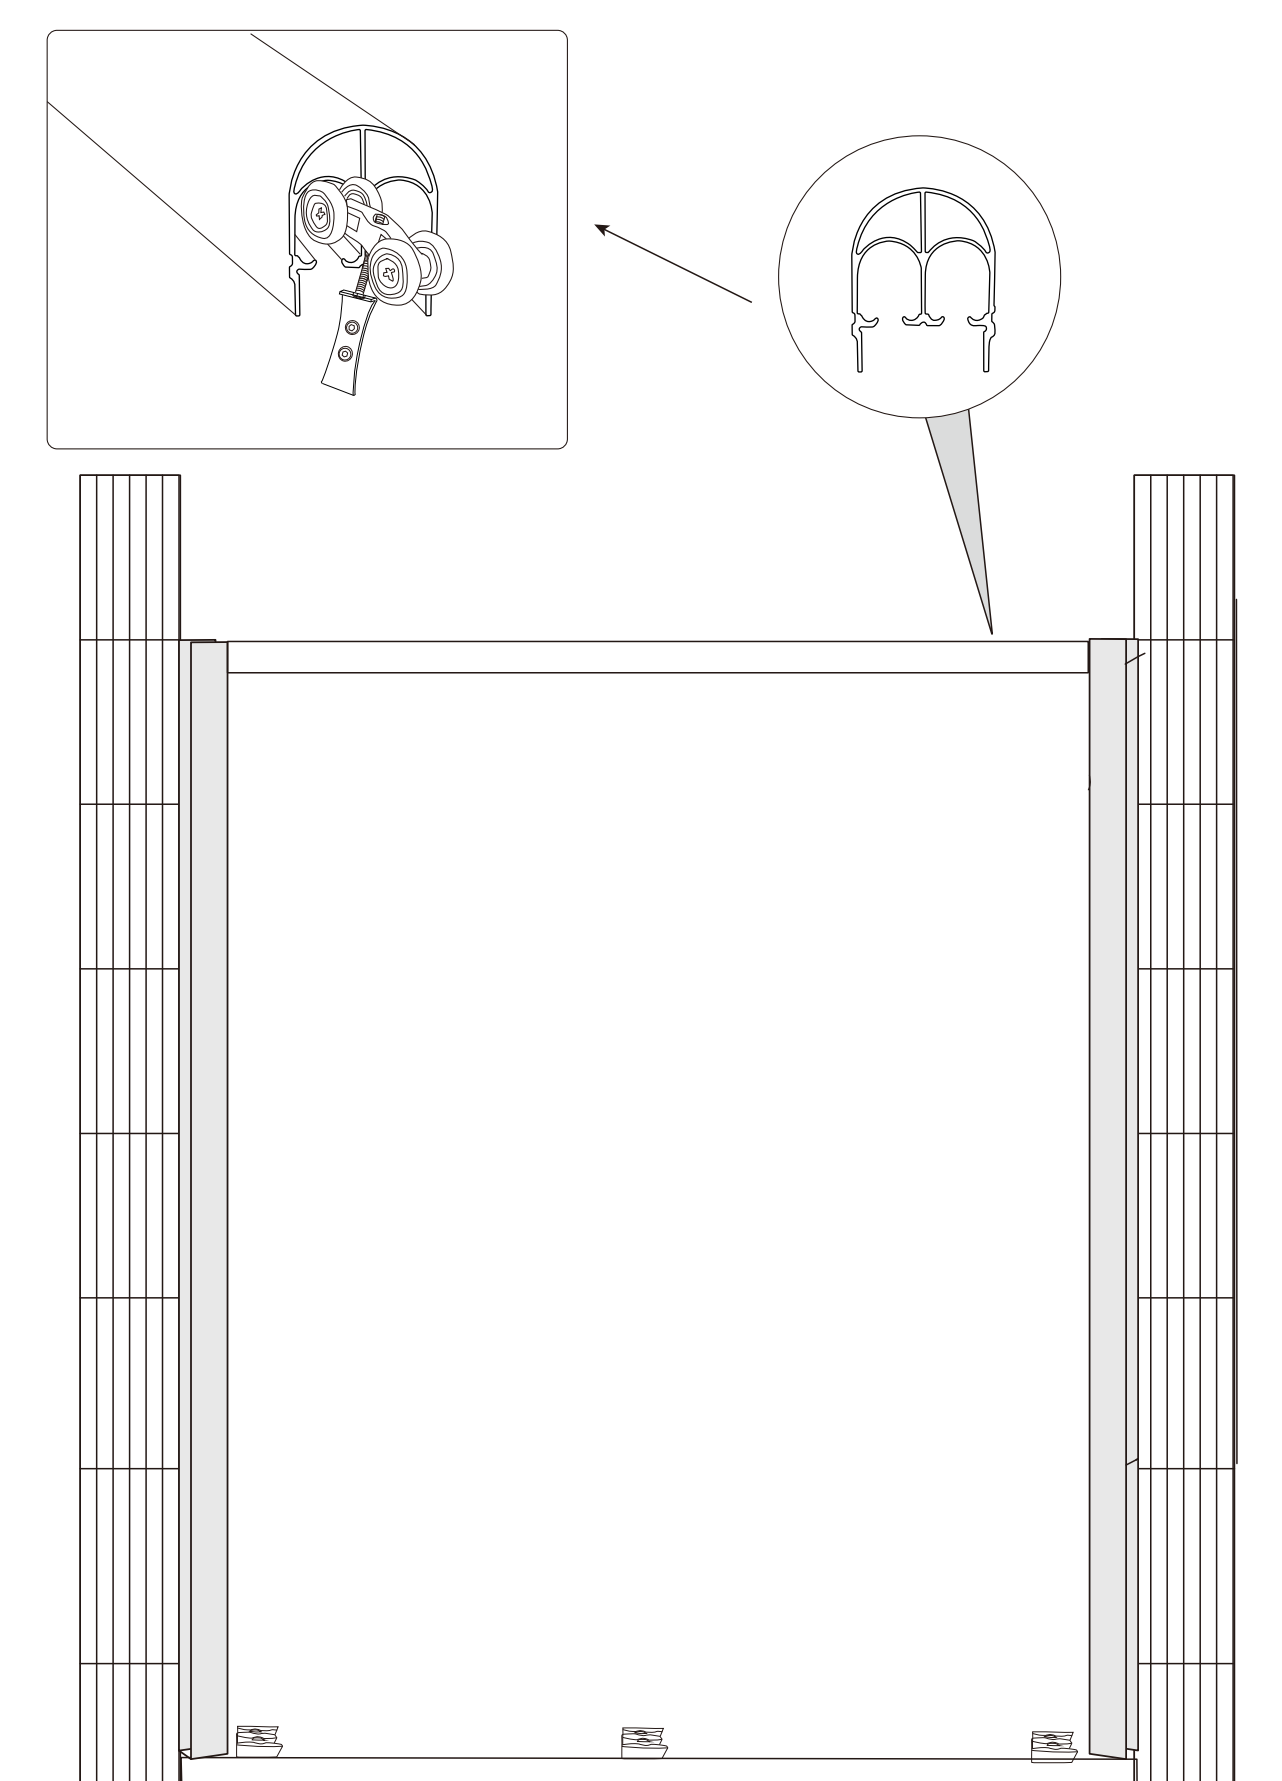Step 06




Put up track(with 4 rollers) on, use B-3 to fix it with 2 vertical frames if you feel not strong enough.

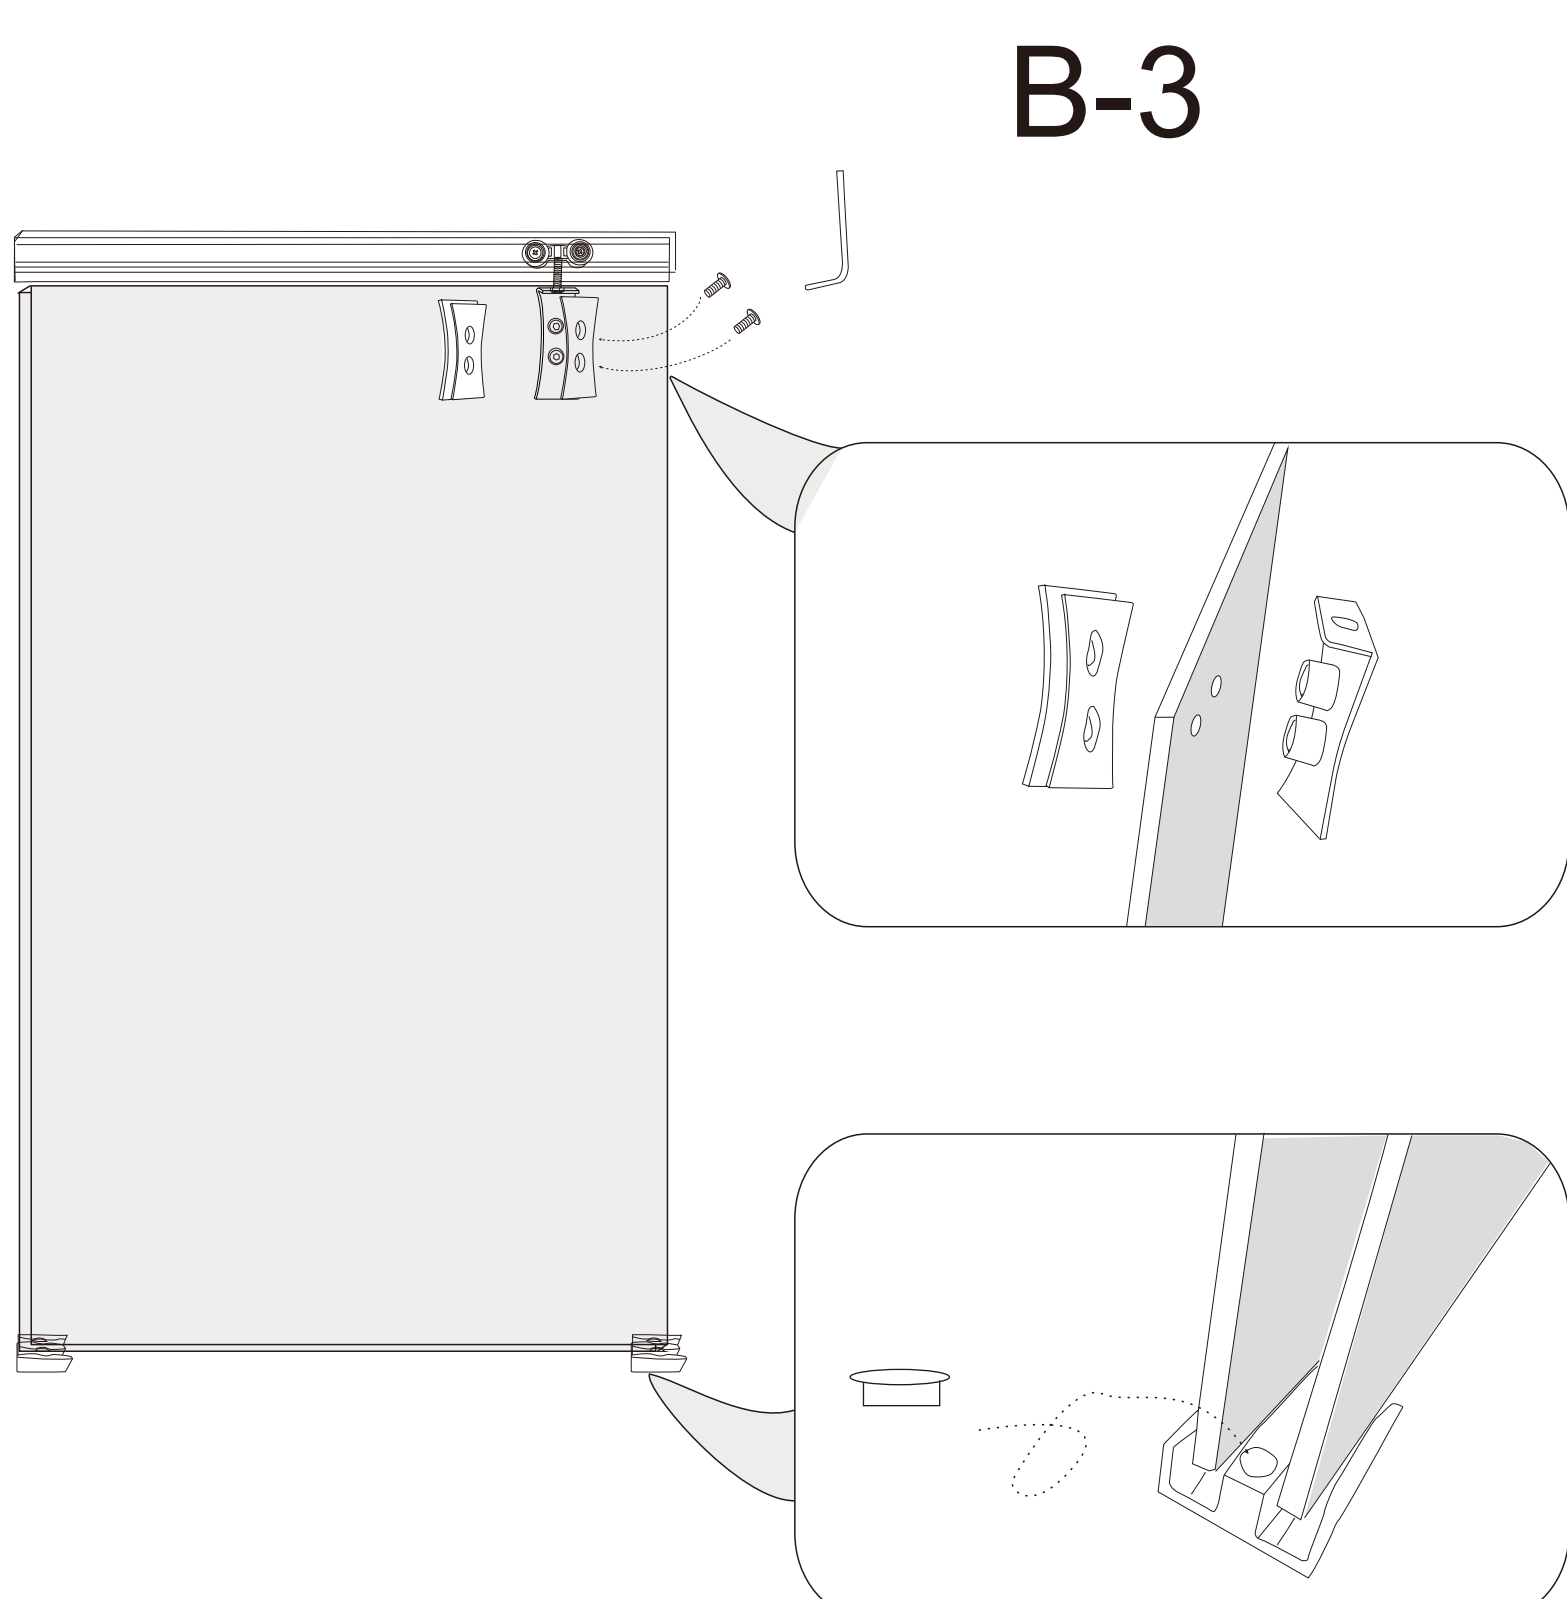Step 07



Ask someone to lift the glass for fixing it with hinges on rollers, leave a little space between glass and H

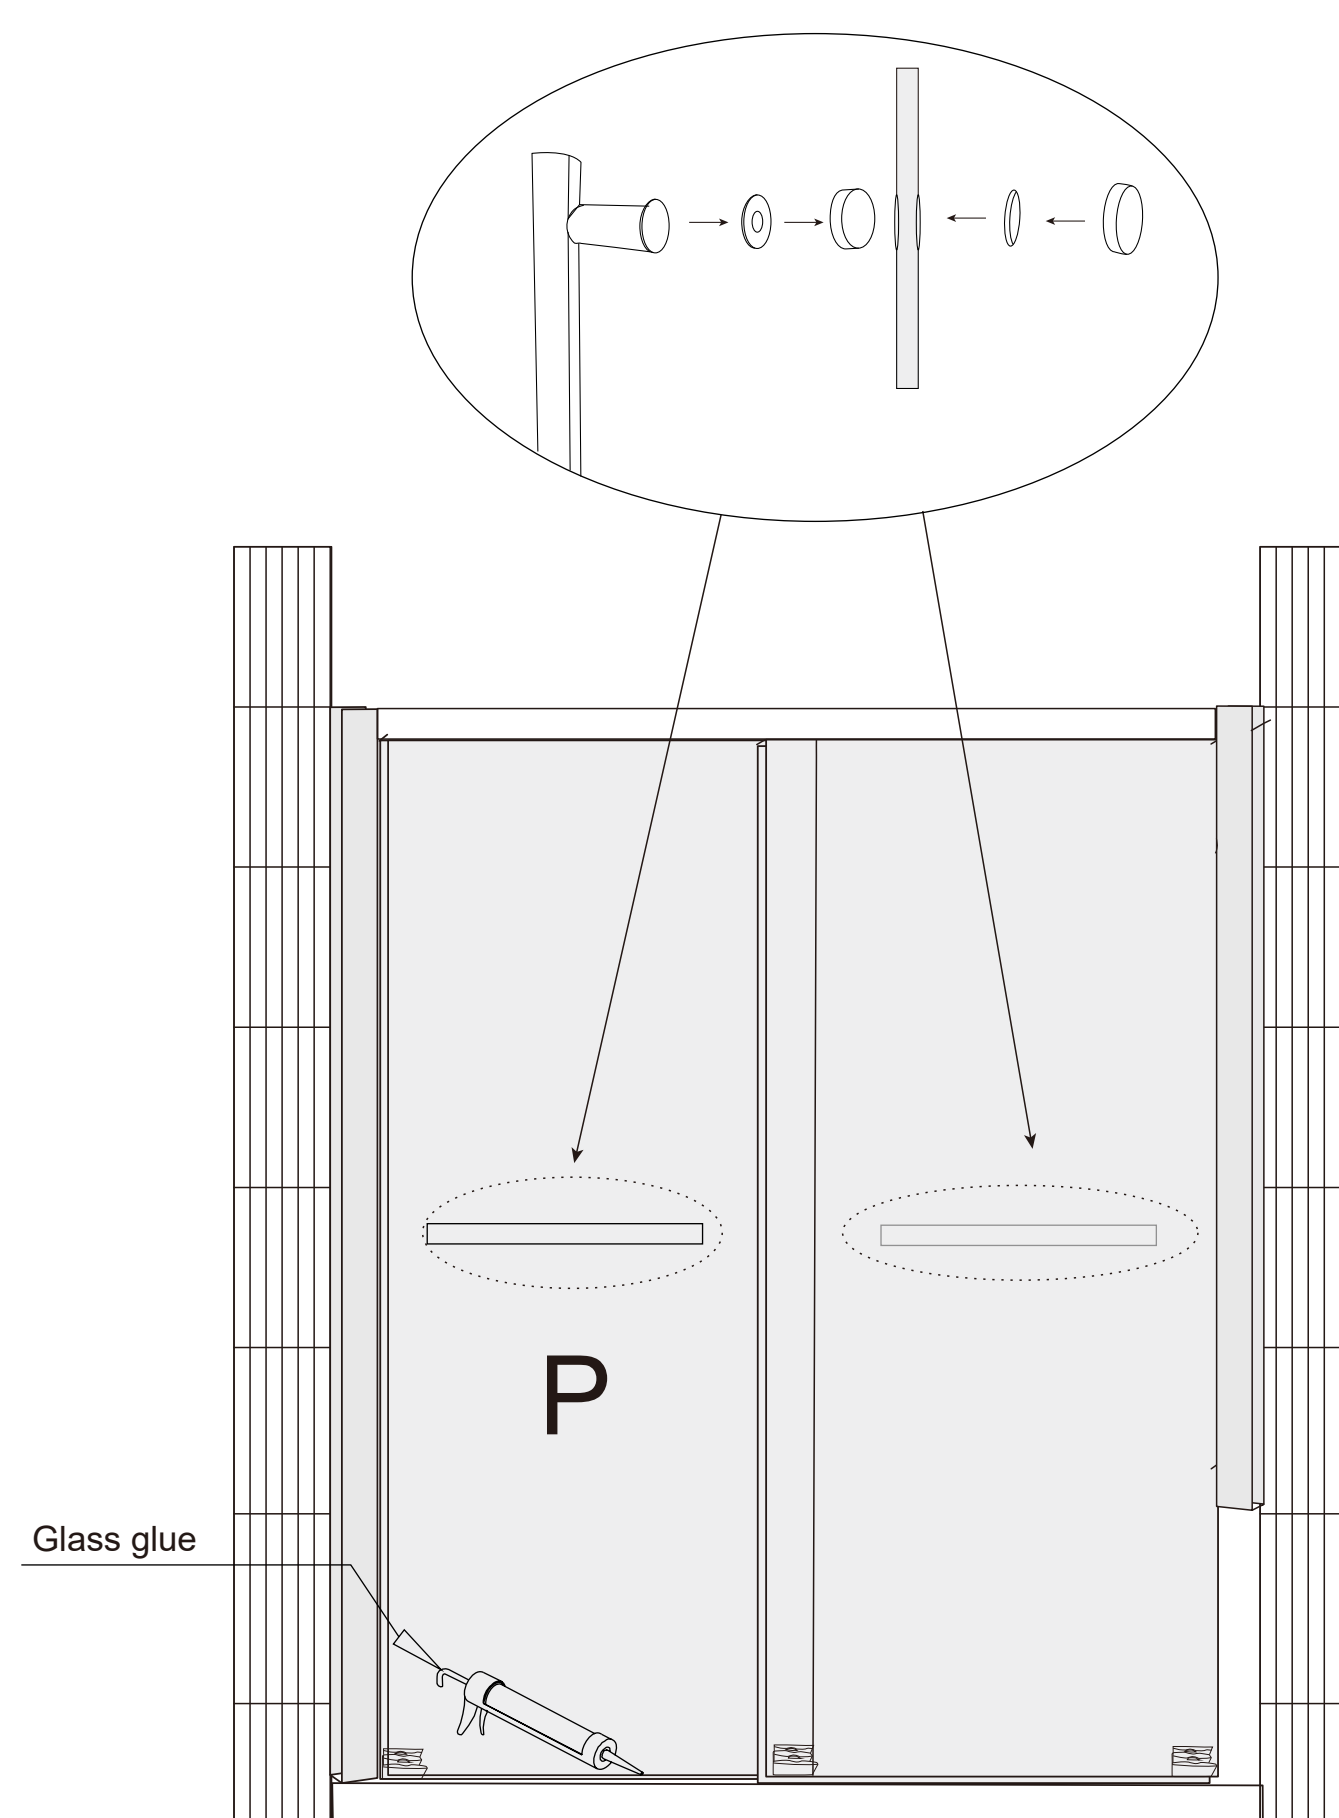Step 08



Make sure both sides are with rubber piece between glass and handle

Step 09

Remark

1. Cut up & down tracks to fit with your bathtub length.
2. Put rollers into up track first, and keep rollers inside, then deal with glass doors.
3. Before fixing glass doors with hinges on rollers, make sure the down side of glass is snapped into the track.
4. After installation of frame and glass, use glass glue on down side track.
5. ABOUT CLEANING
Glass: Use alcohol to wet a piece of cloth, then wipe the glass.
Down track: Usually use wet cloth to wipe the dust or water stains, oil stains require cleaner.