



ASSEMBLY INSTRUCTIONS

FULL DAY BED

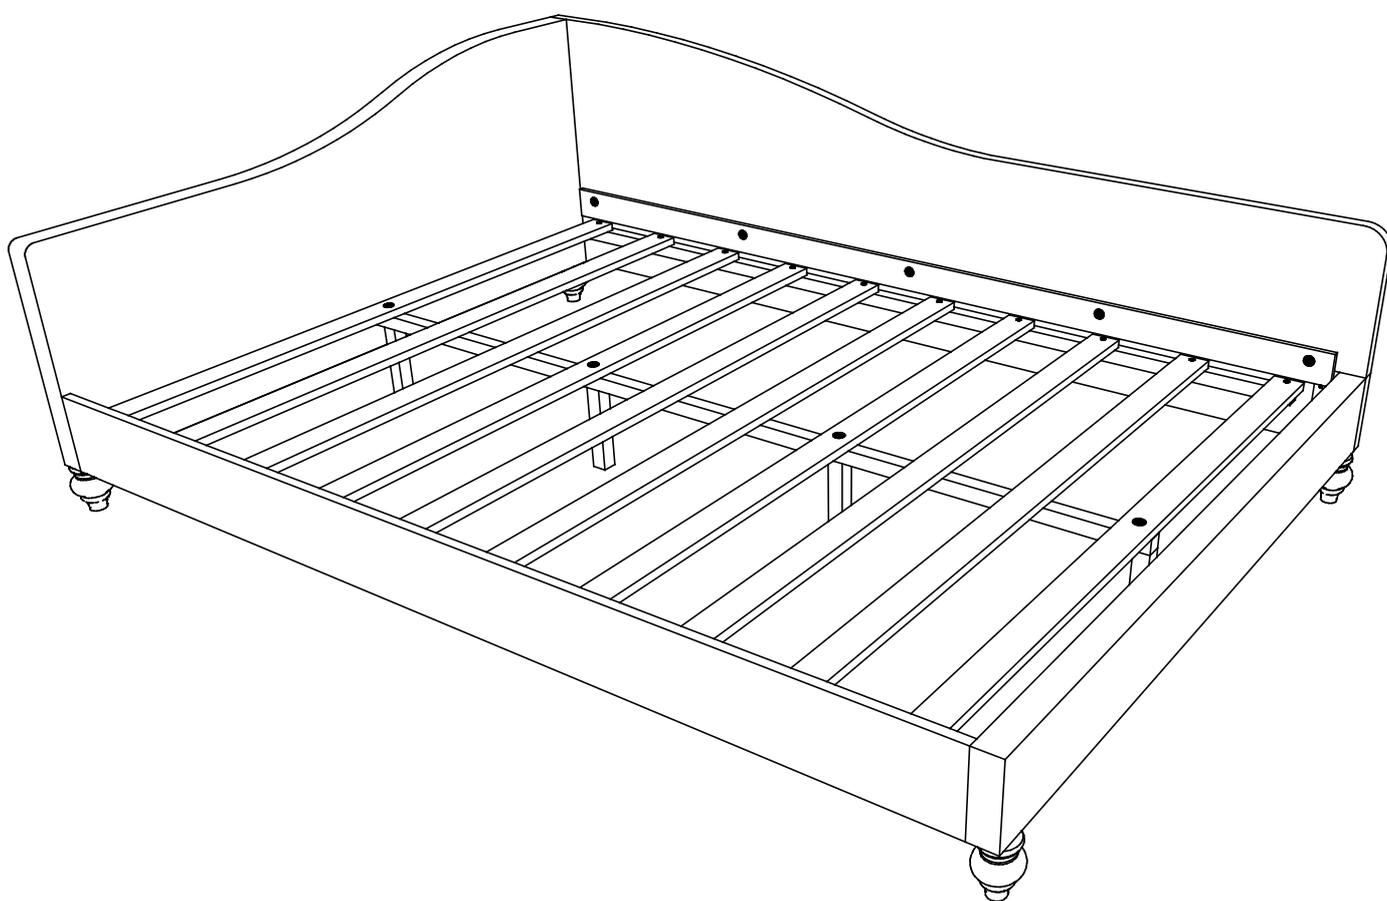





WF323811 & WF323812

Detail View

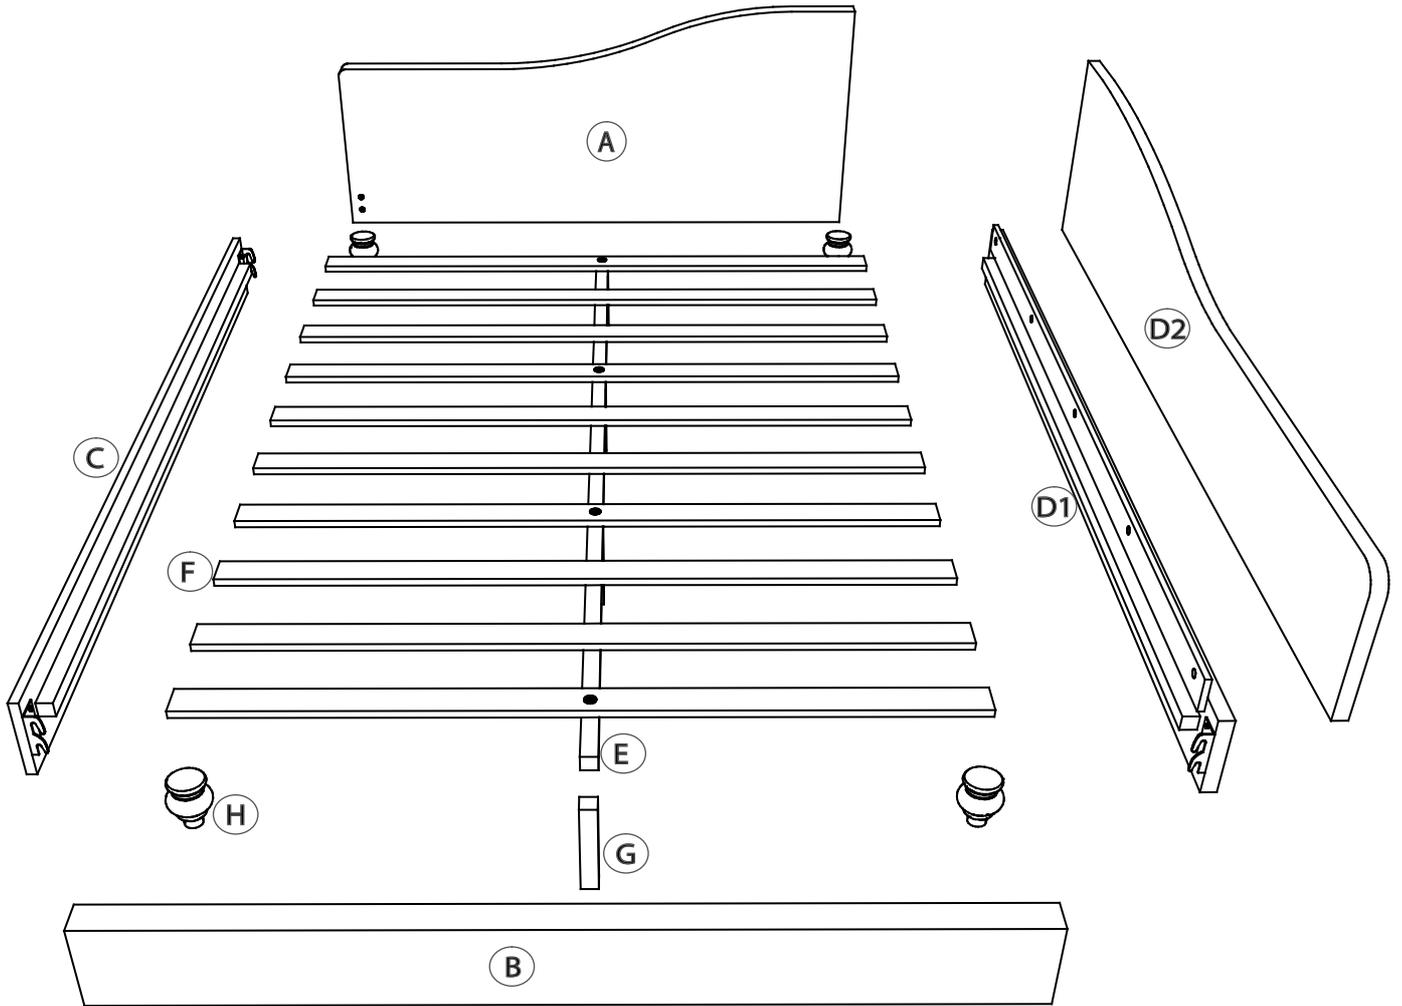



Part List

WF323811

| | | |
|---|---|---|
| C  LEFT SIDE RAIL - 1PC | D1  BOTTOM RIGHT SIDE RAIL - 1PC | D2  TOP RIGHT SIDE RAIL - 1PC |
| E  CENTER SUPPORT BAR - 1PC | | |



Part List

WF323812

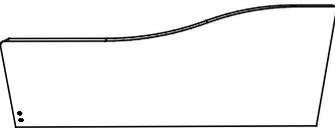
| | | |
|---|---|--|
| A  HEADBOARD - 1PC | B  FOOTBOARD - 1PC | F  SLATS - 10PCS |
| G  CENTER SUPPORT LEGS - 4PCS | H  HEAD&FOOTBOARD LEGS - 4PCS | |

Hardware List

in WF323812


| | | |
|---|--|---|
| 1  Allen key (1pc) | 2  5/16"*45mm Hex-Head bolts (4pcs) | 3  1/4"*60mm Hex-Head bolts (4pcs) |
| 4  5/16"*30mm Hex-Head bolts (11pcs) | 5  5/16" Flat Washer (15pcs) | 6  1/4" Flat Washer (4pcs) |
| 7  F4*35mm Screw (20pcs) | | |
| | | |

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:

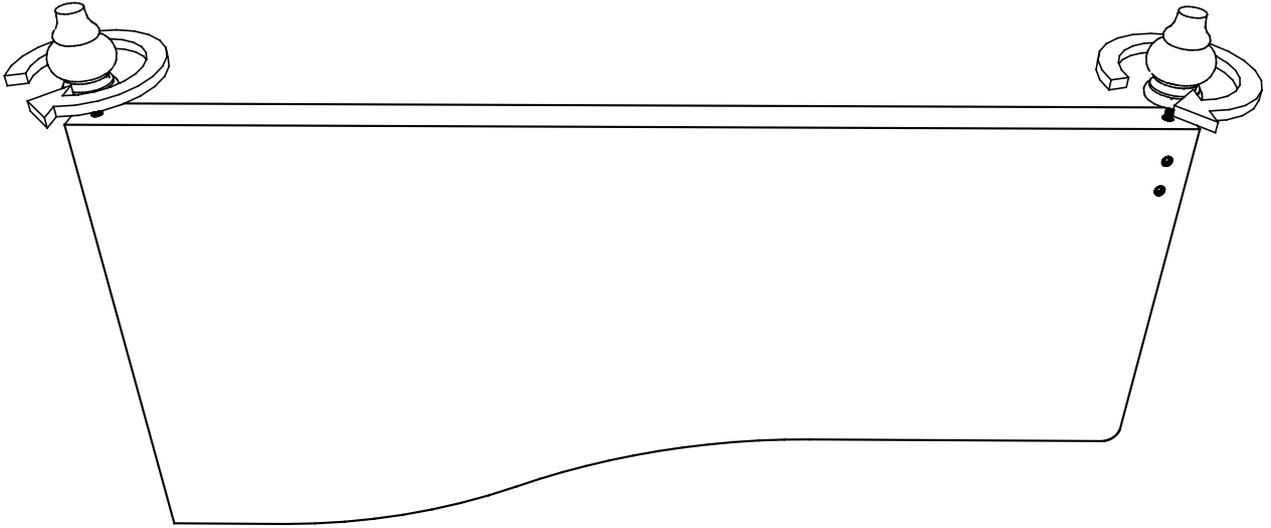

- Screw in Head & FootBoard Legs (H) to HeadBoard (A).


STEP 2:

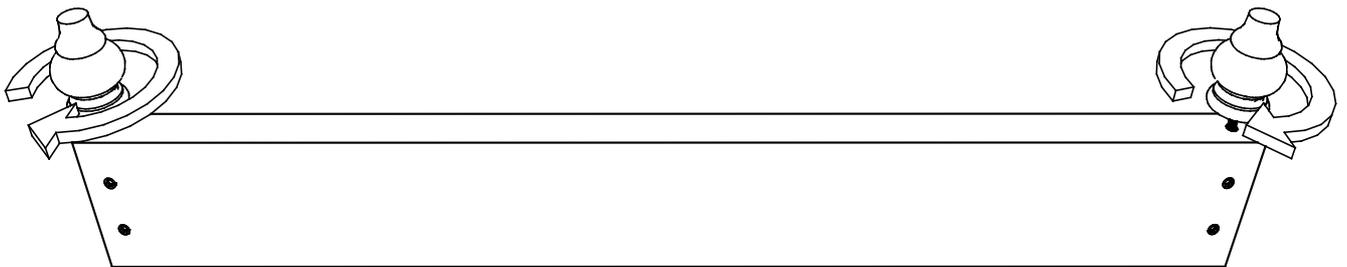

- Screw in Head & FootBoard Legs (H) to FootBoard (B).

STEP 3:


| | | | |
|-------------|---|-------------|---|
| 4 |  | 5 |  |
| 2PCS | | 2PCS | |

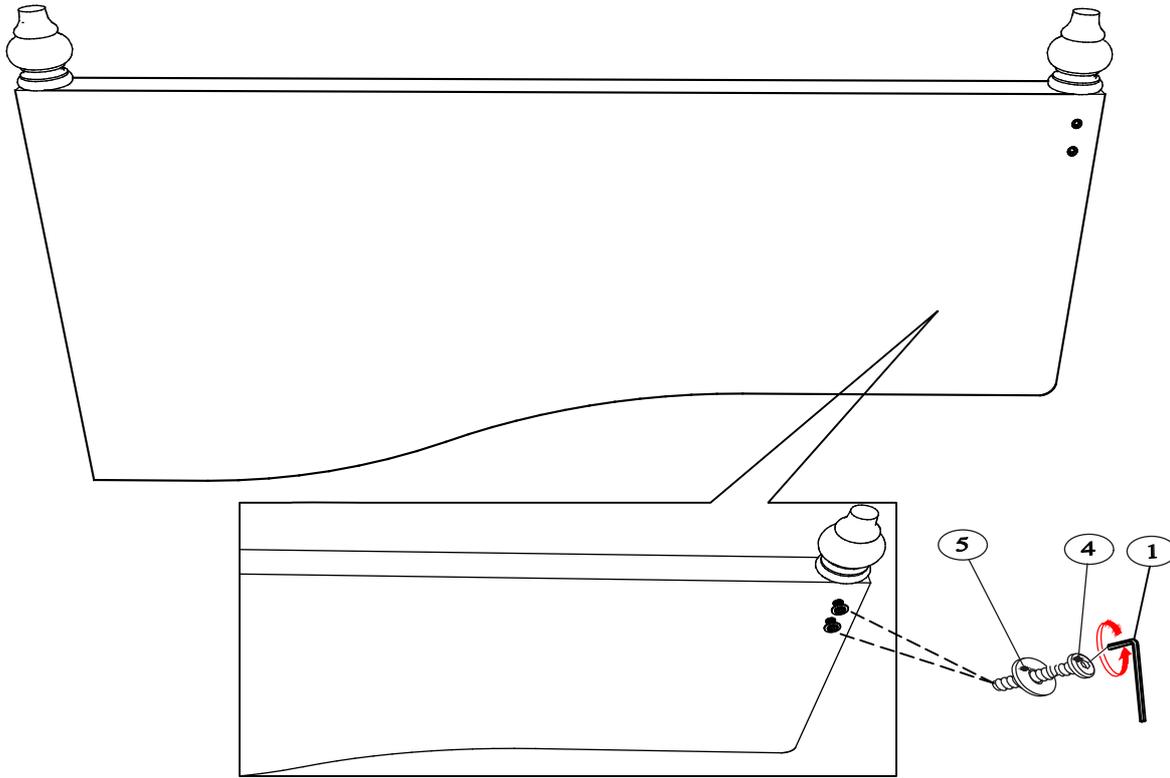

- Use Allen Key (1) to loosely (do not tighten) drive Bolt (4) with Flat Washer (5) onto the Headboard (A).

STEP 4:


| | | | |
|-------------|---|-------------|---|
| 4 |  | 5 |  |
| 4PCS | | 4PCS | |

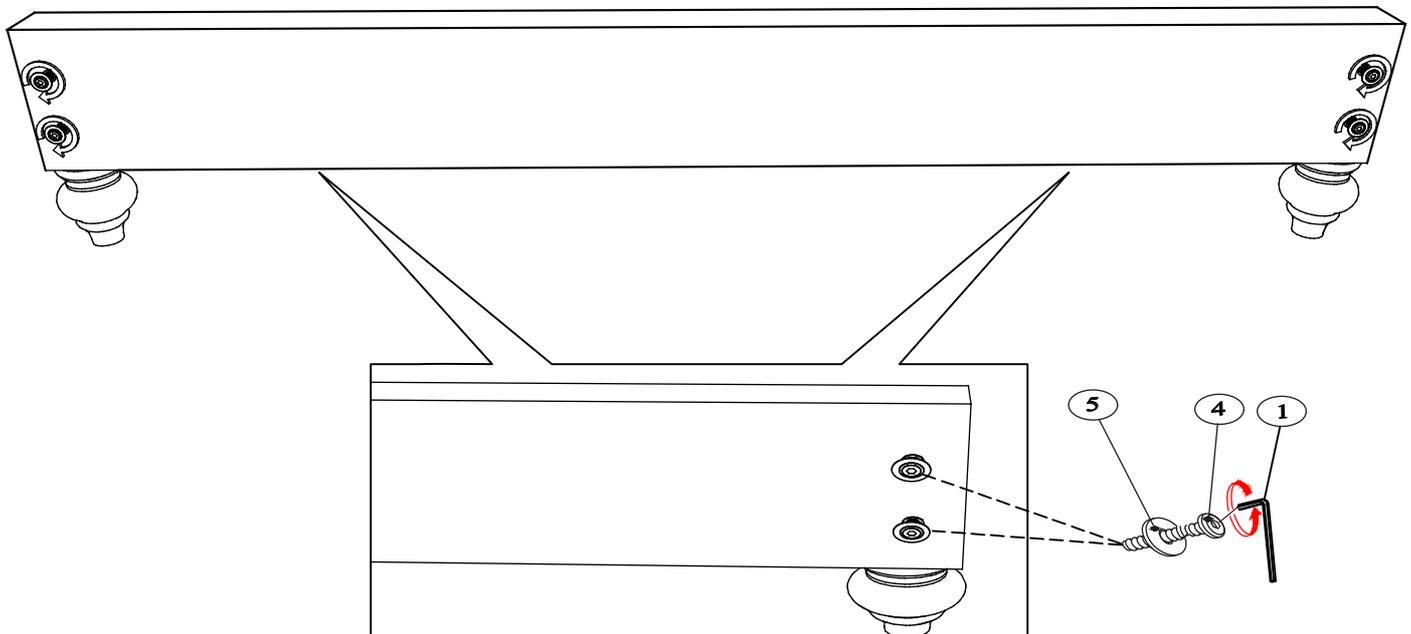

- Use Allen Key (1) to loosely (do not tighten) drive Bolt (4) with Flat Washer (5) onto the Footboard (B).


STEP 5:

| | | | |
|------|---|------|---|
| 4 |  | 5 |  |
| 5PCS | | 5PCS | |

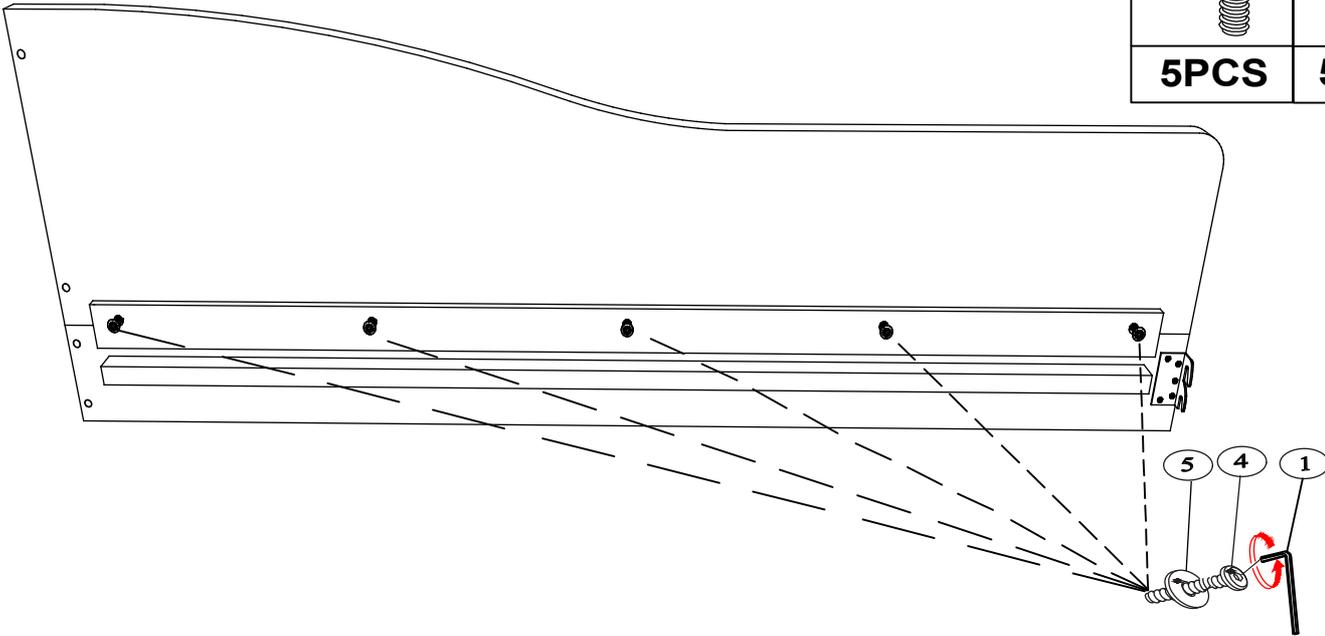


- Connect TOP RIGHT SIDERAIL to BOTTOM RIGHT SIDERAIL by use Bolt (4) with Flat Washer (5). Then tighten the bolts fully.


STEP 6:

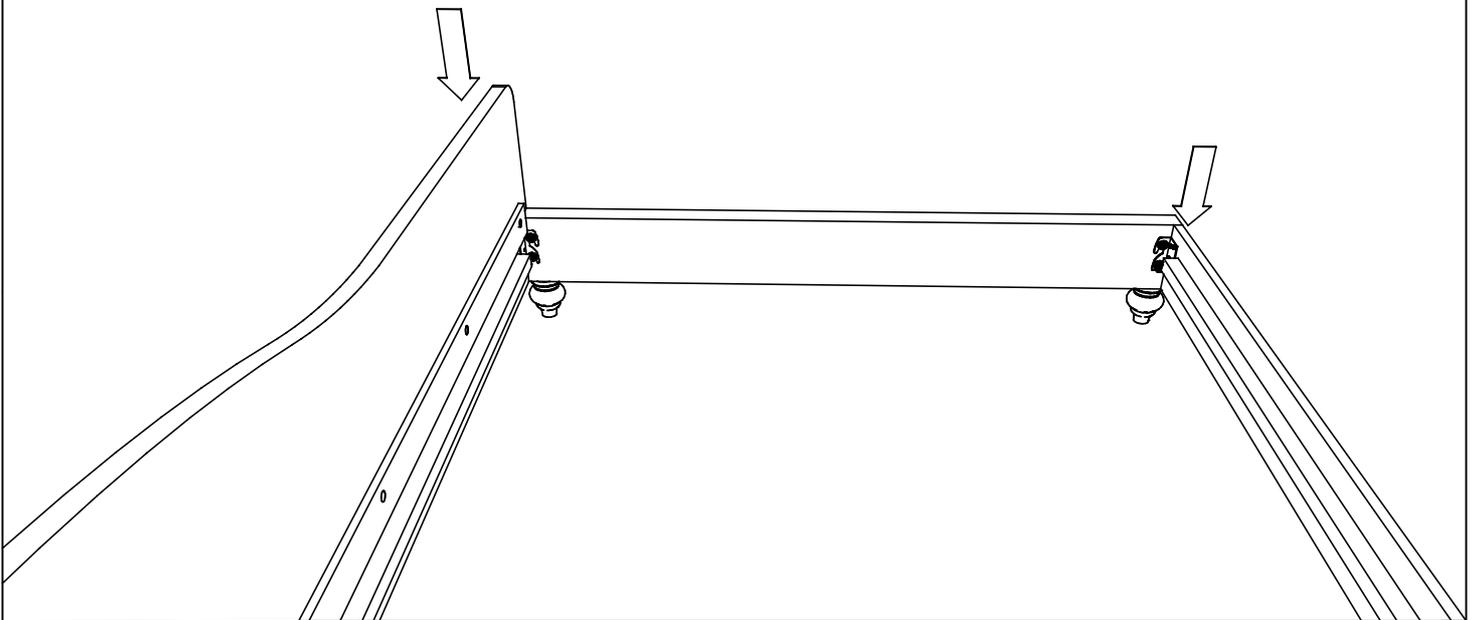

- Place the hook of Left & Right SideRail (C & D1,D2) to Bolt (4) on the FootBoard (B). Then tighten the Bolt (4) fully.

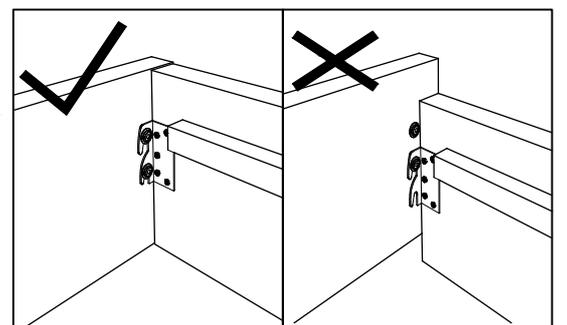


STEP 7:

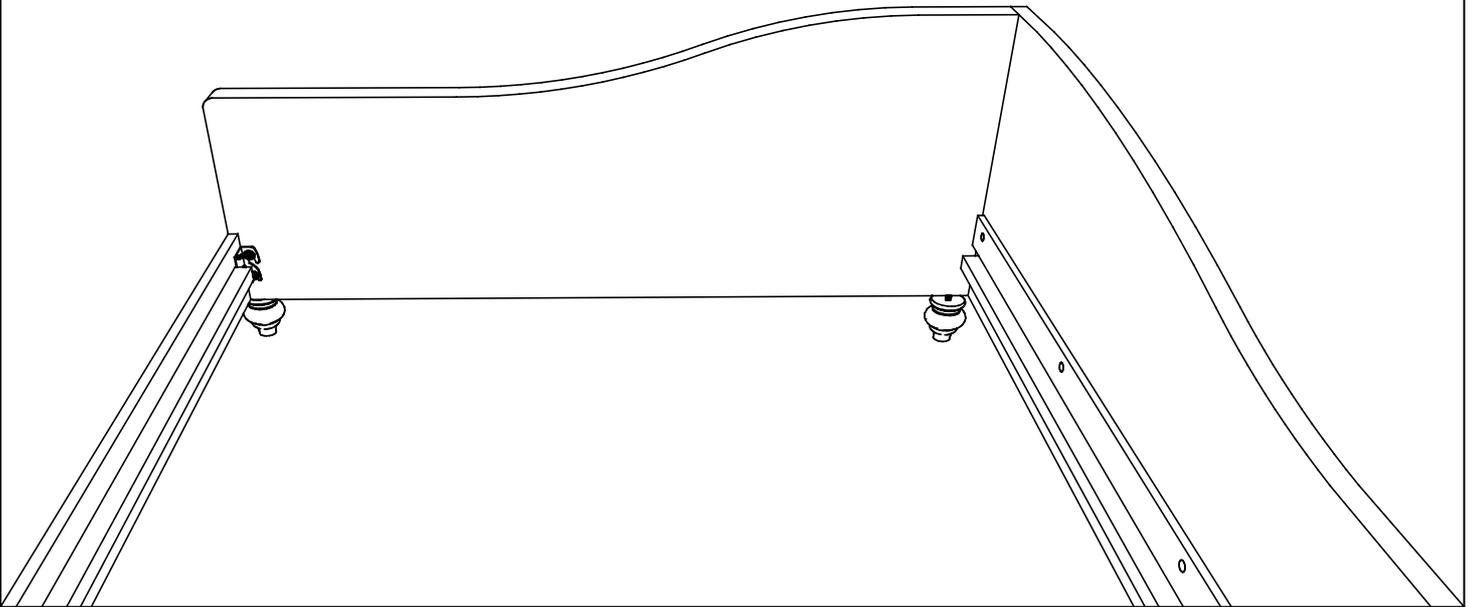

- Place the hook of Left SideRail (C) to Bolt (4) on the HeadBoard (A). Then tighten the Bolt (4) fully.


STEP 8:

| | | | |
|-------------|--|-------------|--|
| 2 | | 5 | |
| 4PCS | | 4PCS | |

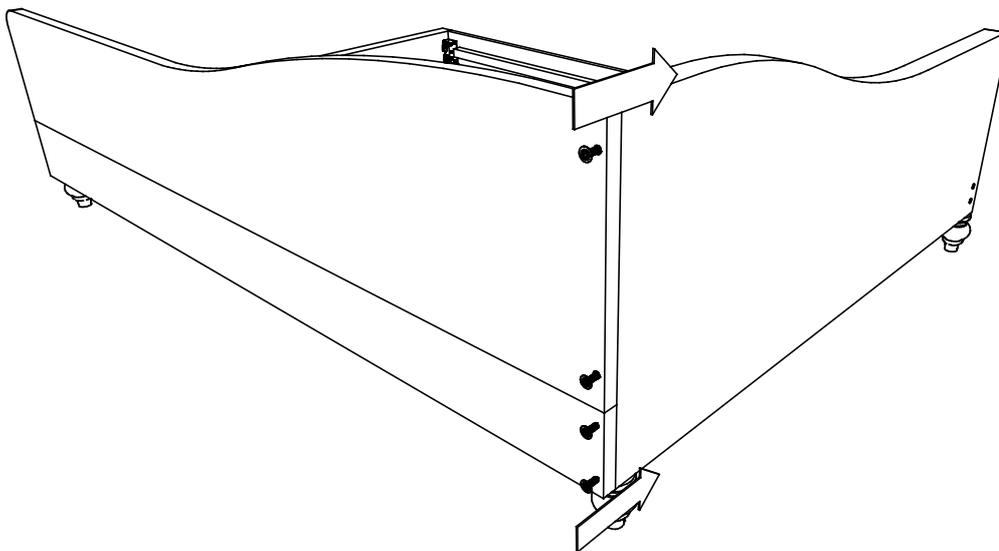


- Connect the TOP RIGHT SIDERAIL and BOTTOM RIGHT SIDERAIL (D1 & D2) to the HeadBoard (A) by use Bolt (2) fitted with Flat Washer (5). Then tighten bolts fully.

STEP 9:

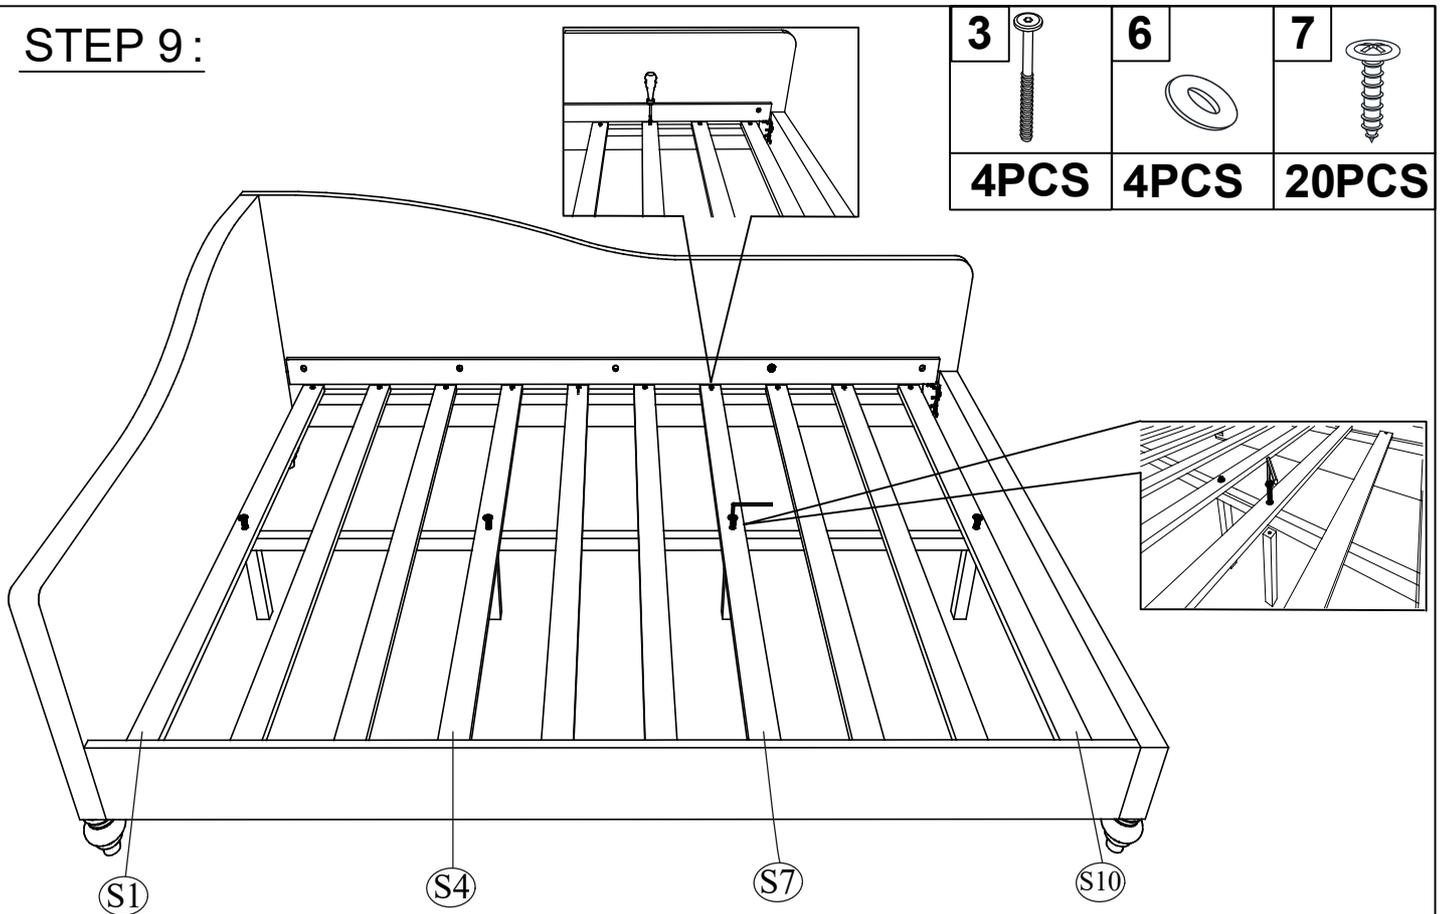

- Set Bolt (3) into Flat Washer (6), then pass assembled Bolts through Slat (S1,S4,S7,S10) and Center Support Bar (E) in turn, fit into Center Support Legs (G) then tighten with Allen Key (1).
- Use the ScrewDriver to install the Screw (7) into the hole on 2 heads of the Slat (F).

STEP 10:

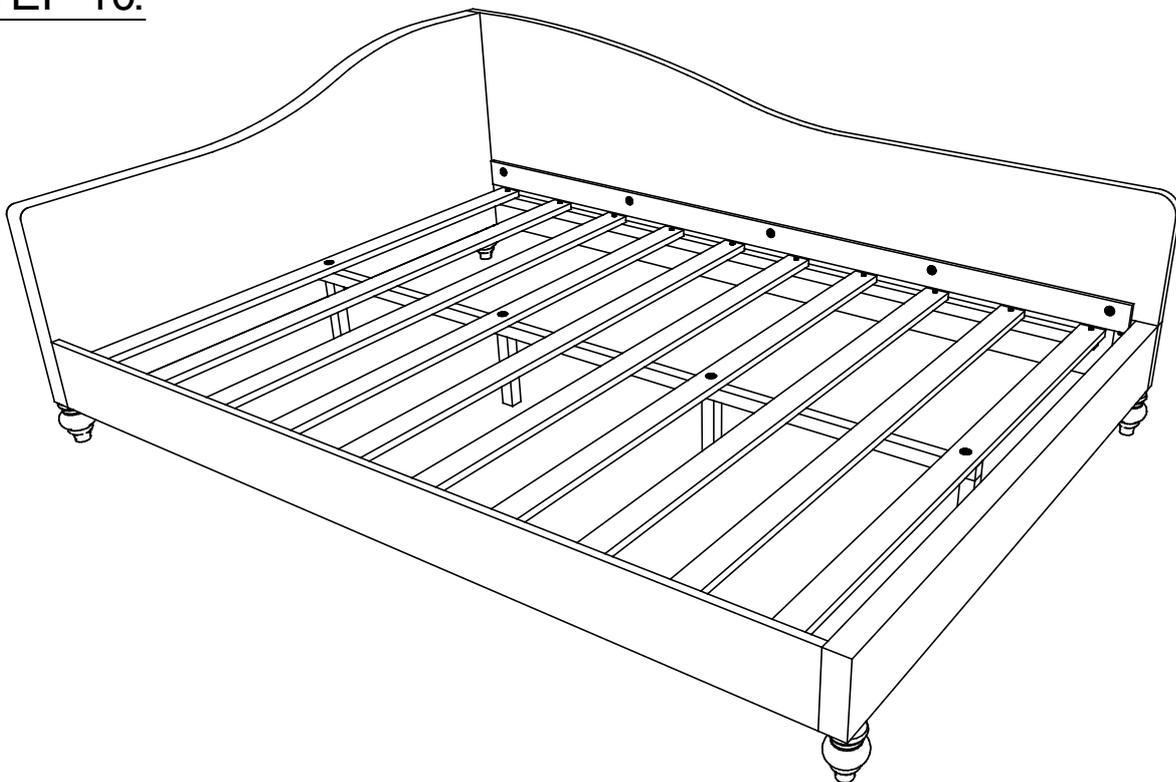

THE BED IS COMPLETE !

