


ASSEMBLY INSTRUCTIONS


SKU CODE: MF323494

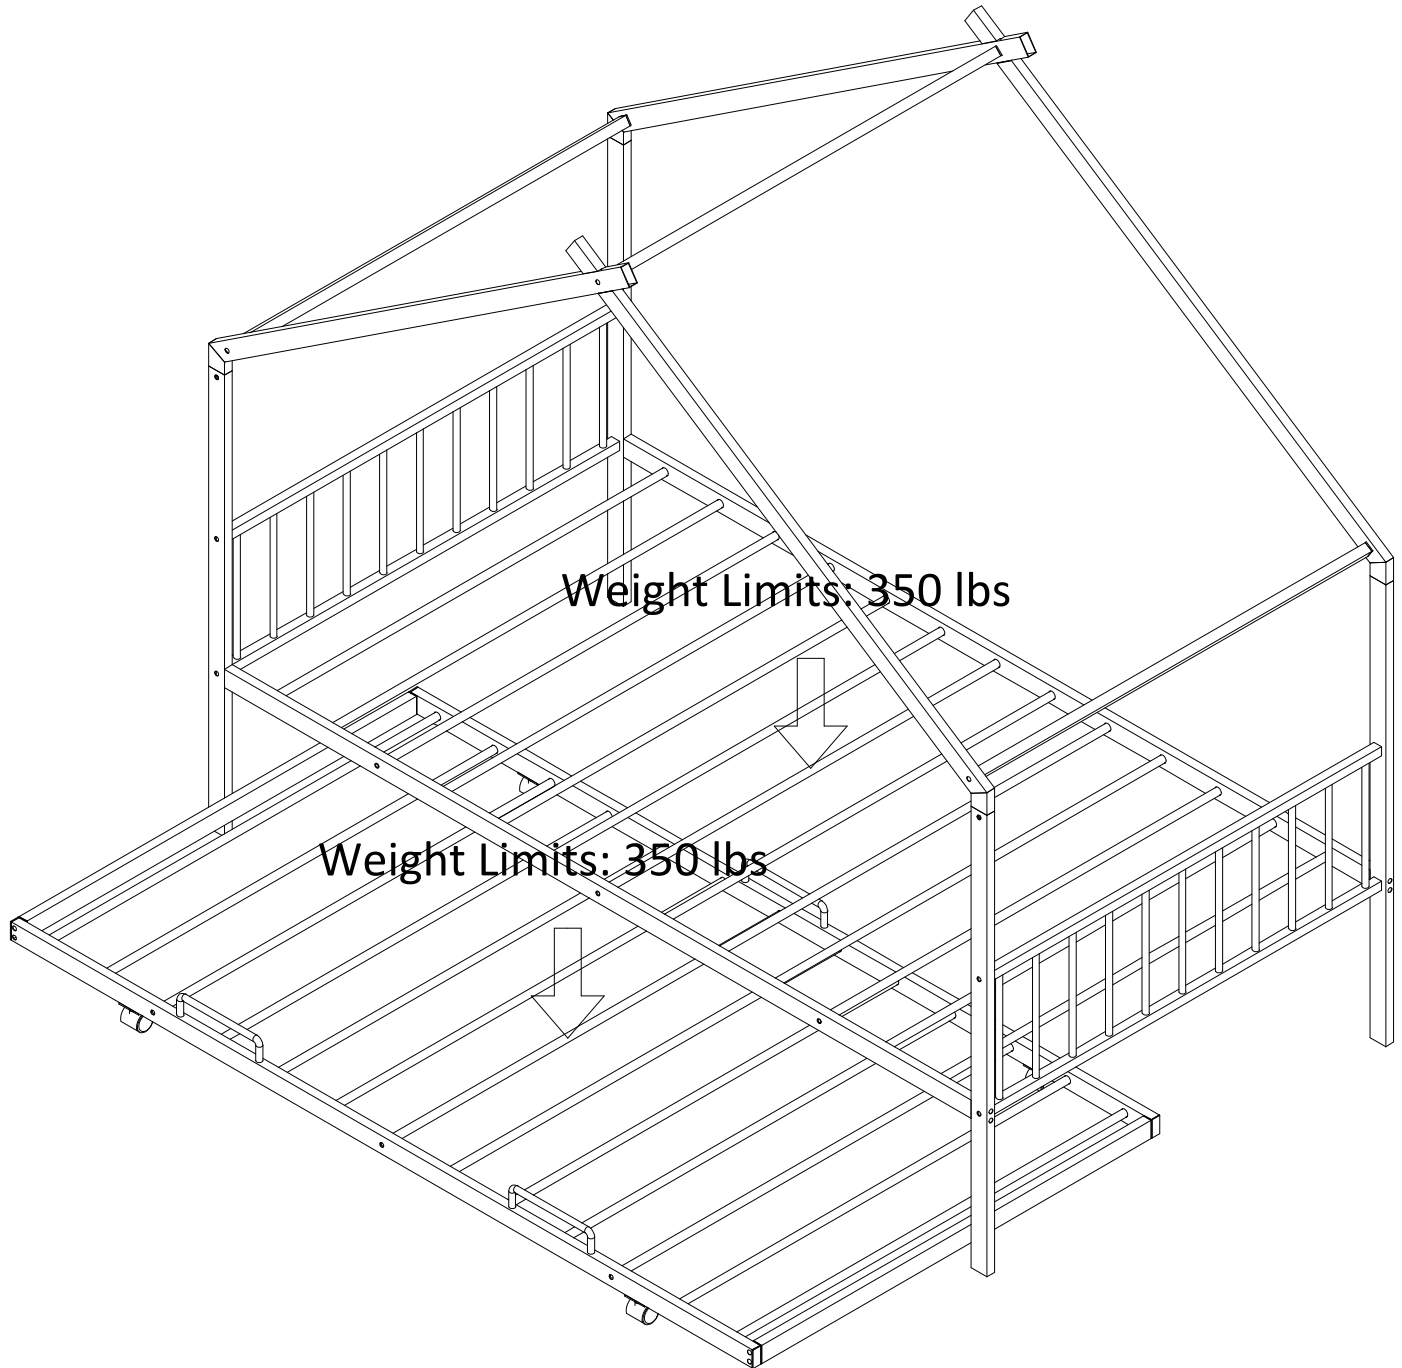

Detail View


BUNK BED

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

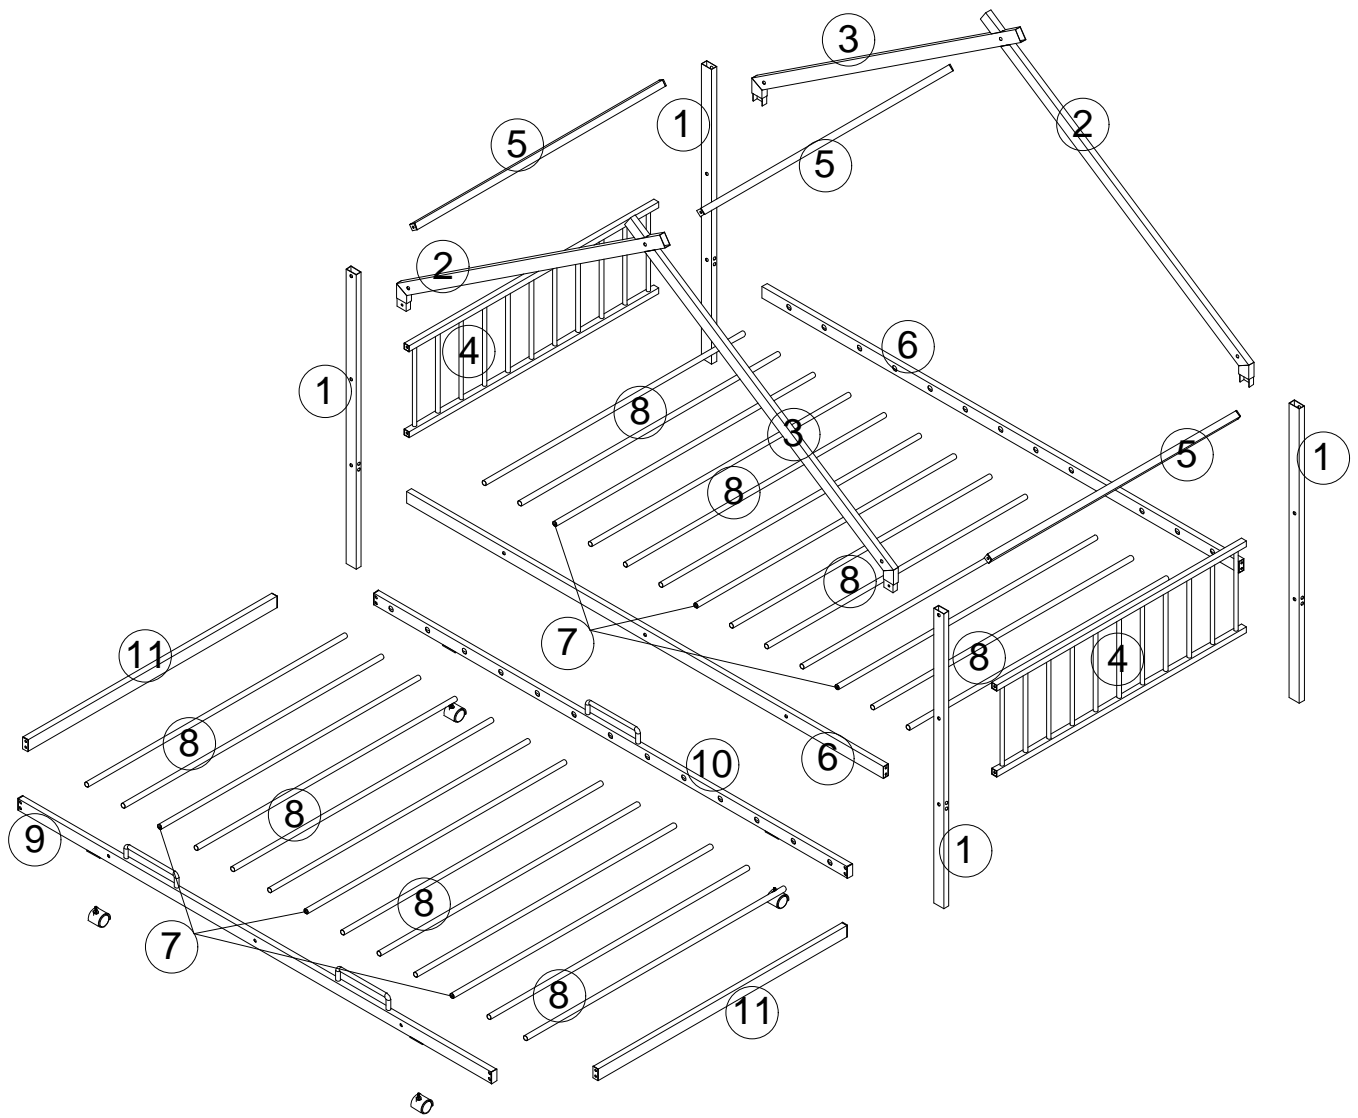

ASSEMBLY INSTRUCTIONS

BUNK BED

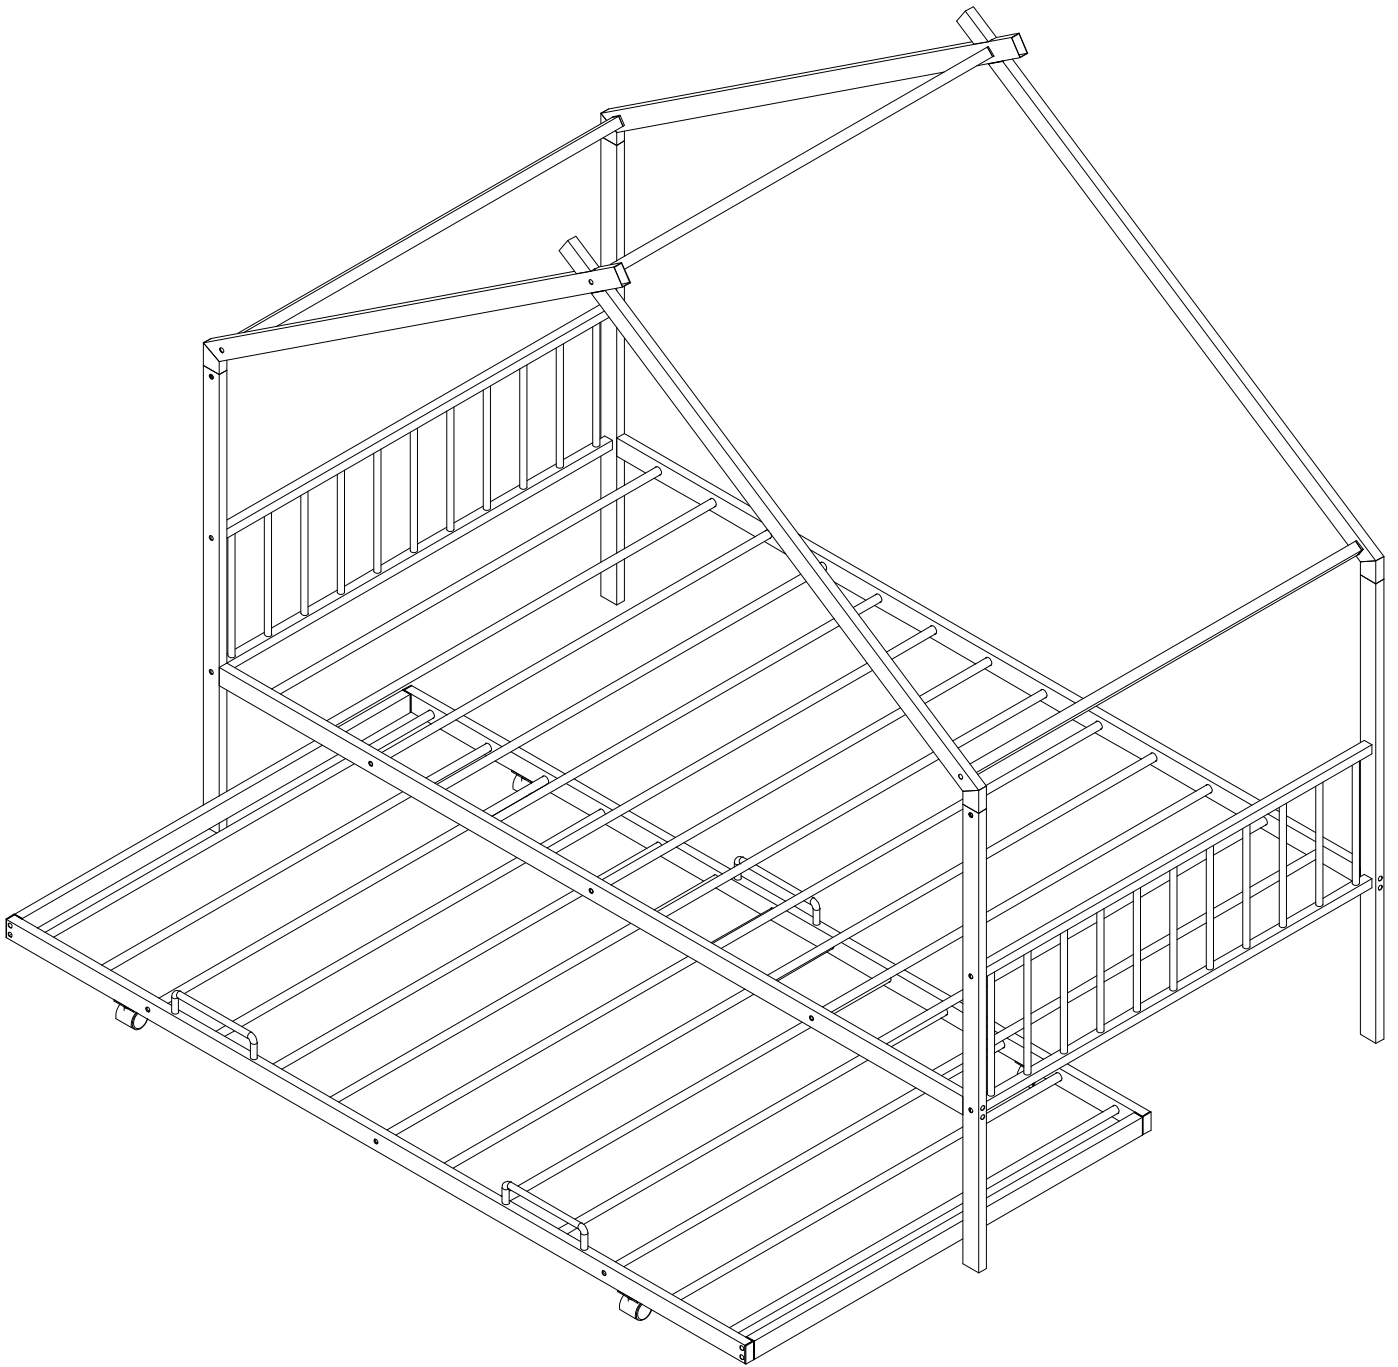
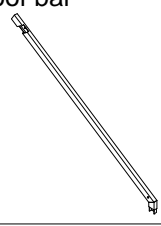

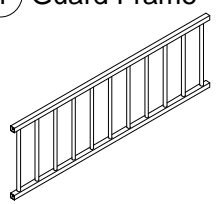
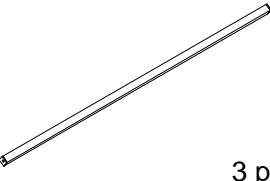
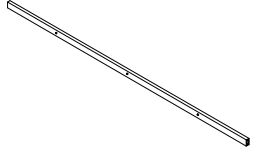
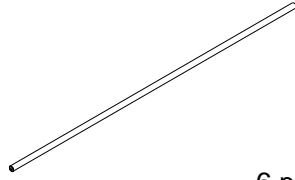
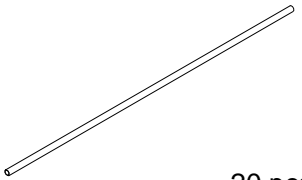
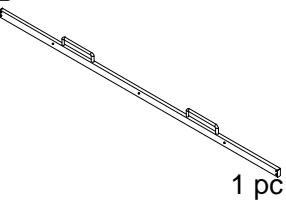
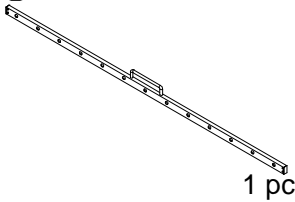
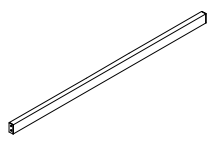


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.





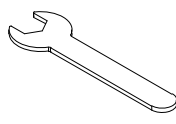


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

PART LIST MF323494


<p>① Vertical bar</p>  <p style="text-align: right;">4 pcs</p>	<p>② Roof bar</p>  <p style="text-align: right;">2 pcs</p>	<p>③ Roof bar</p>  <p style="text-align: right;">2 pcs</p>	<p>④ Guard Frame</p>  <p style="text-align: right;">2 pcs</p>
<p>⑤ Horizontal bar</p>  <p style="text-align: right;">3 pcs</p>	<p>⑥ Horizontal bar</p>  <p style="text-align: right;">2 pcs</p>	<p>⑦ Slats</p>  <p style="text-align: right;">6 pcs</p>	<p>⑧ Slats</p>  <p style="text-align: right;">20 pcs</p>
<p>⑨ Horizontal bar</p>  <p style="text-align: right;">1 pc</p>	<p>⑩ Horizontal bar</p>  <p style="text-align: right;">1 pc</p>	<p>⑪ Horizontal bar</p>  <p style="text-align: right;">2 pcs</p>	

HARDWARE LIST MF323494
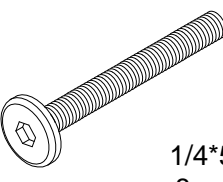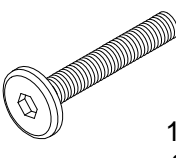
<p>Ⓐ Bolts</p>  <p style="text-align: right;">1/4*55 8 pcs</p>	<p>Ⓑ Bolts</p>  <p style="text-align: right;">1/4*40 22 pcs</p>	<p>Ⓒ Bolts</p>  <p style="text-align: right;">1/4*18 16 pcs</p>	<p>Ⓓ Allen Key</p>  <p style="text-align: right;">4*59 1 pcs</p>
<p>Ⓔ Wrench</p>  <p style="text-align: right;">13*90 1 pc</p>	<p>Ⓕ Caster</p>  <p style="text-align: right;">2 pcs</p>	<p>Ⓖ Locking Caster</p>  <p style="text-align: right;">2 pcs</p>	


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF323494


STEP 1

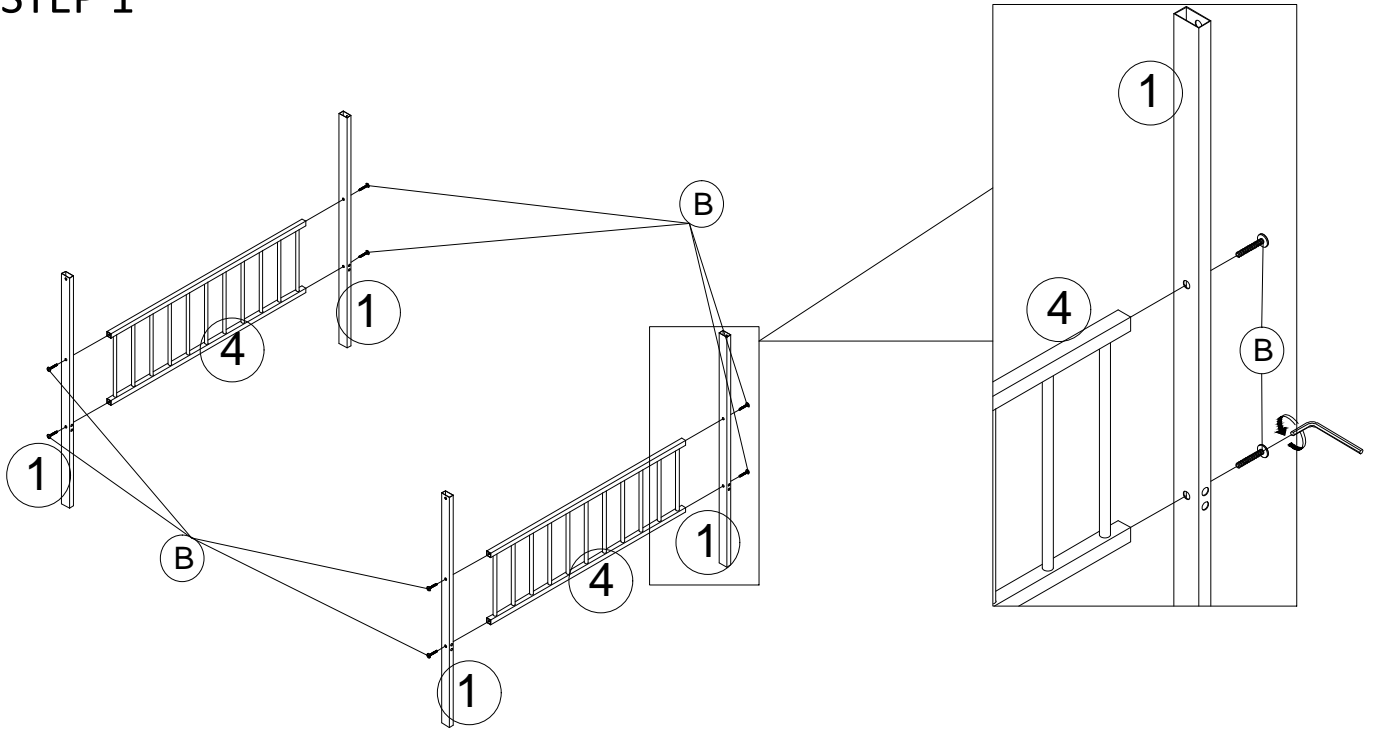

(B)		1/4*40	8 pcs
-----	---	--------	-------


STEP 2

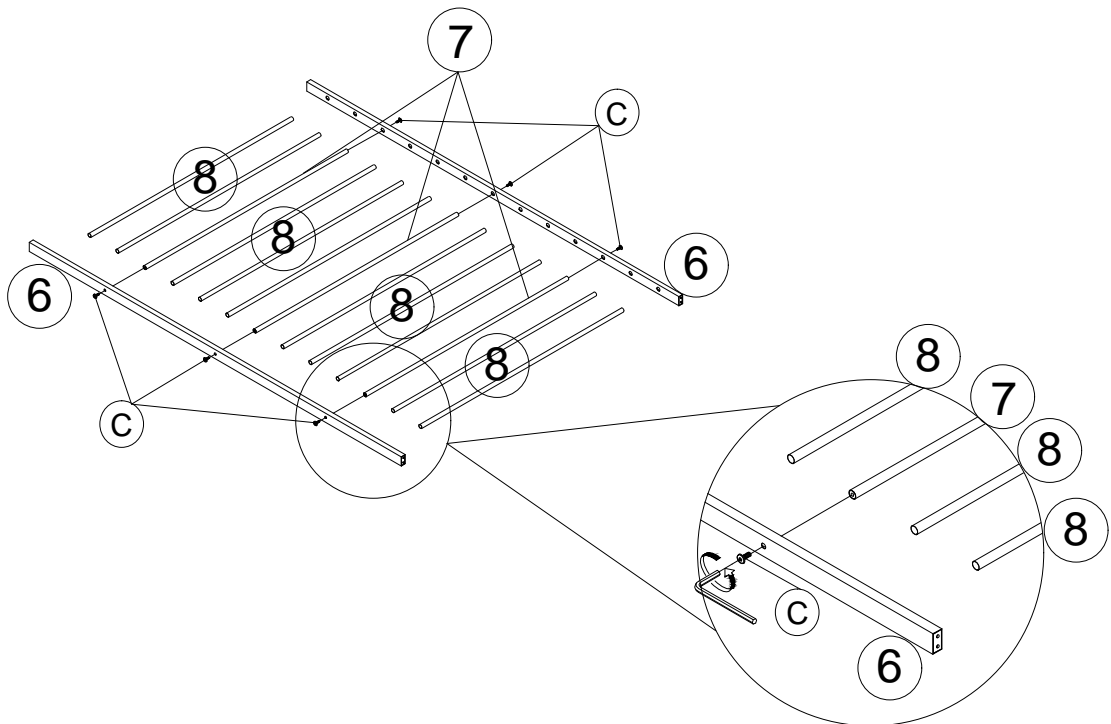


(C)		1/4*18	6 pcs
-----	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF323494

STEP 3

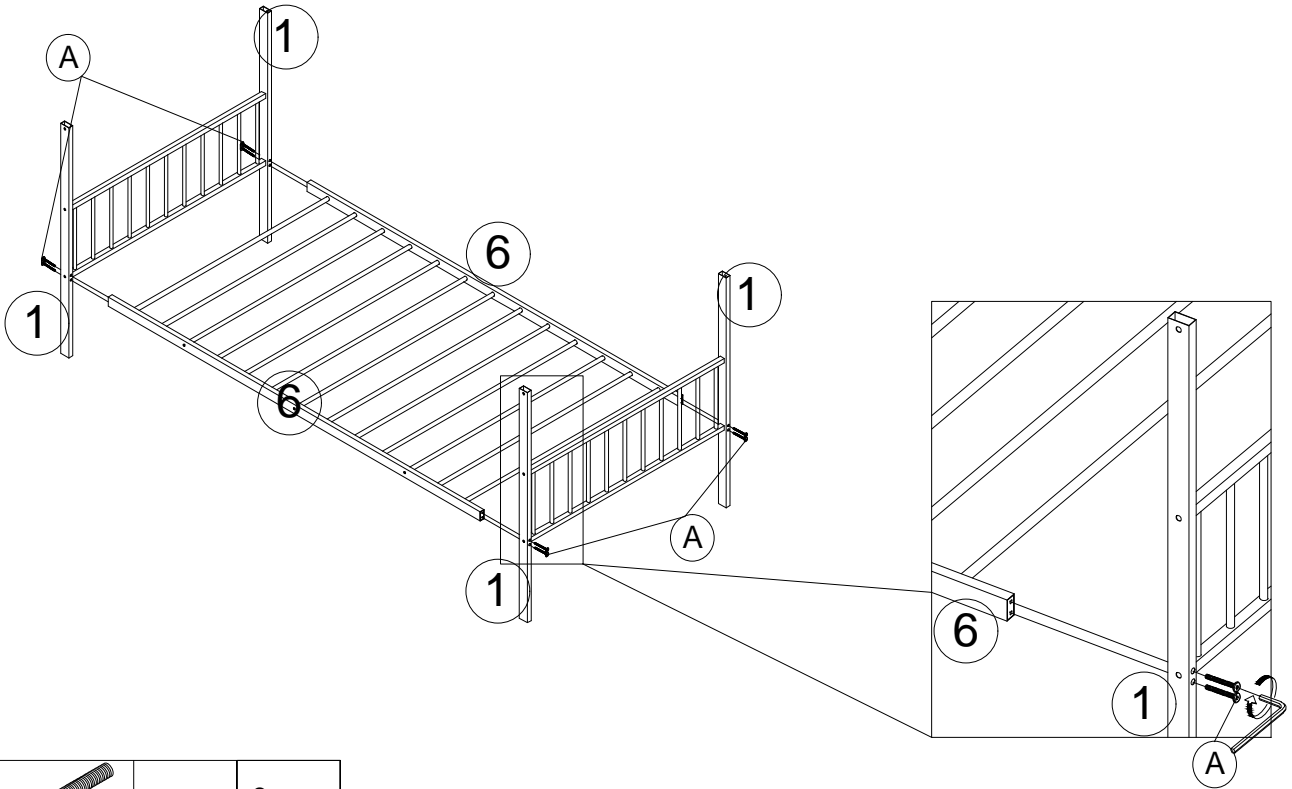

A		1/4*55	8 pcs
---	---	--------	-------


STEP 4

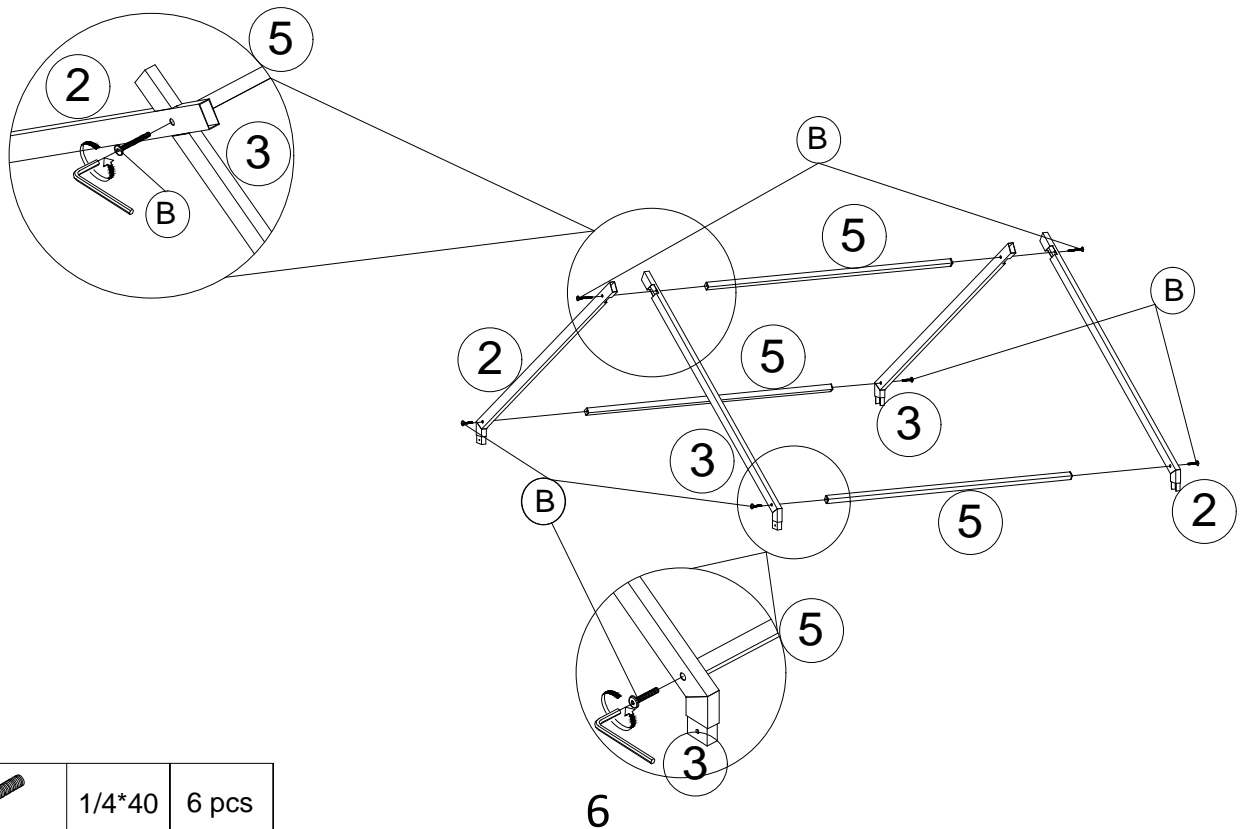


B		1/4*40	6 pcs
---	---	--------	-------


BUNK BED ASSEMBLY INSTRUCTIONS ITEM: MF323494

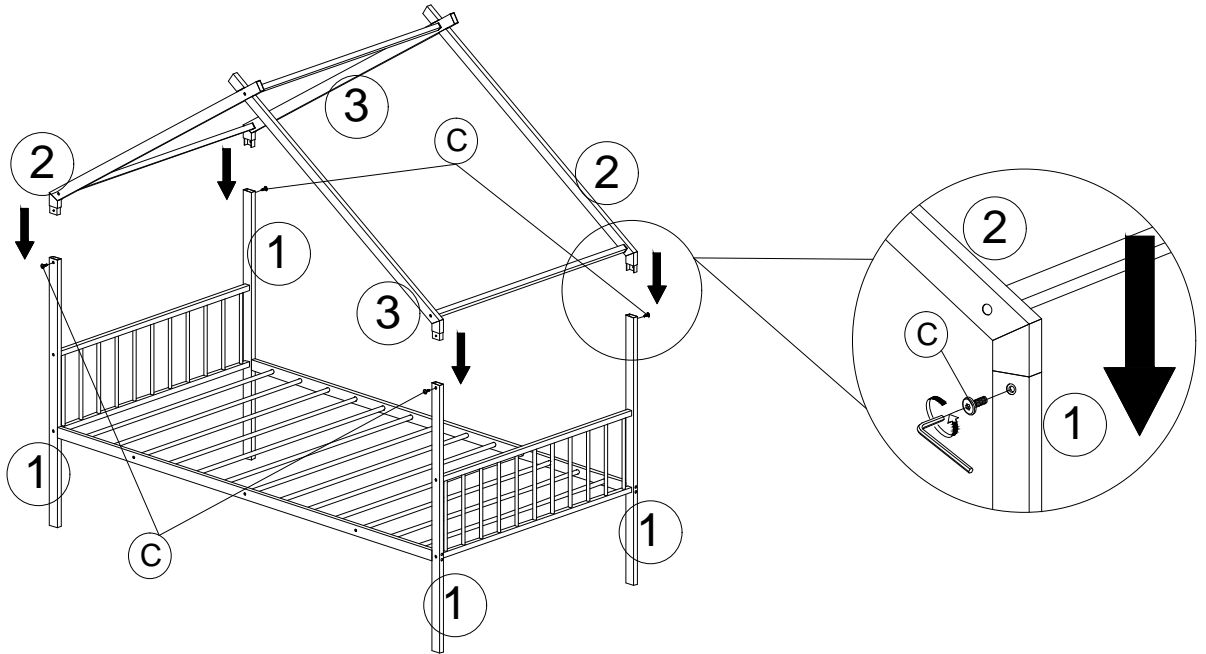

STEP 5



C		1/4*18	4 pcs
---	---	--------	-------

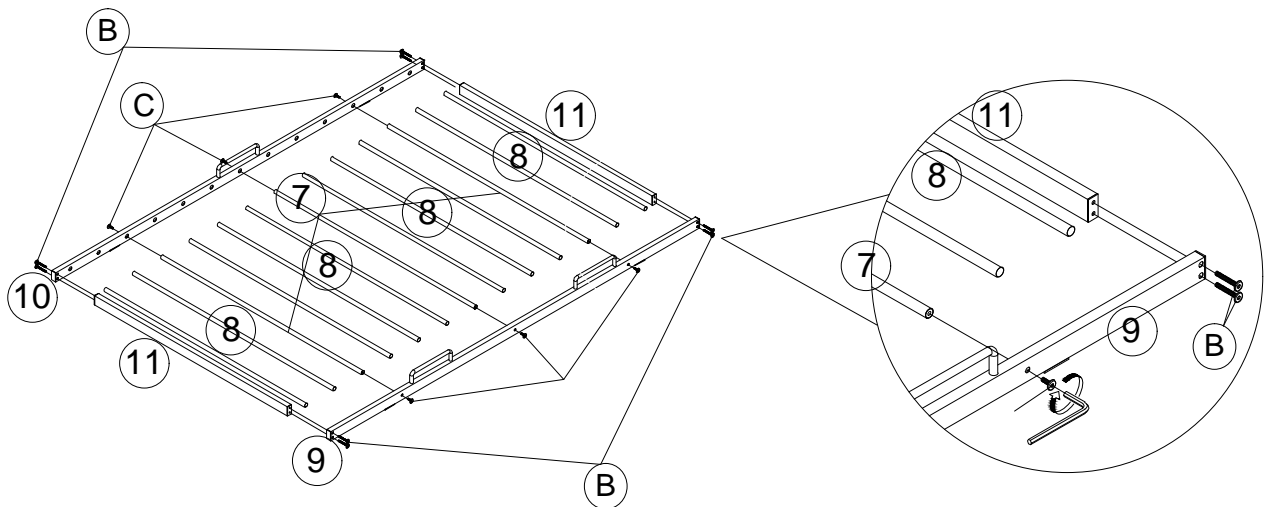
STEP 6



B		1/4*40	8 pcs
C		1/4*18	6 pcs

BUNK BED
ASSEMBLY INSTRUCTIONS
ITEM: MF323494

STEP 7

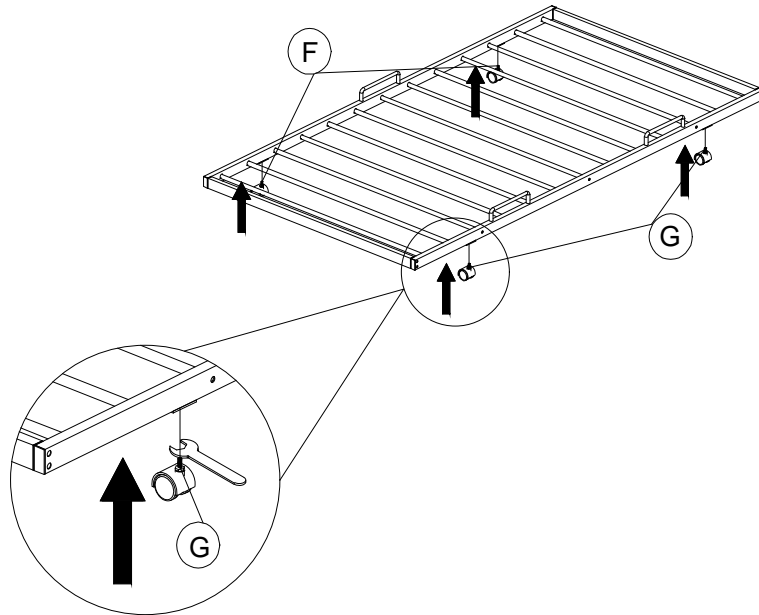

COMPLETE

