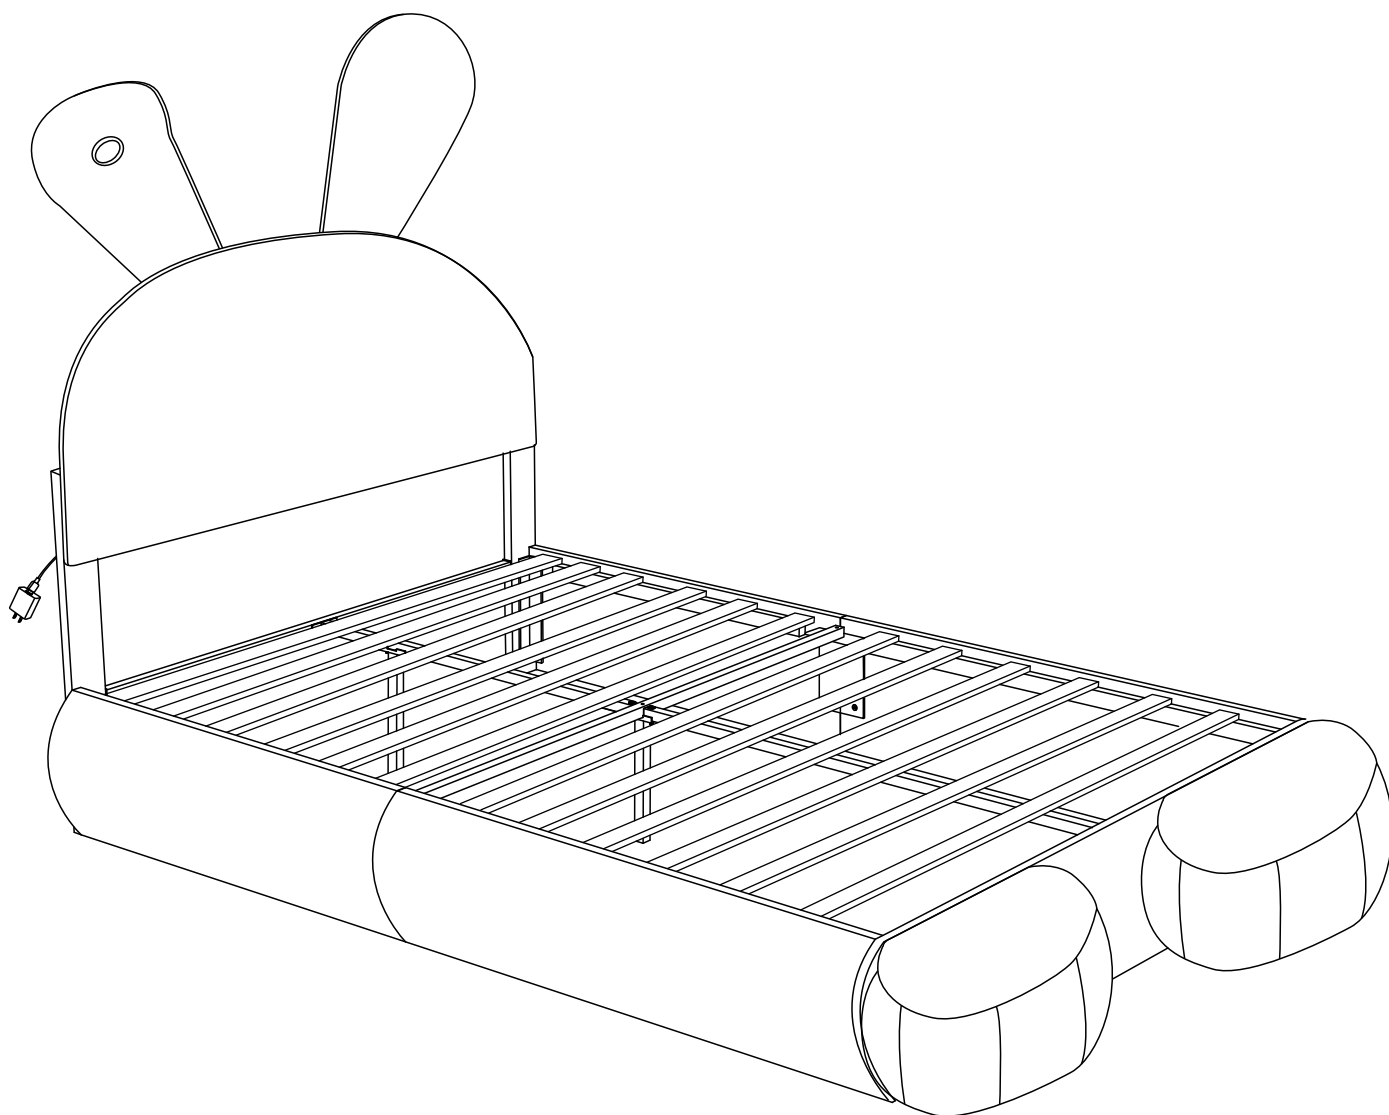


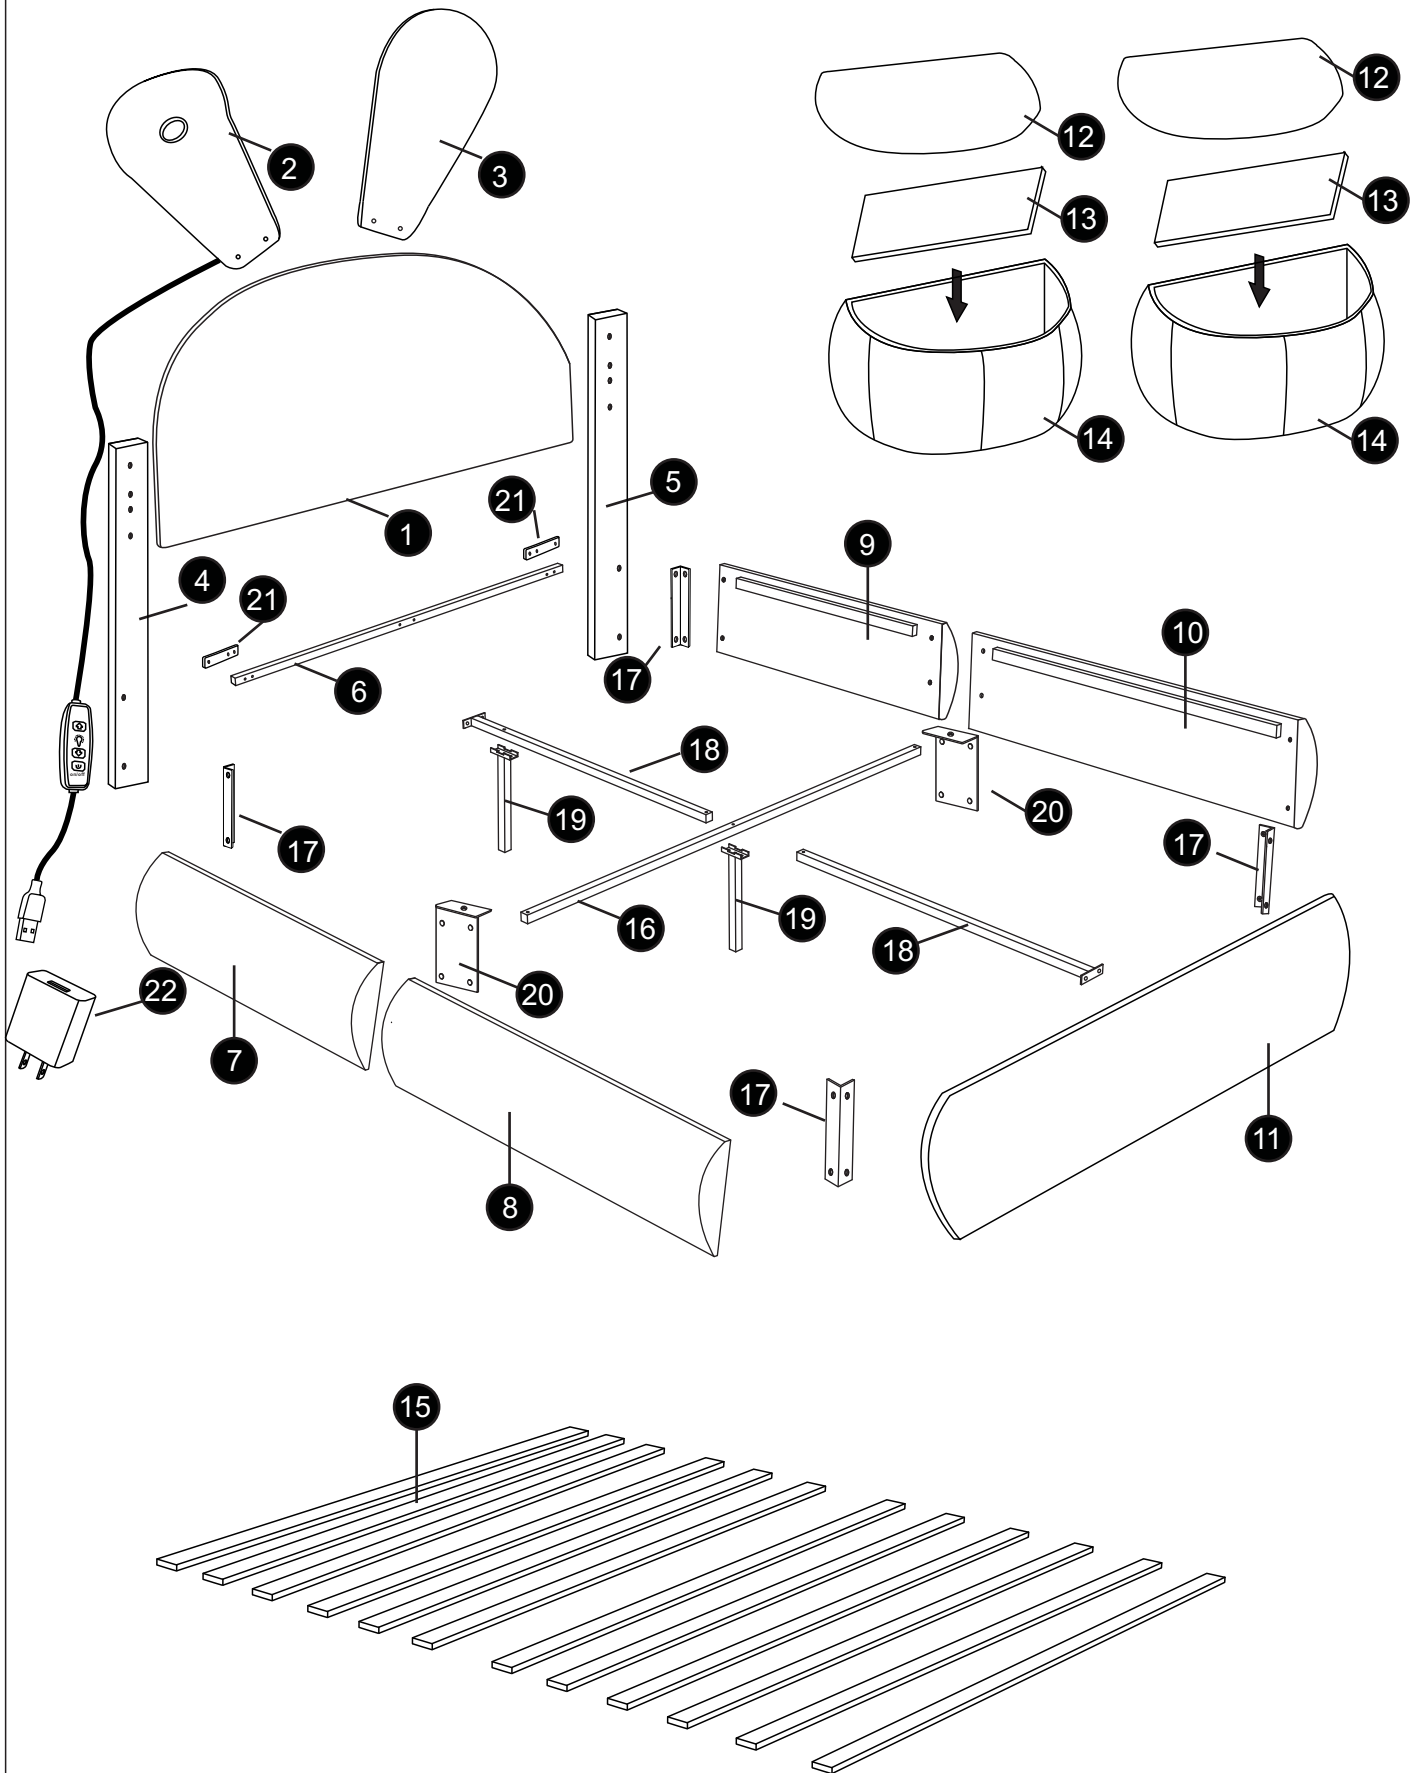
ASSEMBLY INSTRUCTIONS

TWIN BED



WF321677AAA/WF321677AAH

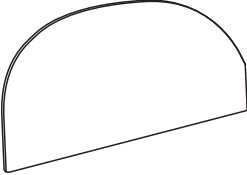
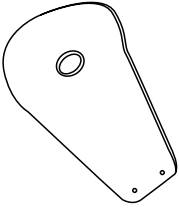
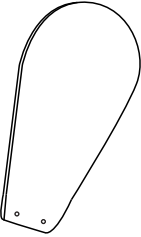


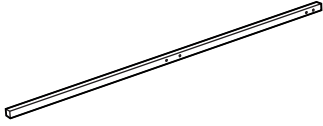
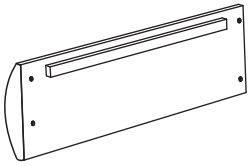
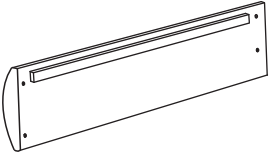
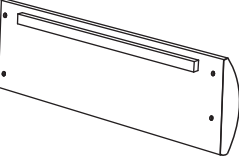
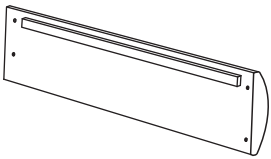
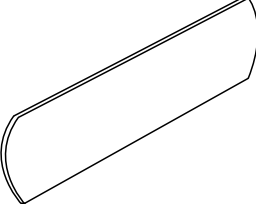


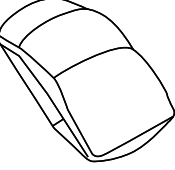
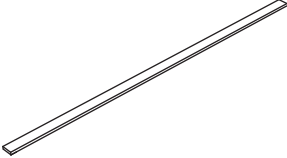




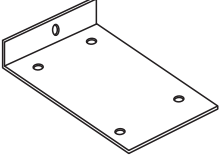
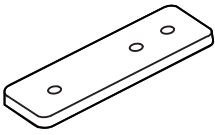
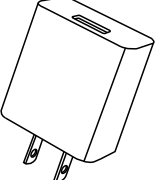
ASSEMBLY INSTRUCTIONS



ASSEMBLY INSTRUCTIONS

PARTS LIST

WF321677AAA/WF321677AAH

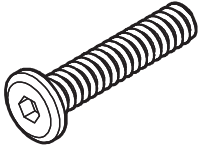
1 x1 	2 x1 	3 x1 	4 x1 
5 x1 	6 x1 	7 x1 	8 x1 
9 x1 	10 x1 	11 x1 	12 x2 
13 x2 	14 x2 	15 x12 	16 x1 
17 x4 	18 x2 	19 x2 	20 x2 
21 x2 	22 x1 		

ASSEMBLY INSTRUCTIONS

PARTS LIST


WE321677AAA/WE321677AAH

A: x14



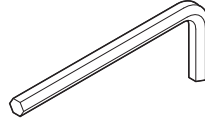
M8*40mm

B: x34



M8*20mm

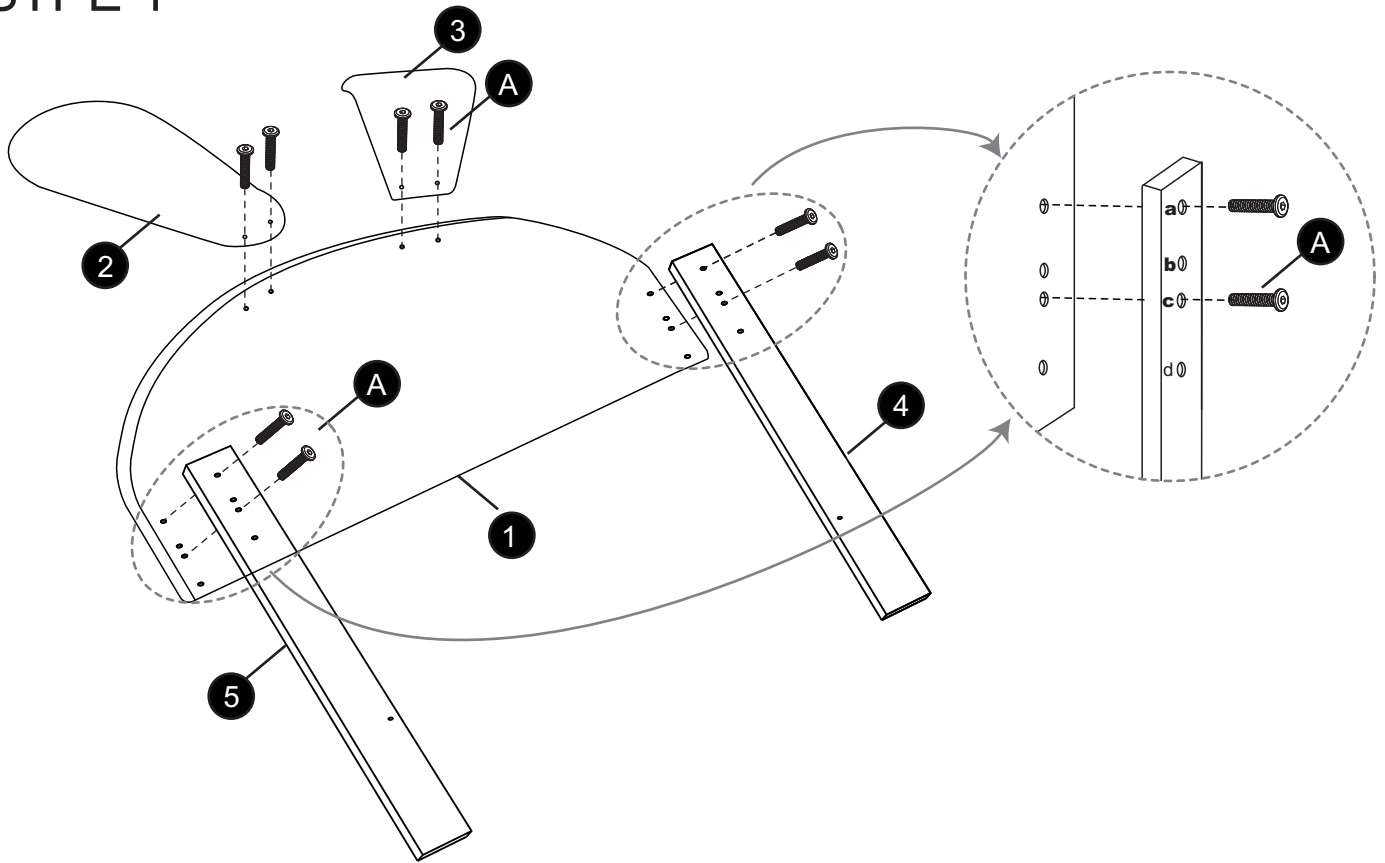
D: x1



Allen Key M8

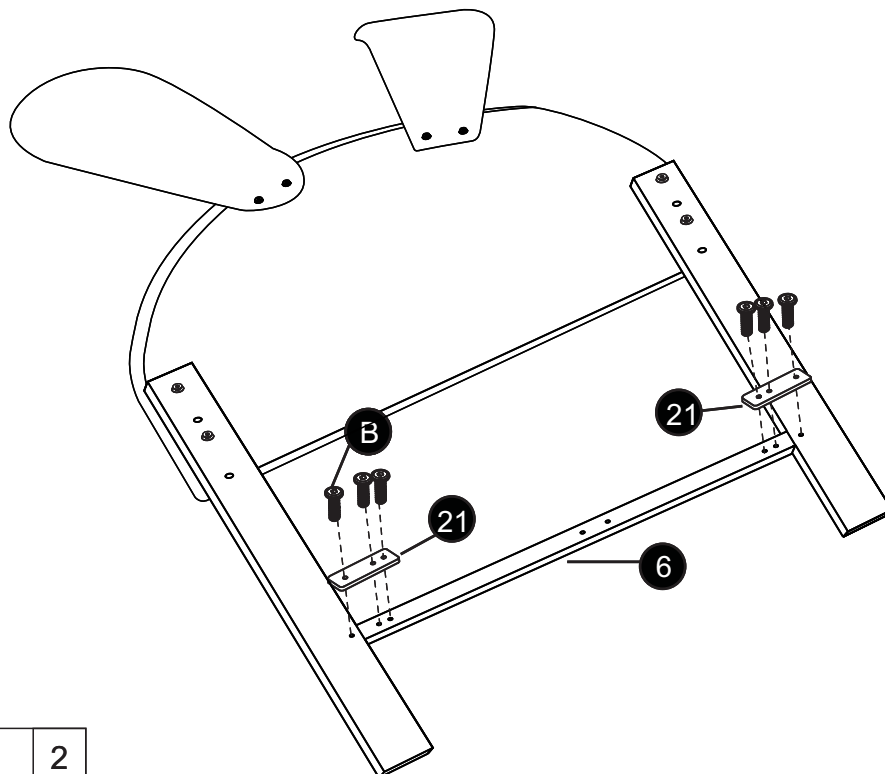
ASSEMBLY INSTRUCTIONS

STPE 1



A	 M8*40mm	8
---	---	---

STPE 2

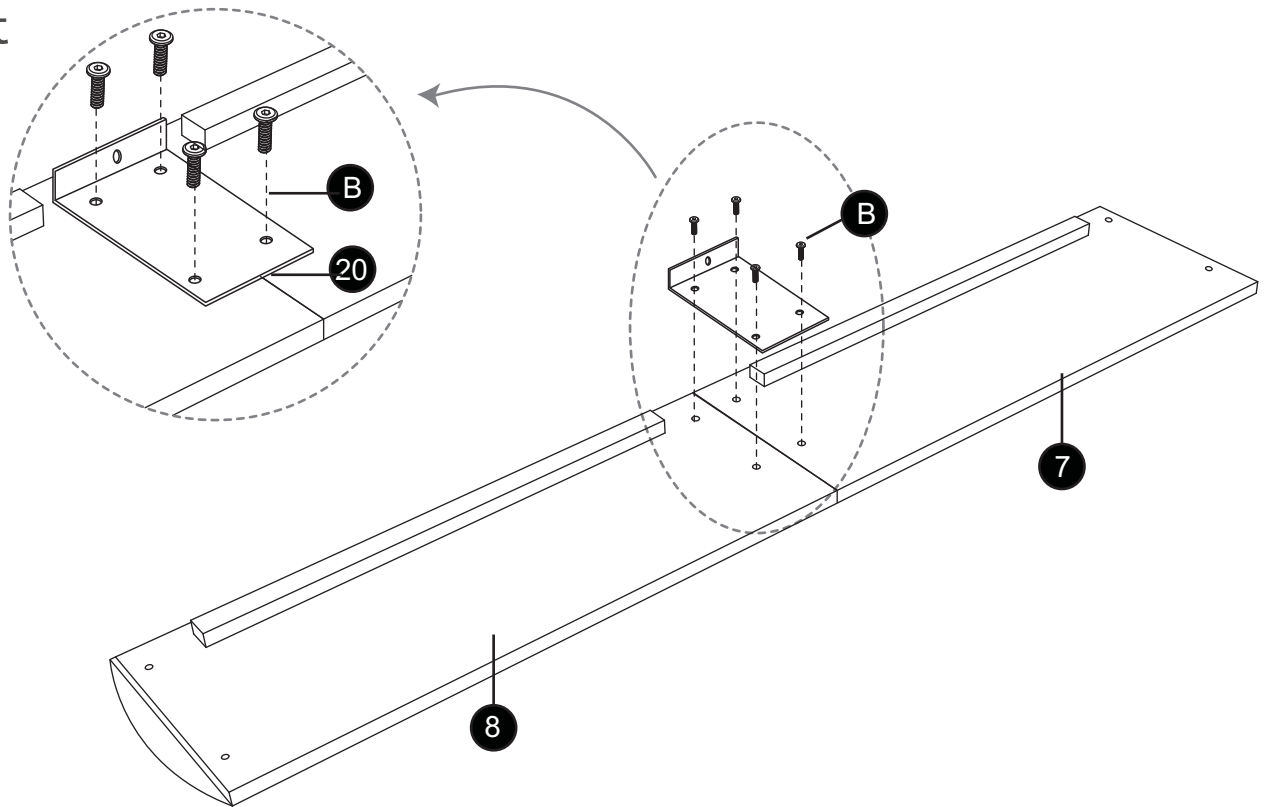




15		2
B	 M8*20mm	6

ASSEMBLY INSTRUCTIONS

STPE 3

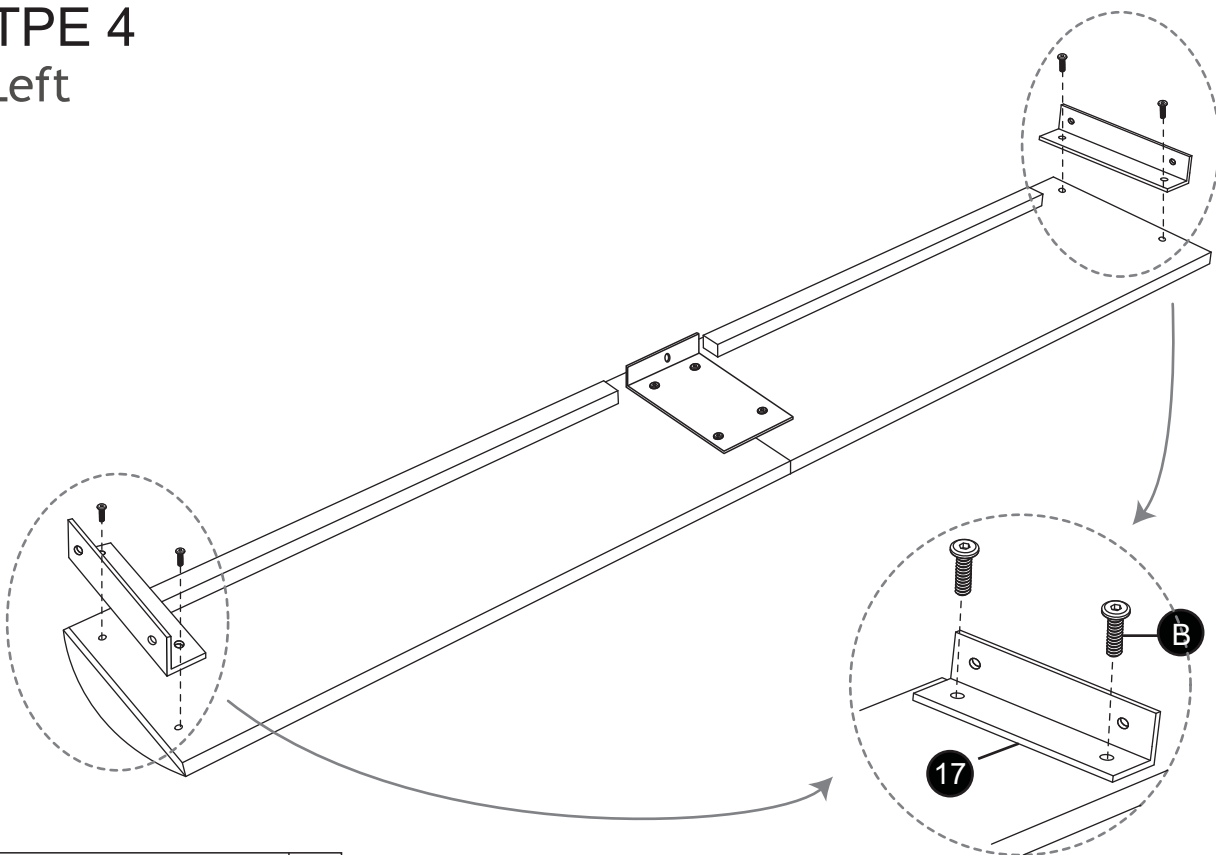
Left





20		1
B	 M8*20mm	4

STPE 4

Left

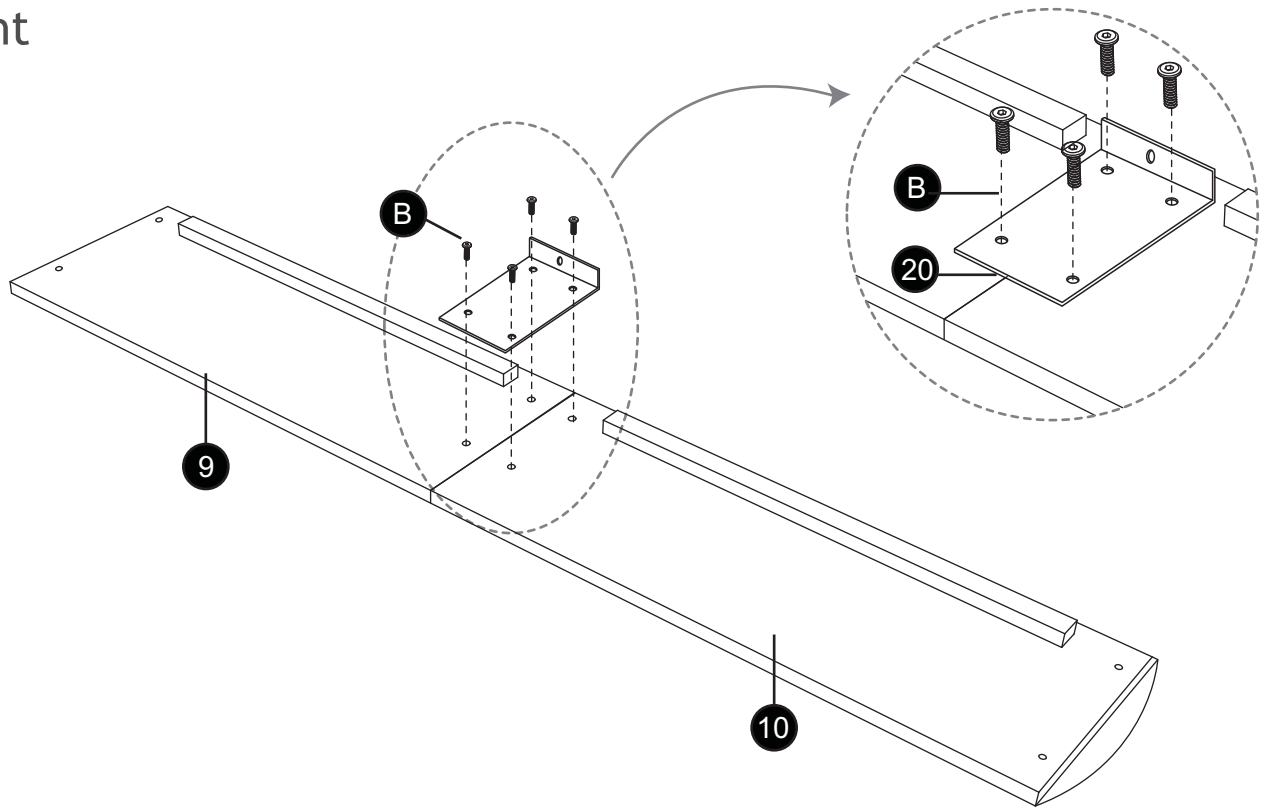




17		2
B	 M8*20mm	4

ASSEMBLY INSTRUCTIONS

STPE 5

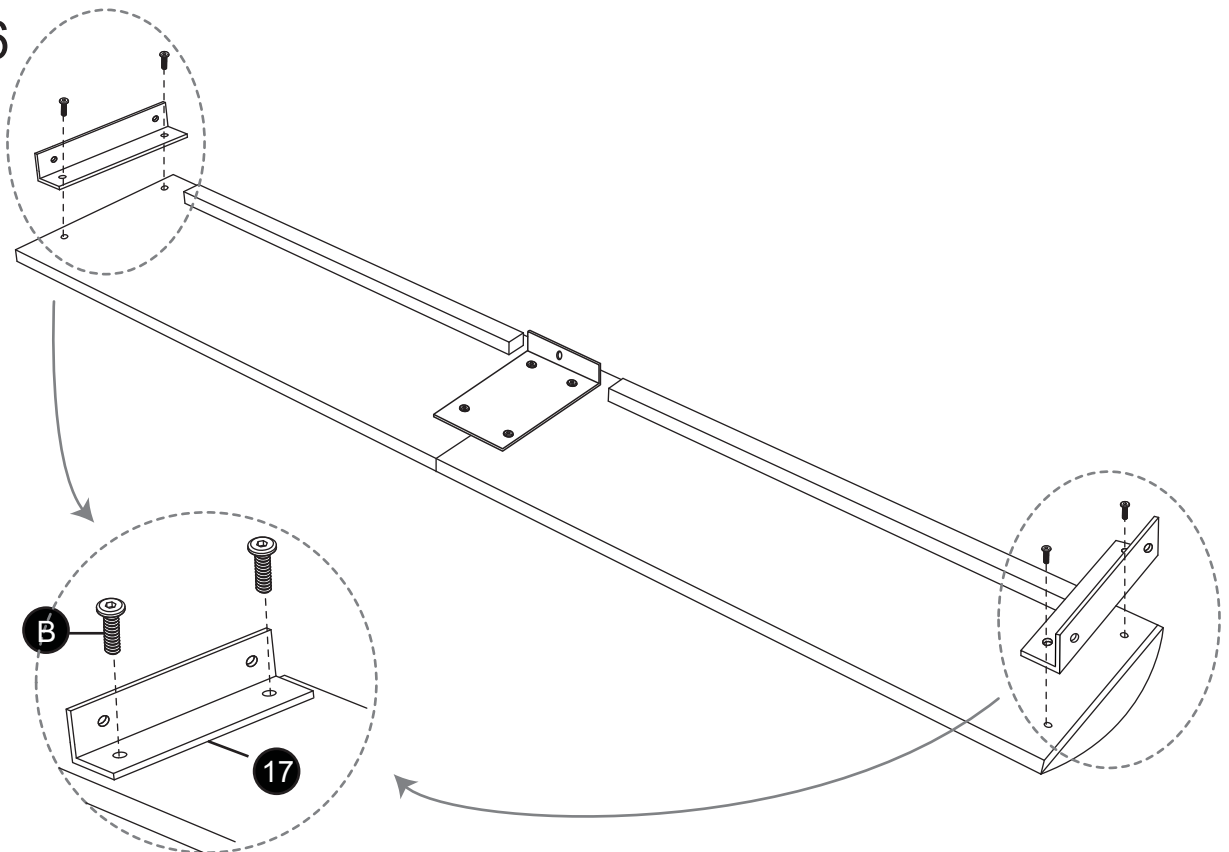
Right





20		1
B	 M8*20mm	4

STPE 6

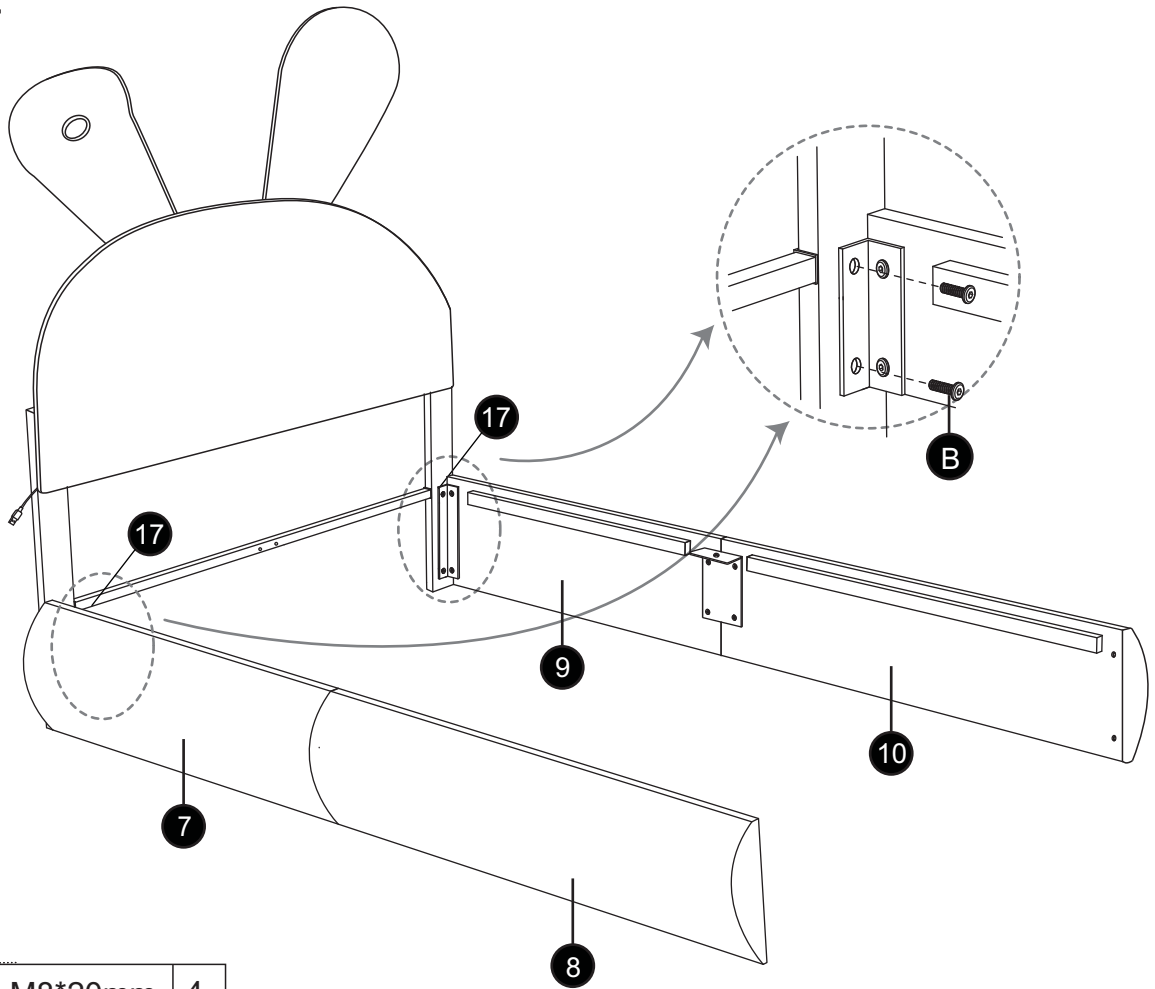
Right



17		2
B	 M8*20mm	4

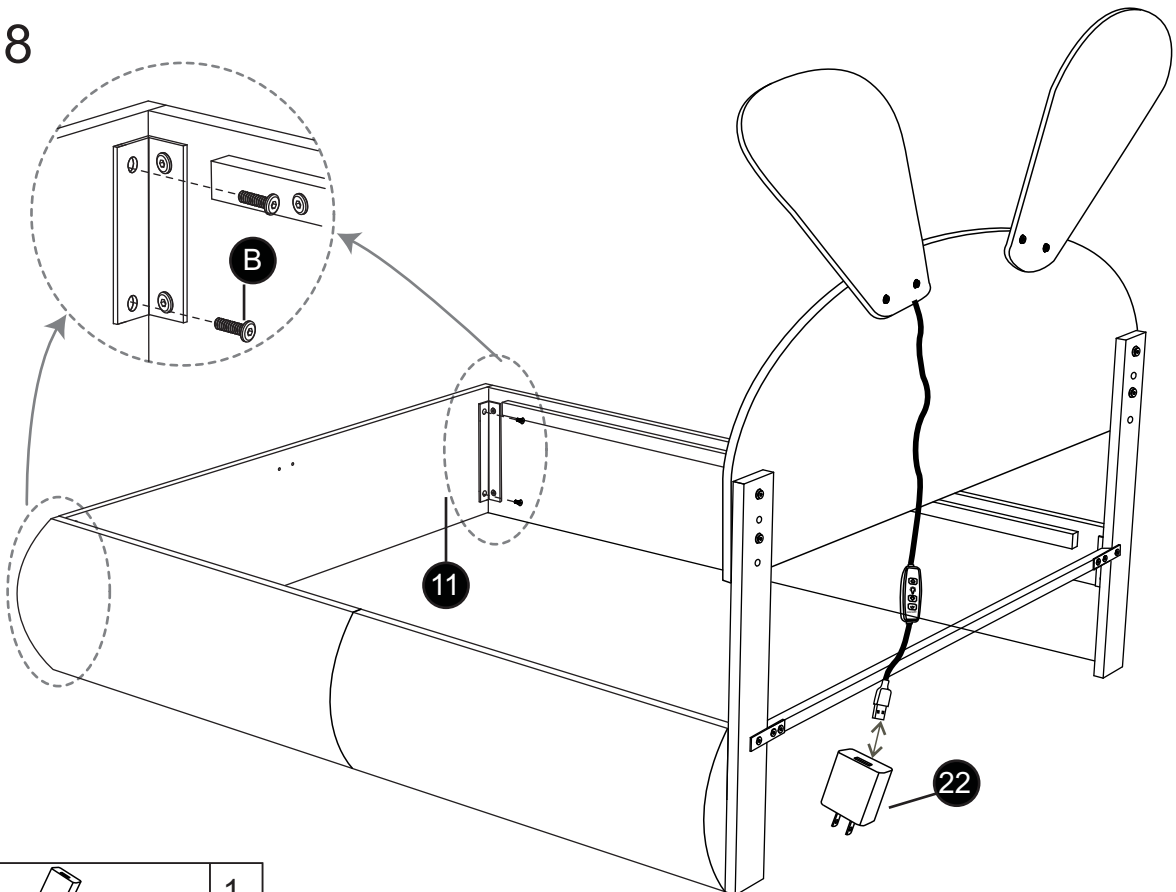
ASSEMBLY INSTRUCTIONS



STPE 7



B		M8*20mm	4
---	---	---------	---

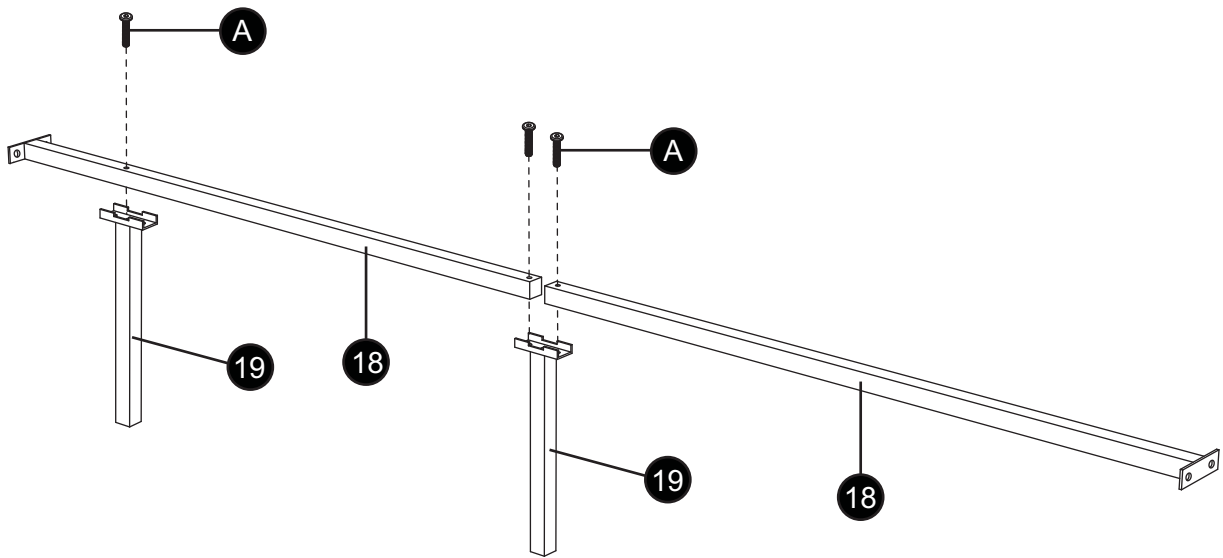
STPE 8





22			1
B		M8*20mm	4

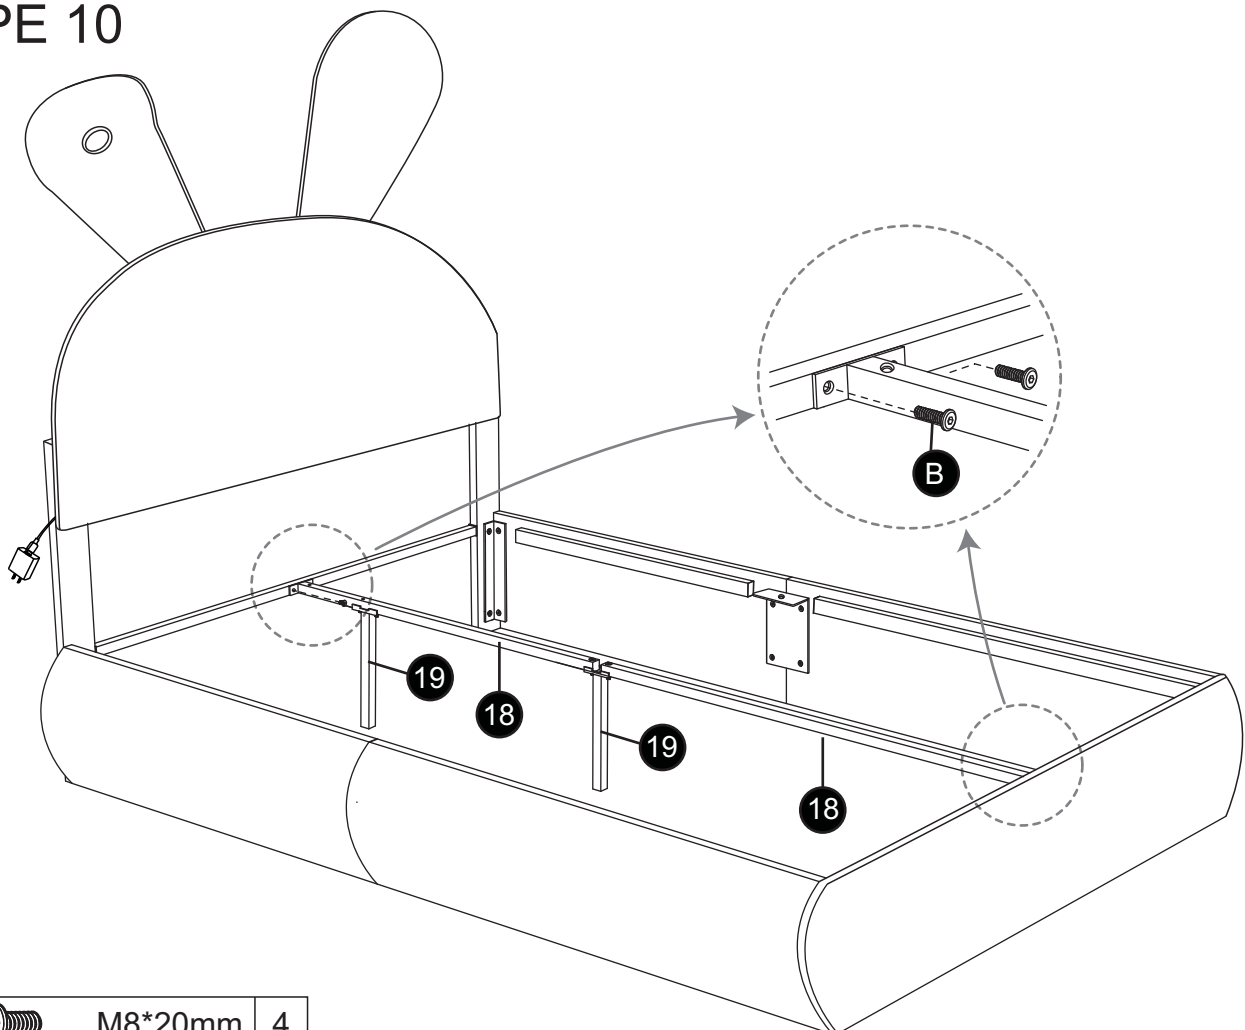
ASSEMBLY INSTRUCTIONS

STPE 9



19		2
A	 M8*40mm	3

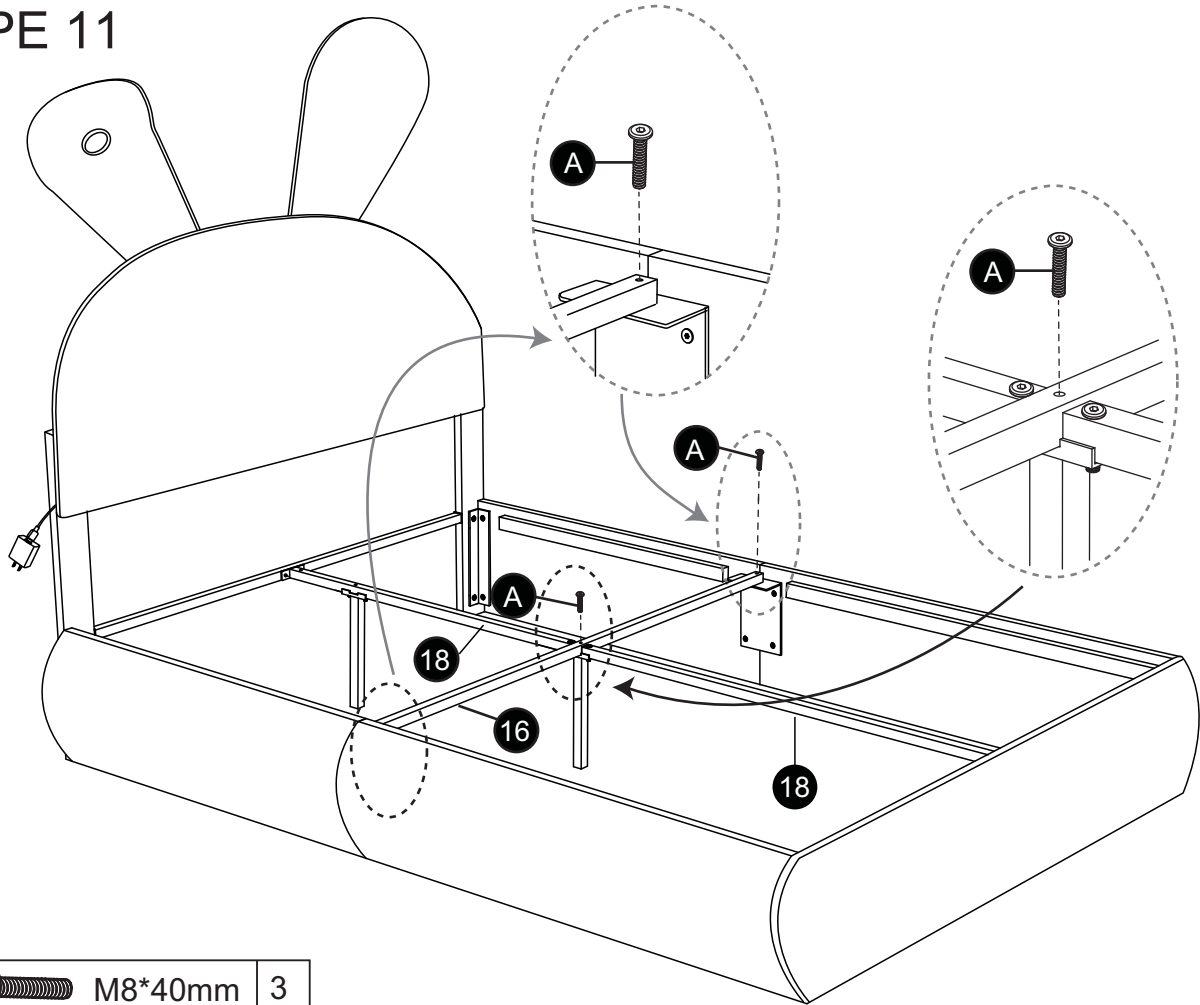
STPE 10



B	 M8*20mm	4
---	---	---

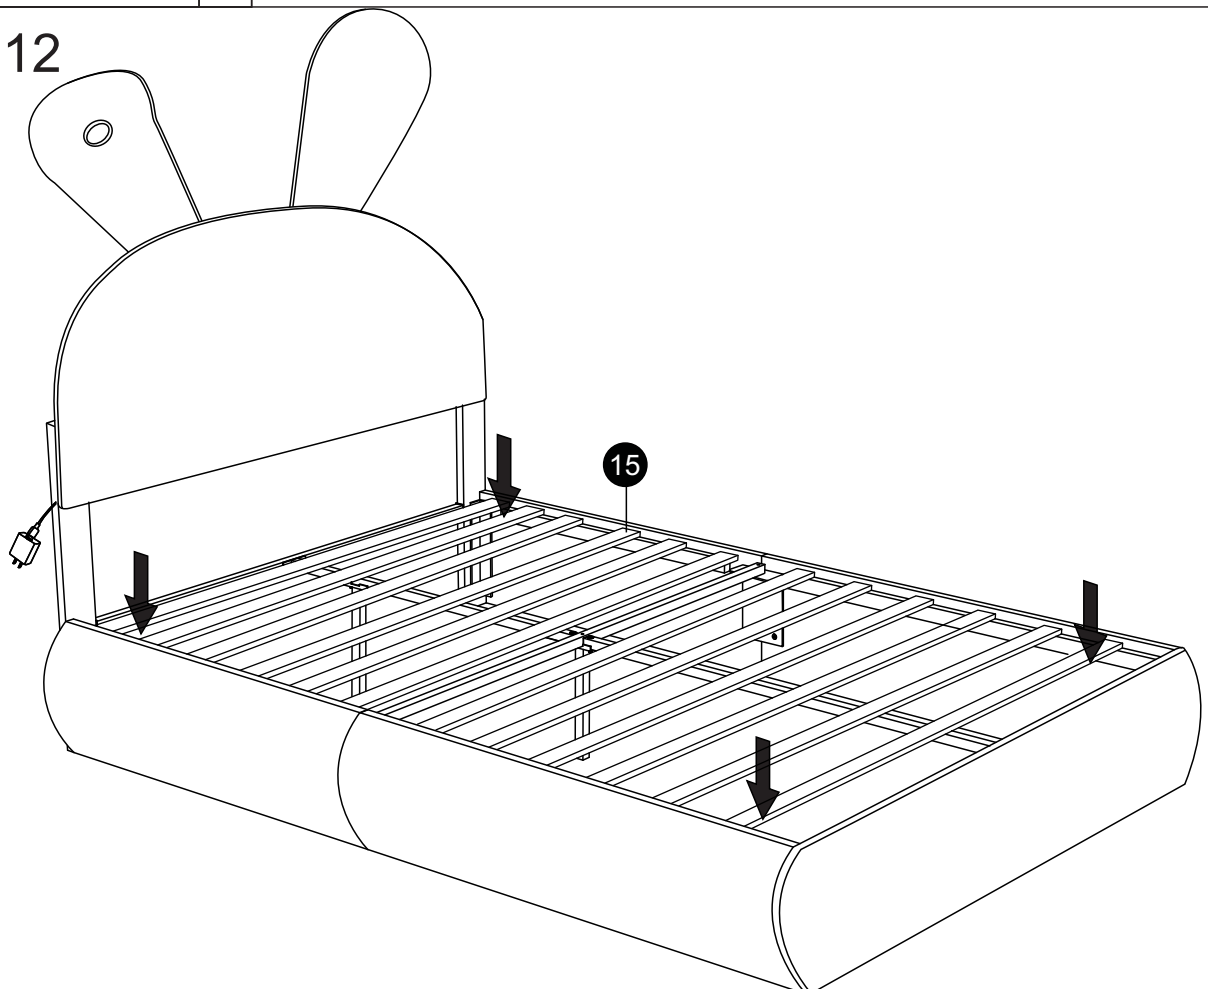
ASSEMBLY INSTRUCTIONS

STPE 11



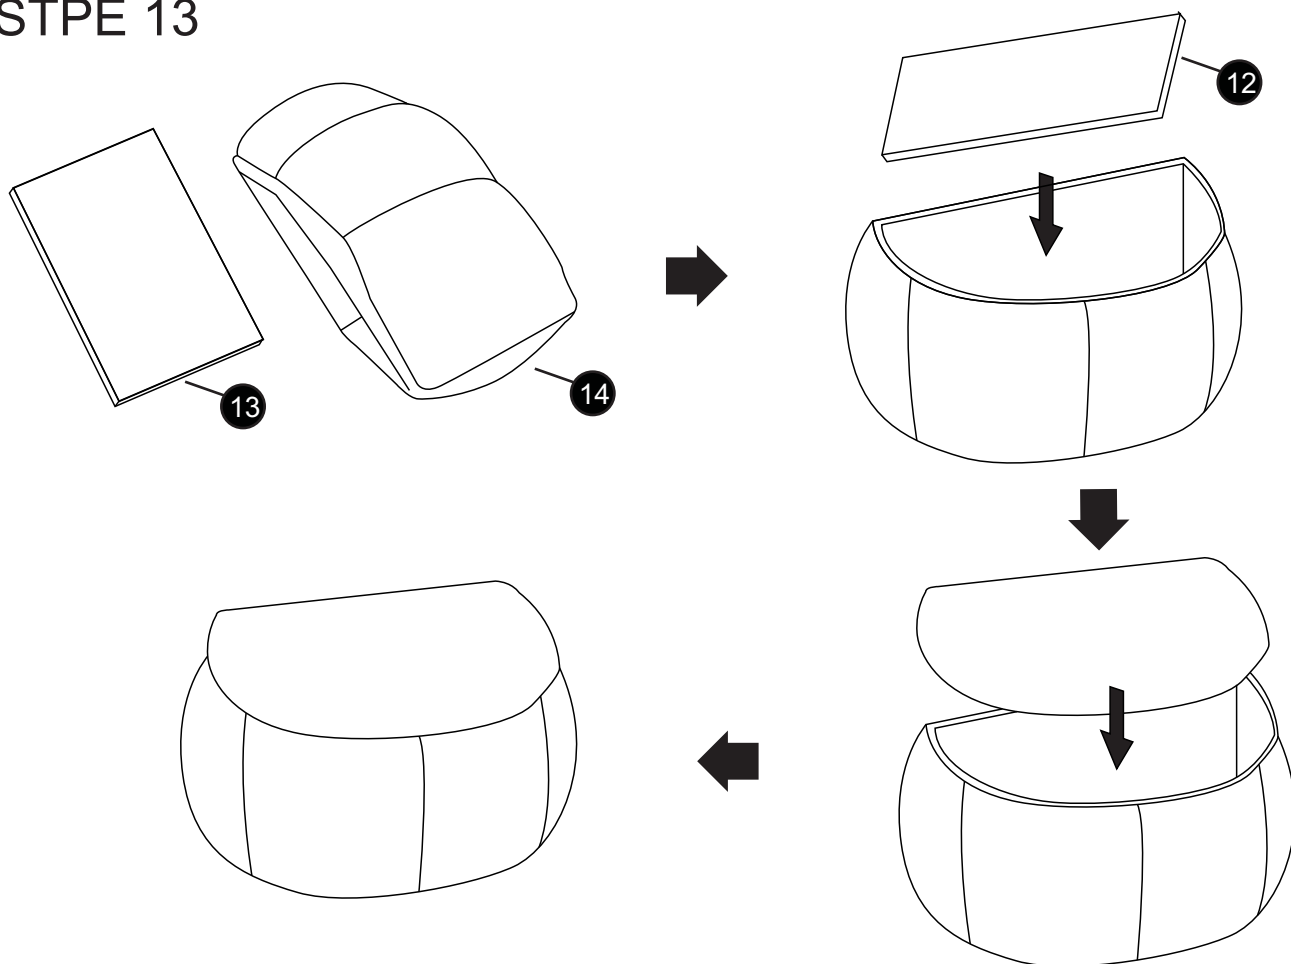
A  M8*40mm 3

STPE 12



ASSEMBLY INSTRUCTIONS

STPE 13



STPE 14

