

# ASSEMBLY INSTRUCTION

## SKU:WF316052 / WF316053

### PART LIST


| ITEM | DESCRIPTION  | QTY  |
|------|--|------|
| 1    | BACKREST    | 1PC  |
| 2    | SEAT FRAME  | 1PC  |
| 3    | FRONT LEG   | 2PCS |

### HARDWARE

| ITEM | DESCRIPTION  | QTY   |
|------|--|-------|
| A    | DOWEL 10*30             | 1PC   |
| B    | 5/16*45MM BOLT          | 2PCS  |
| C    | 5/16*57MM BOLT          | 4PCS  |
| D    | 5/16*83MM BOLT          | 4PCS  |
| E    | M8 SPRING WASHER        | 10PCS |
| F    | 8*22*1.5MM FLAT WASHER  | 10PCS |
| G    | M5 ALLEN KEY            | 1PC   |


#### STEP1:

Stick the dowel(A) in the seat frame(2).

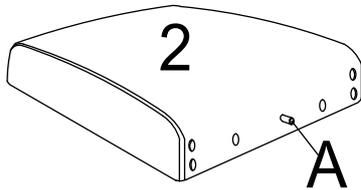


#### STEP2:

Open the velcro strips on the edge of the seat frame, attach the seat frame(2) to the backrest(1), use the allen key(G) to fully fasten 6pcs bolt (B and D), 6pcs flat washer(E) and 6pcs spring washer(F).

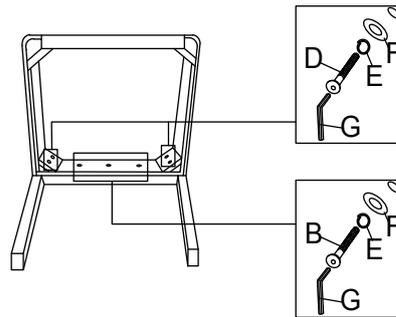

#### STEP3:

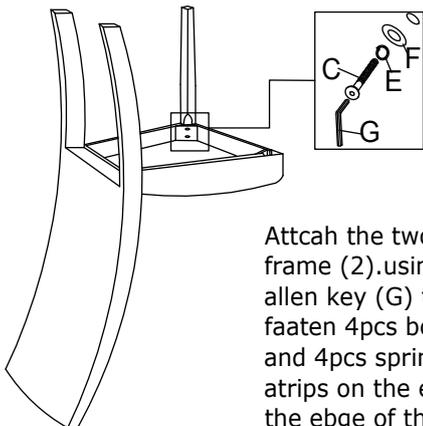

Attach the two front leg(3) to the seat frame (2). using the allen key (G) to fully fasten 4pcs bolt(C). 4pcs flat washer (E) and 4pcs spring washer(F). stick velcro strips on the edge of non woven to it on the edge of the seat frame.

