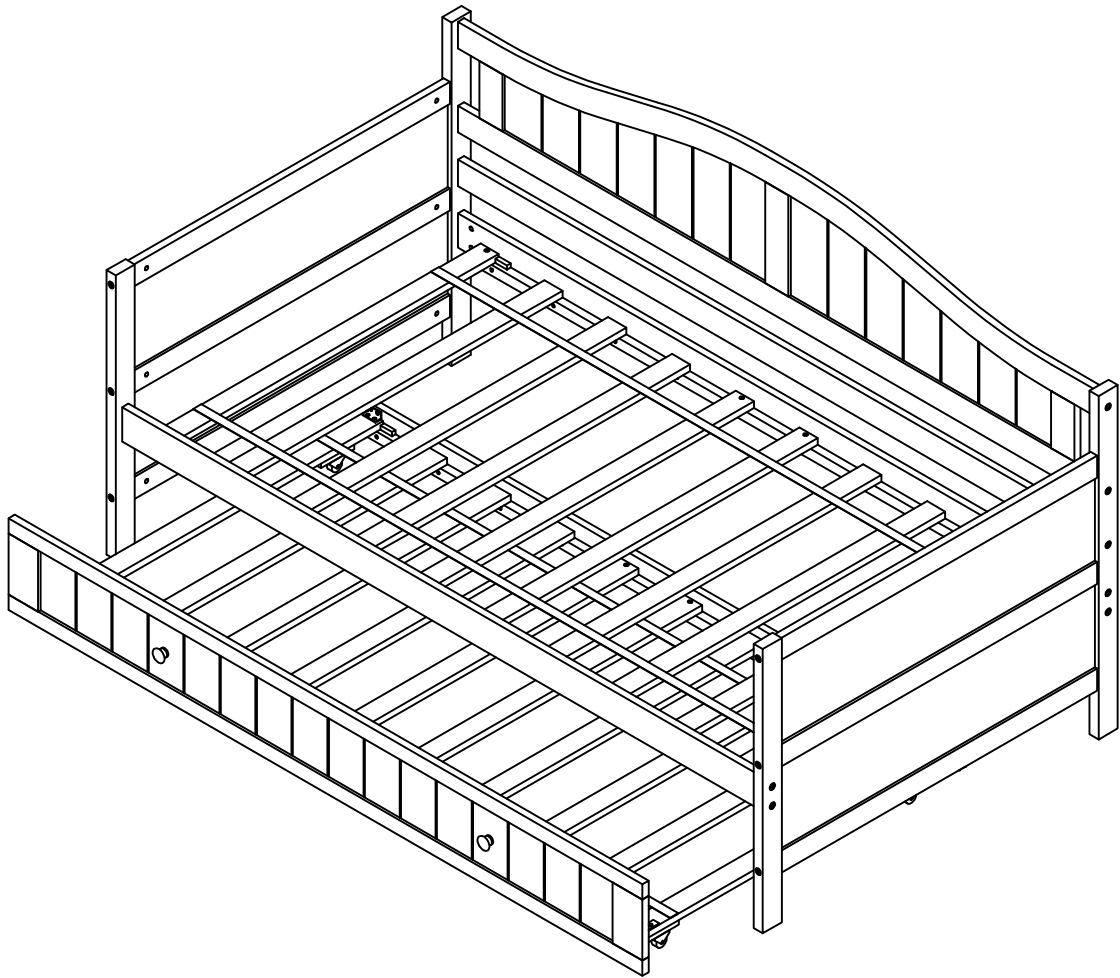


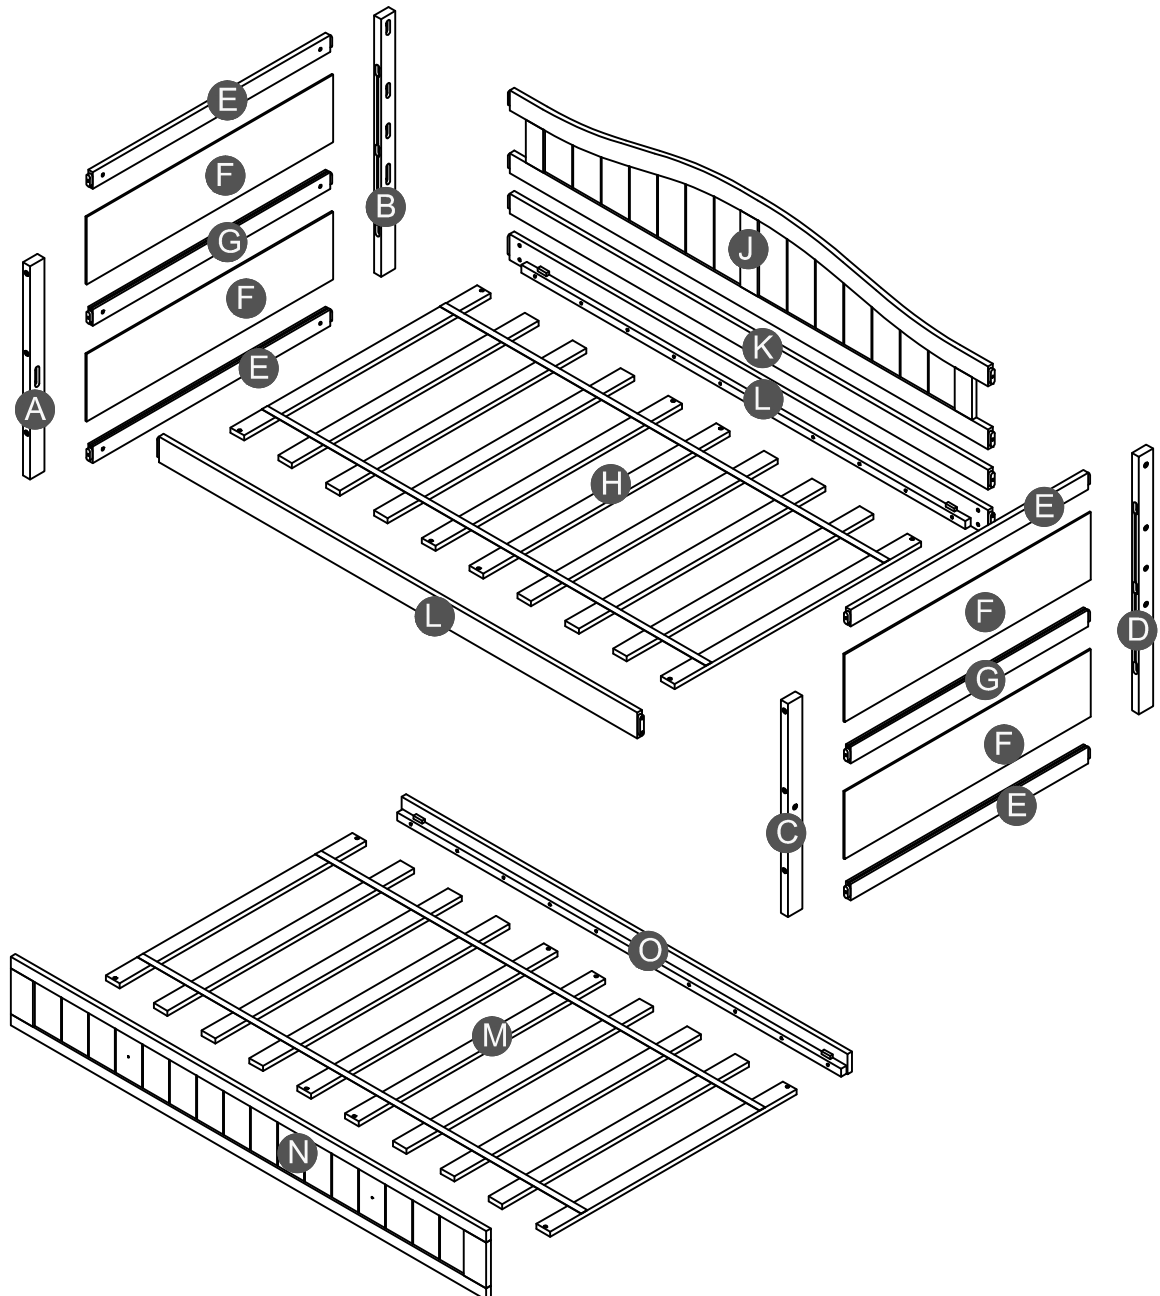
# ASSEMBLY INSTRUCTIONS

## DAY BED WITH TRUNDLE








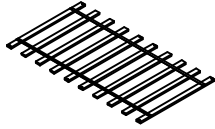



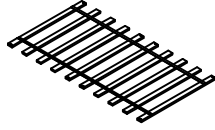




WF192861












# Detail View



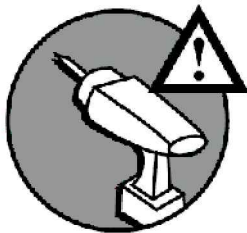

# Part List

<p><b>A</b></p>  <p>Leg HB (Left)- 1pc</p>	<p><b>B</b></p>  <p>Leg HB (Right)- 1pc</p>	<p><b>C</b></p>  <p>Leg FB (Right)- 1pc</p>
<p><b>D</b></p>  <p>Leg FB (left)- 1pc</p>	<p><b>E</b></p>  <p>Horizontal bars HB&amp;FB- 4pcs</p>	<p><b>F</b></p>  <p>Side panel (HB&amp;FB) - 4pcs</p>
<p><b>G</b></p>  <p>Horizontal center HB&amp;FB- 2pcs</p>	<p><b>H</b></p>  <p>Slat - 1set - (10pcs)</p>	<p><b>J</b></p>  <p>Guard rail (back)- 1pc</p>
<p><b>K</b></p>  <p>Horizontal(back)- 1pc</p>	<p><b>L</b></p>  <p>Side rail (Front &amp; Back)- 2pcs</p>	<p><b>M</b></p>  <p>Trundle Slat - 1set - (10pcs)</p>
<p><b>N</b></p>  <p>Trundle front - 1pc</p>	<p><b>O</b></p>  <p>Trundle back panel - 1pc</p>	

# Hardware List

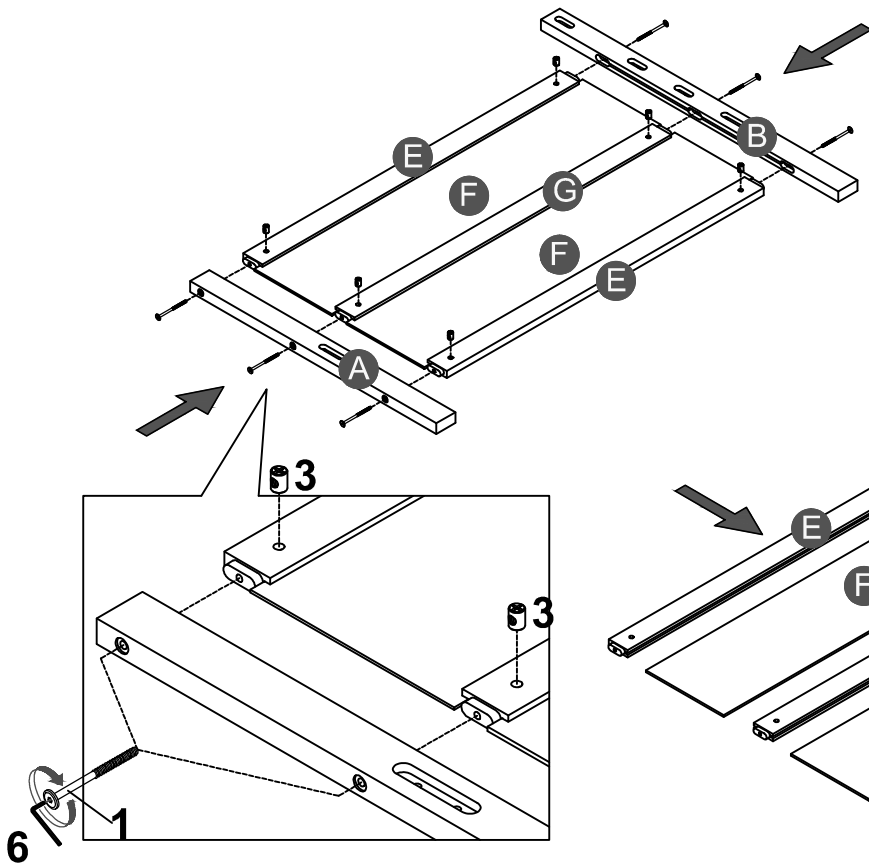
<b>1</b>  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	<b>2</b>  (Ø15)1/4"*80mm Hex-Head bolts (14pcs)	<b>3</b>  1/4"*15 (9.5mm) Horizontal-Hole bolts(26pcs)
<b>4</b>  Ø4*30mm Wood screws (24pcs)	<b>5</b>  100*65*20 mm Wheels (4pcs)	<b>6</b>  (1/4")4.5*58mm Allen key (1pc)
<b>7</b>  95*95*18*3mm Metal bracket (2pcs)	<b>8</b>  Ø3.5*15mm Wood screws (16pcs)	<b>9</b>  40*18*18*2mm Metal bracket (2pcs)
<b>10</b>  Ø38*31mm Pine Knob (2pcs)	<b>11</b>  3/16"*15mm Ph zinc(Knob) (2pcs)	

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )



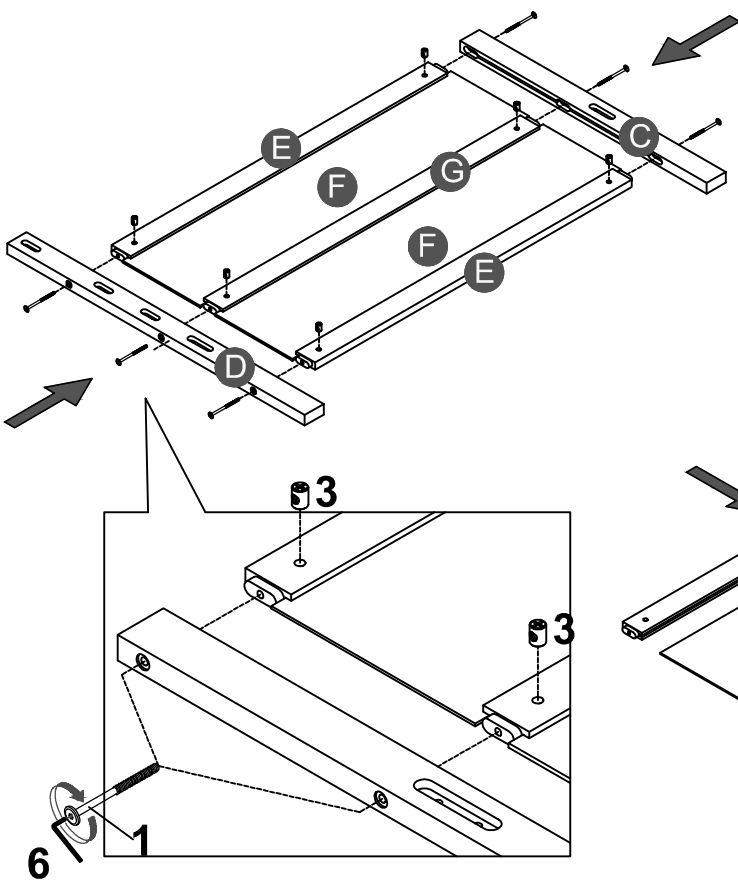
DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

**STEP 1:**





1		3	
6PCS		6PCS	

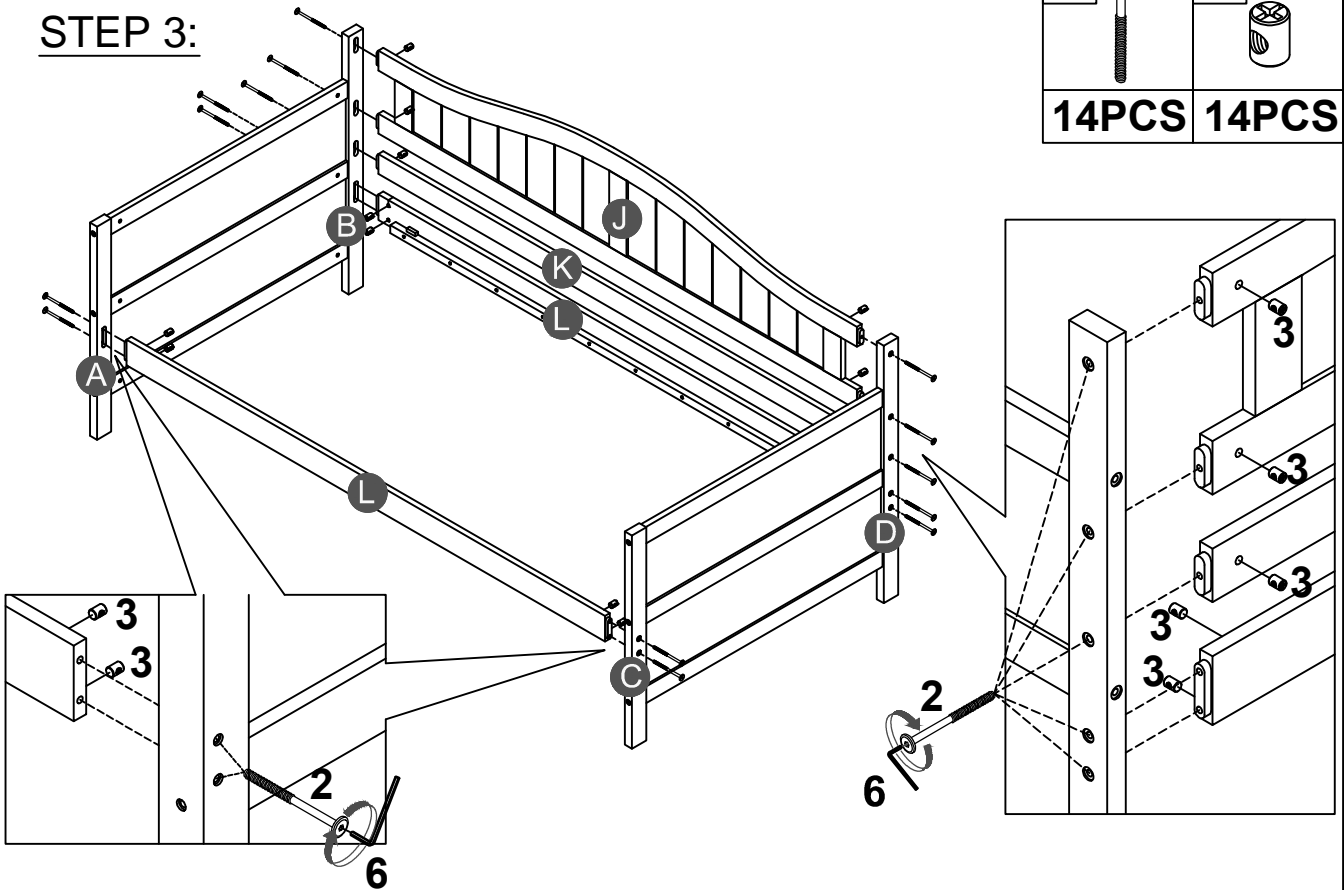
**STEP 2:**




1		3	
6PCS		6PCS	

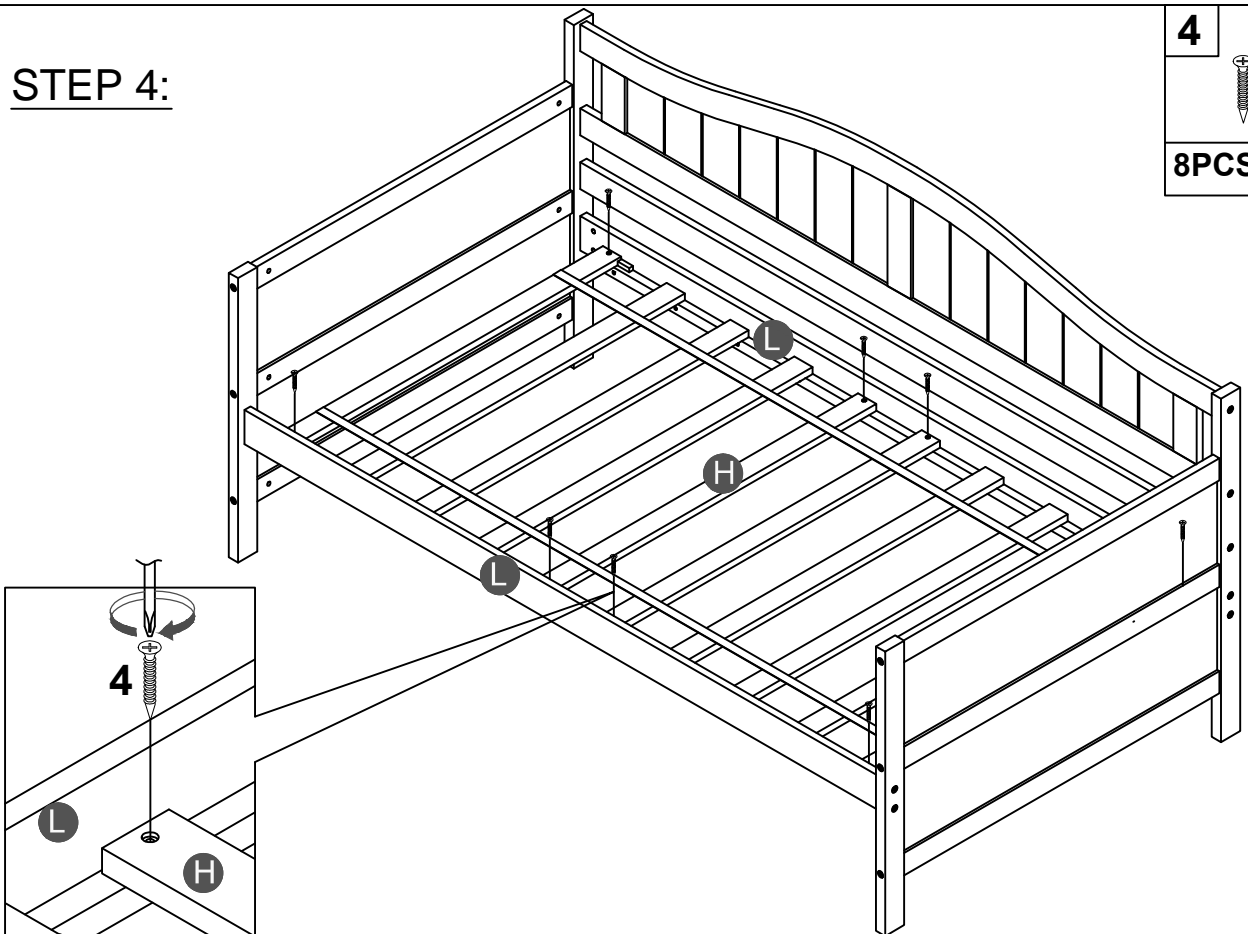
**STEP 3:**

<b>2</b>		<b>3</b>	
<b>14PCS</b>		<b>14PCS</b>	





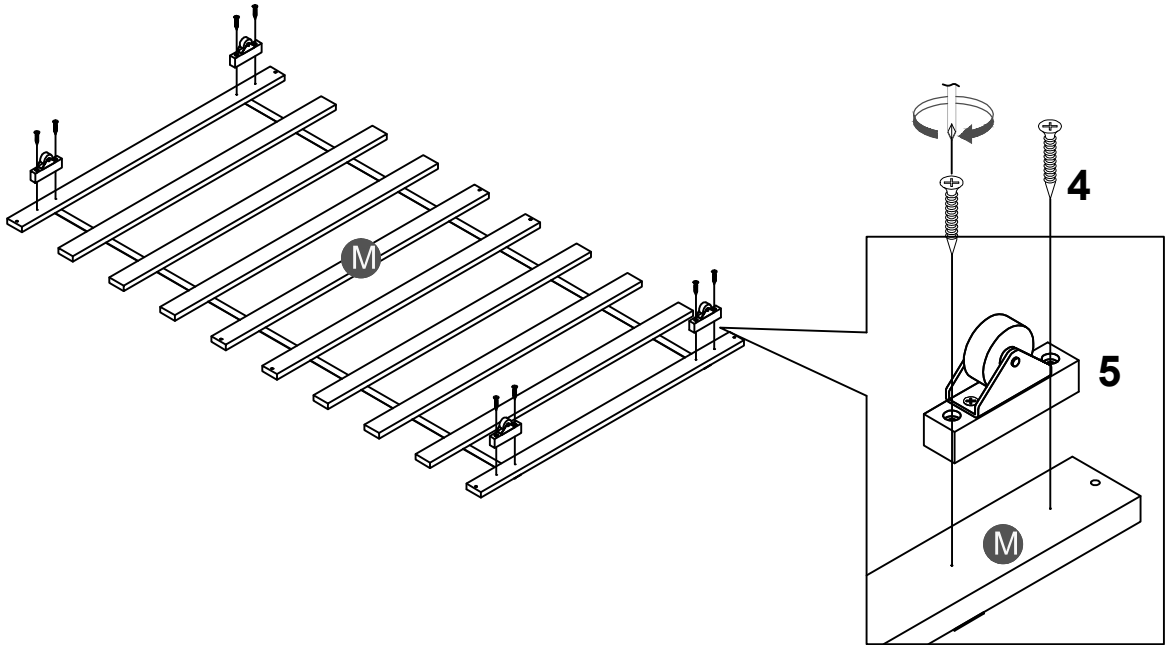
**STEP 4:**

<b>4</b>	
<b>8PCS</b>	




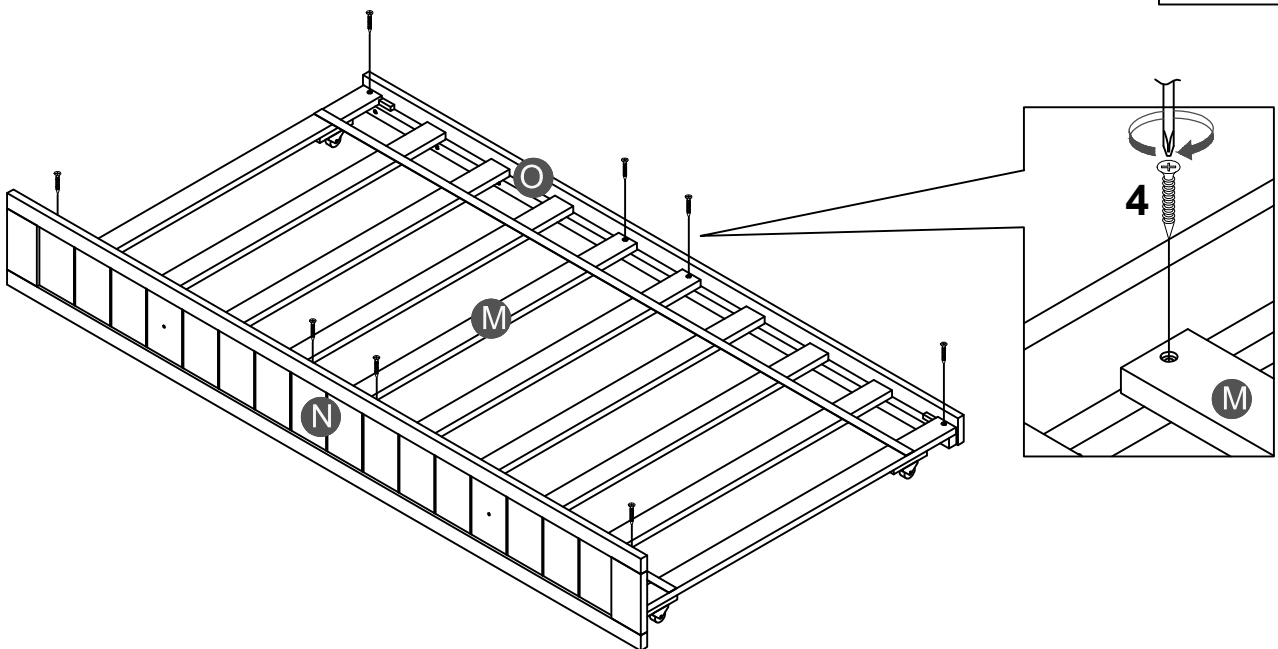
**STEP 5:**

<b>5</b> 	<b>4</b> 
<b>4PCS</b>	<b>8PCS</b>





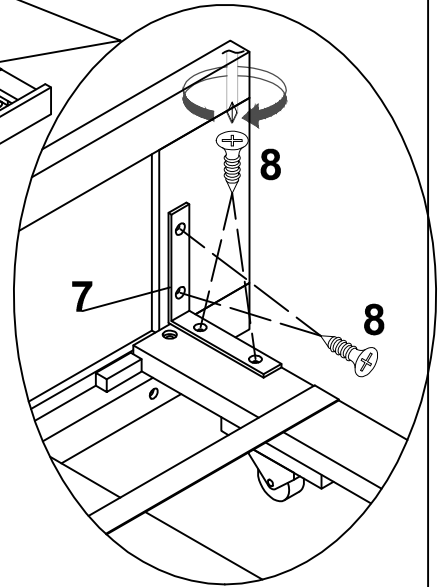
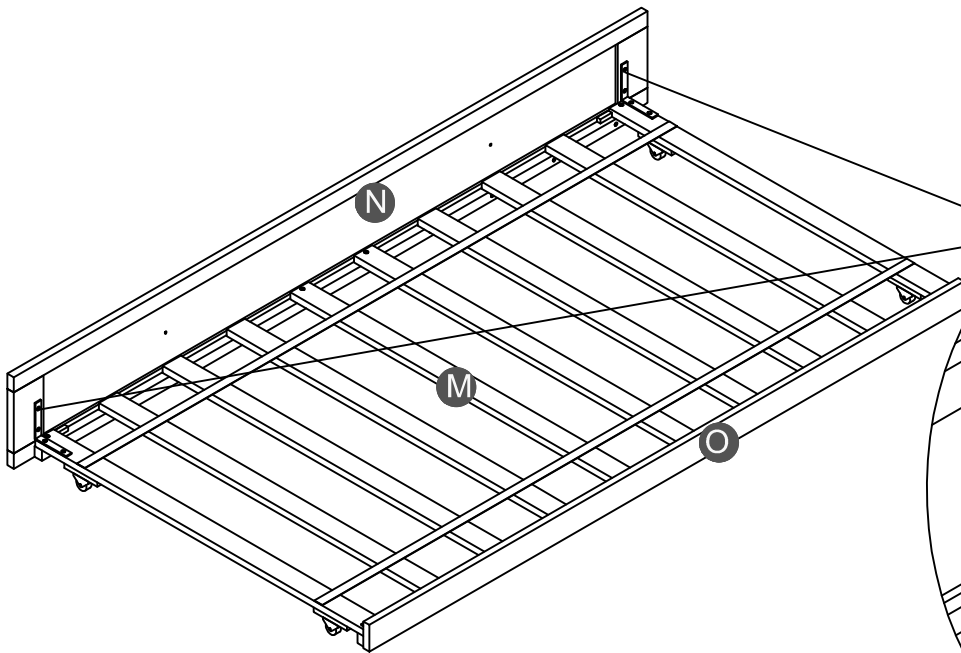
**STEP 6:**

<b>4</b> 
<b>8PCS</b>





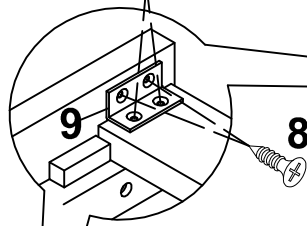
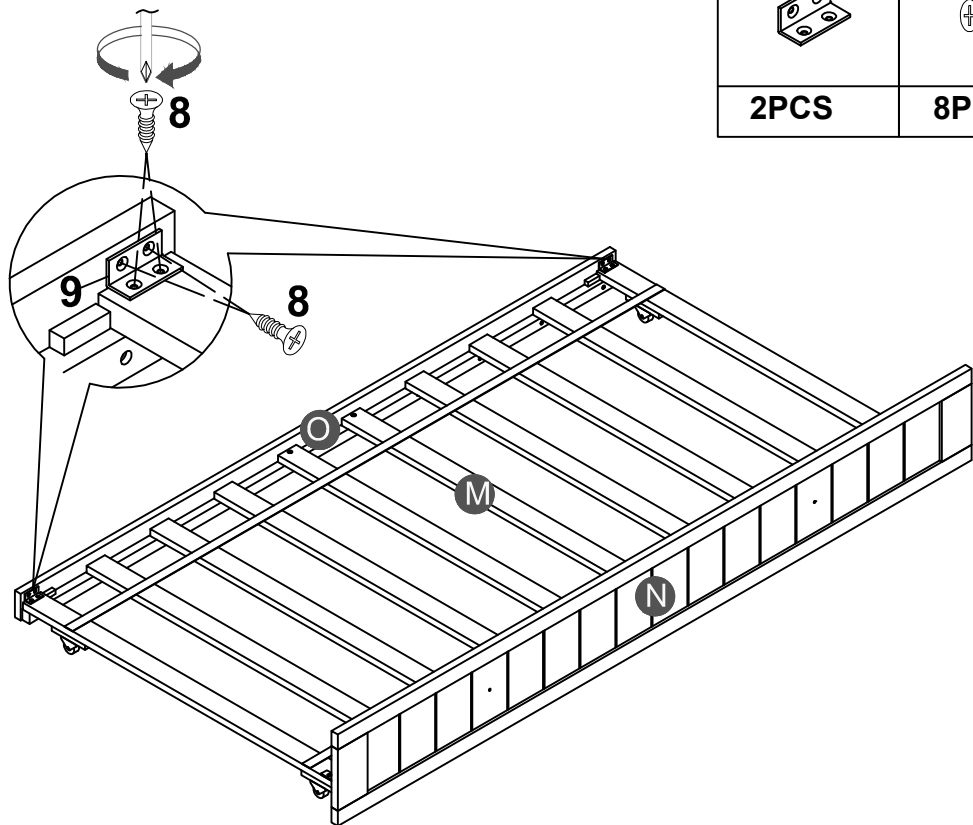
**STEP 7:**

<b>7</b>	<b>8</b>
	
<b>2PCS</b>	<b>8PCS</b>





**STEP 8:**

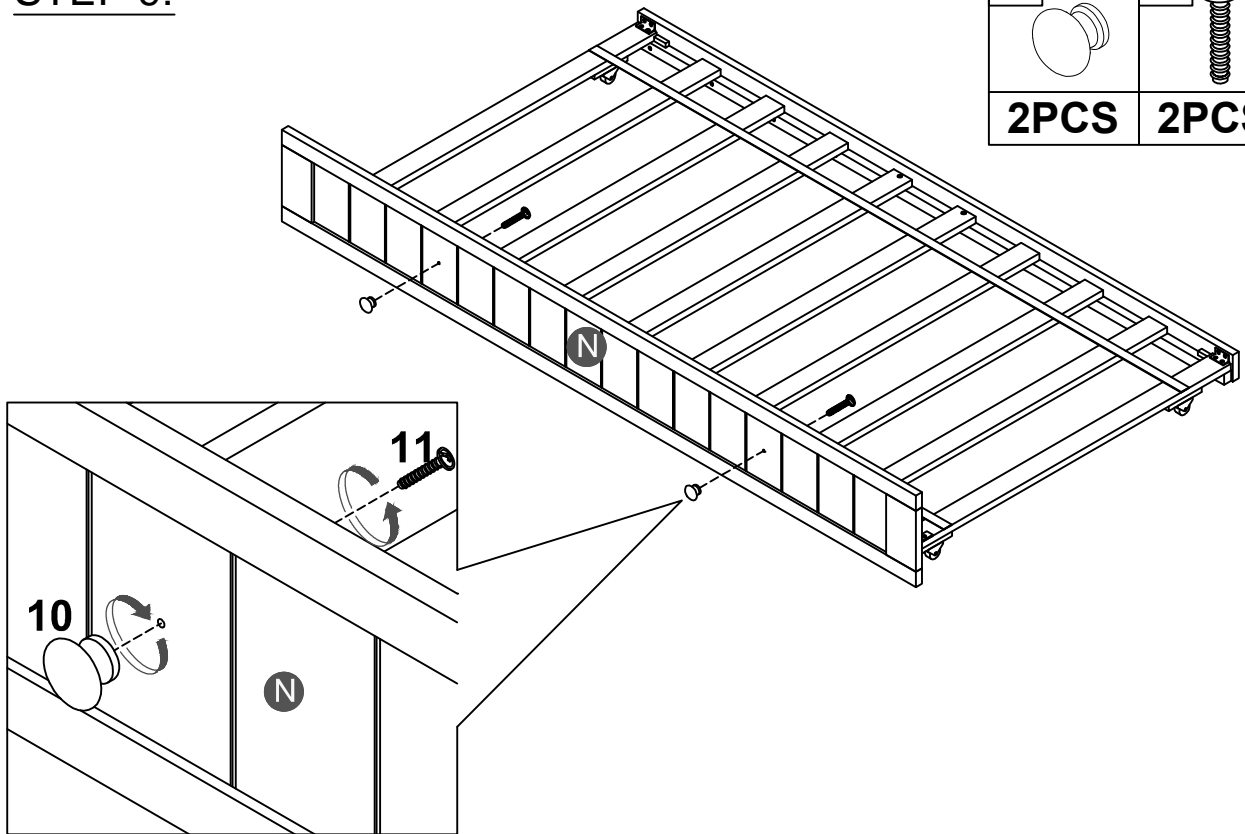
<b>9</b>	<b>8</b>
	
<b>2PCS</b>	<b>8PCS</b>



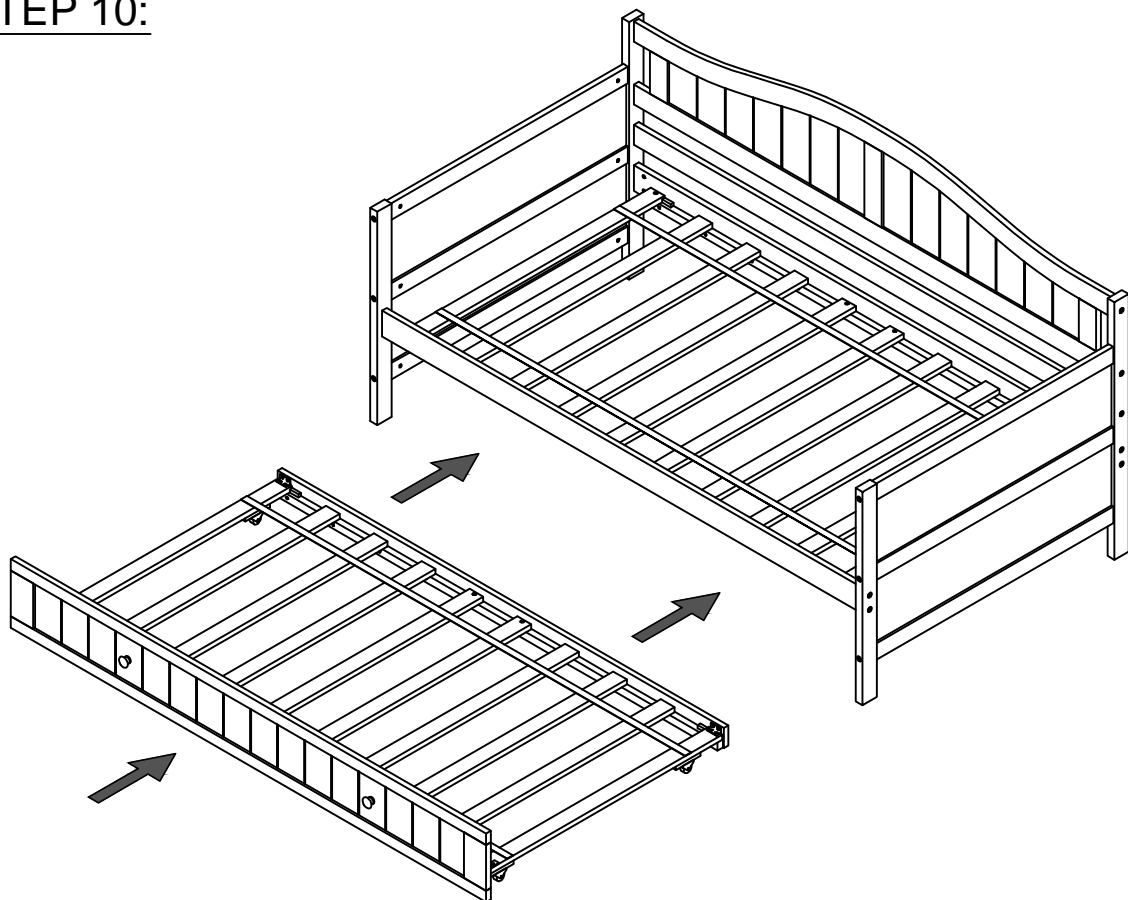


**STEP 9:**

<b>10</b>		<b>11</b>	
<b>2PCS</b>		<b>2PCS</b>	



**STEP 10:**



Push Trundle under the bottom of Day Bed.