



ASSEMBLY INSTRUCTIONS

TWIN HOUSE BED



















WF302176



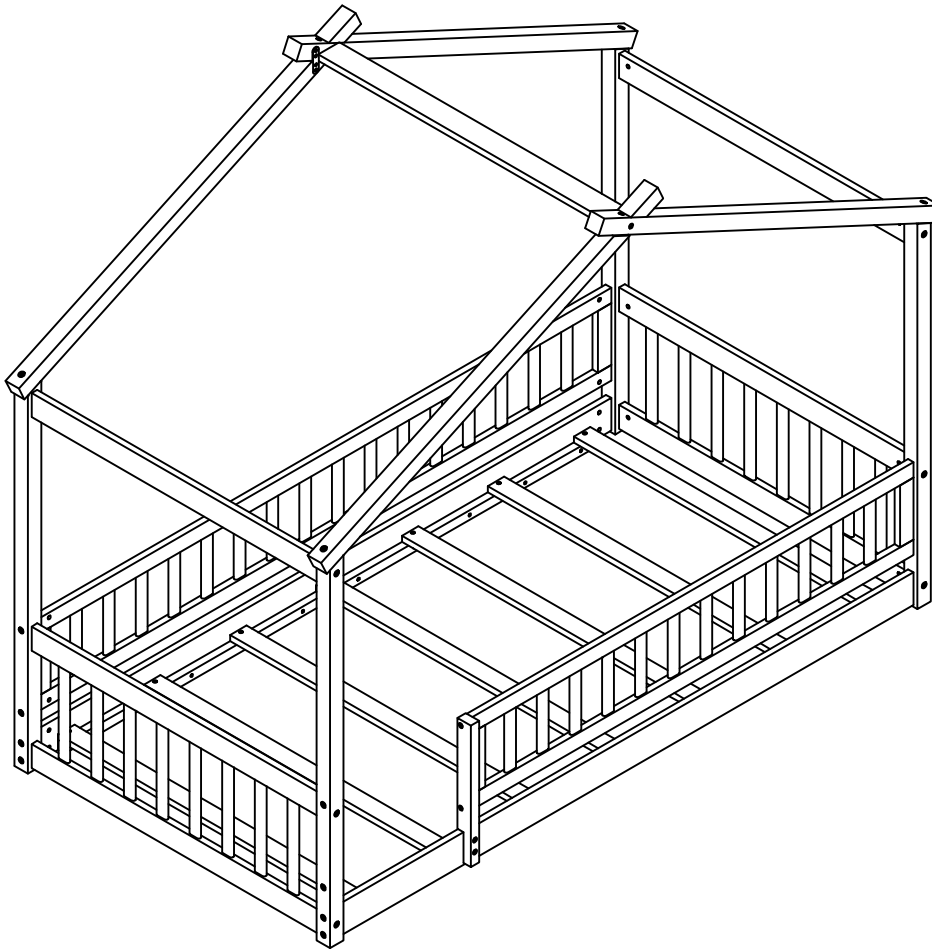


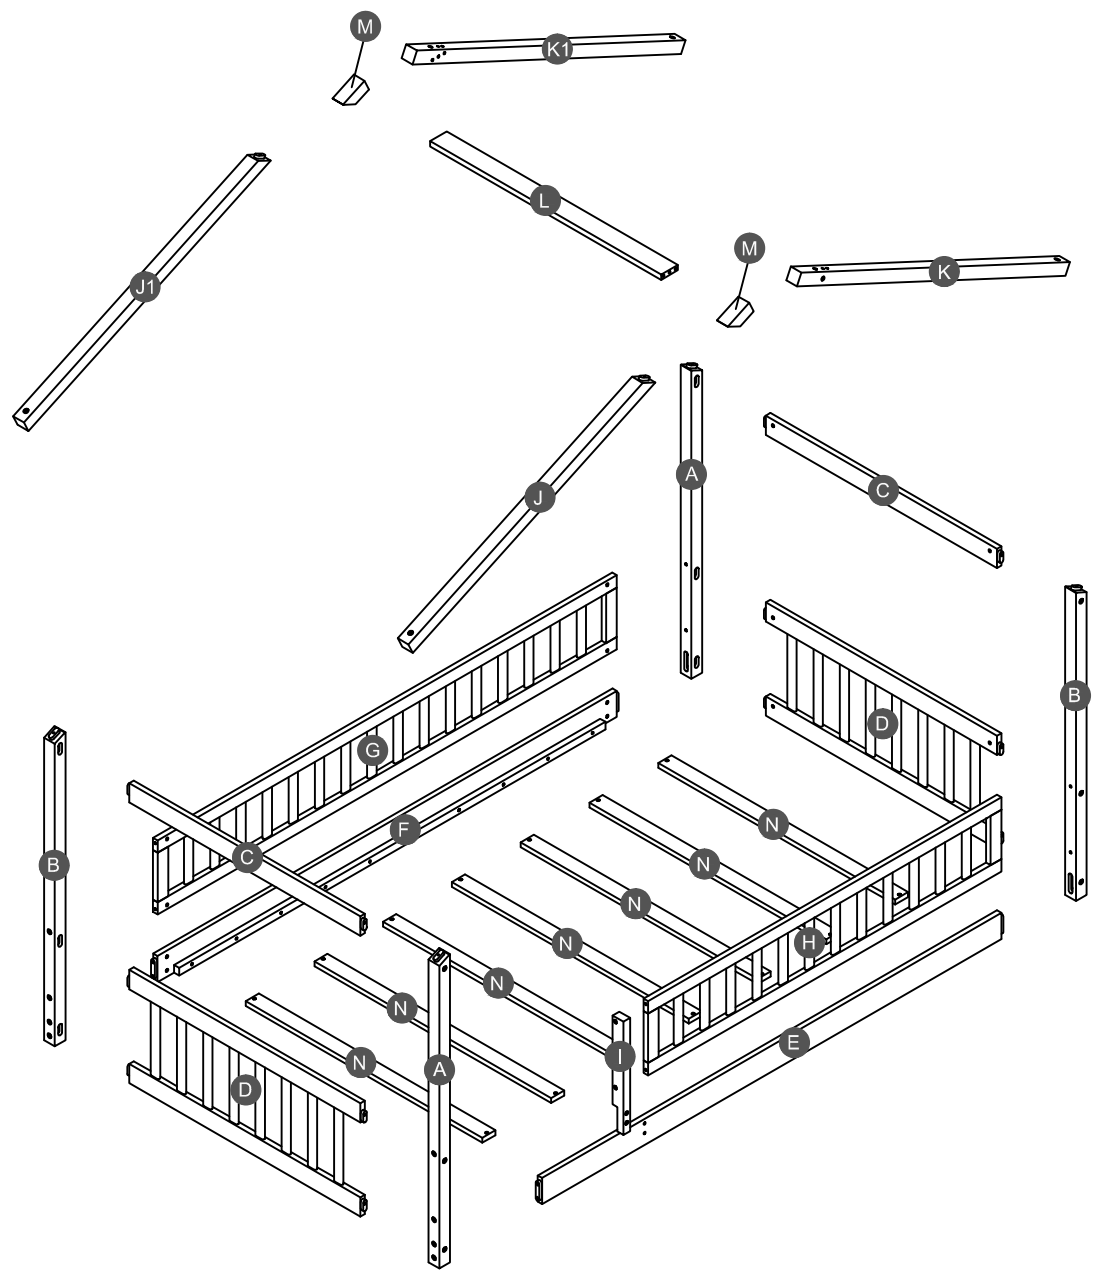




Detail View




Part List

<p>A</p>  <p>Leg (Left Front/Right Back) - 2pcs</p>	<p>B</p>  <p>Leg (Left Back/Right Front) - 2pcs</p>	<p>C</p>  <p>Horizontal bar HB/FB - 2pcs</p>
<p>D</p>  <p>Frame HB/FB - 2pcs</p>	<p>E</p>  <p>Side rail (Front) - 1pc</p>	<p>F</p>  <p>Side rail (Back) - 1pc</p>
<p>G</p>  <p>Long guard rail (Back) - 1pc</p>	<p>H</p>  <p>Short guard rail (Front) - 1pc</p>	<p>I</p>  <p>Support guard rail(Left) - 1pc</p>
<p>J</p>  <p>Upper (Left Front) - 1pc</p>	<p>J1</p>  <p>Upper (Left Back) - 1pc</p>	<p>K</p>  <p>Upper (Right Front) - 1pc</p>
<p>K1</p>  <p>Upper (Right Back) - 1pc</p>	<p>L</p>  <p>Upper horizontal bar - 1pc</p>	<p>M</p>  <p>Block - 2pcs</p>
<p>N</p>  <p>Slats - 7pcs</p>		

Hardware List


1  Ø8*30mm Wood dowel (6pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (16pcs)
4  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	5  (Ø12)1/4"*65mm Hex-Head bolts (8pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(30pcs)
7  (1/4")4.5*58mm Allen key (1pc)	8  Ø4*30mm Wood screws (14pcs)	9  Ø3.5*19mm Wood screws (8pcs)
10  75*20*2 mm Metal bracket (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

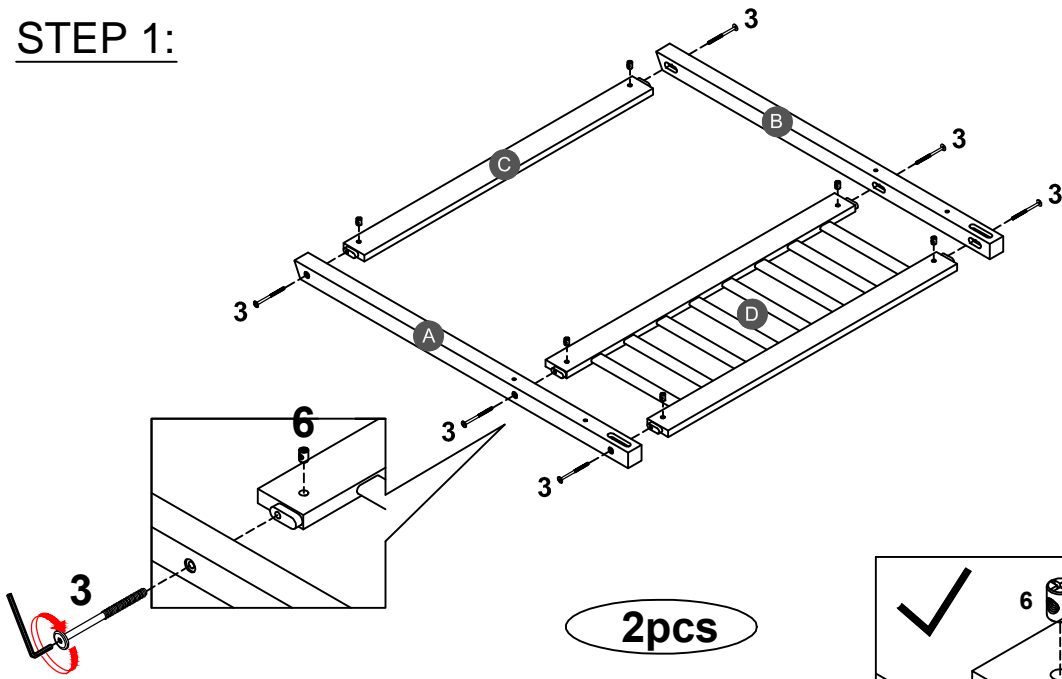


3	
12PCS	
6	
12PCS	

Note: Part 6 will face up with the "x" mark on it, otherwise it cannot be tightened

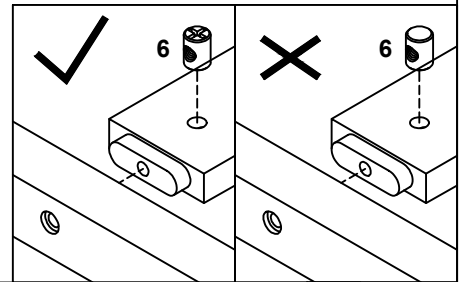



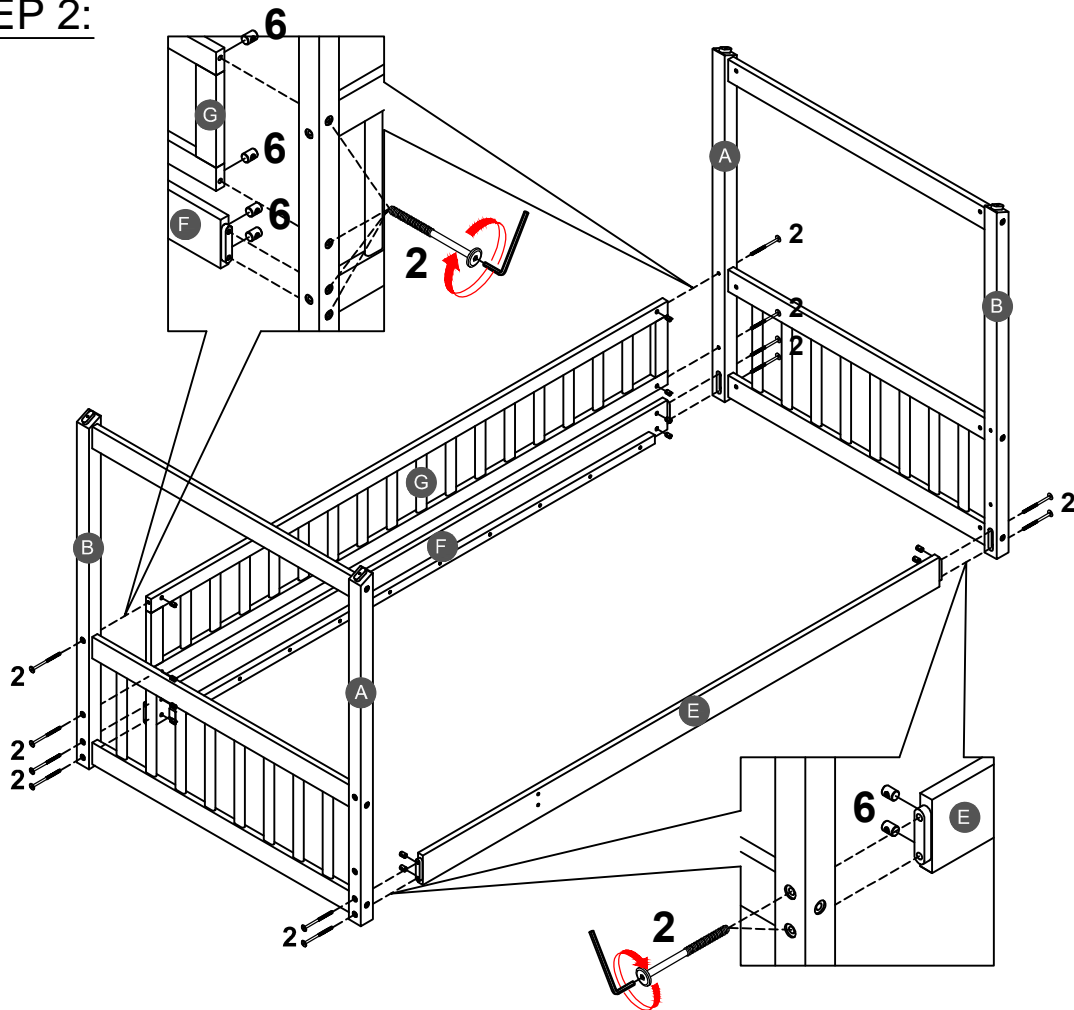


STEP 2:







2	
12PCS	
6	
12PCS	

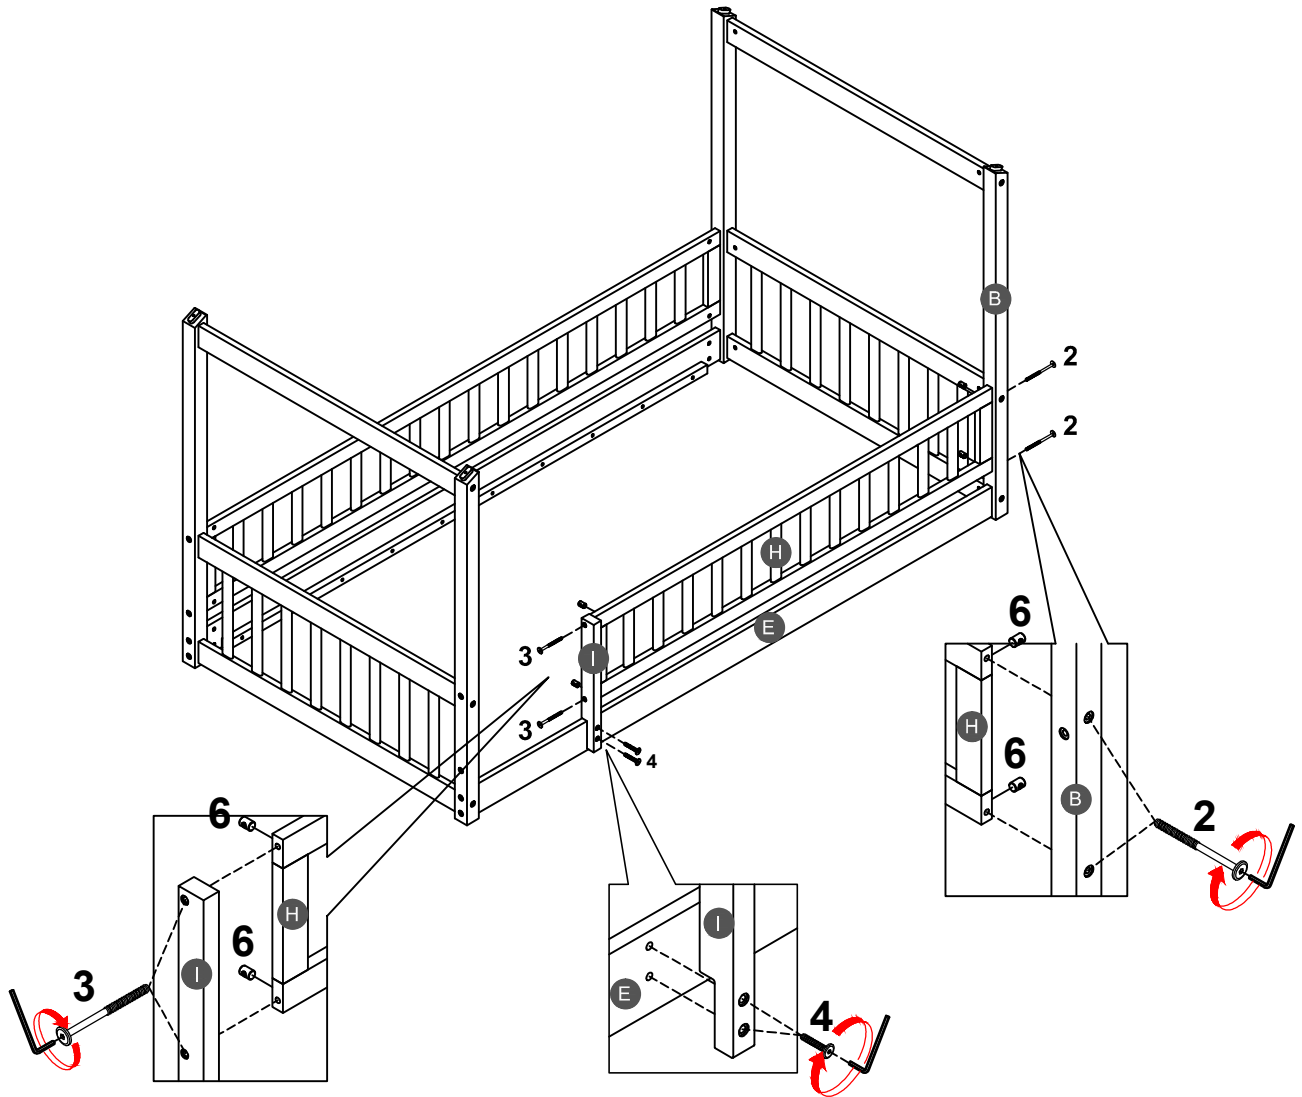
STEP 3:

2		3		4		6	
2PCS		2PCS		2PCS		4PCS	






STEP 4:

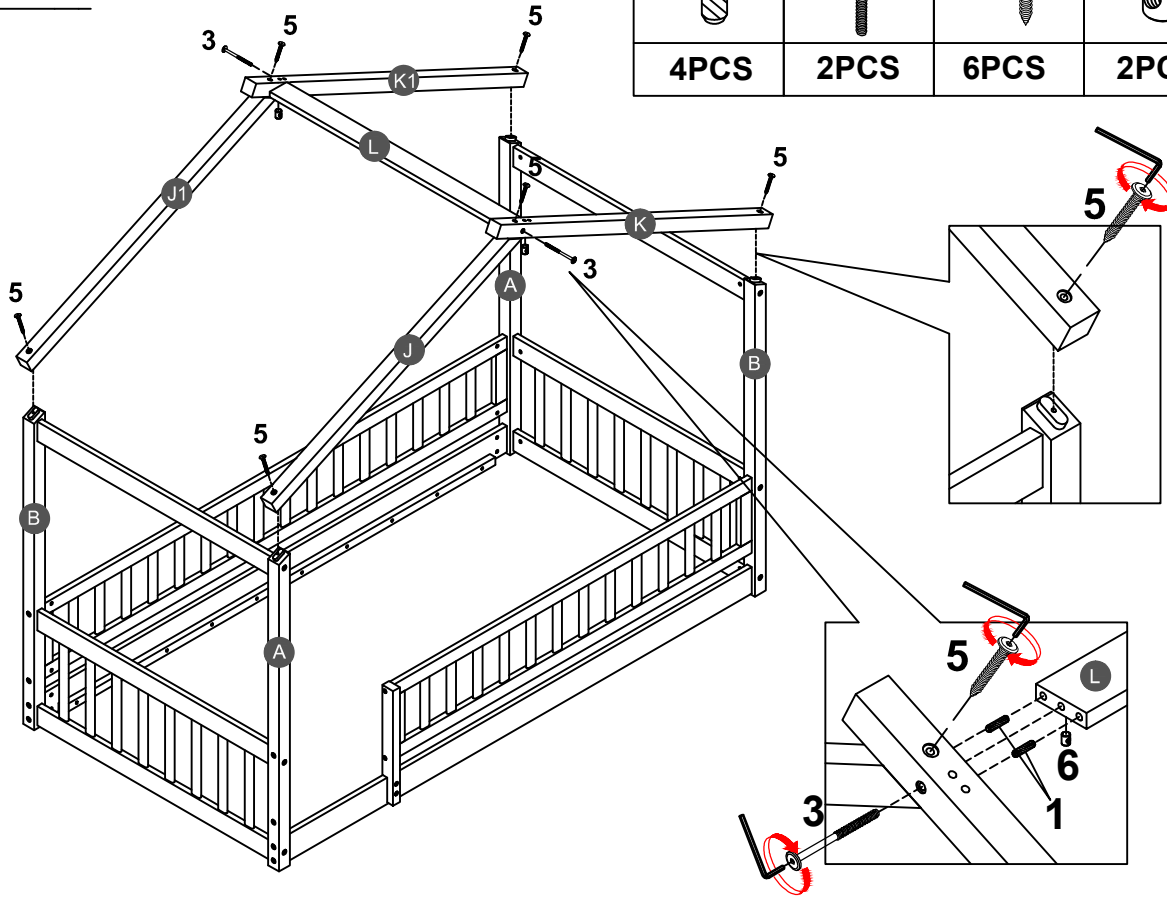1		3		5		6	
4PCS		2PCS		6PCS		2PCS	






STEP 5:

1	
2PCS	
5	
2PCS	

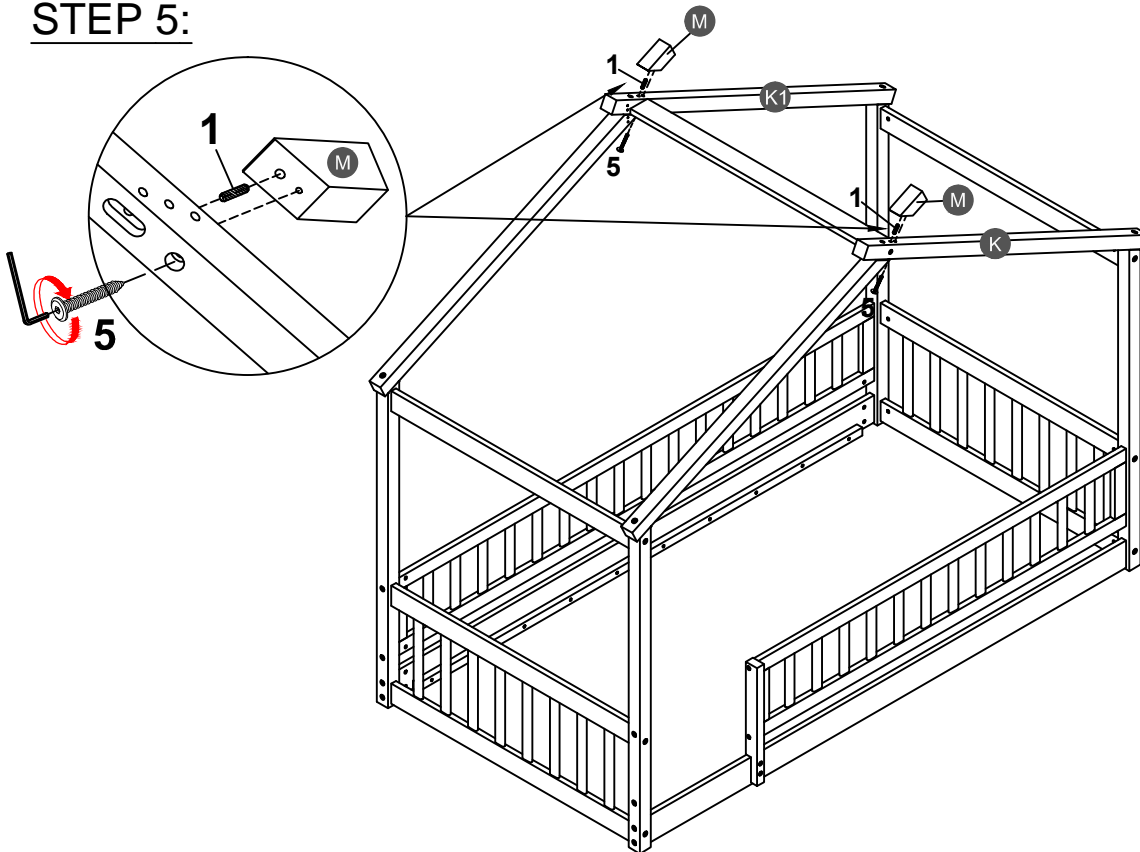


STEP 6:

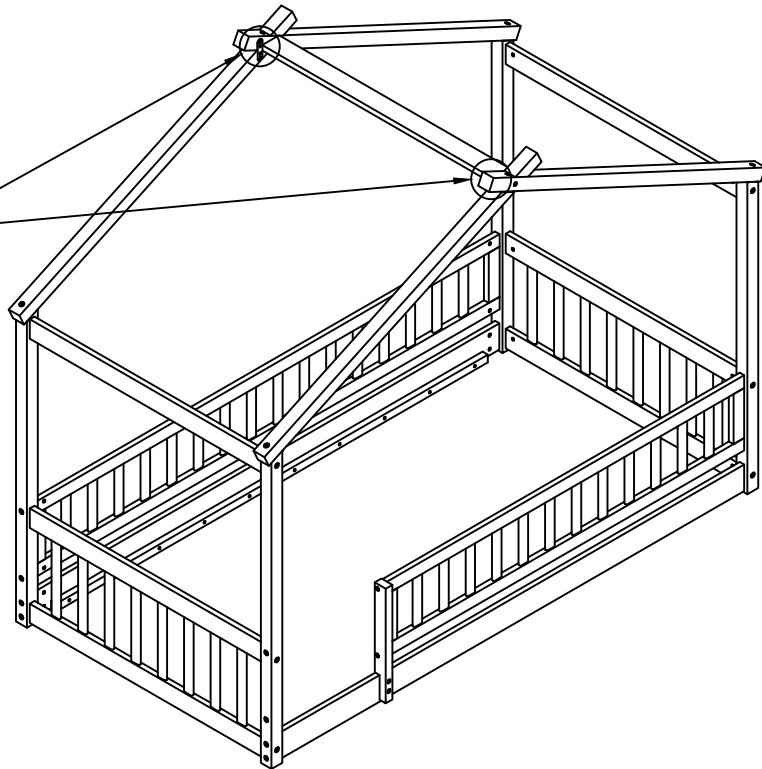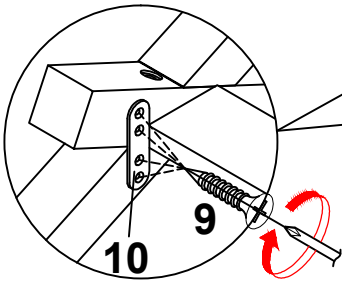



9



8PCS

10


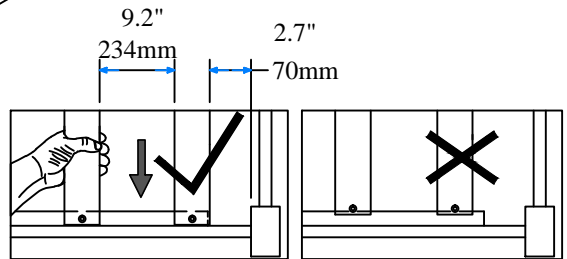
2PCS

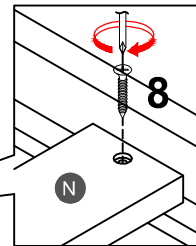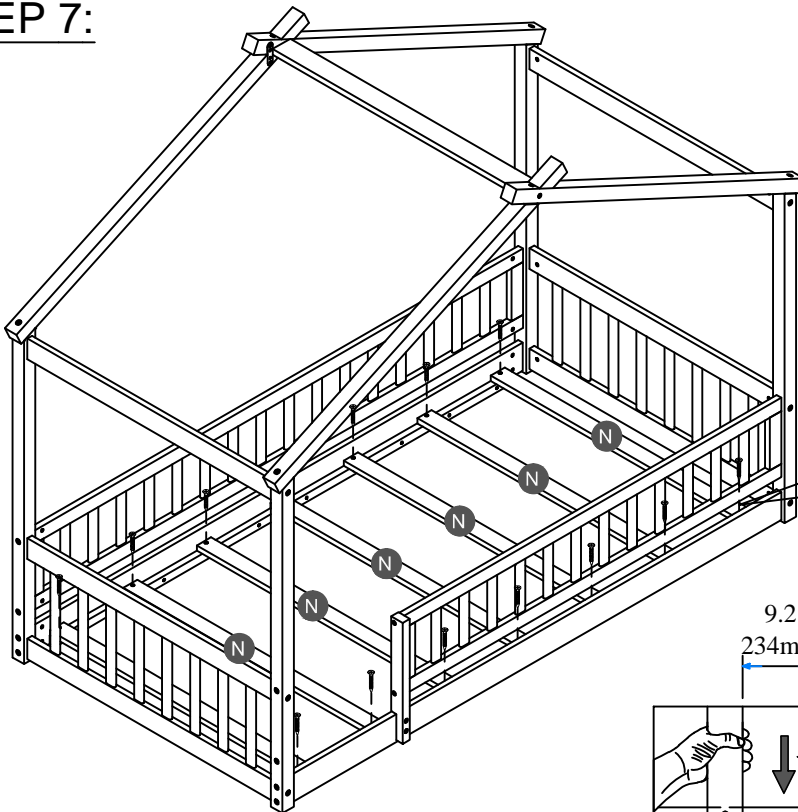STEP 7:



8


14PCS



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.