
ASSEMBLY INSTRUCTIONS

TWIN/FULL BED WITH TABLE

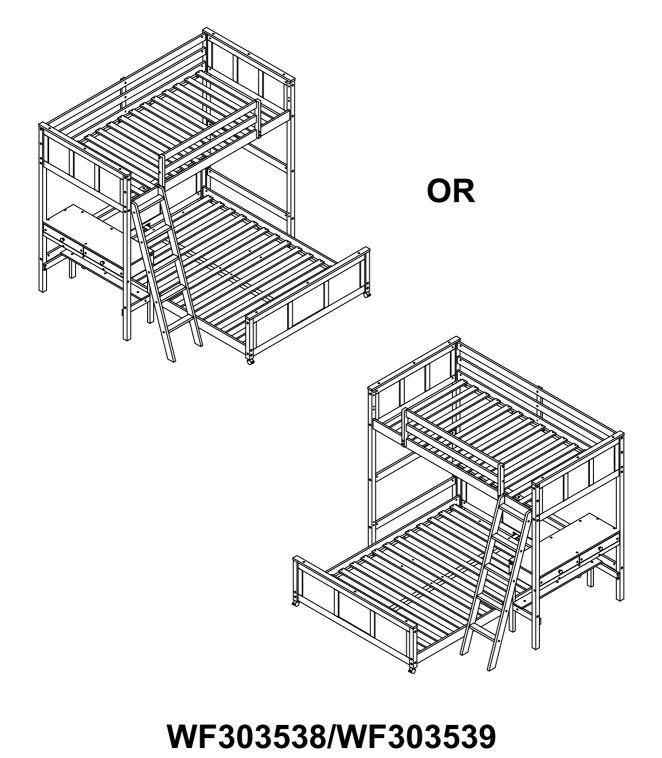



SAFETY WARNING



1. This bed is designed for use only mattress (es) meeting the following specifications on the upper bunk, and lower bunk:


<u>Upper bunk</u> (Bunk bed and tribed included)


Bed typeLengthWidthThicknessTwin Standard74"-75"38 1/2"6" max


Lower bunk

Bed type Length Width Thickness Full Standard 74"-75" 54" 8"

- 2. Replacement parts, including additional guardrails, maybe obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC . 18961 ARENTH AVENUE, CITY OF INDUSTRY, CA, 91748.) dealers
- 3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
- 4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
- 5. Surface of mattress must be at least 5" (127mm) below the upper edge of guardrails.
- 6. Do not allow children under 6 years of age to use the upper bunk.
- 7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
- 8. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- 9. Always use the ladder for entering and leaving the upper bunk.
- 10. Do not use substitute part. Contact the manufacture or dealer for replacement part.
- 11. Use of a night light may provide added safety precaution for a child using the upper bunk.
- 12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
- 13. The use of water or sleep flotation mattresses is prohibited.
- 14. STRANGULATION HAZARD Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
- 15. Keep these instruction for future reference.
- 16. Prohibit more than one person on upper bunk
- 17. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
- 18. Be certain all staples are out of the box before beginning assembly on the shipping carton.

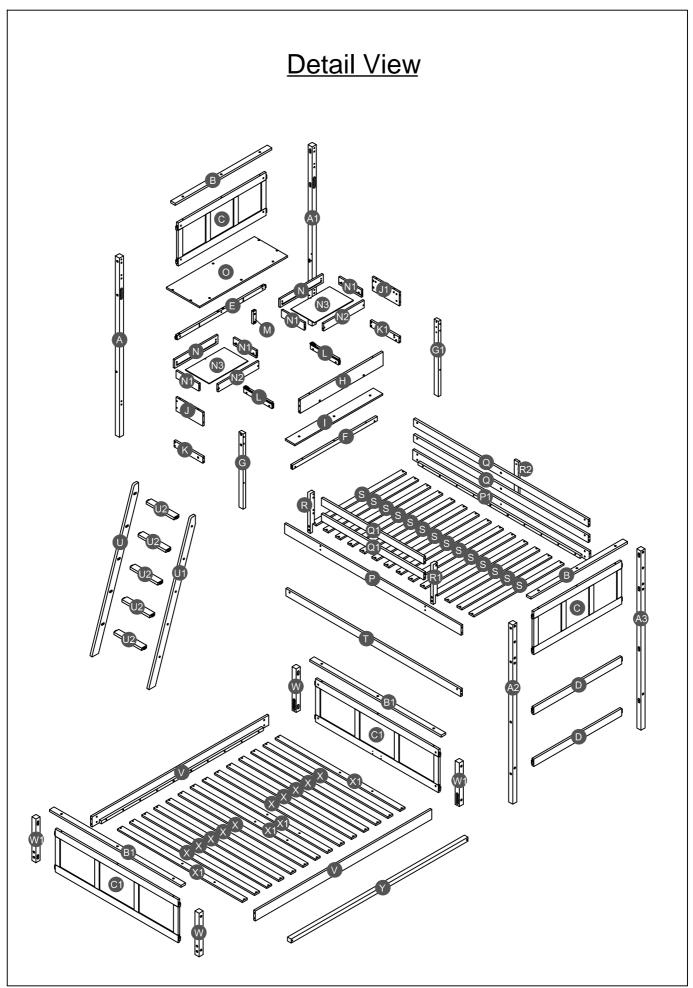

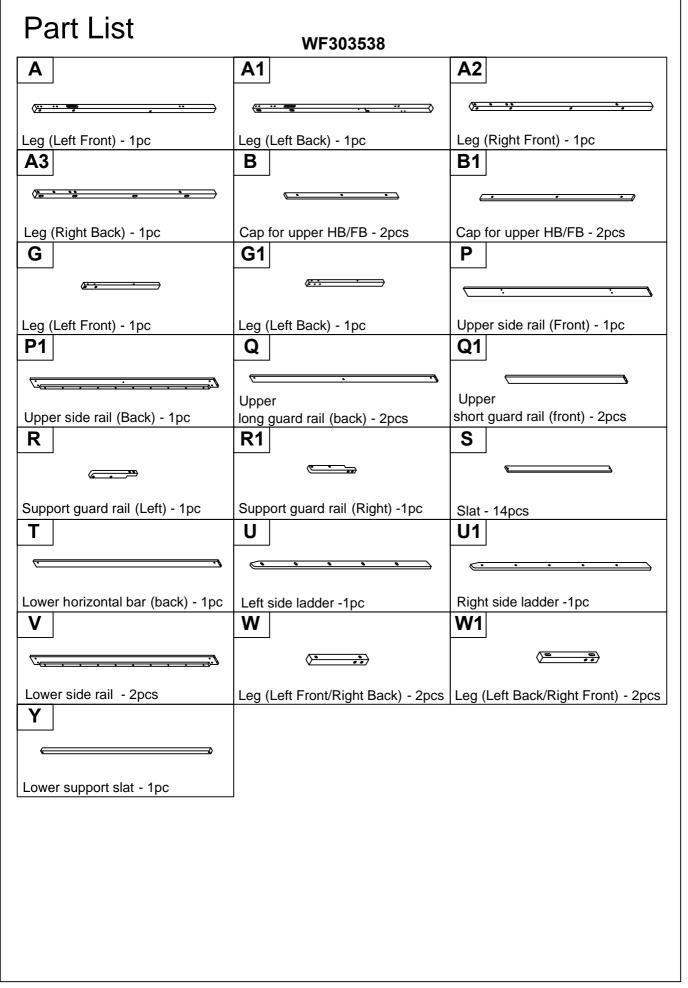

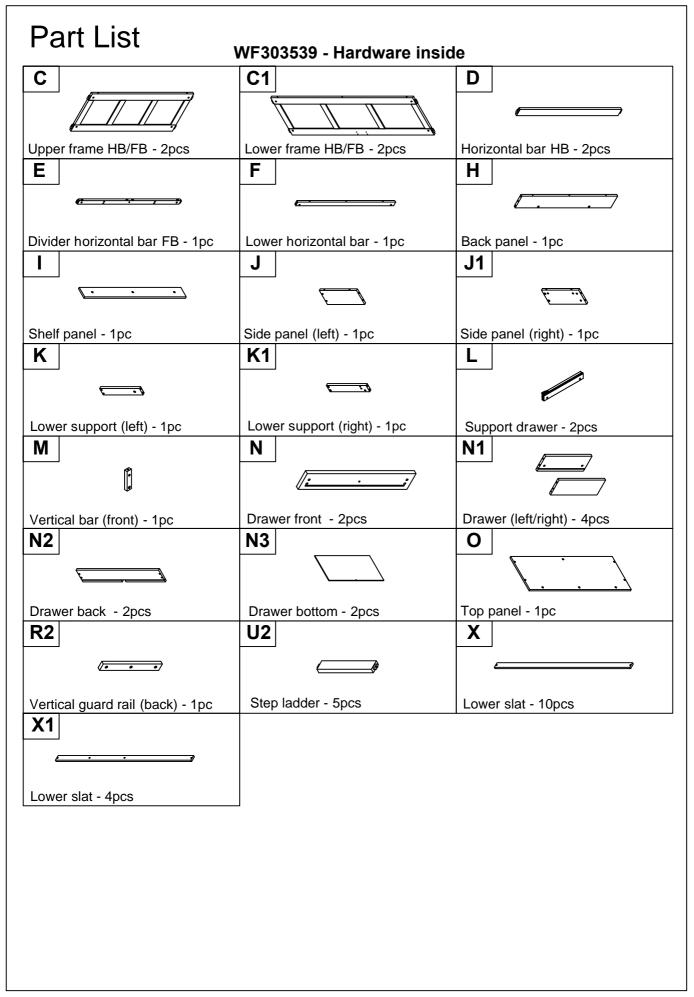


Hardware List WF303539


4	2	3
1	2	3
(1/////)	Q1/1//W	
Ø10*40mm	Ø8*30mm	(Ø15)1/4"*100mm
Wood dowel (10pcs)	Wood dowel (14pcs)	Hex-Head bolts (22pcs)
4	5	6
(9)	(a)	(a)
(Ø15)1/4"*80mm	(Ø12)1/4"*70mm	(Ø12)1/4"*60mm
Hex-Head bolts (32pcs)	Hex-Head bolts (4pcs)	Hex-Head bolts (29pcs)
(Ø12)1/4"*40mm	(Ø12)1/4"*35mm	(Ø12)1/4"*30mm
Hex-Head bolts (3pcs)	Hex-Head bolts (4pcs)	Hex-Head bolts (3pcs)
10	11	12
(Ø12)1/4"*40mm	(1/4")4.5*58mm	1/4"*15 (9.5mm)
Hex-Head bolts (26pcs)	Allen key (2pcs)	Horizontal-Hole bolts(87pcs)
13	14	15 👸
(†)::::::::::::::::::::::::::::::::::::	(4) (minute)	
Ø4*30mm	Ø3.5*15mm	64*52*95mm
Wood screws (60pcs)	Wood screws (14pcs)	Castor (2pcs)
16	17	18
64*52*95mm	266*30mm	(Ø13)1/4"*14mm
Castor (2pcs)	Upper slider drawer (2pcs)	Connect bolt (2pcs)
19	20	21
116*40*27mm	Ø38*31mm	3/16"*25mm
Metal bracket (2pcs)	Pine Knob (2pcs)	Ph zinc(Knob) (2pcs)
22	23	
81*26*21*(2.5mm)	Ø4*19mm	
Hooks (2pcs)	Wood screws (6pcs)	





ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

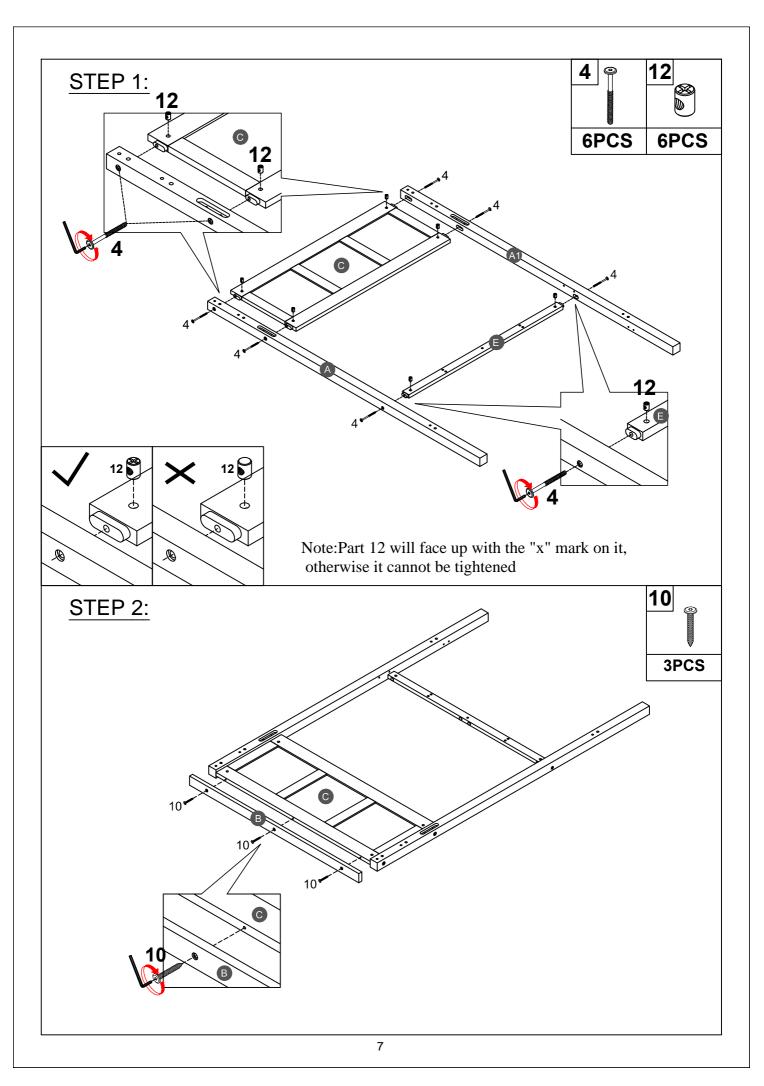

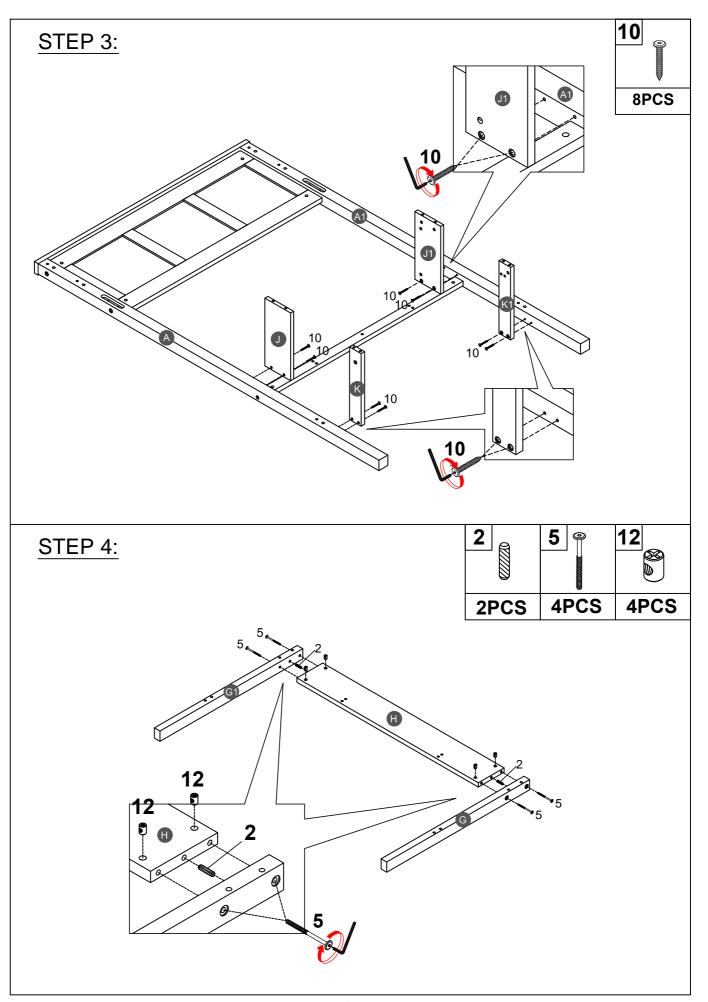


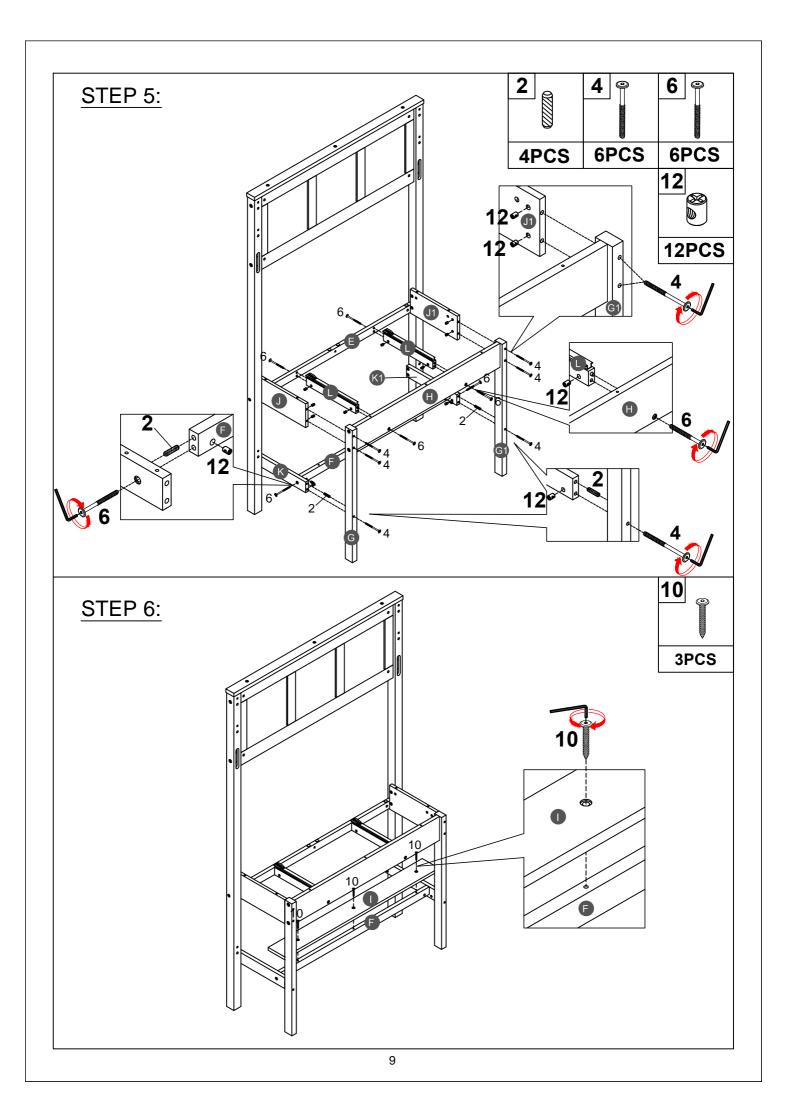


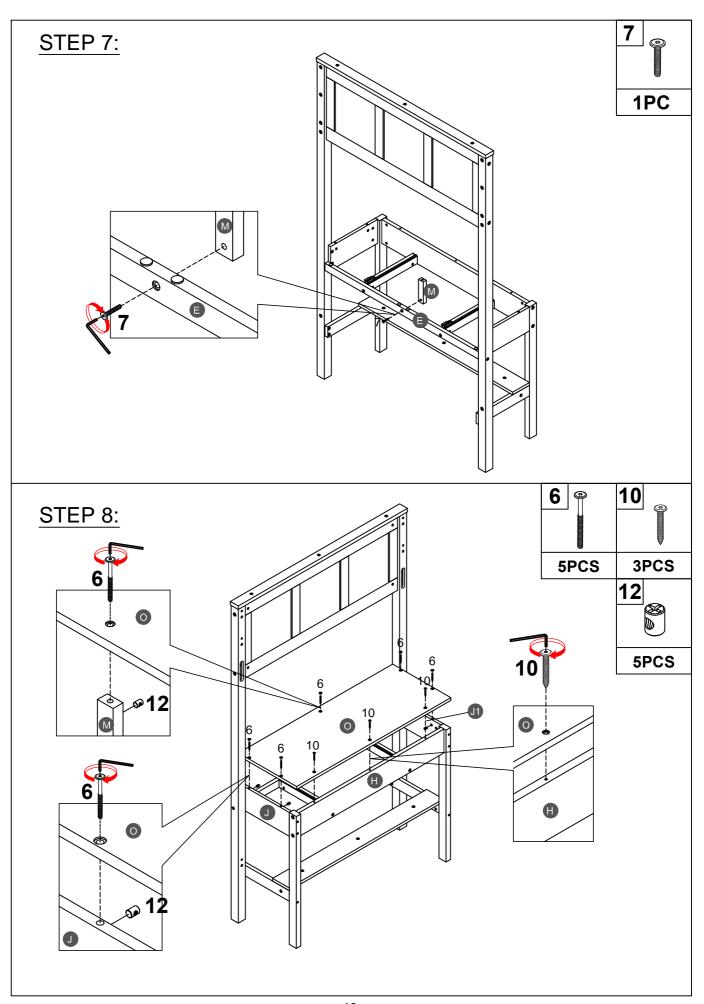

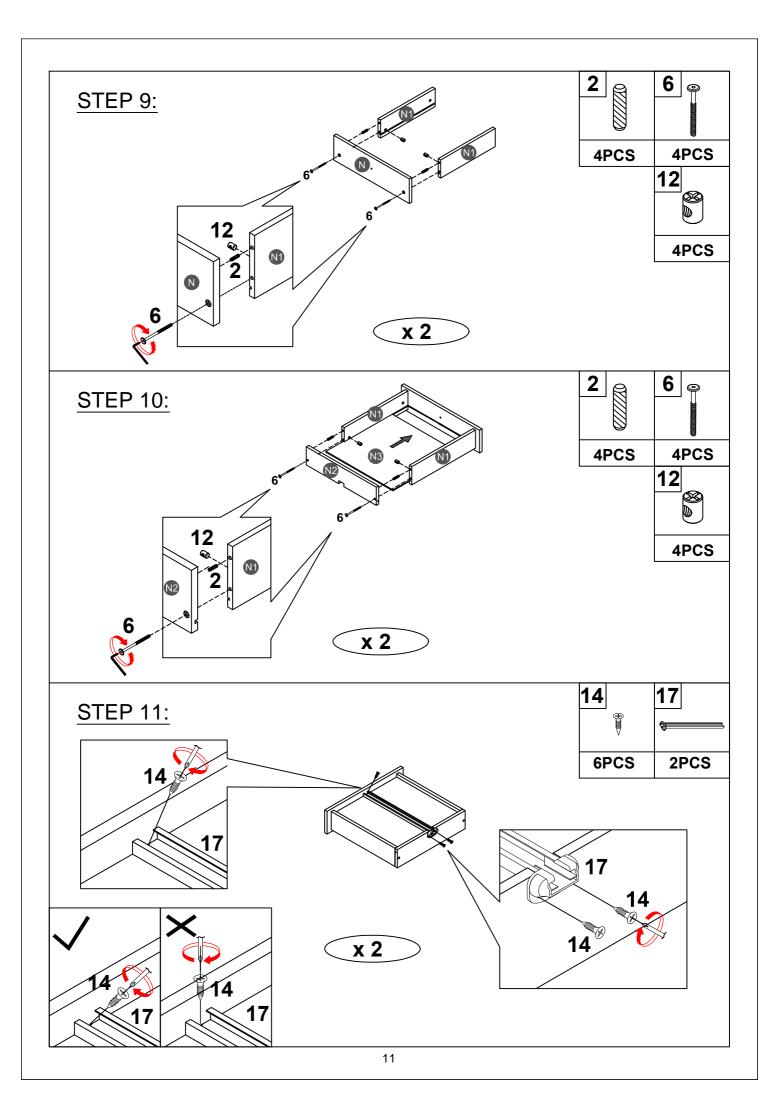








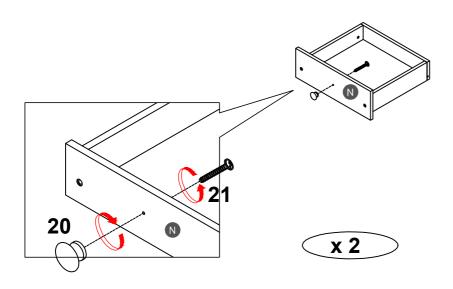



STEP 13:

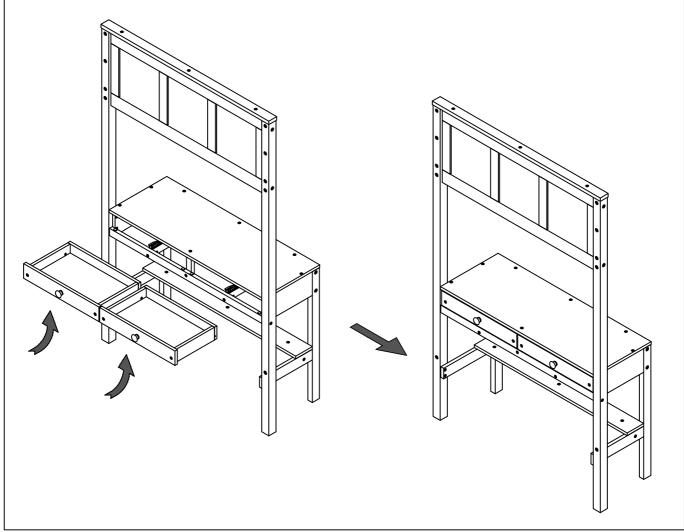


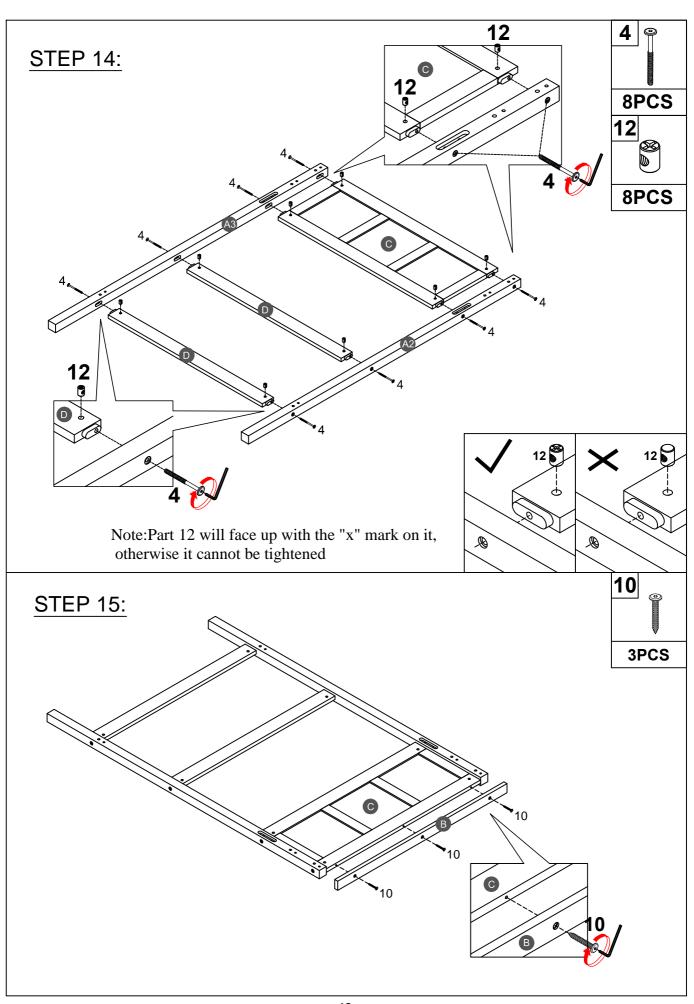

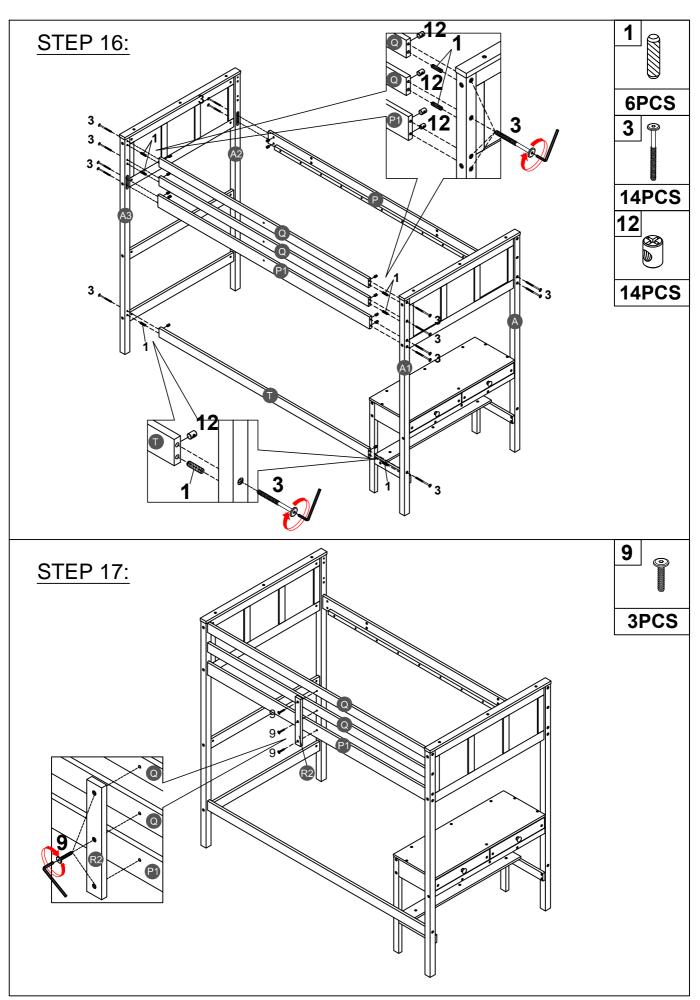


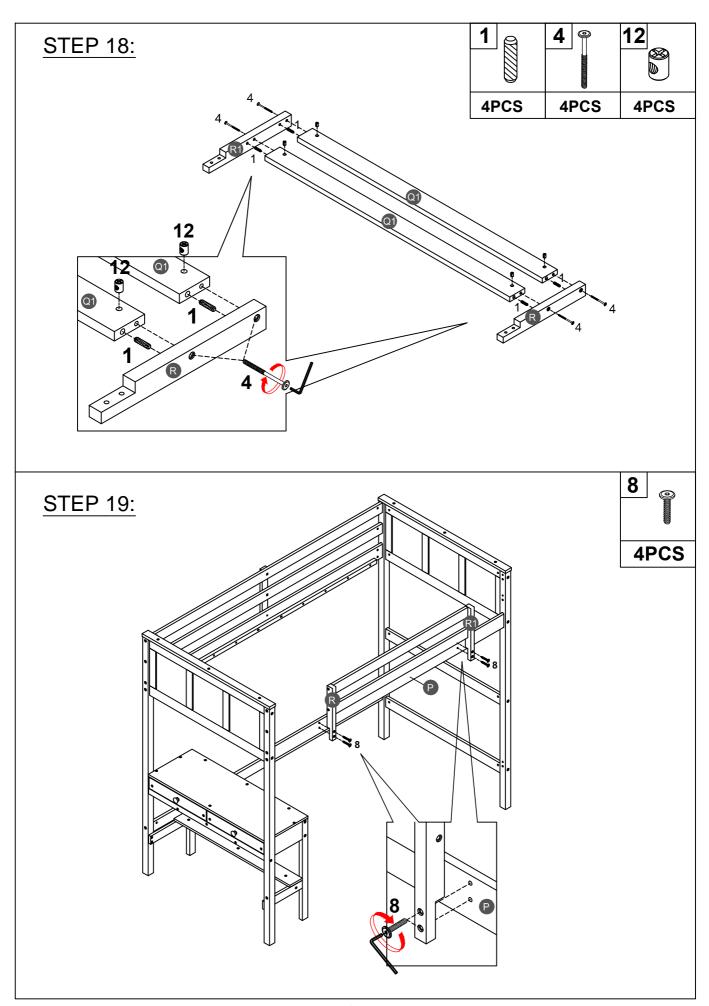


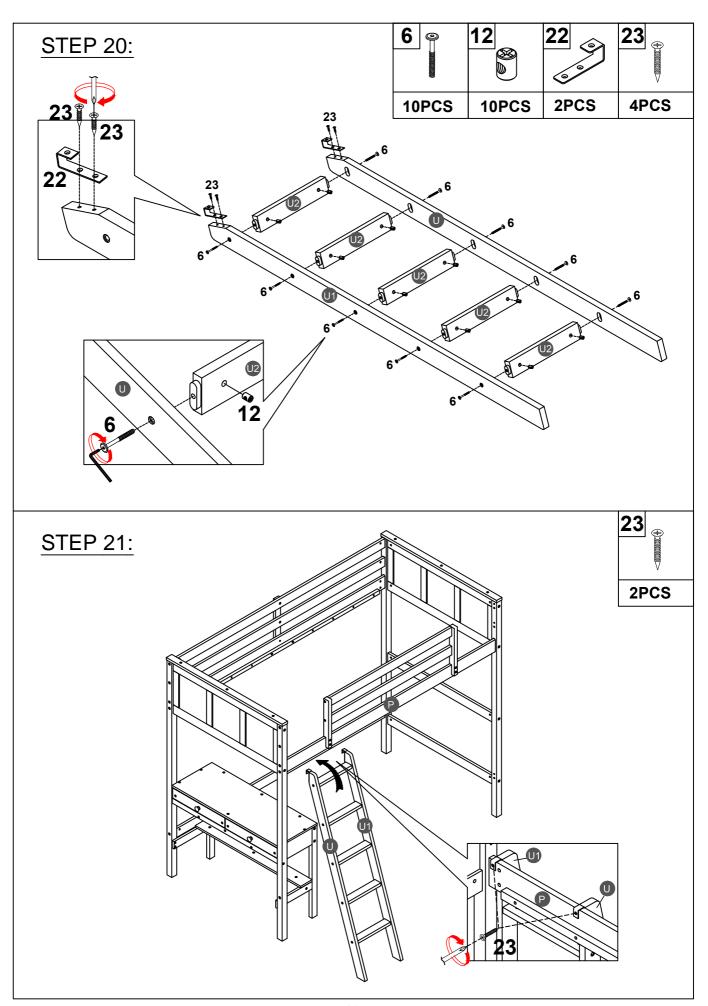


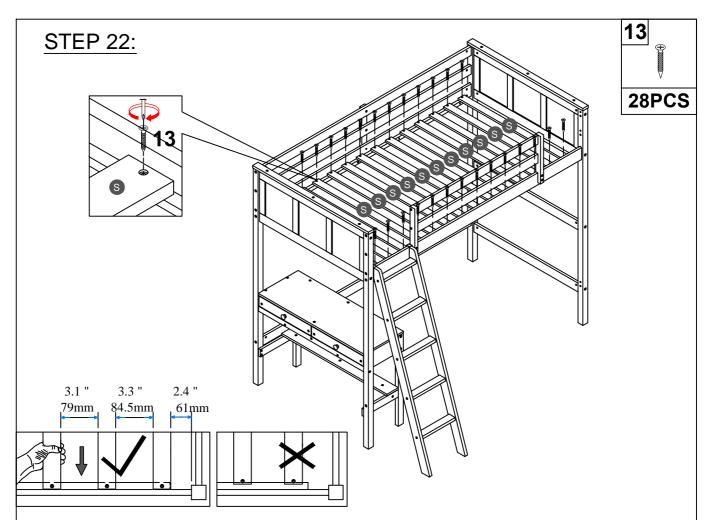



Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

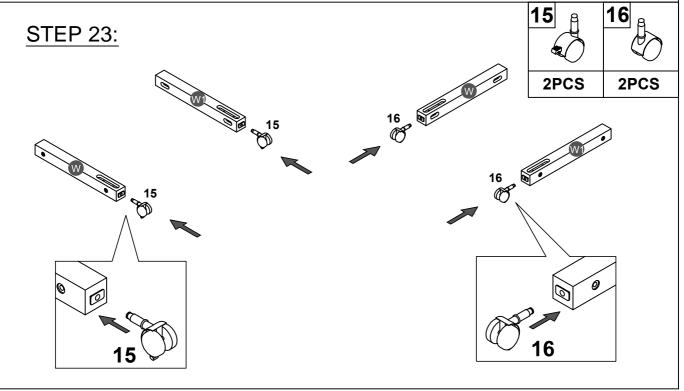

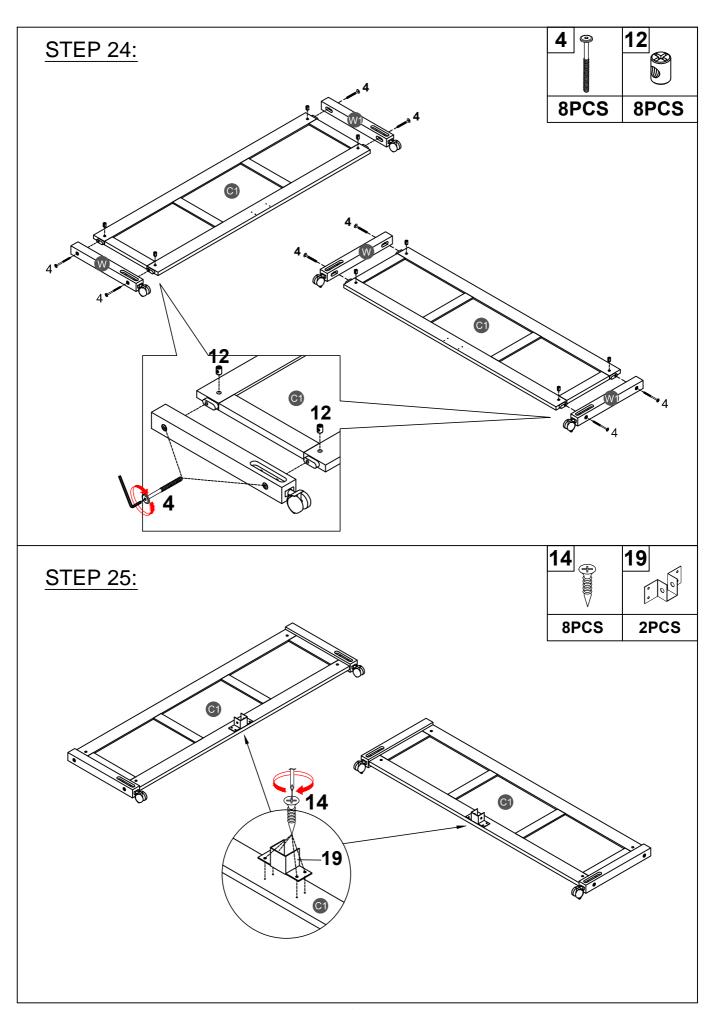

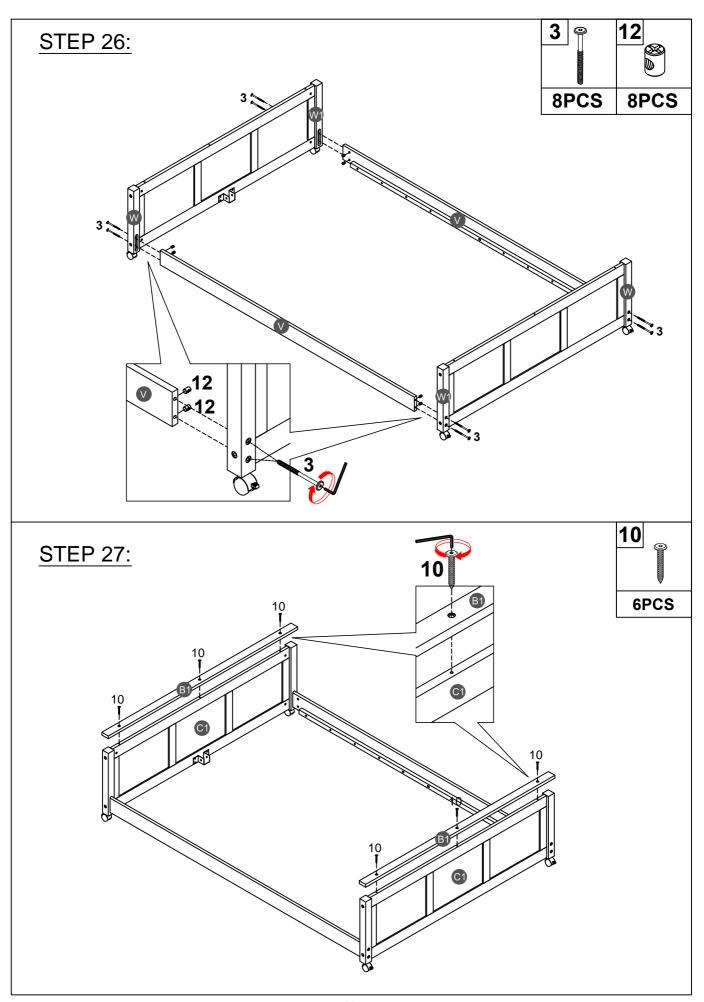

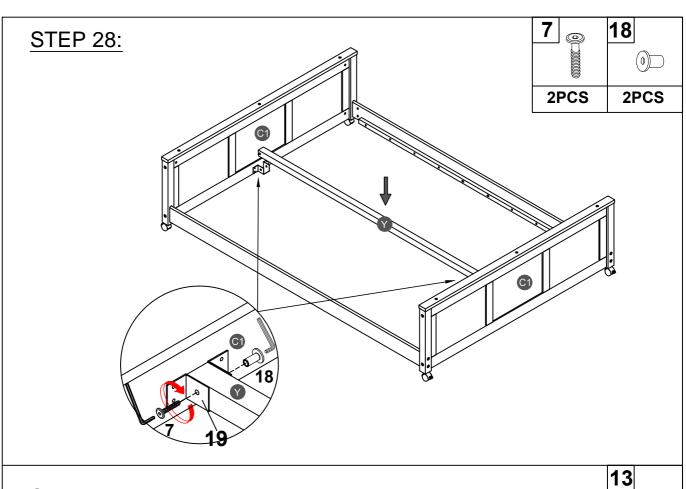

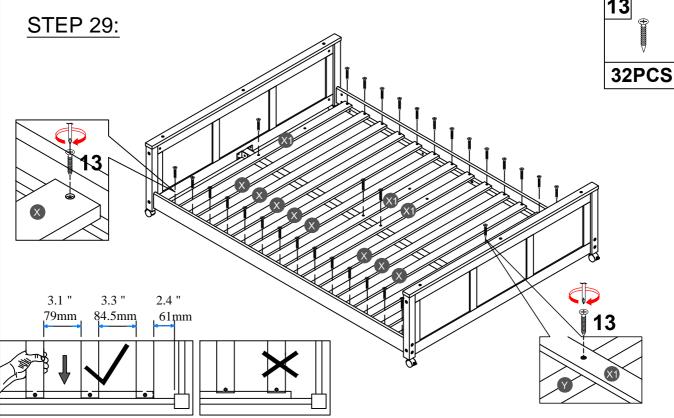

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

