


FULL OVER FULL BUNK BED  
ASSEMBLY INSTRUCTIONS  
SKU : MF310408

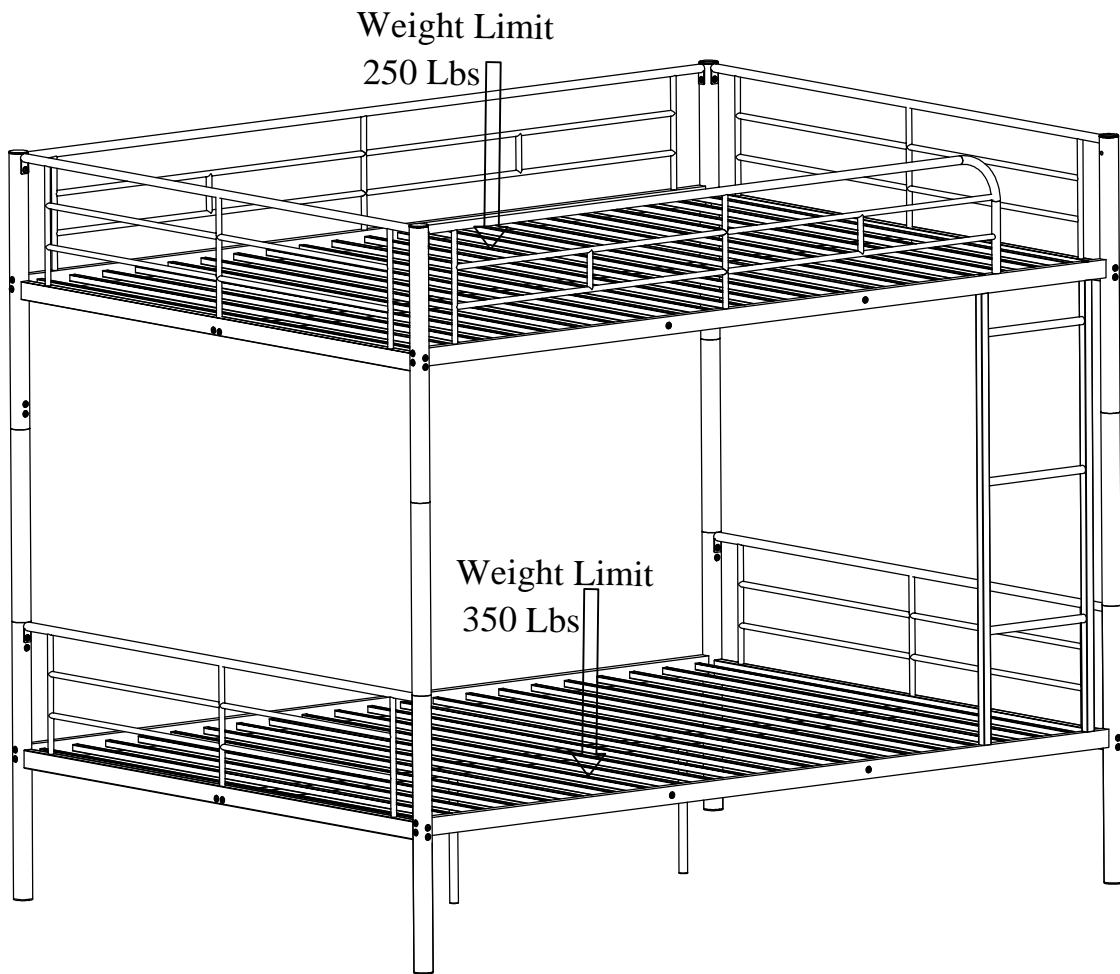

**FULL OVER FULL BUNK BED  
ASSEMBLY INSTRUCTIONS  
SKU : MF310408**

**SAFETY WARNINGS AND GENERAL NOTES:**

1. Follow the information on the warnings on the bunk bed end structure and on the carton. Do not remove the warning label from the bed.
2. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow children under 6 years of age to use the upper bunk.
4. Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.
5. Do not allow horseplay on or under beds.
6. Always prohibit jumping on the bed.
7. Prohibit more than one person on upper bunk.
8. Always use the ladder for entering and leaving the upper bunk.
9. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
10. Use of a night-light may provide added safety precaution for a child using the upper bunk.
11. Always use guardrails on both long sides of the upper bunk.
12. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

13. **STRANGULATION HAZARD-** Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
14. Keep these instructions for future reference.
15. We recommend assembling your bunk bed on the shipping carton to protect your floor or carpet.
16. Be certain all staples are out of the box before beginning assembly on the shipping carton.

**17. USE ONLY MATTRESSES WHICH ARE AS THE TABLE BELOW ON UPPER AND ON LOWER BUNKS.**

Upper bunk (bunk bed and tribed included)

Bed type	Length	Width	Thickness
Full bed	74" – 75"	53" – 54"	6" max

Lower bunk

Bed type	Length	Width	Thickness
Full bed	74" – 75"	53" – 54"	8"


**18. SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.**

**19. Replacement Parts:**

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC.) dealers









FULL OVER FULL BUNK BED  
ASSEMBLY INSTRUCTIONS  
SKU : MF310408

DETAIL VIEW



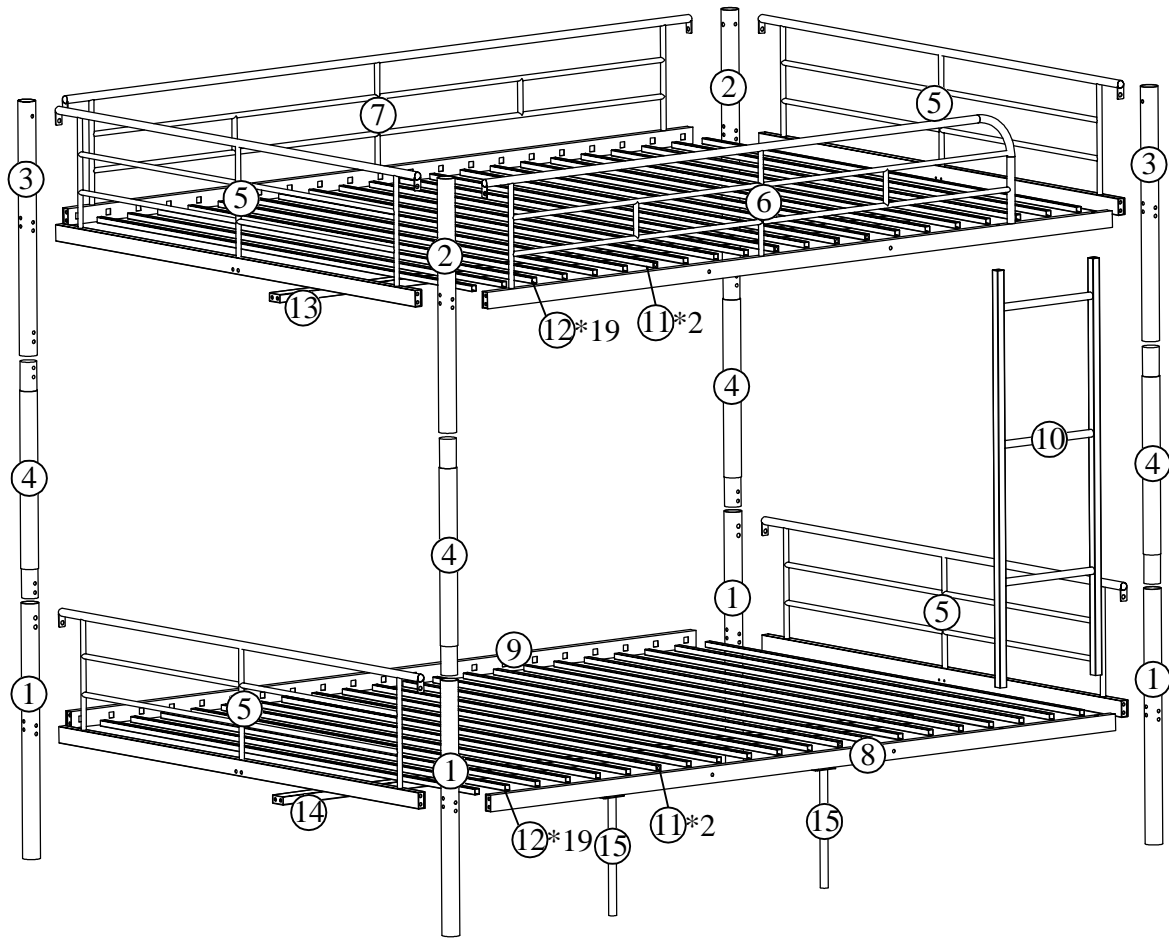




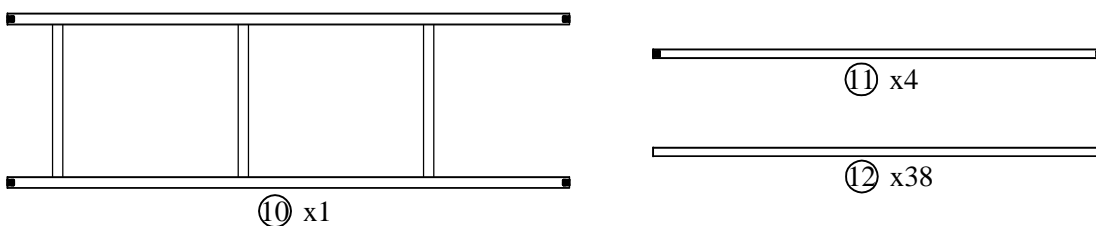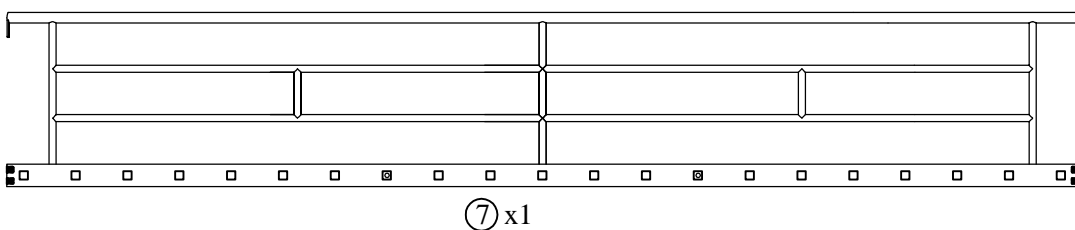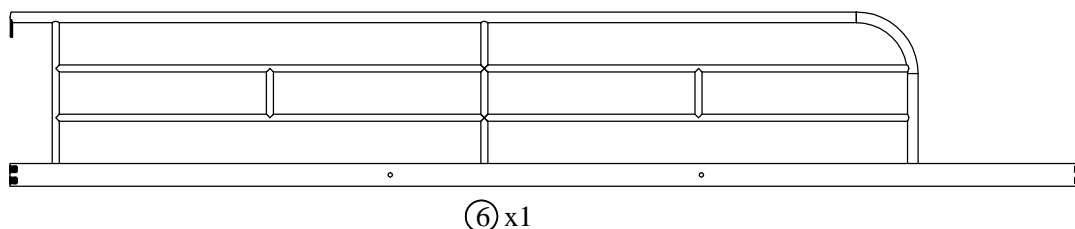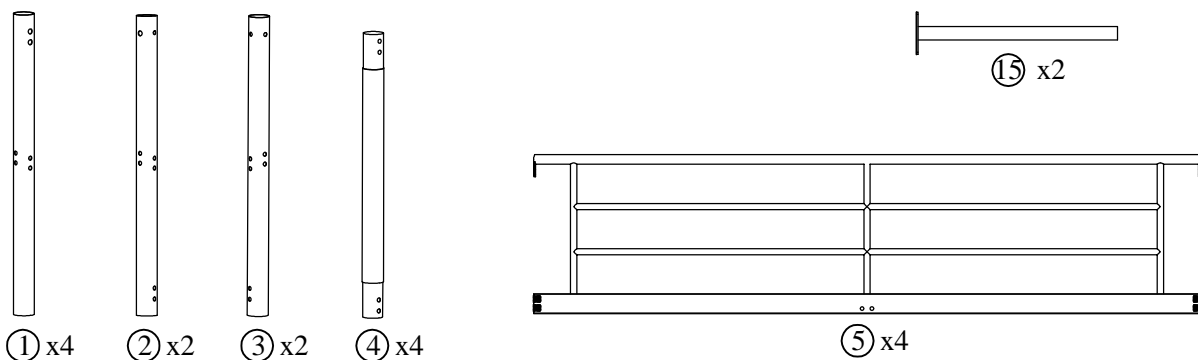


FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

PART LIST




HARDWARE LIST


Ⓐ Bolts	Ⓑ Bolts	Ⓒ Bolts	Ⓓ End cap	Ⓔ End cap	Ⓕ Allen key	Ⓖ Connect wall	Ⓖ Hex nut
							
1/4*60 36PCS	1/4*40 8PCS	1/4*15 35PCS	Ø42 16PCS	Ø19 2PCS	4*59 1PC	1/4*40 2 SET	1/4 4PCS

FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

OPTION A STEP 1-7

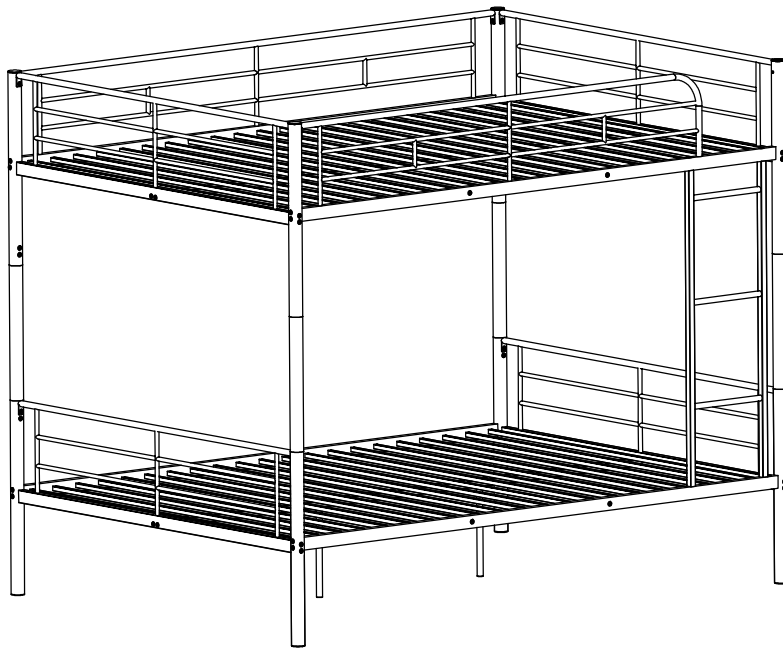


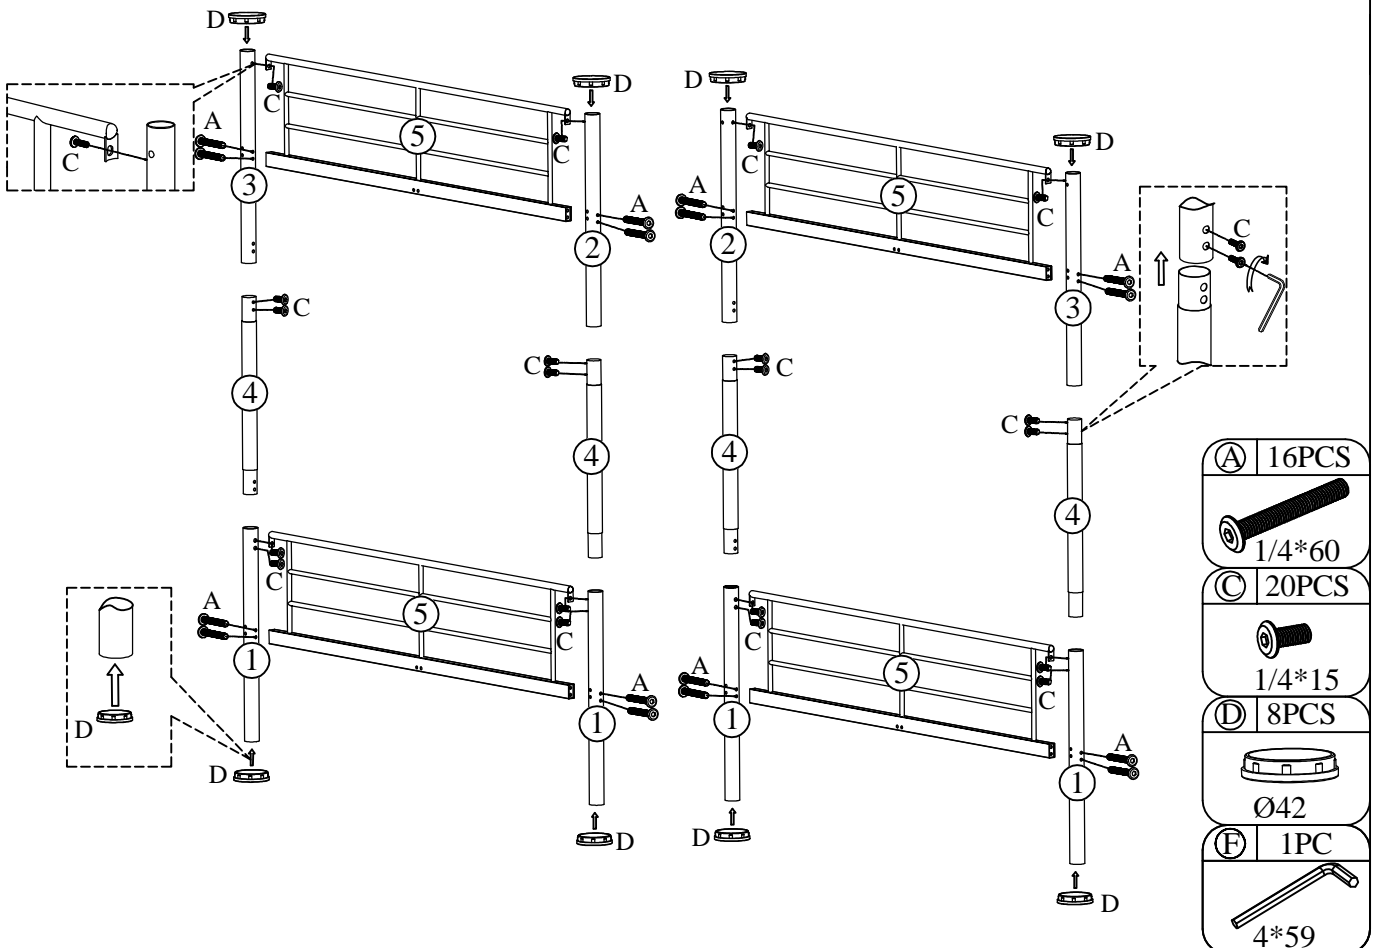

STEP 1 :




FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

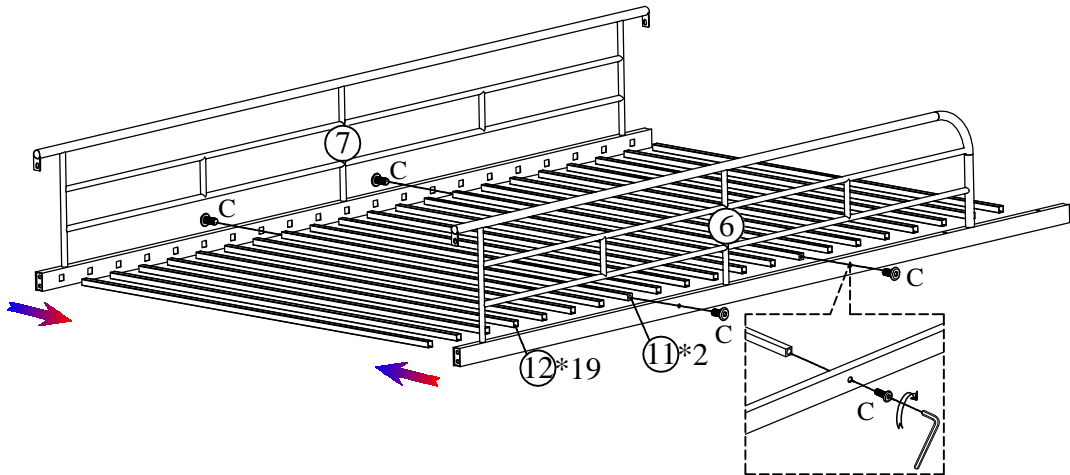

STEP 2 :



Ⓒ	4PCS
	1/4*15
Ⓕ	1PC
	4*59

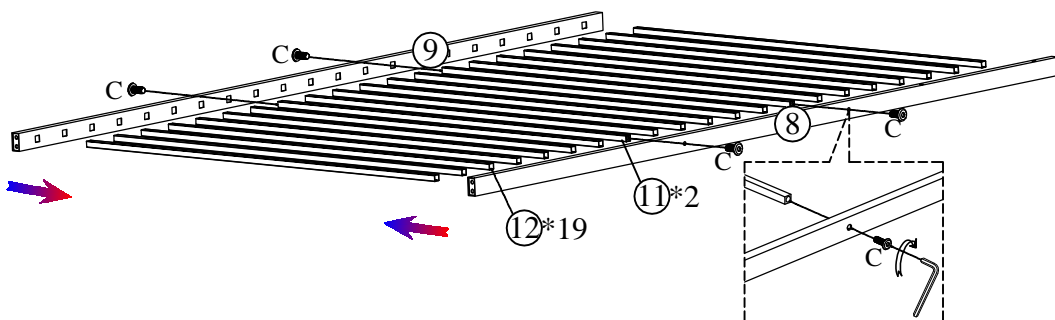
STEP 3 :



Ⓒ	4PCS
	1/4*15
Ⓕ	1PC
	4*59


FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

STEP 4 :

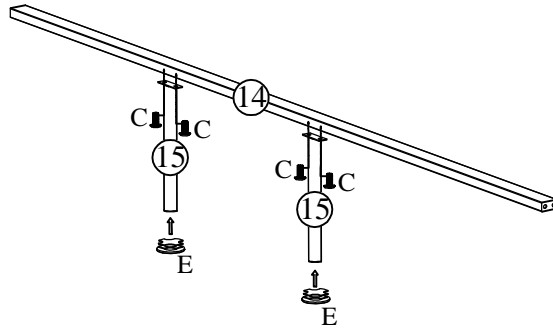

(E)	2PCS
	Ø19
(C)	4PCS
	1/4*15
(F)	1PC
	4*59


STEP 5 :

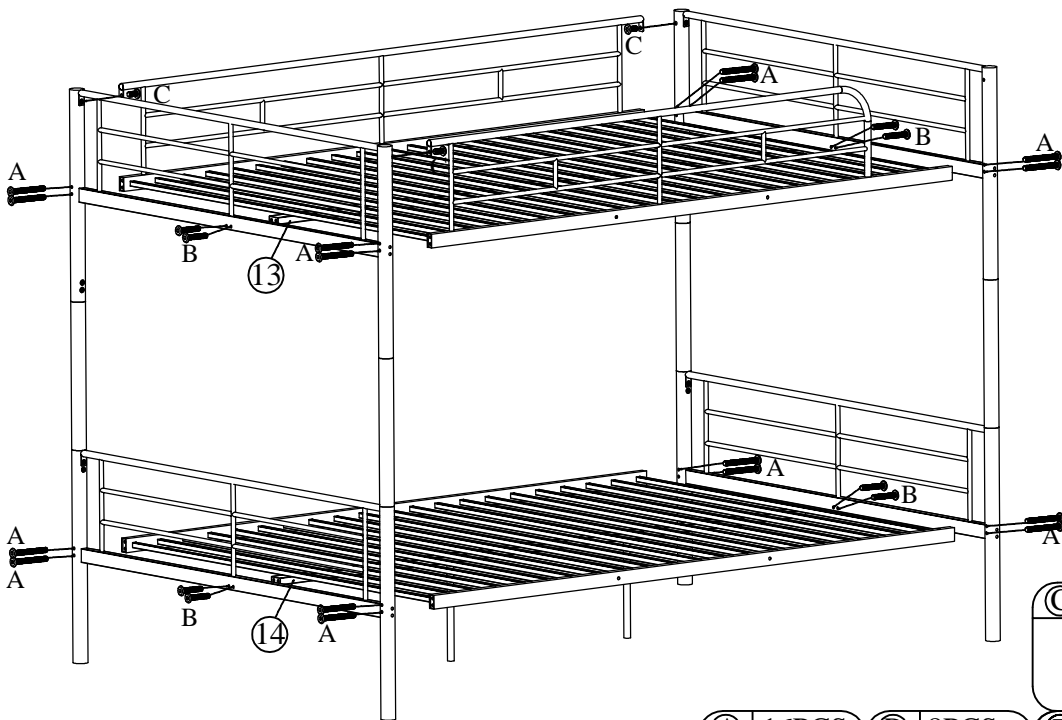



(C)	3PCS
	1/4*15
(A)	16PCS
	1/4*60
(B)	8PCS
	1/4*40
(F)	1PC
	4*59


FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

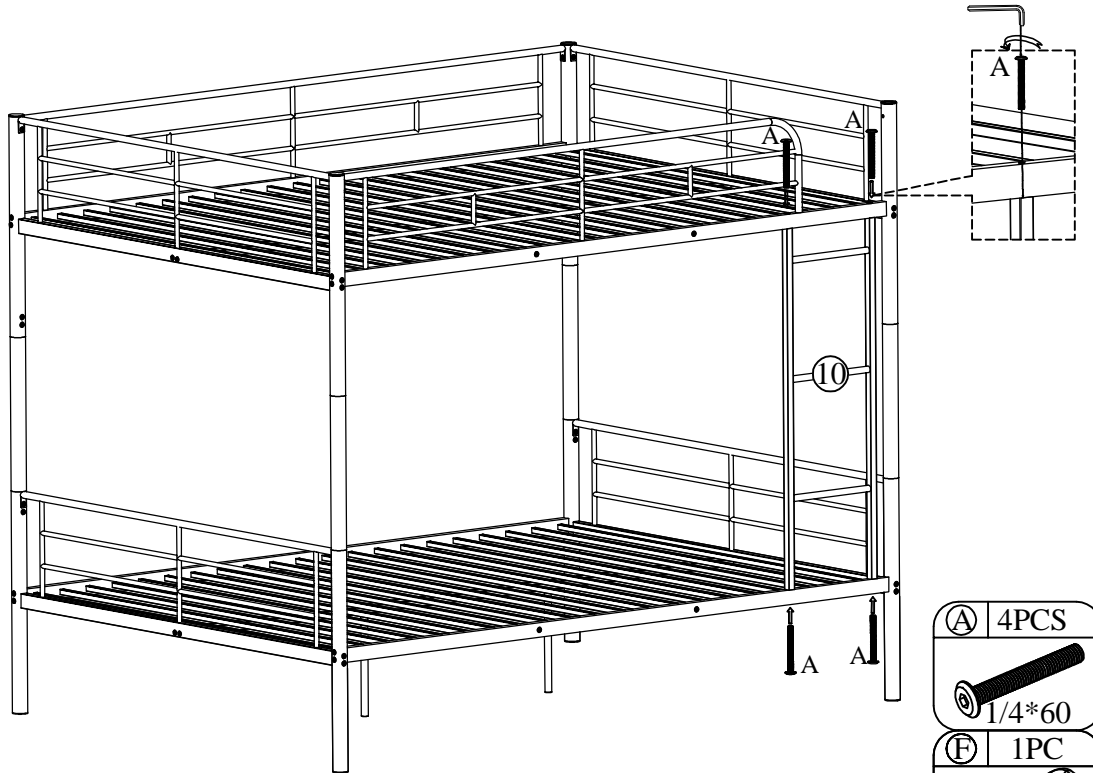


STEP 6 :



- (A) 4PCS  
  
 1/4\*60
- (F) 1PC  
  
 4\*59

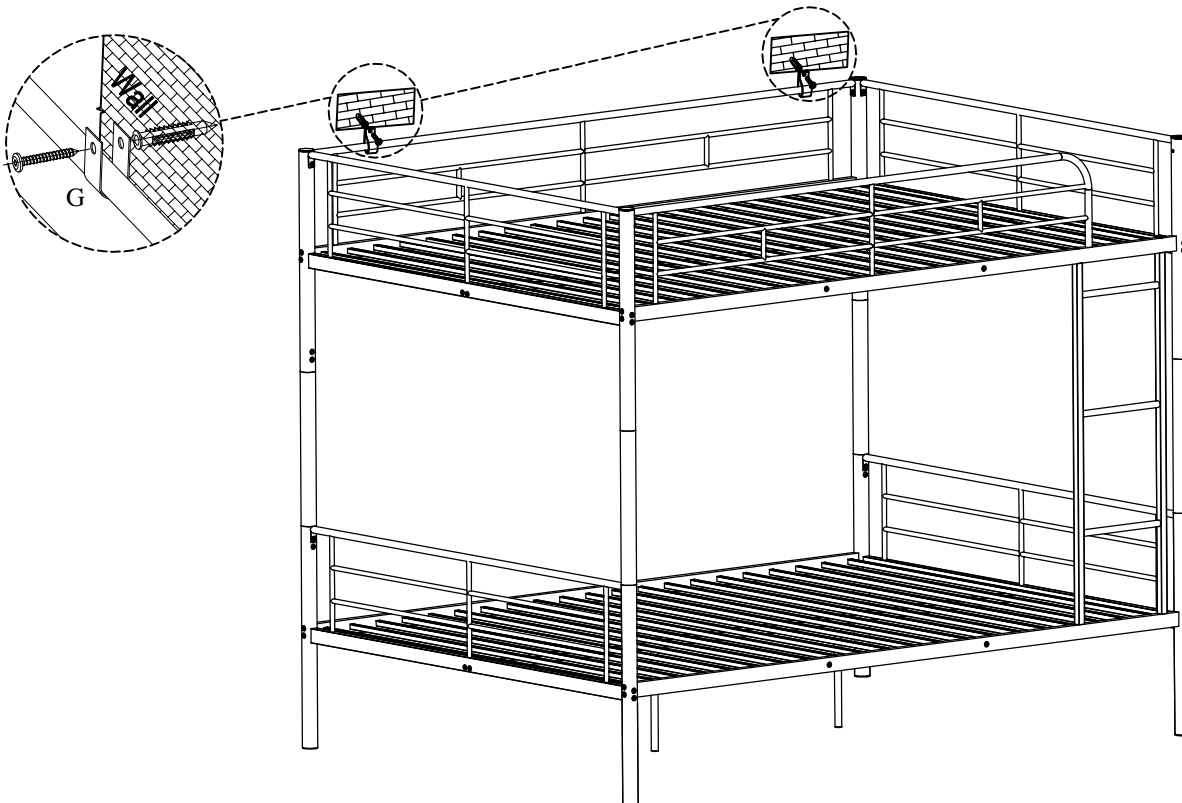STEP 7 :





- (G) 2 SET  
  

- (F) 1PC  
  
 4\*59

NOTE: Tighten all step before using. Thank you.





FULL OVER FULL BUNK BED  
ASSEMBLY INSTRUCTIONS  
SKU : MF310408

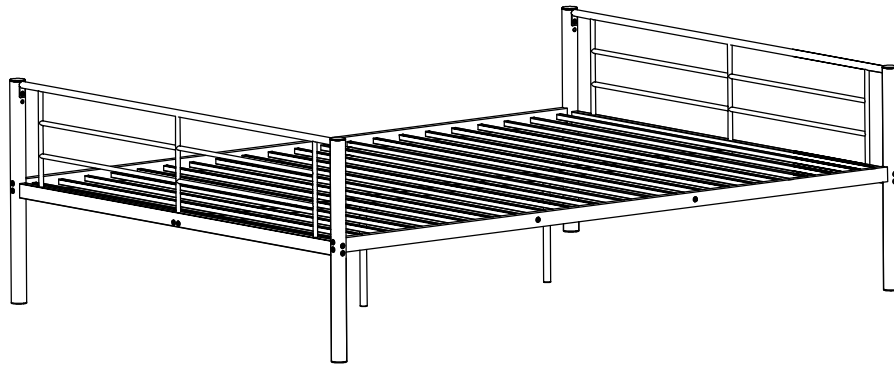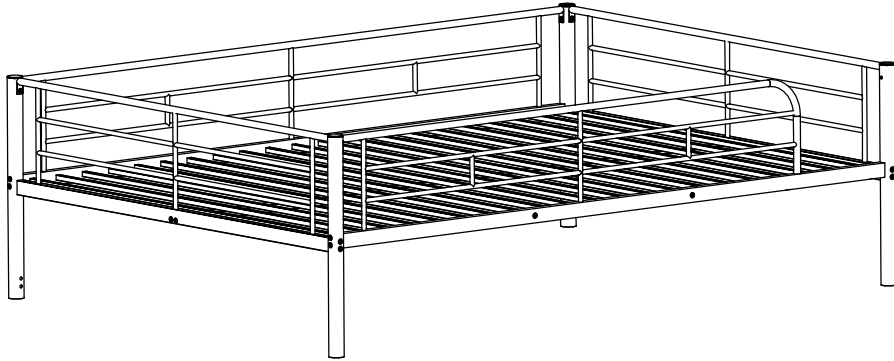OPTION B STEP 8-12





STEP 8 :

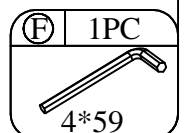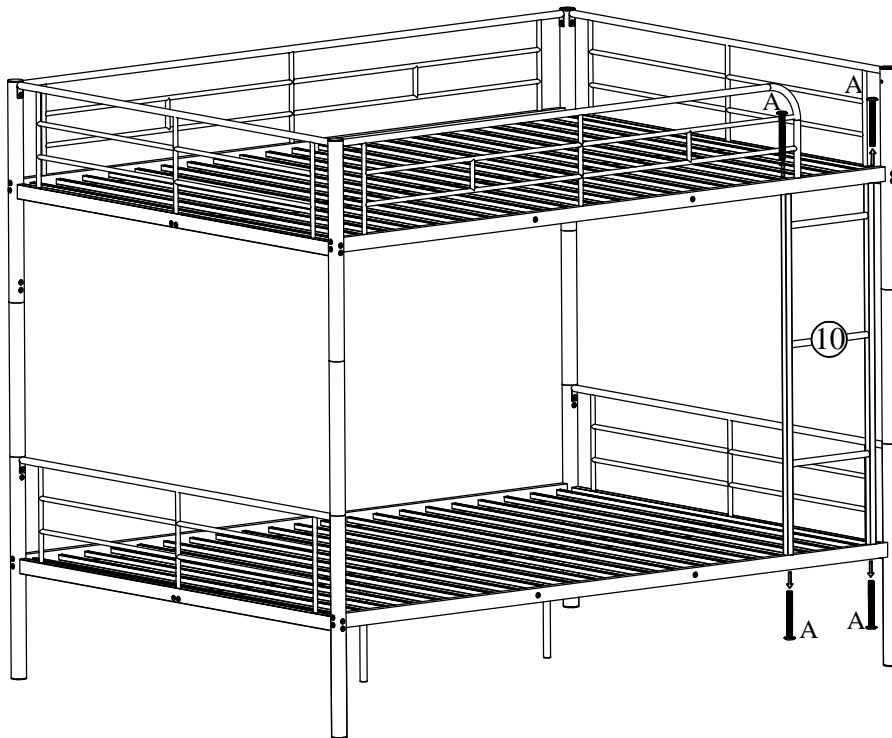


FULL OVER FULL BUNK BED  
ASSEMBLY INSTRUCTIONS  
SKU : MF310408

STEP 9 :

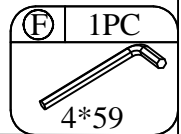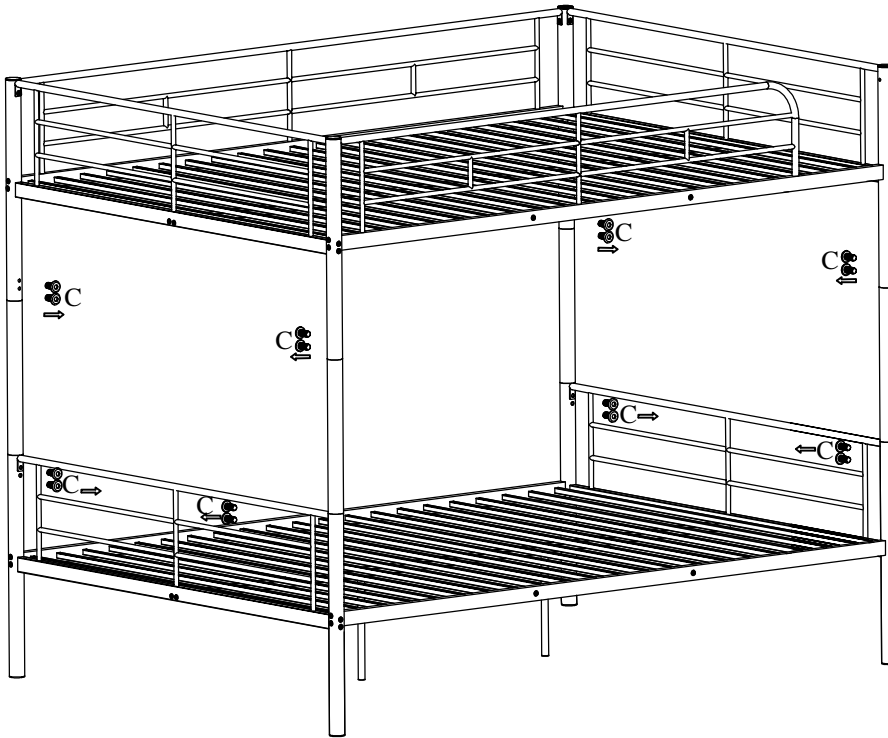


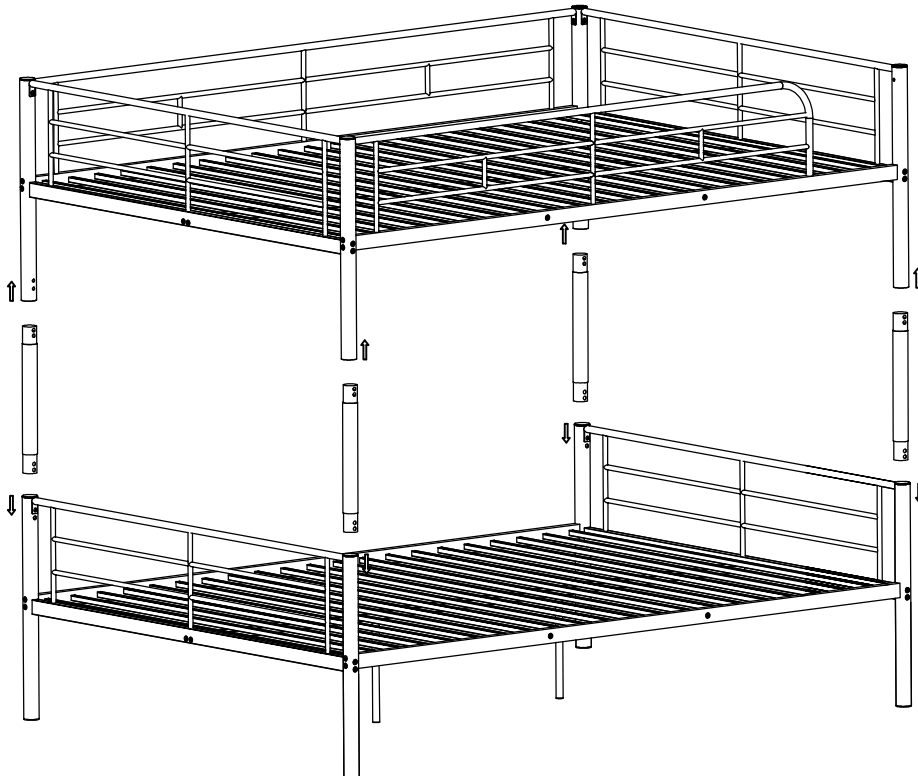


STEP 10 :




FULL OVER FULL BUNK BED  
 ASSEMBLY INSTRUCTIONS  
 SKU : MF310408

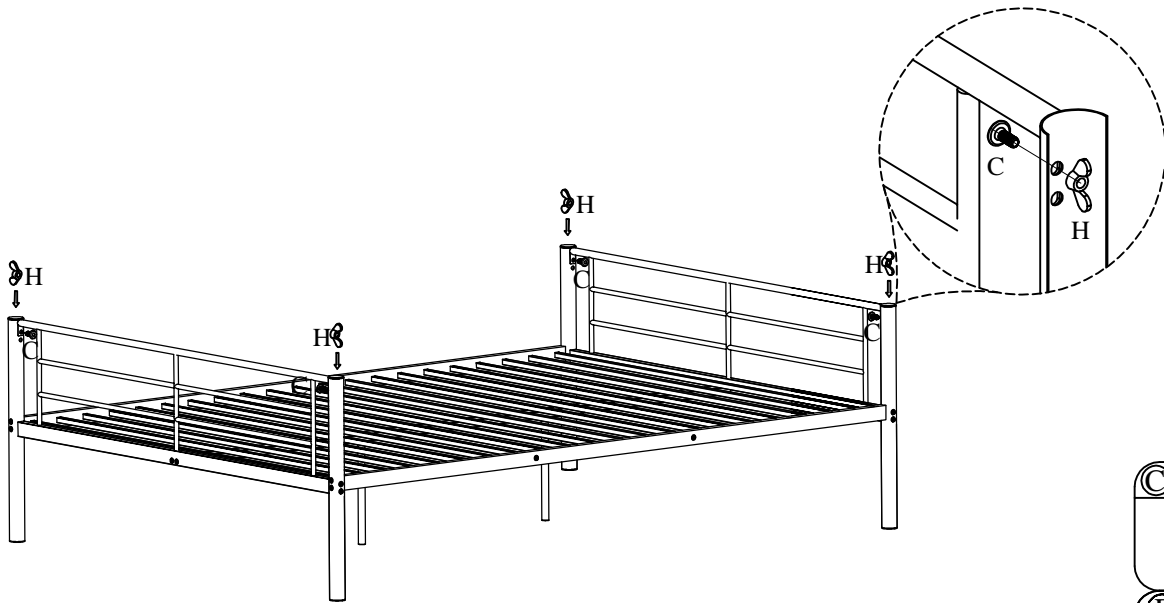
STEP 11 :



Ⓒ	4PCS
	1/4*15
Ⓕ	1PC
	4*59
Ⓗ	4PCS
	

STEP 12 :

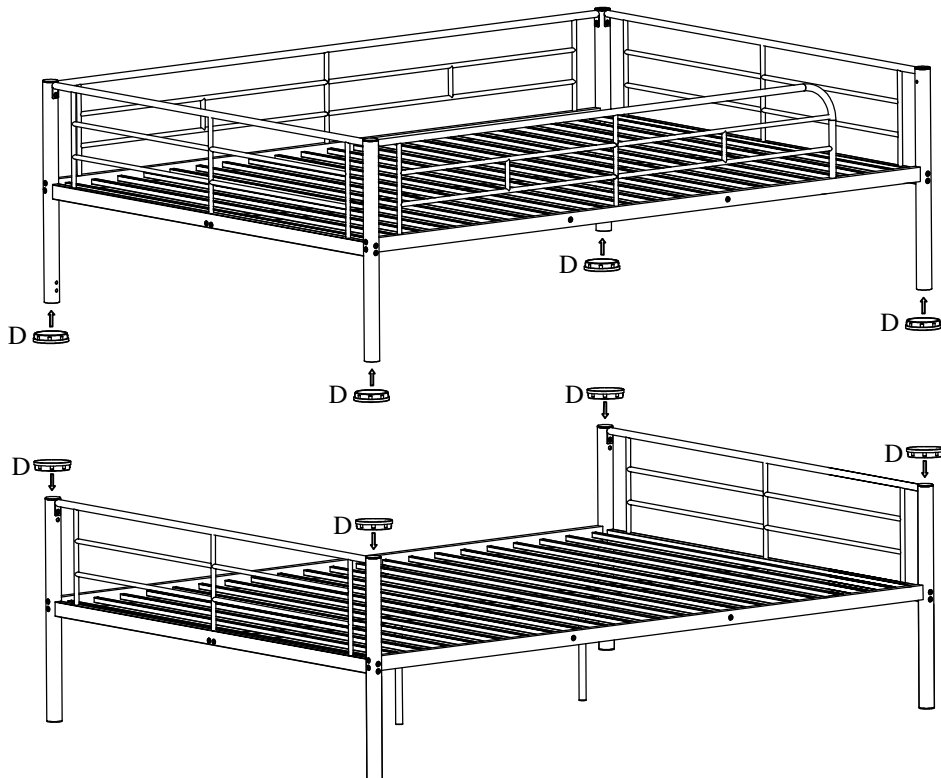

Ⓓ	8PCS
	Ø42

NOTE: Tighten all step before using. Thank you.