ITEM#: 182325



VERSION: 20190508 PAGE 1 OF 9

#### PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.

Tip #3: Note position of all holeson each panel during assembly.


ITEM#: 182325



VERSION: 20190508 PAGE 1 OF 9

#### PARTS IDENTIFICATION

ITEM#:182325

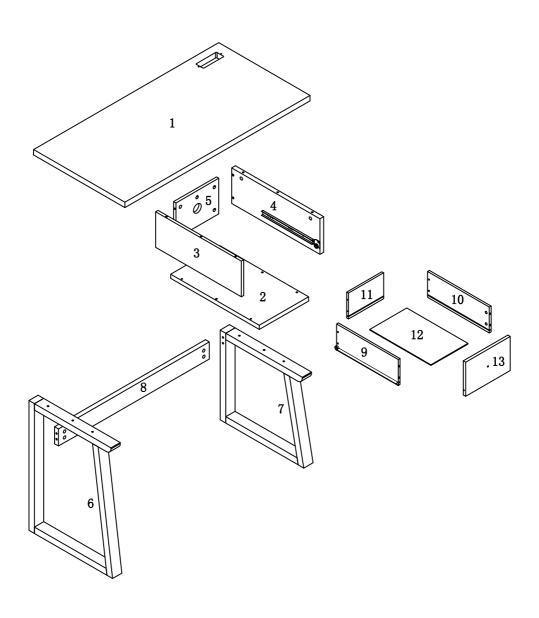

(1)	lpc	(8)	lpc
(2)	1pc	(9)	1pc
(3)	1pc	(10)	1pc
(4)	1pc	(11)	1pc
(5)	1pc	(12)	1pc
(6)	1pc	(13)	1pc

(7) 1pc


PAGE 2 OF 9


## HARDWARE IDENTIFICATION

TTEM#.	122225
TILLIMIT .	104040


. – – – – – –			
A		L29	13pcs
В		Ø15	13pcs
$\bar{C}$		L20	4pcs
$\bar{\mathbf{D}}$			4pcs
F			6pcs
F	*)xxxxx>		4pcs
Ğ	*)DDDDDDD		3pcs
Η		Ø7 x 48	$2 \mathrm{pcs}$
Ī		$\overline{M8x45}$	4pcs
$\mathbf{J}$		$ \sqrt[\infty]{16} \times \sqrt[\infty]{8} \times 2 $	6pcs
K		M5	1pc
			1pc
$\bar{\mathbf{M}}$		$\overline{\text{M4x22}}$	1pc
$\bar{N}$	0000	$ar{ ilde{arphi}}_{22}$	10pcs
0		Ø15	3pcs
P		Ø16	4pcs
$\bar{Q}$			1pc
Ř	(g))))))	Ø3. 5x12	$^{-2}\mathrm{pcs}$
$\bar{S}$		Glue: For securing please apply to wood dowel first before inserting into panel	1pc

ITEM#: 182325

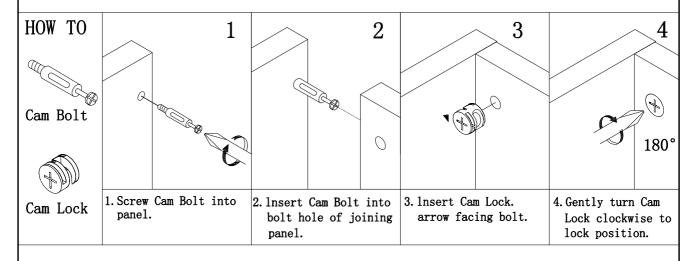


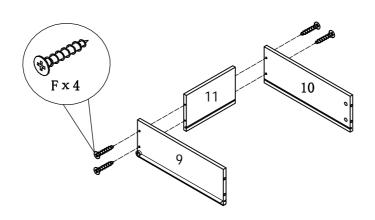

#### STEP1

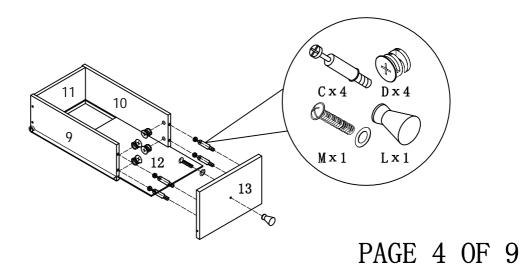


ITEM#:182325

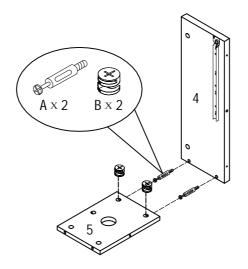


#### STEP3

#### STEP4

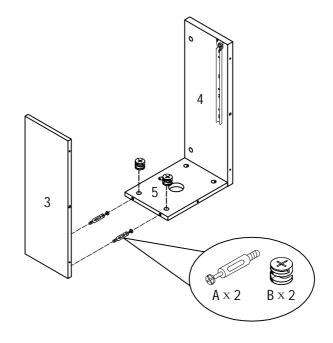


PAGE 5 OF 9


ITEM#: 182325

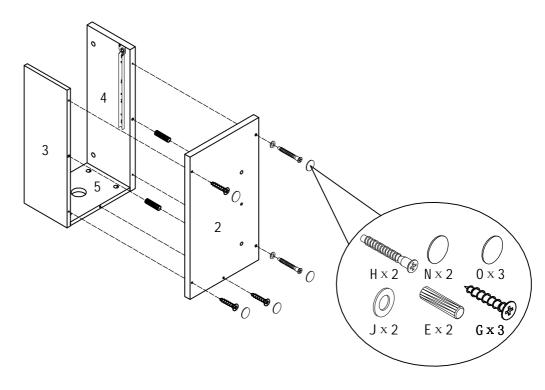


STEP5

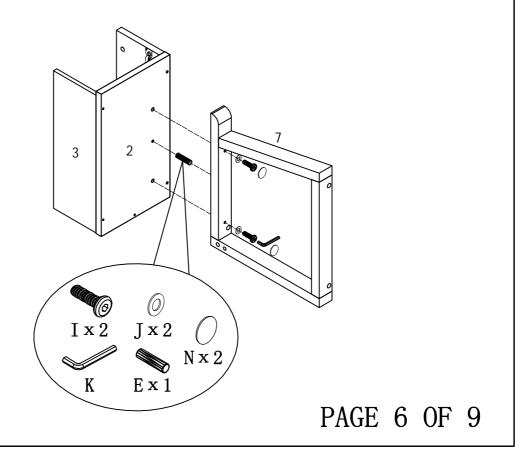


ITEM#:182325

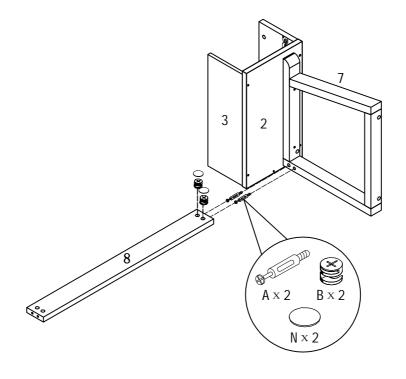


STEP7

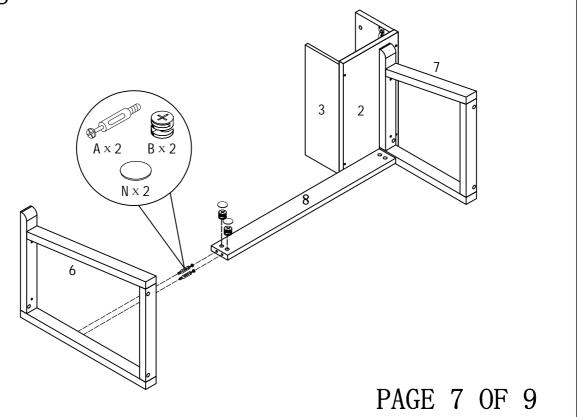


ITEM#:182325

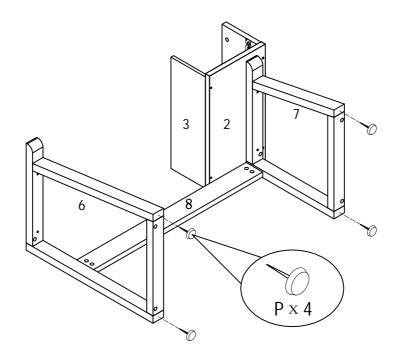

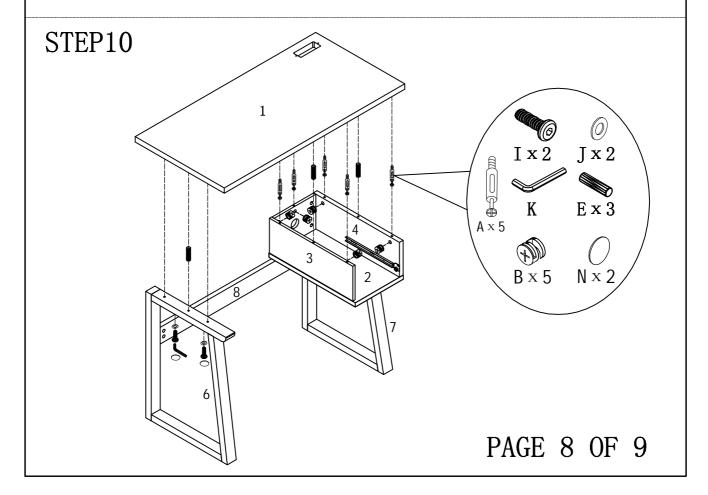

ITEM#:182325

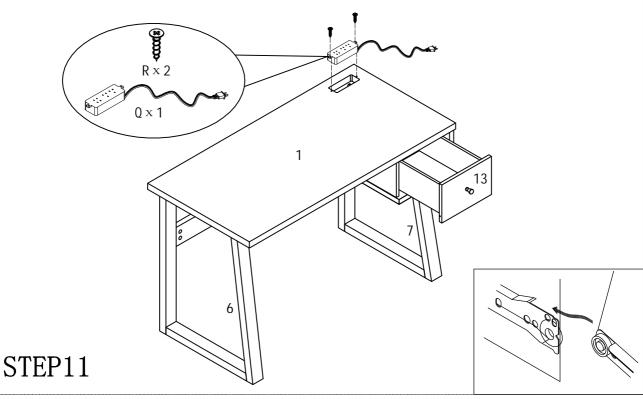

#### STEP12



PAGE 9 OF 9