


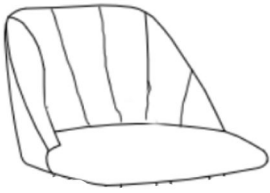






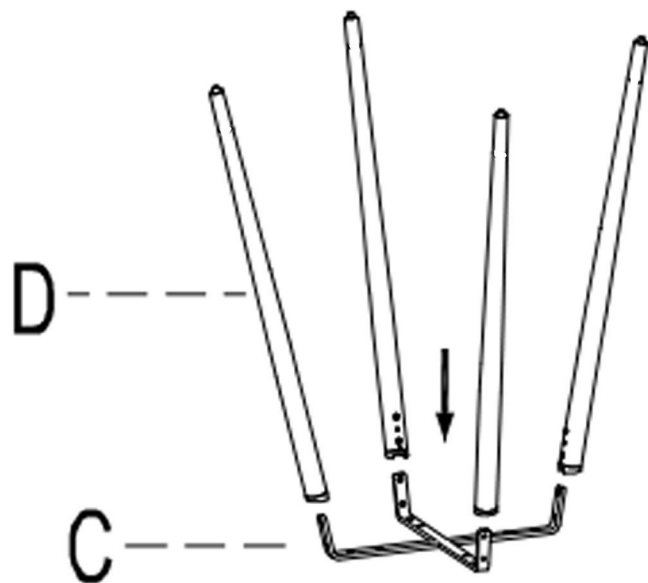
PP322591



Assembly Instruction
Montageanleitung




<p>A</p>  <p>1PCS</p>	<p>B</p>  <p>1PCS</p>	<p>C</p>  <p>1PCS</p>
<p>D</p>  <p>4 PCS</p>	<p>E</p>  <p>M6*20 8+1PCS</p>	<p>F</p>  <p>M6*25 4+1PCS</p>
<p>G</p>  <p>M6*35 4+1PCS</p>	<p>H</p> 	

Step 1



	C*1
	D*4


Step 2

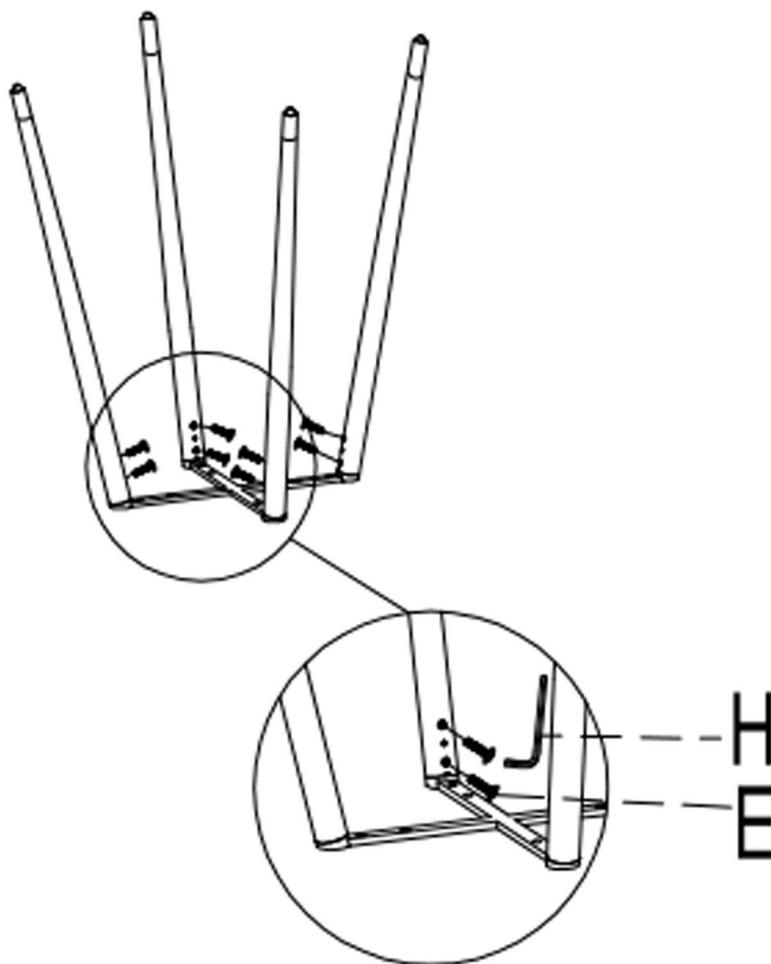




	E*8
	H*1


Step 3

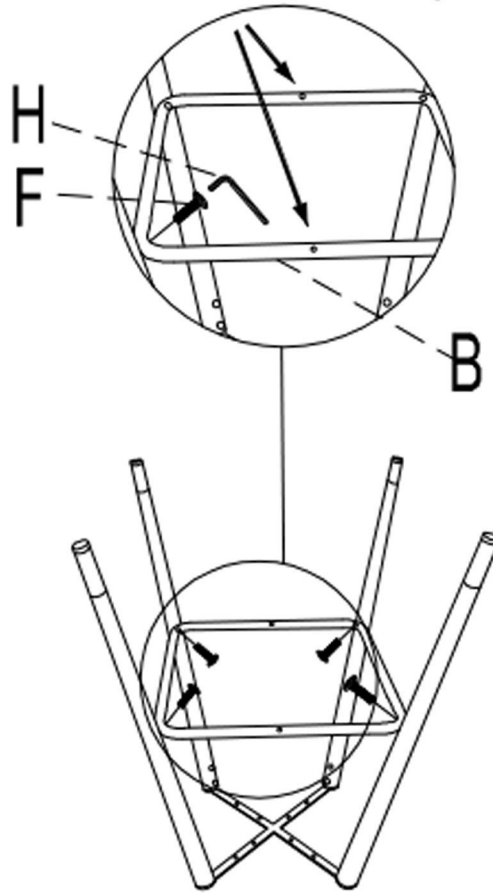

The hole location is facing the ground.



	H*1
	B*1
	F*4

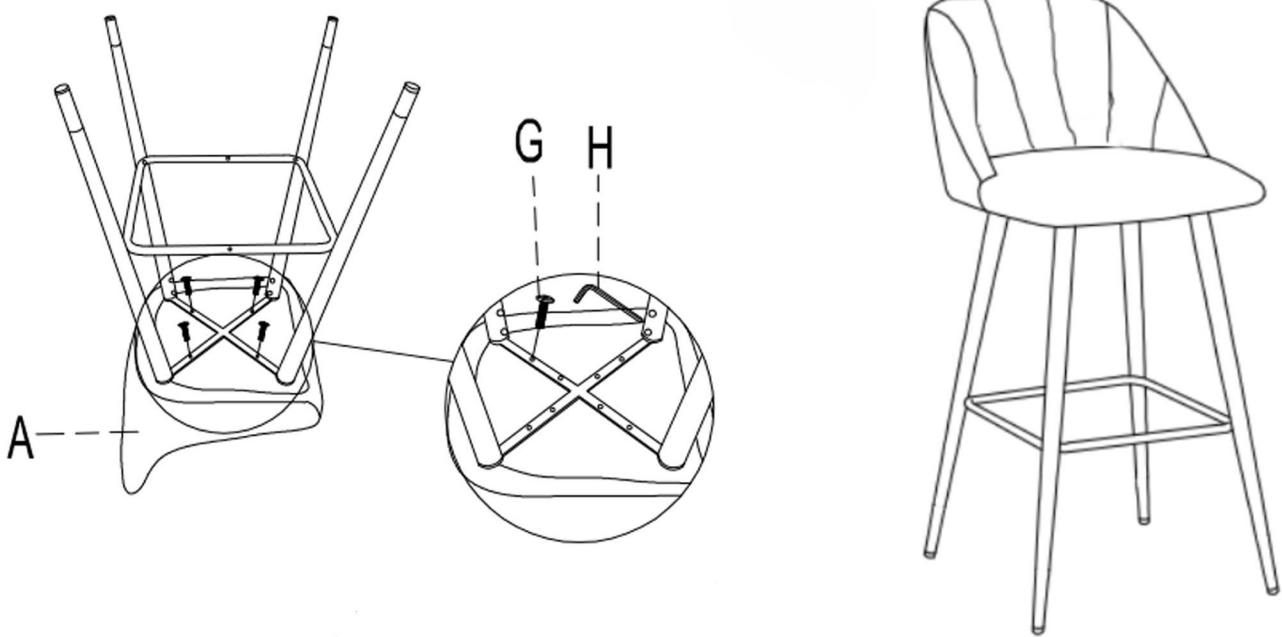Step 4



	G*4
	H*1