
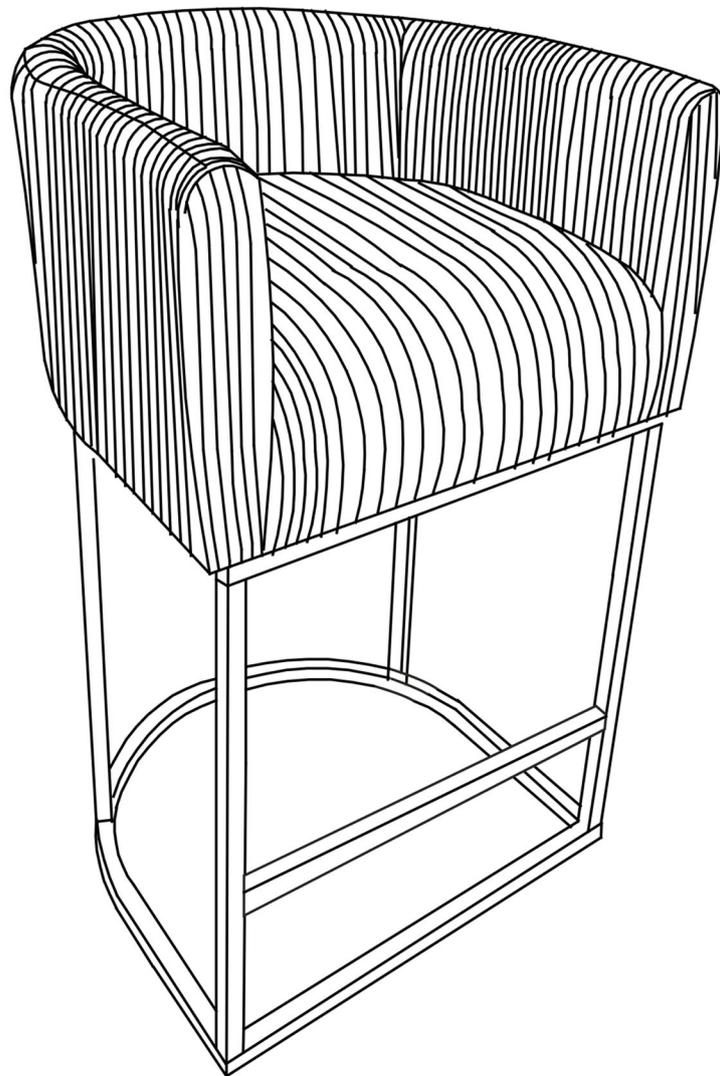
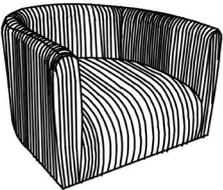


PP322593


Assembly Instruction
Montageanleitung

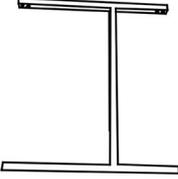

PP322593

<p>A</p>  <p>1PCS</p>	<p>B</p>  <p>1PCS</p>	<p>C</p>  <p>2PCS</p>
<p>D</p>  <p>1PCS</p>	<p>E</p>  <p>1PCS</p>	<p>F</p>  <p>M6*14 16+1PCS</p>
<p>G</p>  <p>M6*18 4+1PCS</p>	<p>H</p>  <p></p>	<p>I</p>  <p></p>


Step 1

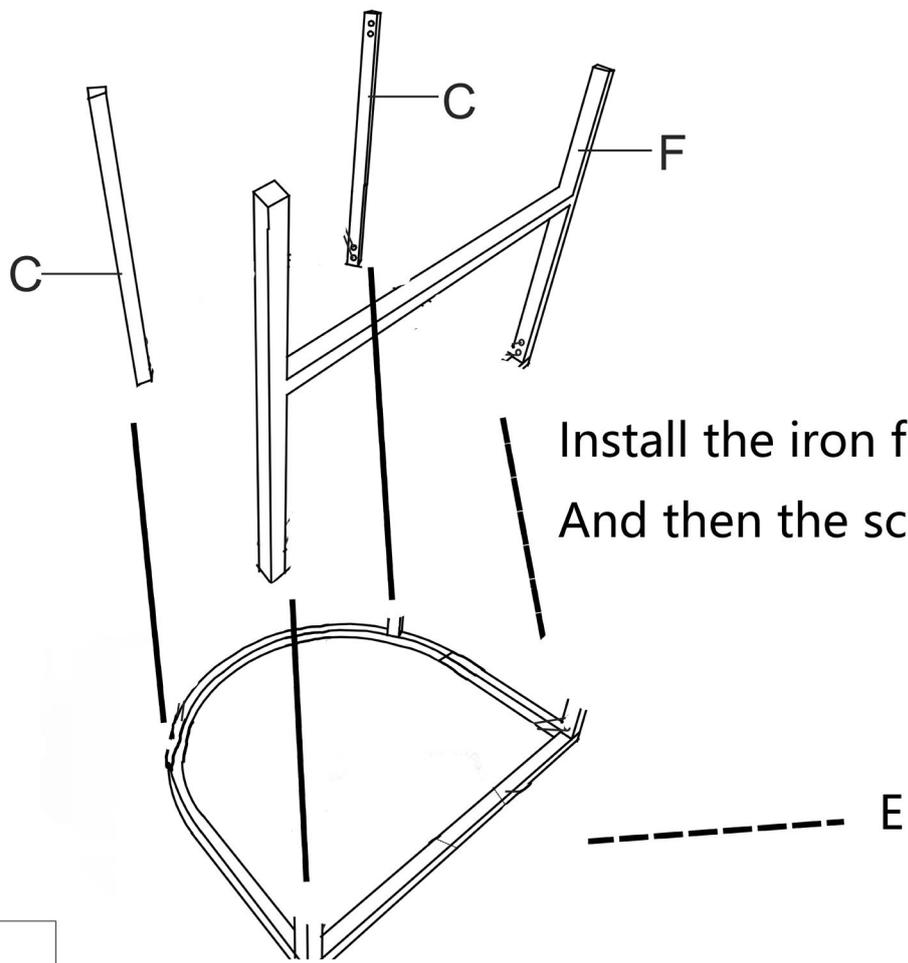

Install the iron frame first
And then the screws.


	E*1
	C*1

Step 2

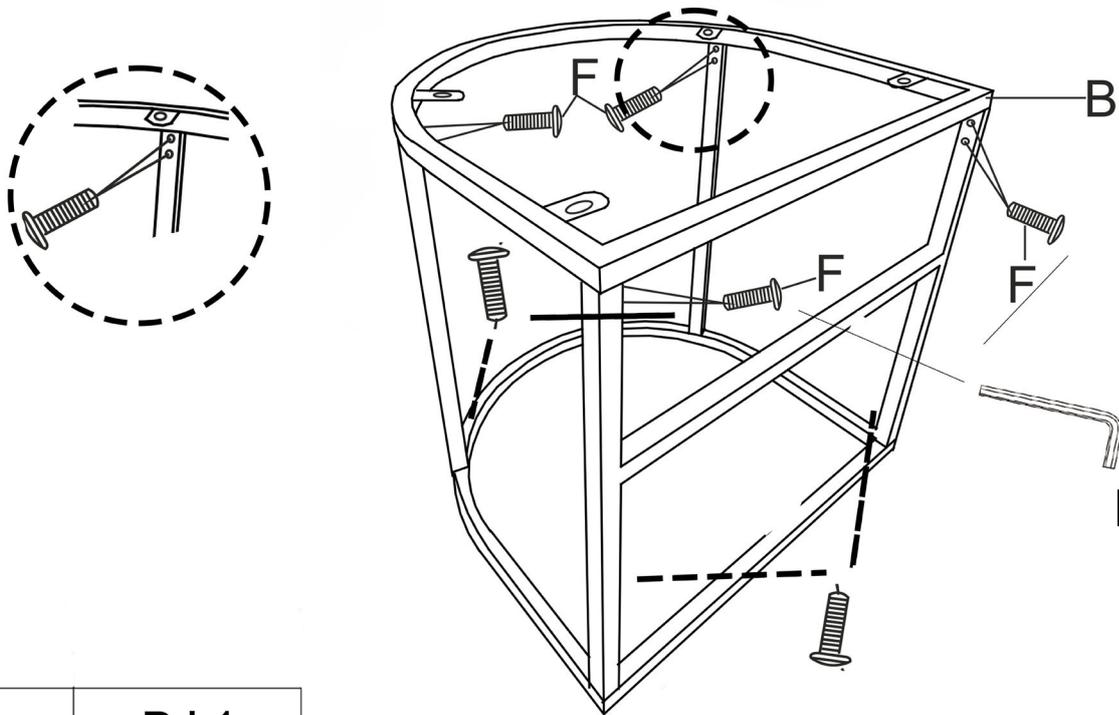

	B*1
	F*16
	I*1

Step 3

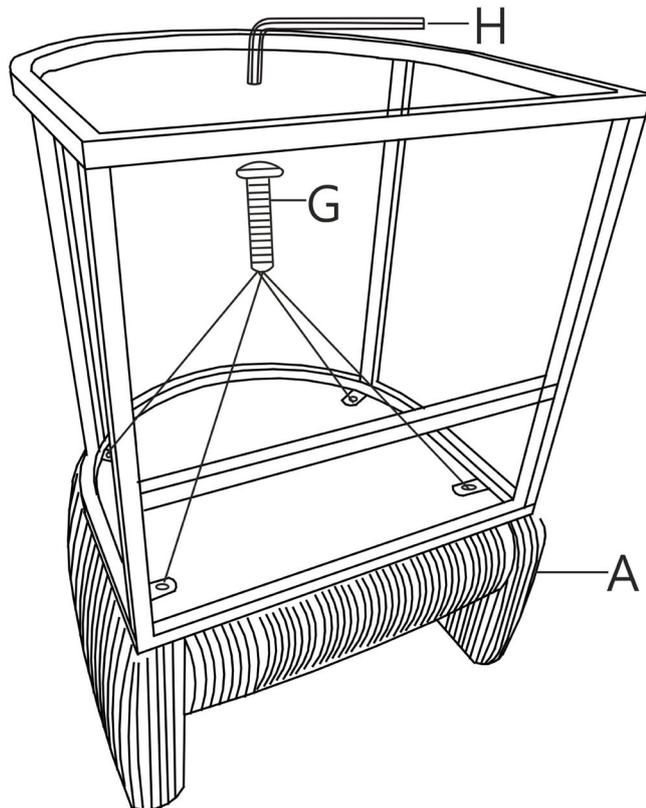

	A*1
	H*1
	G*4

Step 4

