

ASSEMBLY INSTRUCTION

!WOODEN MATERIALS ! NO ELECTRIC DRILL!

Ax16



M6x16

Bx3



M6x45

Cx19




6x16


Dx1



1

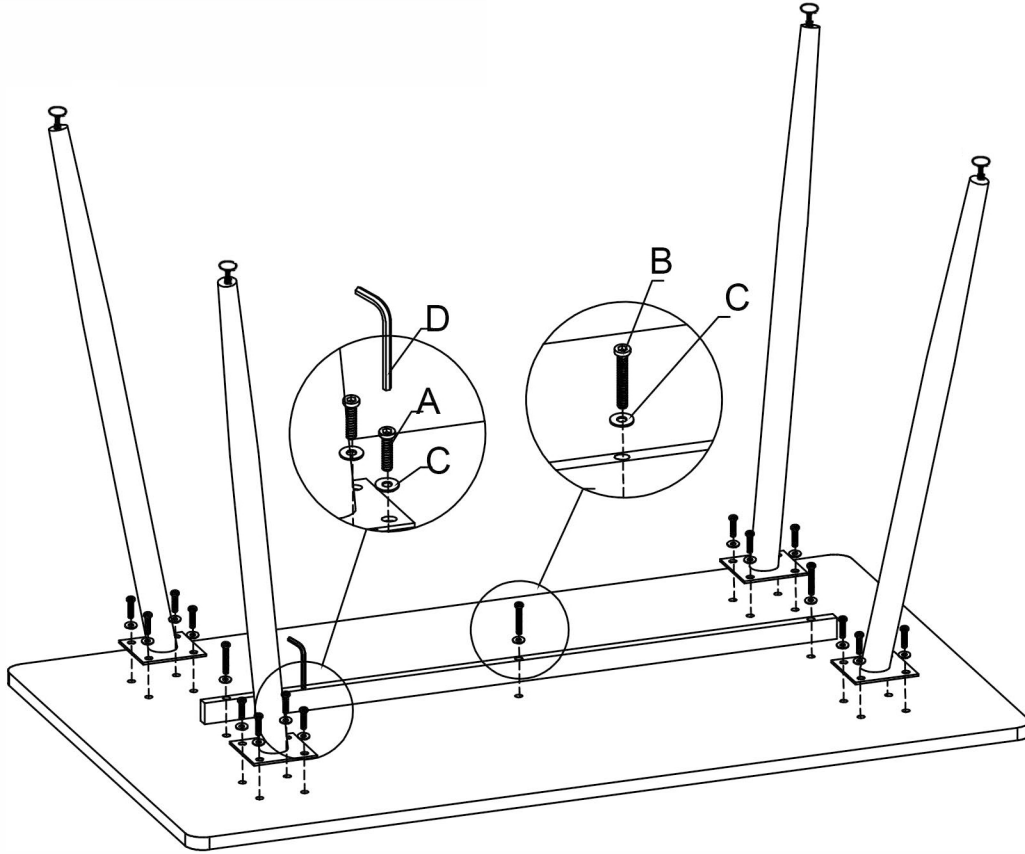

2

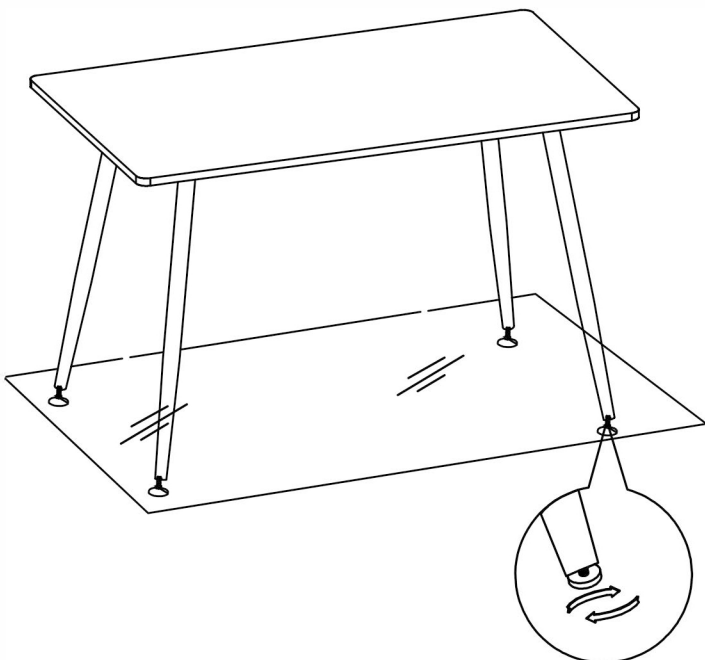

3

