

► SCREW PACKAGE



M6x10(x4)

A




M6x45(x4)

B




(x1)

C




(x1)

D



(x2)


E



(x2)


F

► PARTS INCLUDED

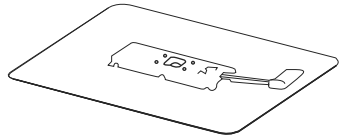

x1

G



x1

H




x1

I

ASSEMBLY INSTRUCTIONS

D-M01

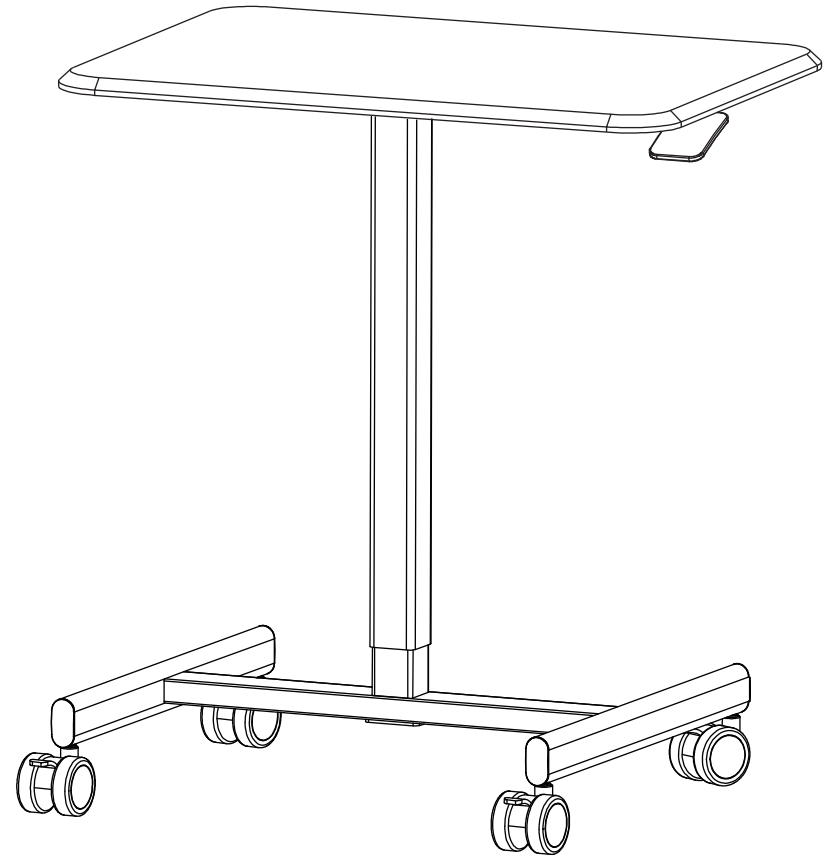

✉ HJ-Customer-Service@outlook.com

☎ (909)637-7665 | (909)637-7593



EST 9:00AM--17:00PM

<https://hlinstallationvideos.s3.amazonaws.com/D-M01-Mobile+Desk.mp4>





► SCREW PACKAGE



1

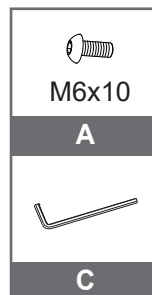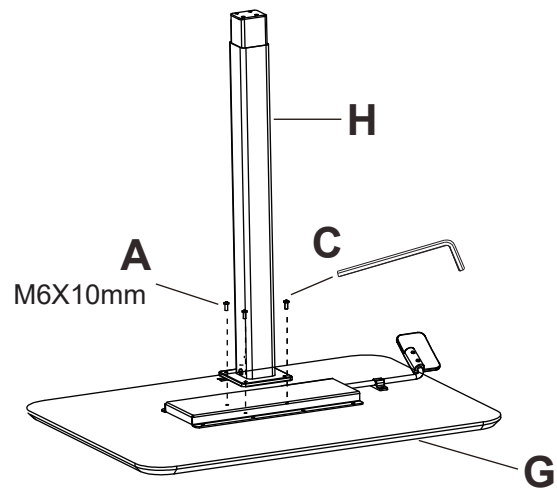

2

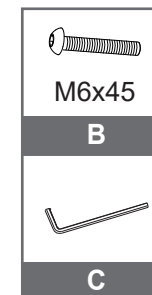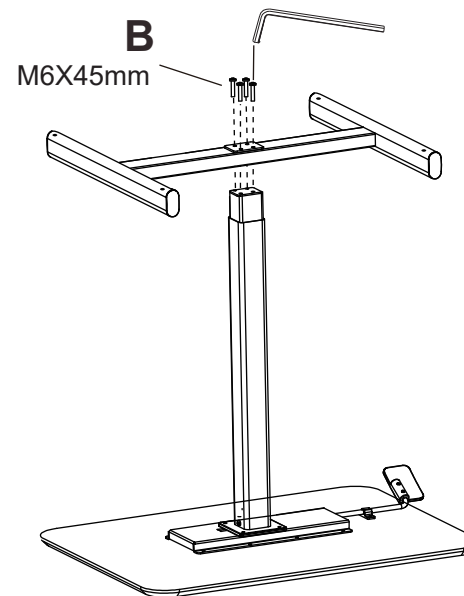

3

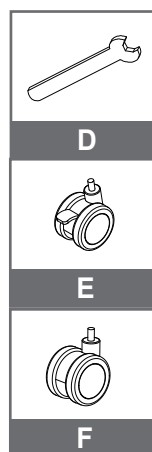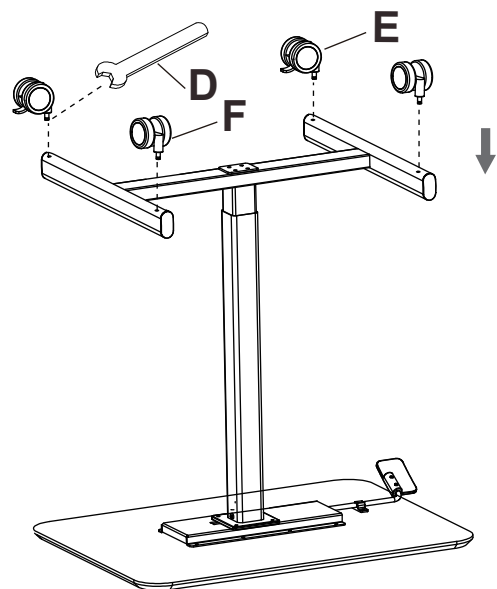

4

