

WF 296297

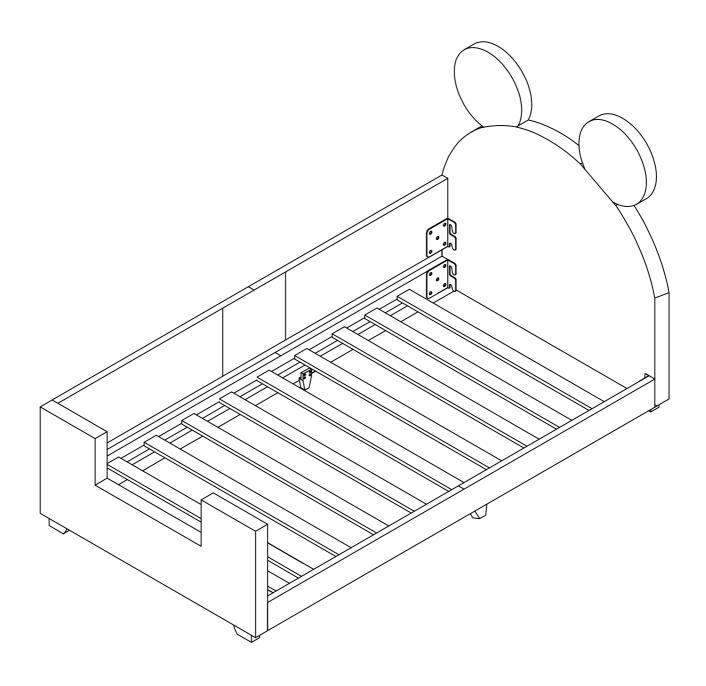

IMPORTANT NOTE


- **PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- **DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

WF 296297

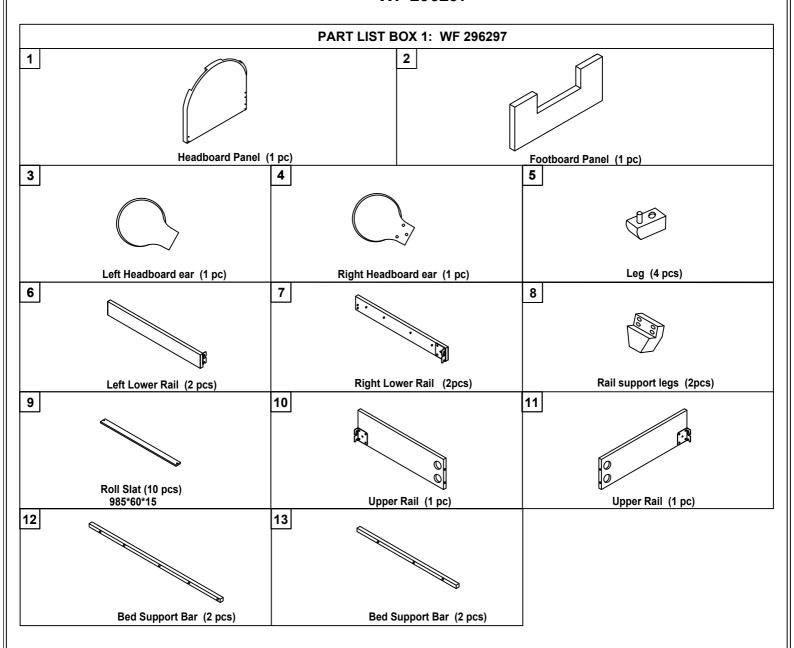


WF 296297


HARDWARE LIST IN WF 296297

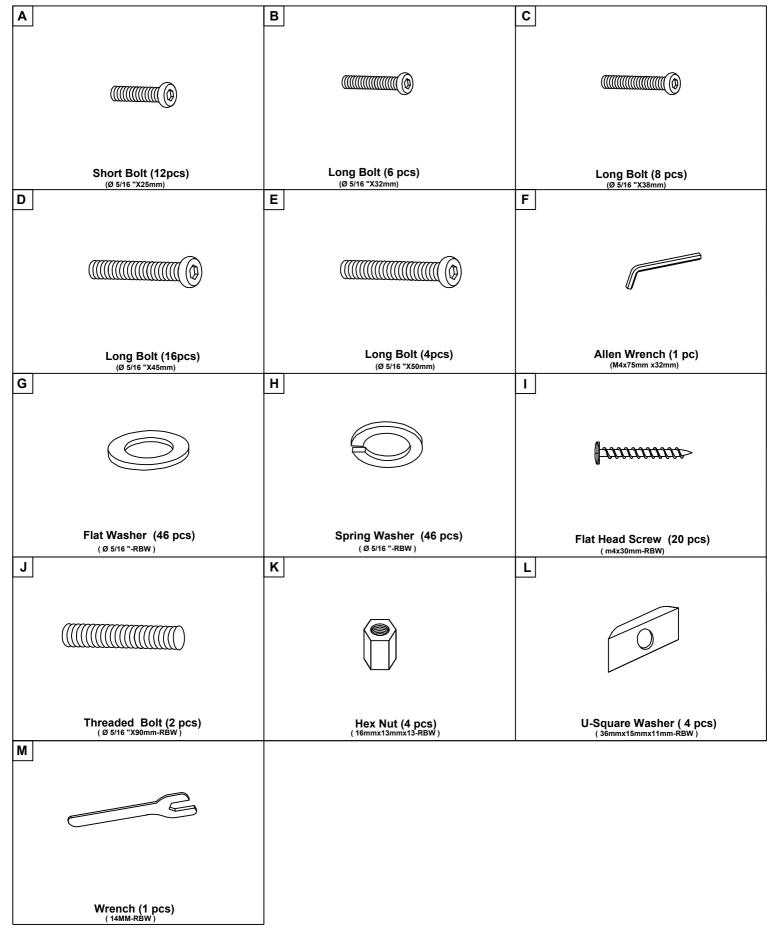


STEP 1

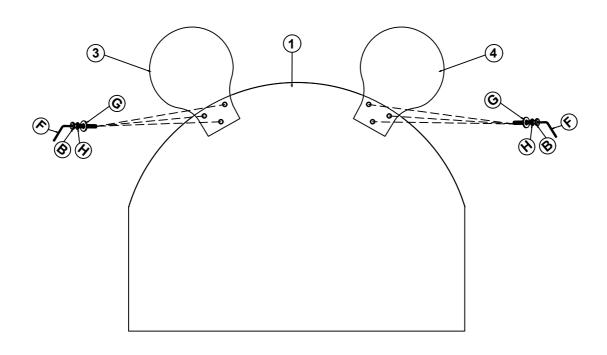


В	Bolt (Ø 5/16 "X32mm)	6pcs	G	Flat Washer (Ø 5/16 "-RBW)	6pcs
F	Allen Wrench (M4x75mm x32mm)	1pc	н	Spring Washer (Ø 5/16 "-RBW)	6pcs

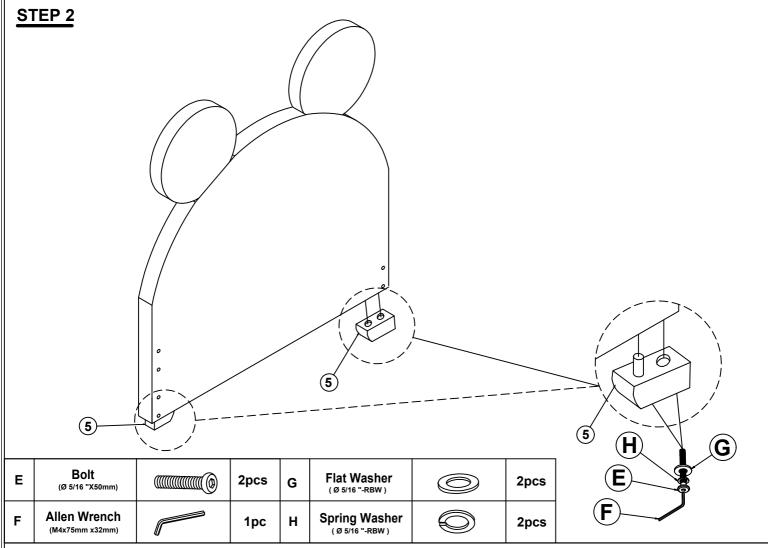

MADE IN VIETNAM

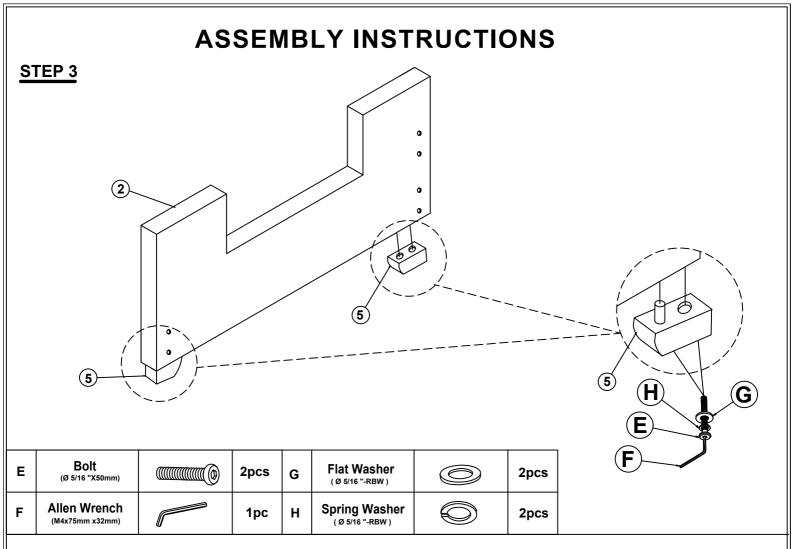


STEP 4

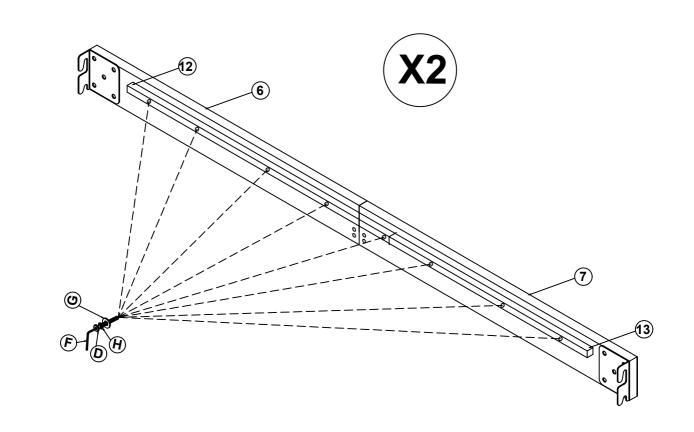


D	Bolt (Ø 5/16 "X45mm)	16pcs	G	Flat Washer	16pcs
F	Allen Wrench (M4x75mm x32mm)	1pc	н	Spring Washer	16pcs


STEP 5

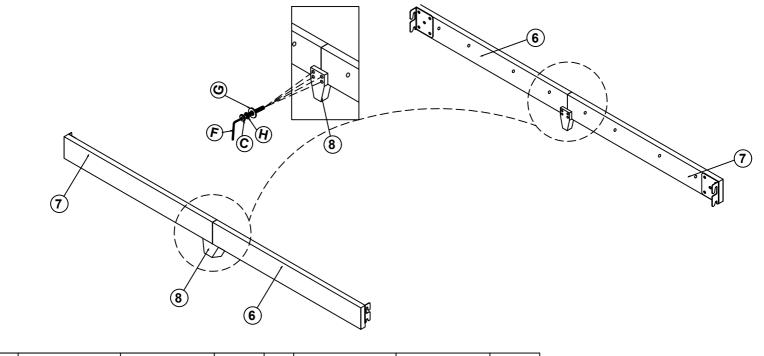

С	Bolt (Ø 5/16 "X38mm)	8pcs	G	Flat Washer	8pcs
F	Allen Wrench (M4x75mm x32mm)	1pc	н	Spring Washer	8pcs

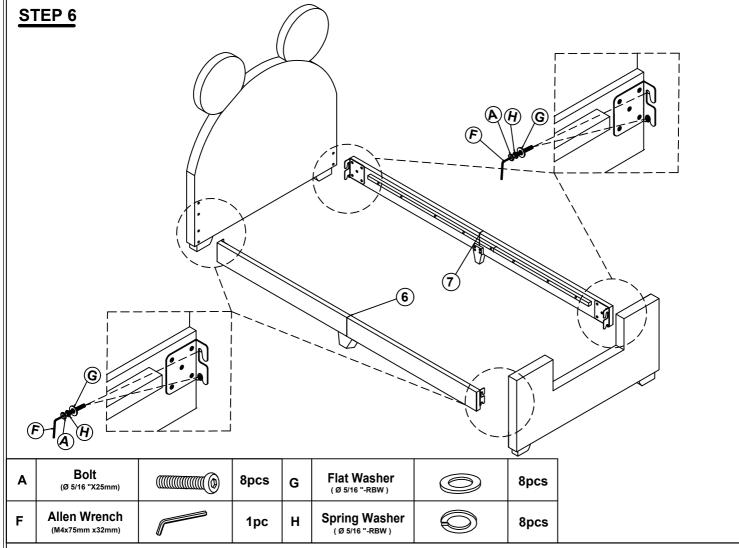


MADE IN VIETNAM

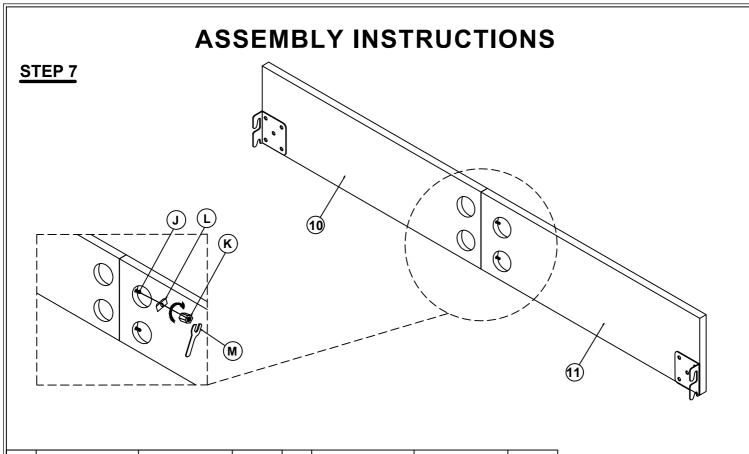


J	Threaded Bolt (Ø 5/16 "x90mm-RBW)	2pcs	L	U-Square Washer	0	4pcs
к	Hex Nut	4pcs	М	Wrench (14mm-RBW)		1pc

STEP 8

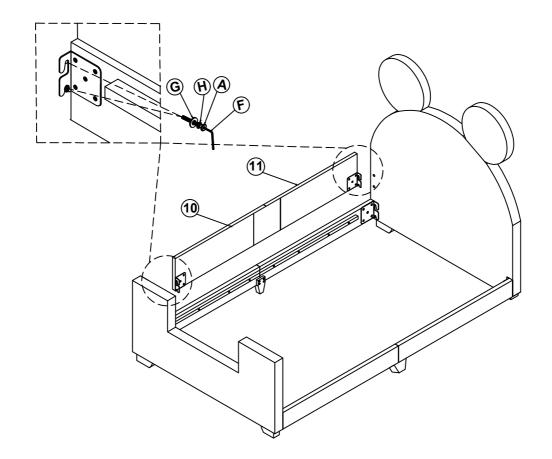

A	Bolt (Ø 5/16 "X32mm)	4pcs	G	Flat Washer (Ø 5/16 "-RBW)	4pcs
F	Allen Wrench (M4x75mm x32mm)	1pc	н	Spring Washer	4pcs

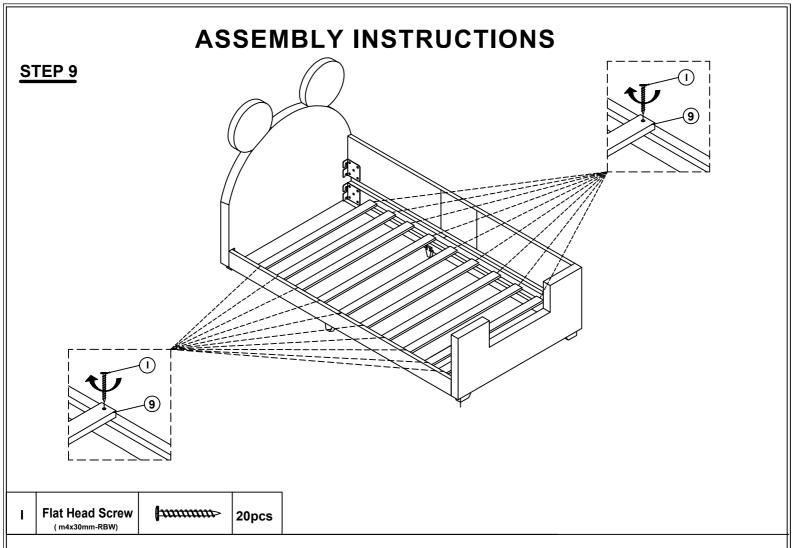

STEP 10 COMPLETE

