



# ASSEMBLY INSTRUCTIONS

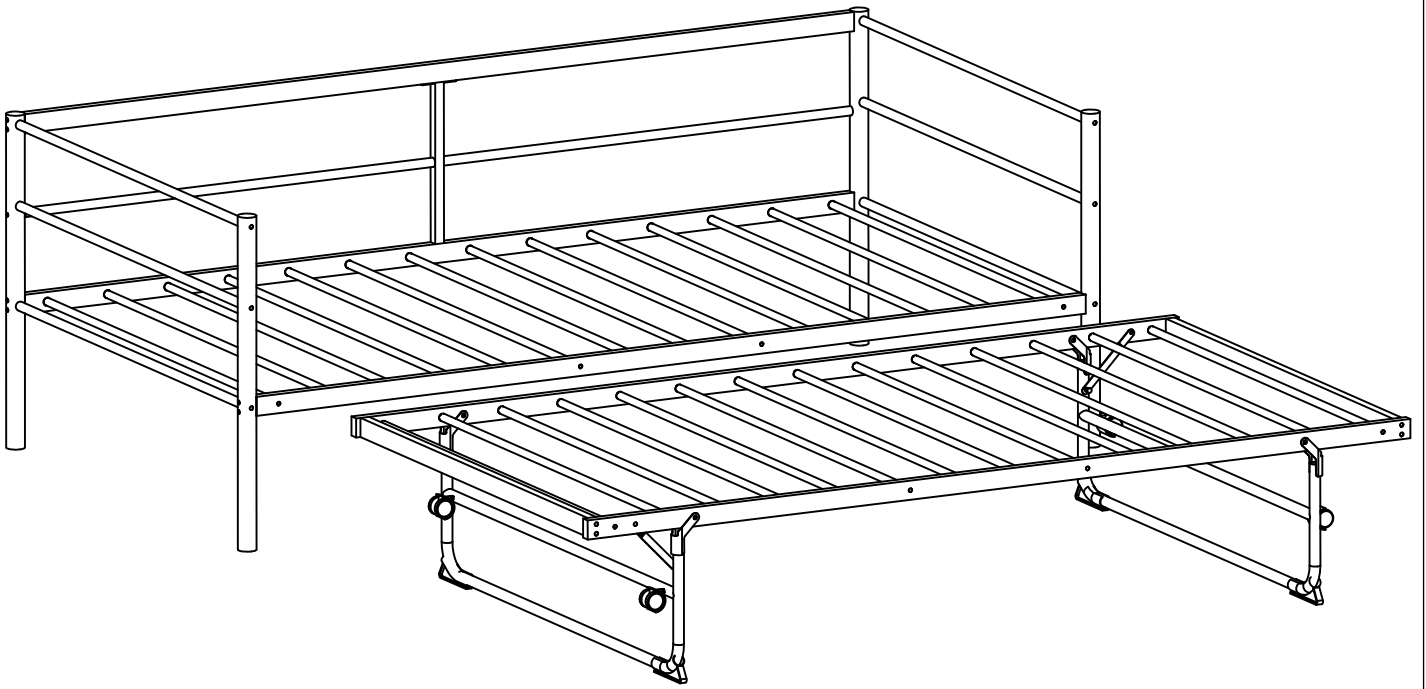






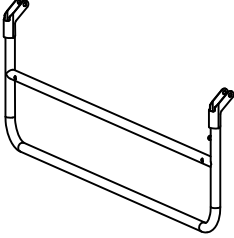




## SOFA BED

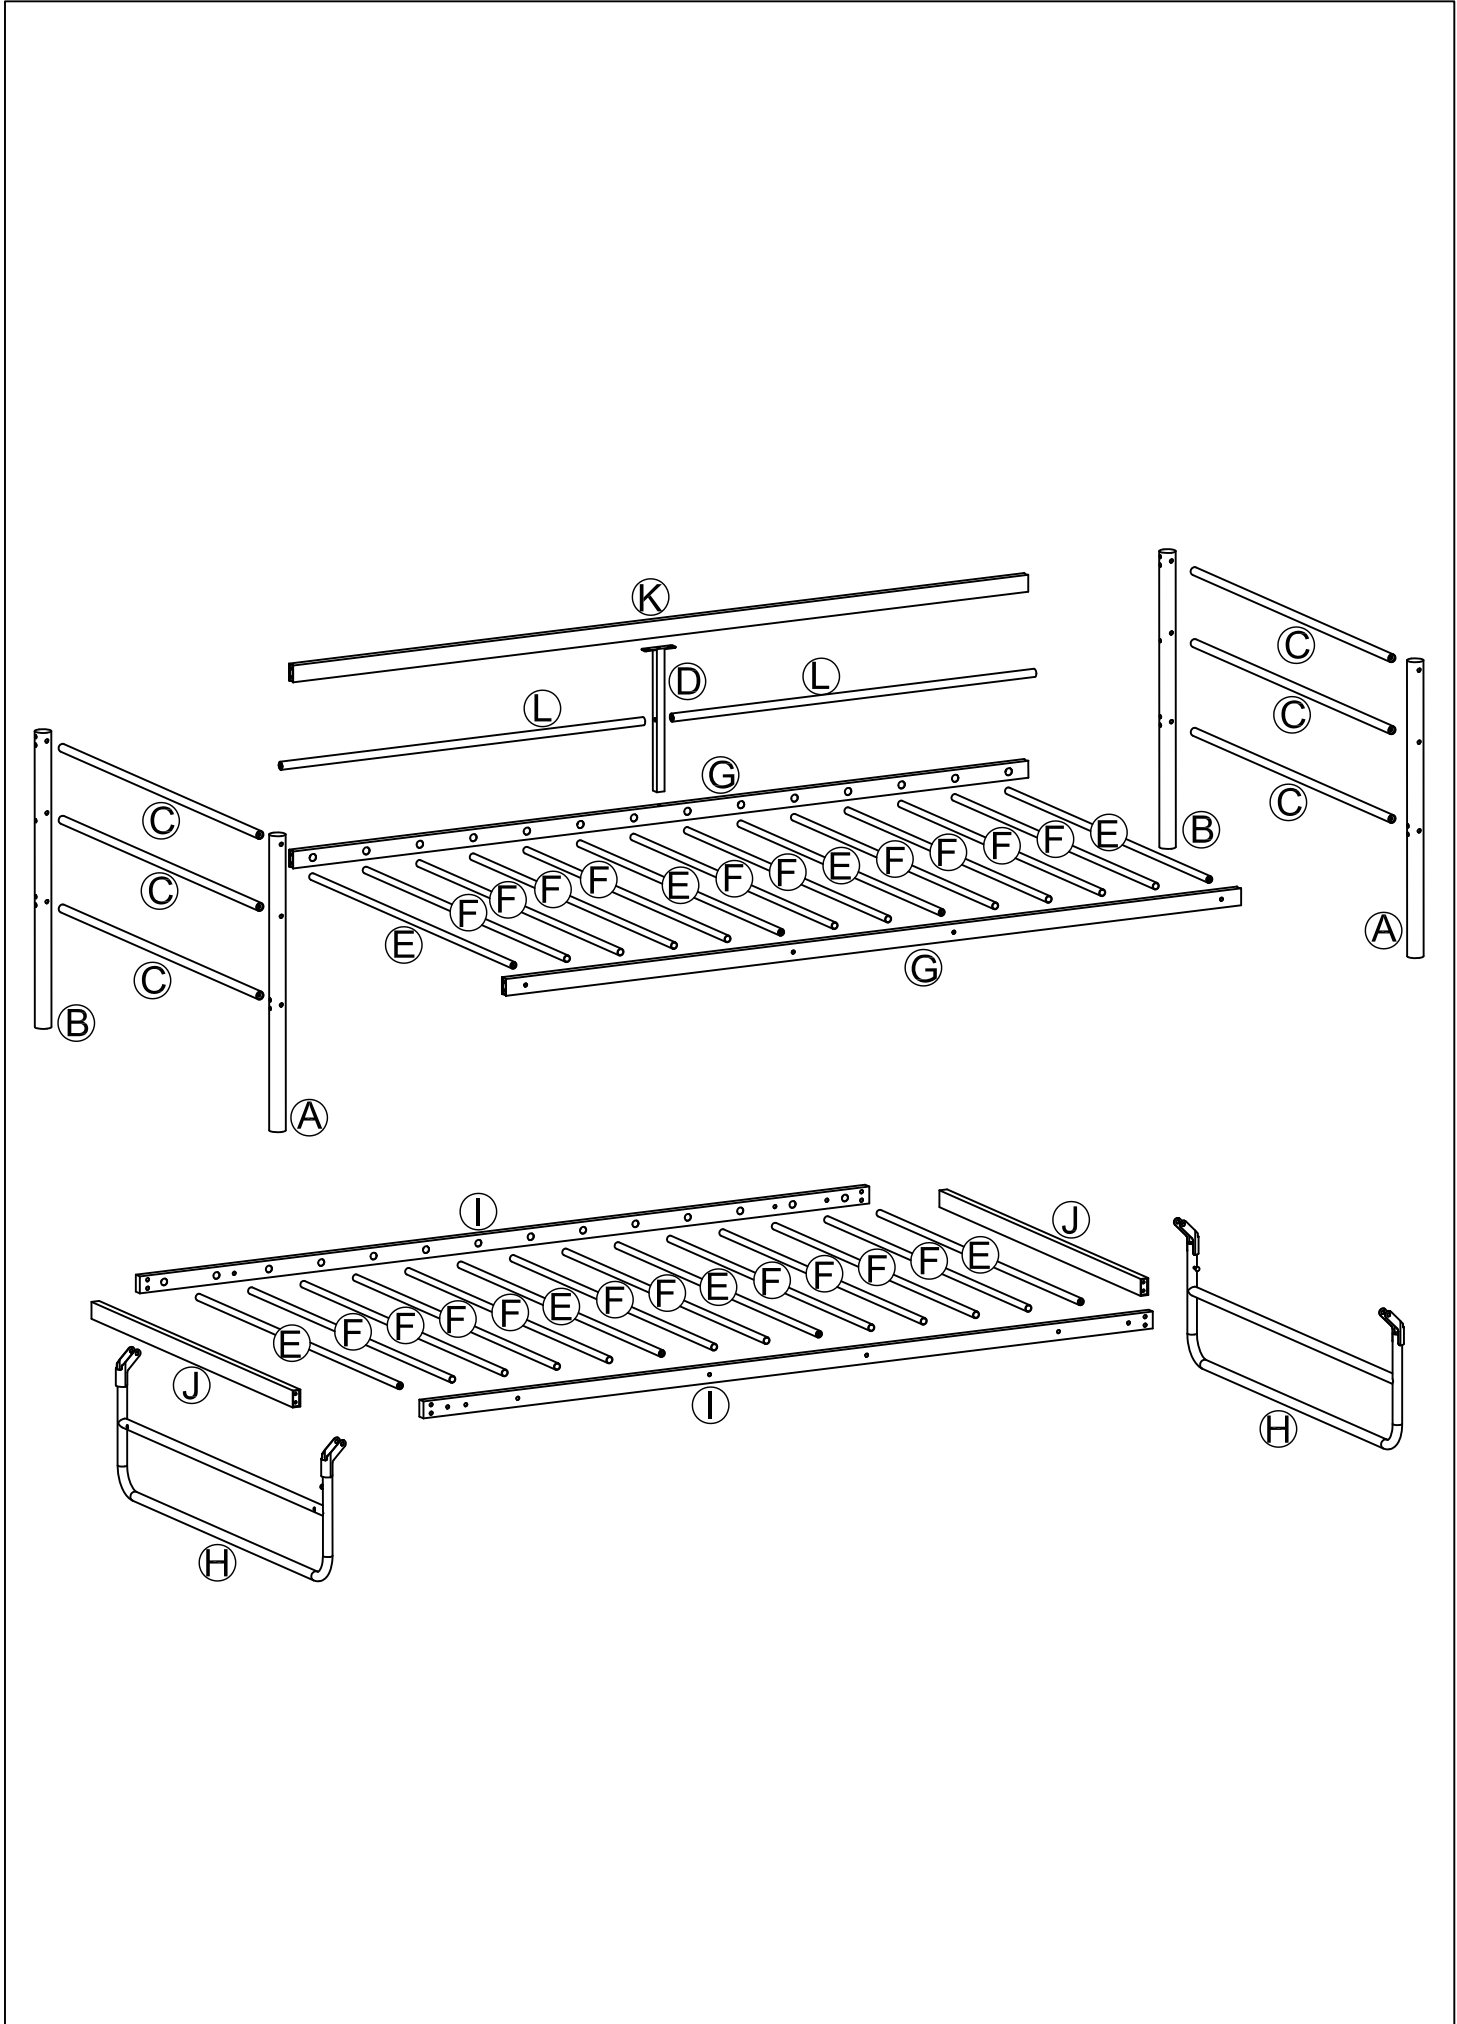















WF 301146





# Parts List

<p>Ⓐ</p>  <p>2Pcs</p>	<p>Ⓑ</p>  <p>2Pcs</p>	<p>Ⓒ</p>  <p>6Pcs</p>
<p>Ⓓ</p>  <p>1Pc</p>	<p>Ⓔ</p>  <p>8Pcs</p>	<p>Ⓕ</p>  <p>20Pcs</p>
<p>Ⓖ</p>  <p>2Pcs</p>	<p>Ⓖ</p>  <p>2Pcs</p>	<p>Ⓖ</p>  <p>2Pcs</p>
<p>Ⓙ</p>  <p>2Pcs</p>	<p>Ⓚ</p>  <p>1Pc</p>	<p>Ⓛ</p>  <p>2Pcs</p>

# Hardware List

<p>1</p>  <p>M6*40mm</p> <p>1Pcs</p>	<p>2</p>  <p>M6*60mm</p> <p>27Pcs</p>	<p>3</p>  <p>M6*16mm</p> <p>18Pcs</p>
<p>4</p>  <p>4#</p> <p>1Pc</p>	<p>5</p>  <p>M6*40mm</p> <p>12Pcs</p>	<p>6</p>  <p>M6</p> <p>2Pcs</p>
<p>7</p>  <p>M6</p> <p>6Pcs</p>	<p>8</p>  <p>M6*35mm</p> <p>2Pcs</p>	<p>9</p>  <p>M8</p> <p>2Pcs</p>
<p>10</p>  <p>4Pcs</p>	<p>11</p>  <p>2Pcs</p>	<p>12</p>  <p>10mm</p> <p>1Pc</p>
<p>13</p>  <p>13mm</p> <p>1Pc</p>	<p>14</p>  <p>M8</p> <p>2Pcs</p>	



1

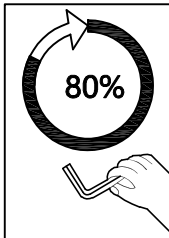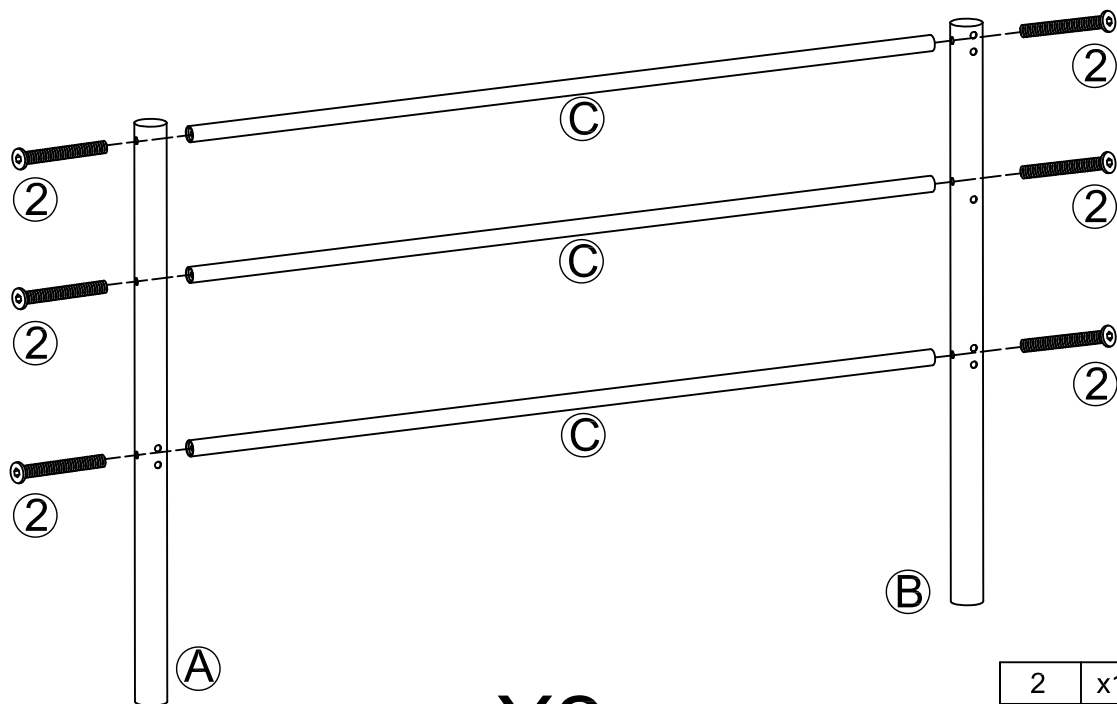

X2



2	x12	4	x1
M6*60mm		4#	

2

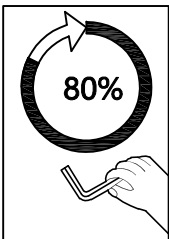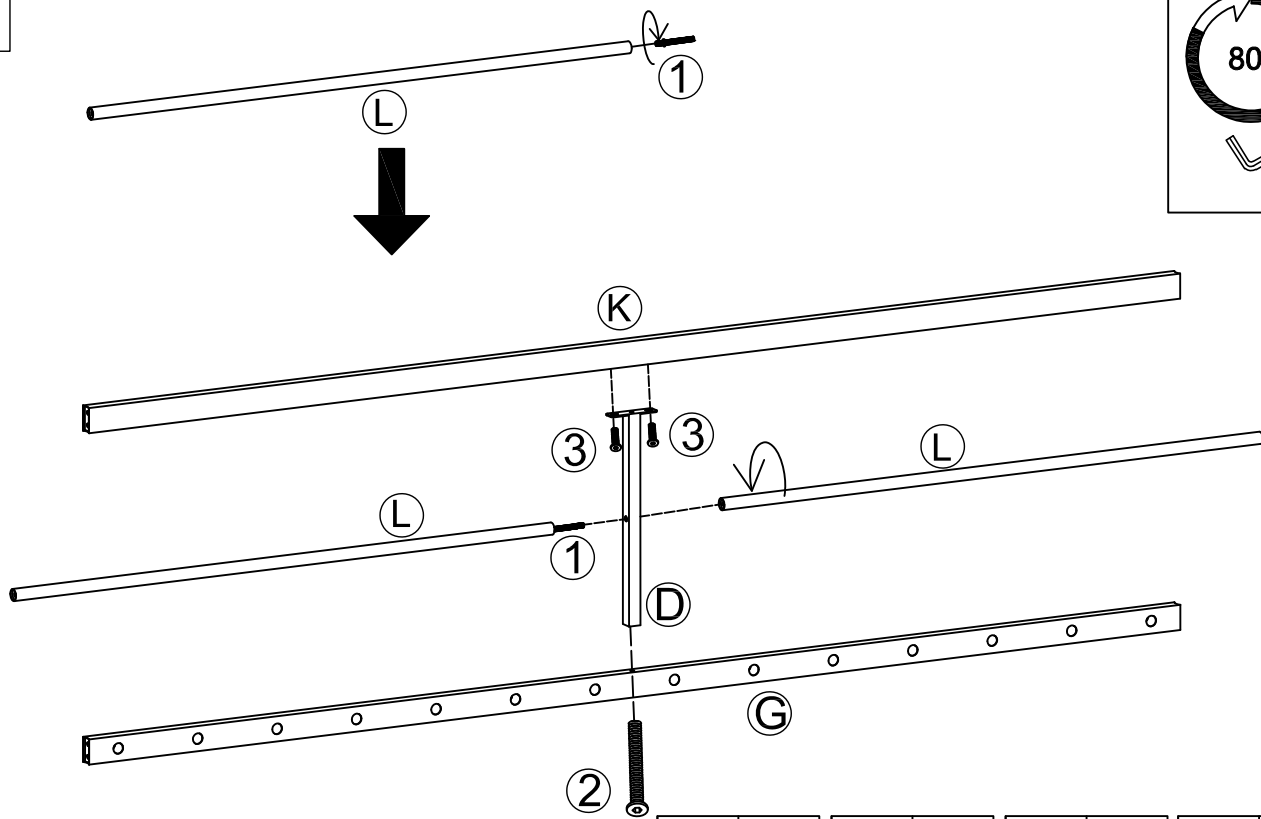



1	x1	2	x1	3	x2	4	x1
M6*40mm		M6*60mm		M6*16mm		4#	

3

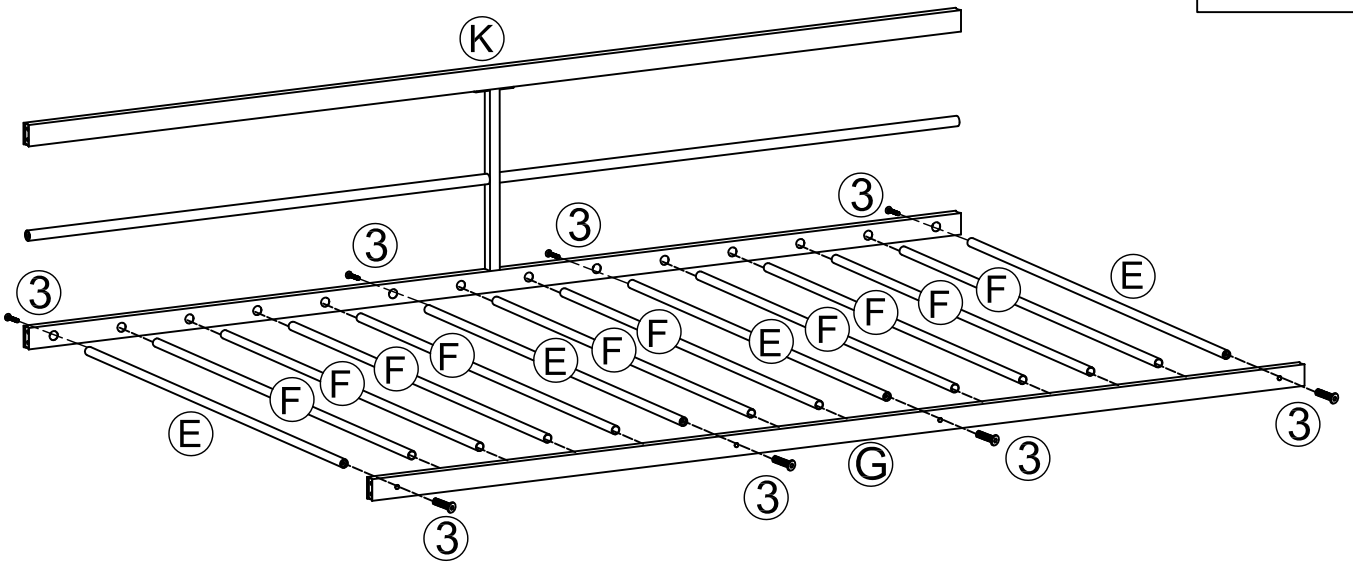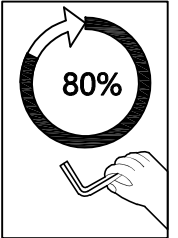



3	x8	4	x1
M6*16mm		4#	

4

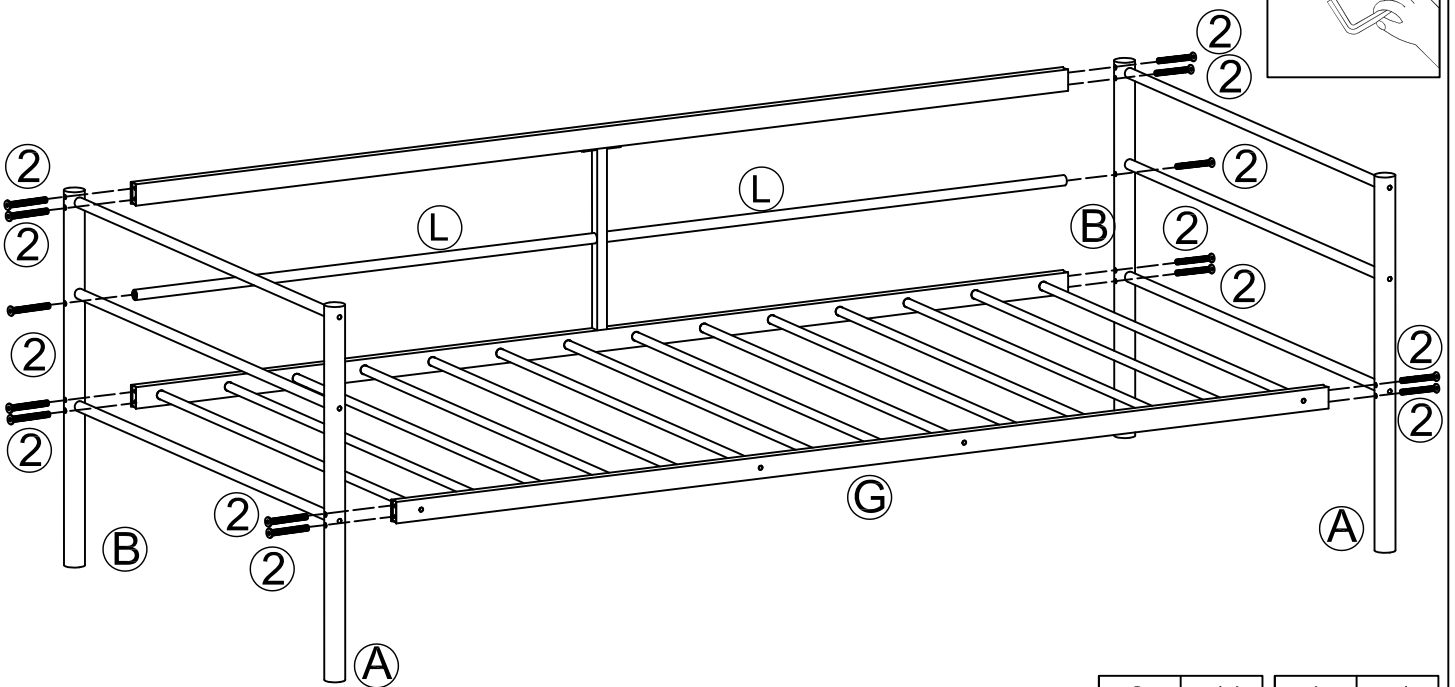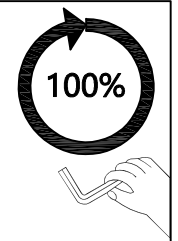



2	x14	4	x1
M6*60mm		4#	

5

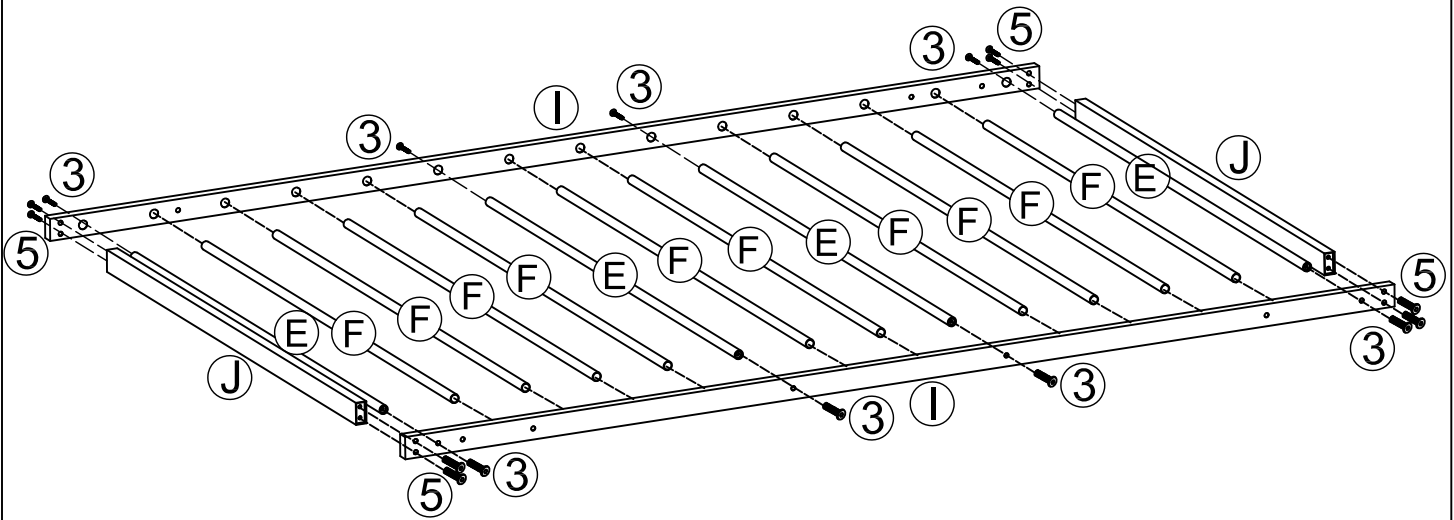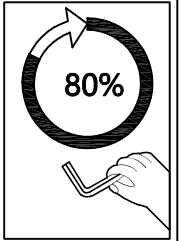




3	x8	4	x1	5	x8
M6*16mm		4#		M6*40mm	

6

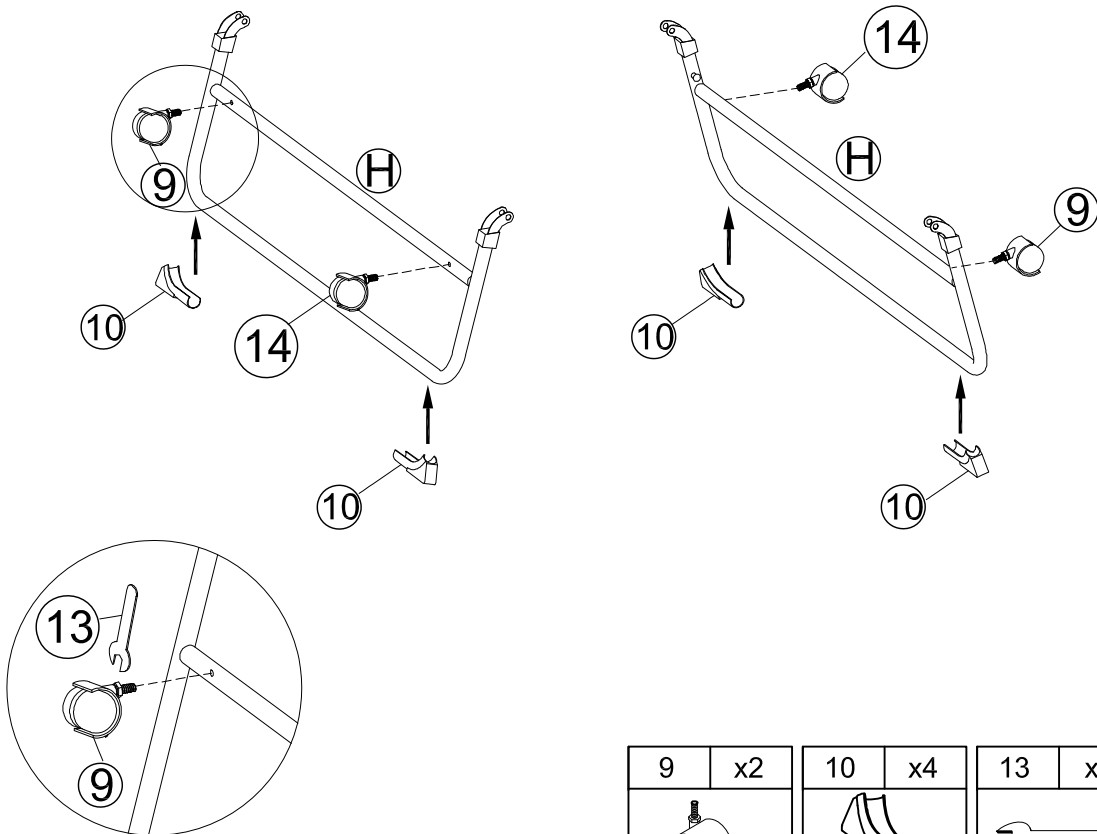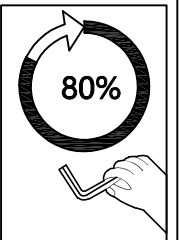





9	x2	10	x4	13	x1	14	x2
M8				13mm		M8	

7

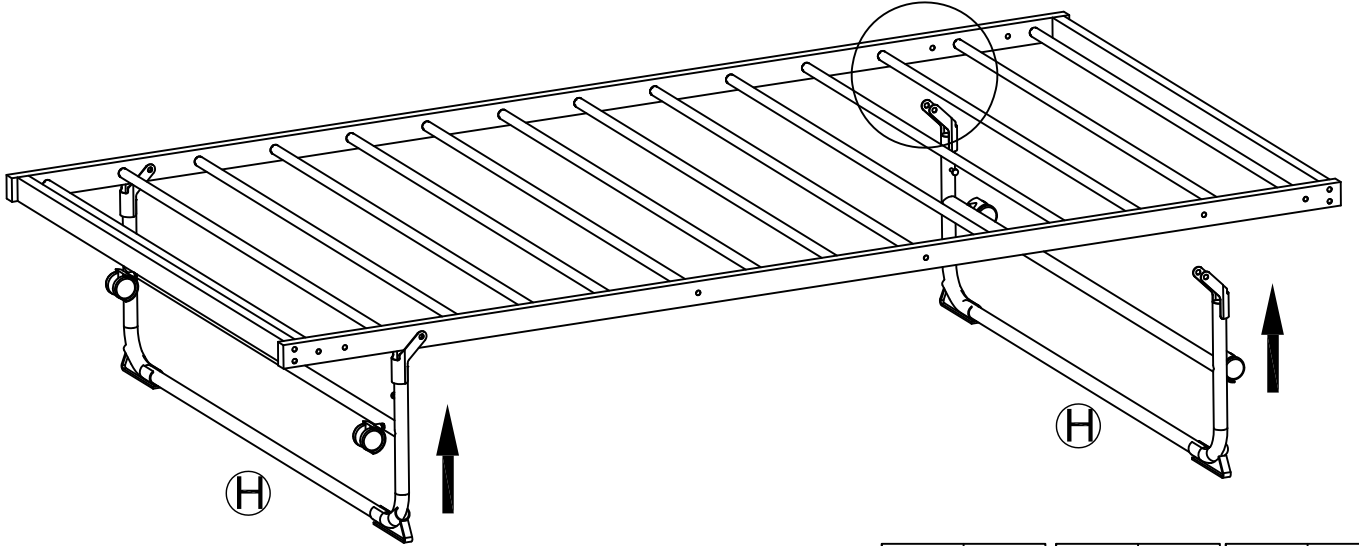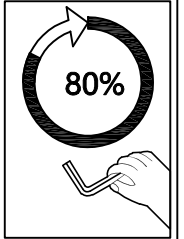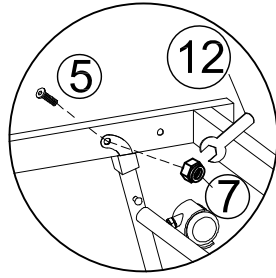

5	x4	7	x4	12	x1
M6*40mm		M6		10mm	

8

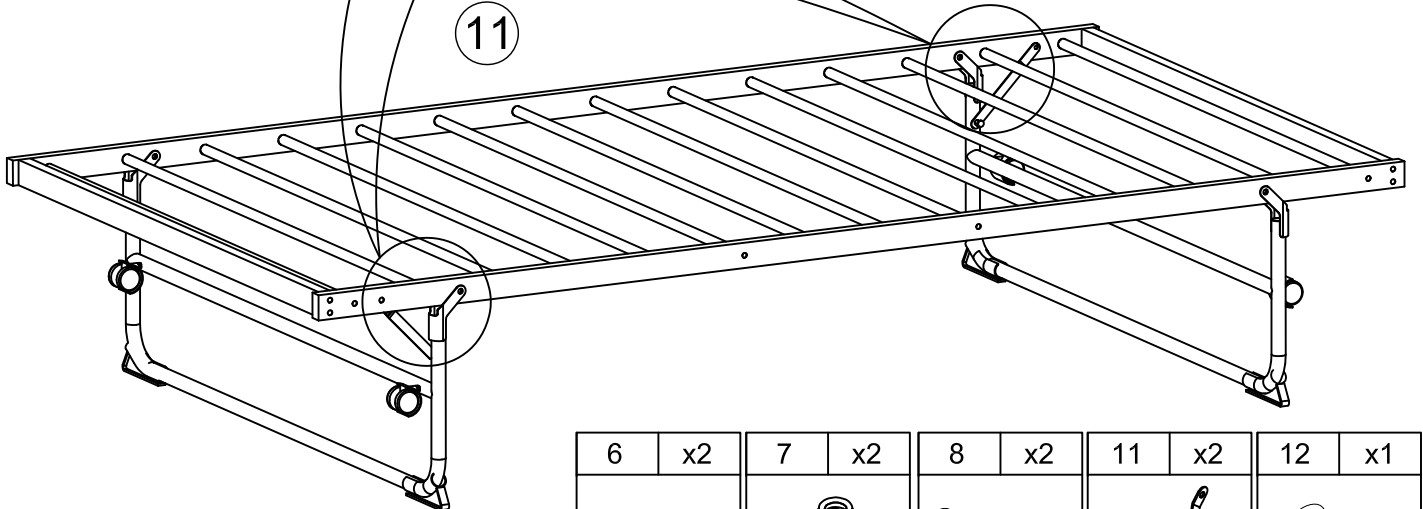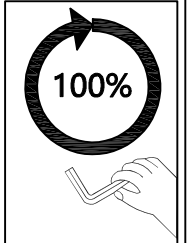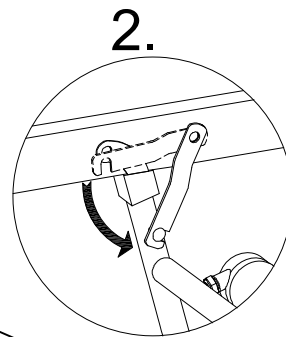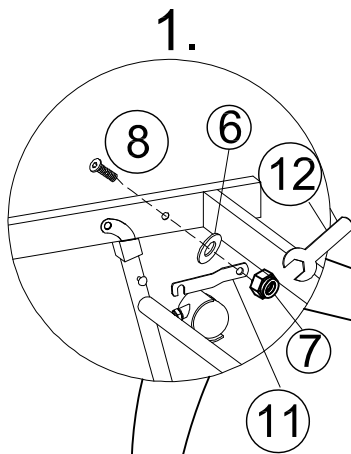

6	x2	7	x2	8	x2	11	x2	12	x1
		M6		M6*35mm				10mm	