
WF293096/WF293097

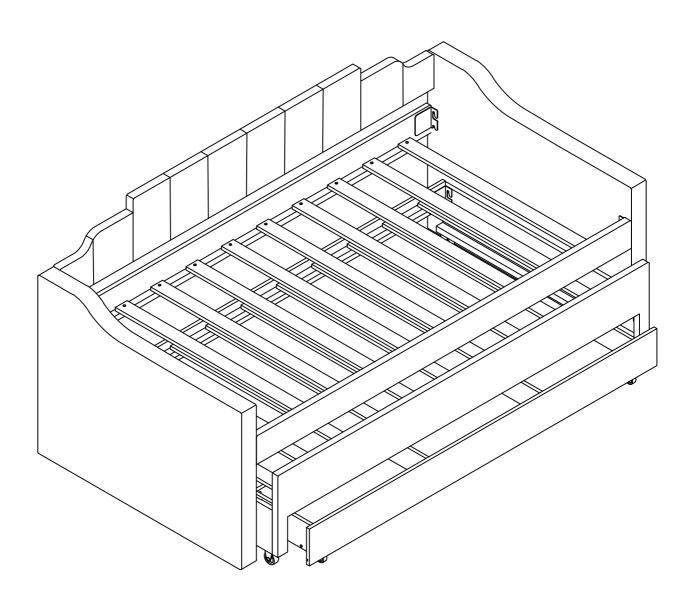


IMPORTANT NOTE

**PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED

** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP

**DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

WF293096/WF293097

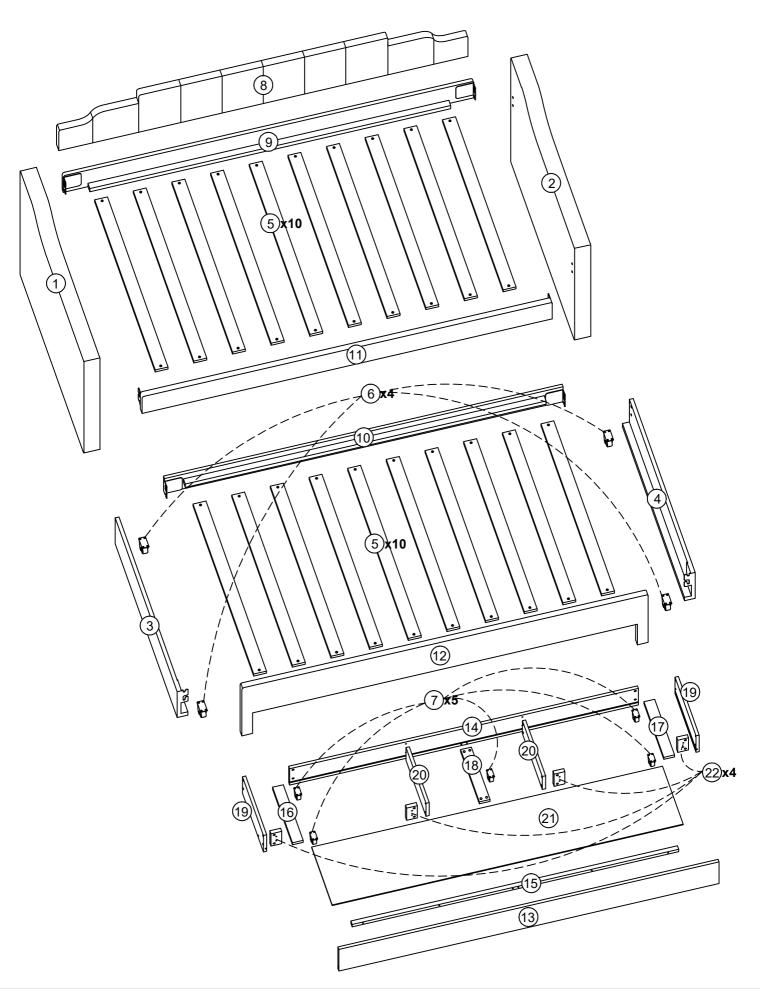

MADE IN VIETNAM


WF293096/WF293097 PARTS IDENTIFICATION WF293096(BOX1) **Bed Right Panel** 1 Bed Left Panel 1pc 2 1pc **Trundle Right End Panel** 3 **Trundle Left End Panel** 1pc 4 1pc 5 Slat Roll Wheels 20pcs 6 4pcs 59x42x66mm Wheels 47x25x50mm 7 5pcs WF293097(BOX2) **Headboard Panel** Left Upper Rail 8 9 1pc 1pc **Back Panel Trundle** 10 **Right Upper Rail** 11 1pc 1pc 12 **Front Panel Trundle** 13 1pc **Drawer Front Panel** 1pc **Drawer Back Panel** Long Drawer Bottom Connector 14 15 1pc 1pc Left Trundle Board **Right Trundle Board** 16 1pc 17 1pc 18 **Drawer Bottom Connector** 19 **Drawer Side Panel** 1pc 2pcs 20 **Drawer Middle Connector** 21 **Drawer Bottom Panel** 2pcs 1pc •••• **Drawer Bottom Right Connector** 22 4pcs

MADE IN VIETNAM

PAGE 3 OF 12


WF293096/WF293097




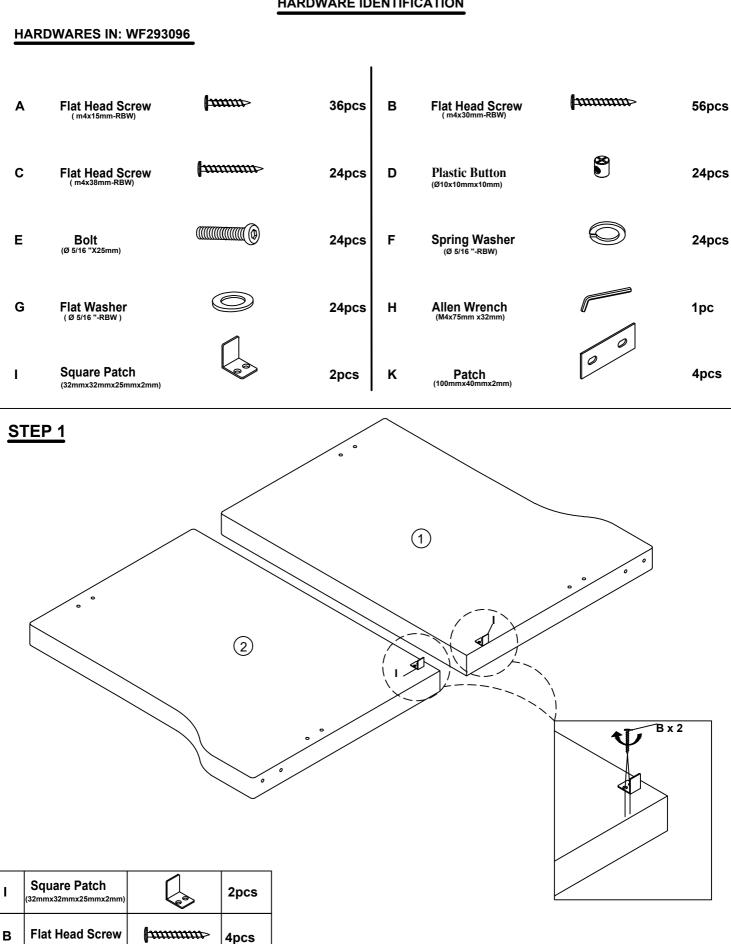


MADE IN VIETNAM


(m4x30mm-RBW)

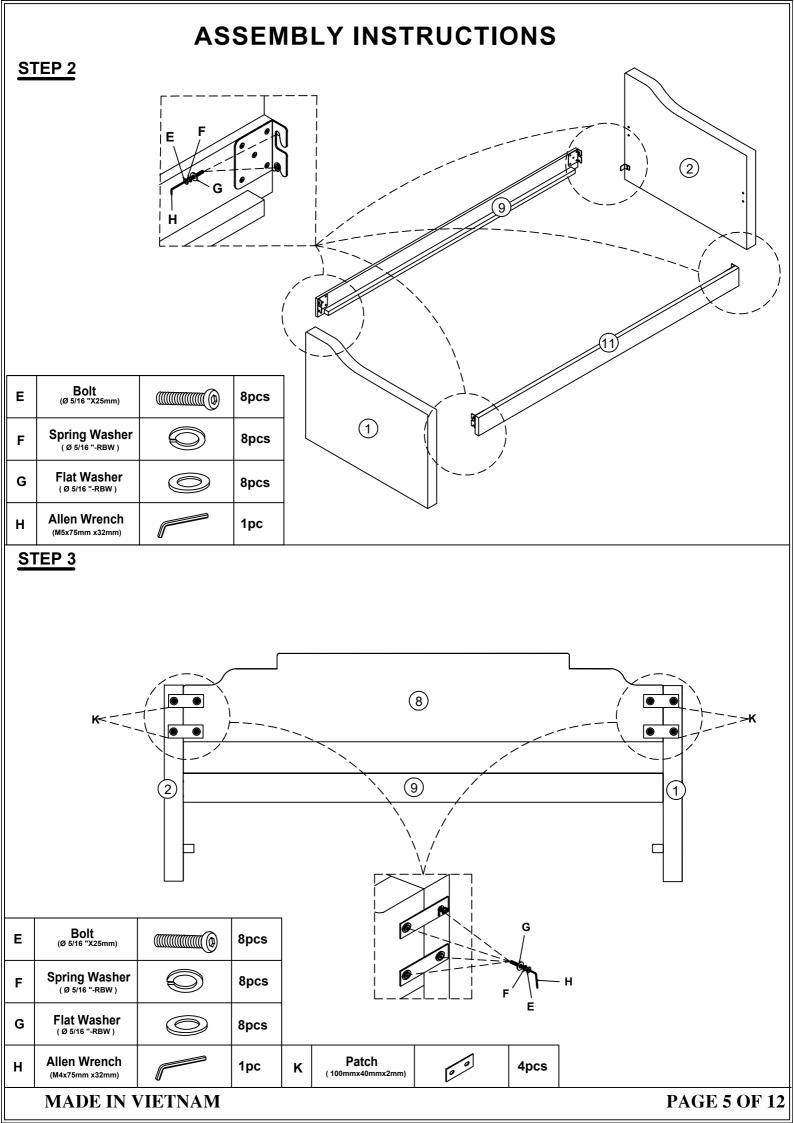


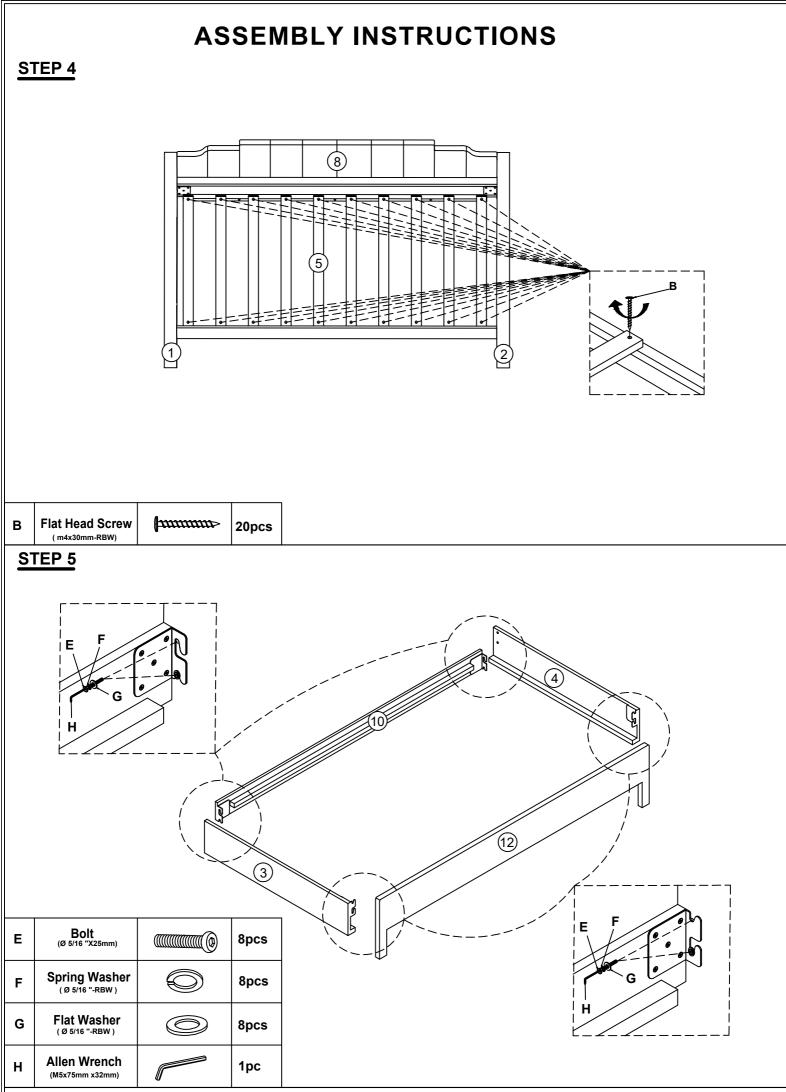

MADE IN VIETNAM

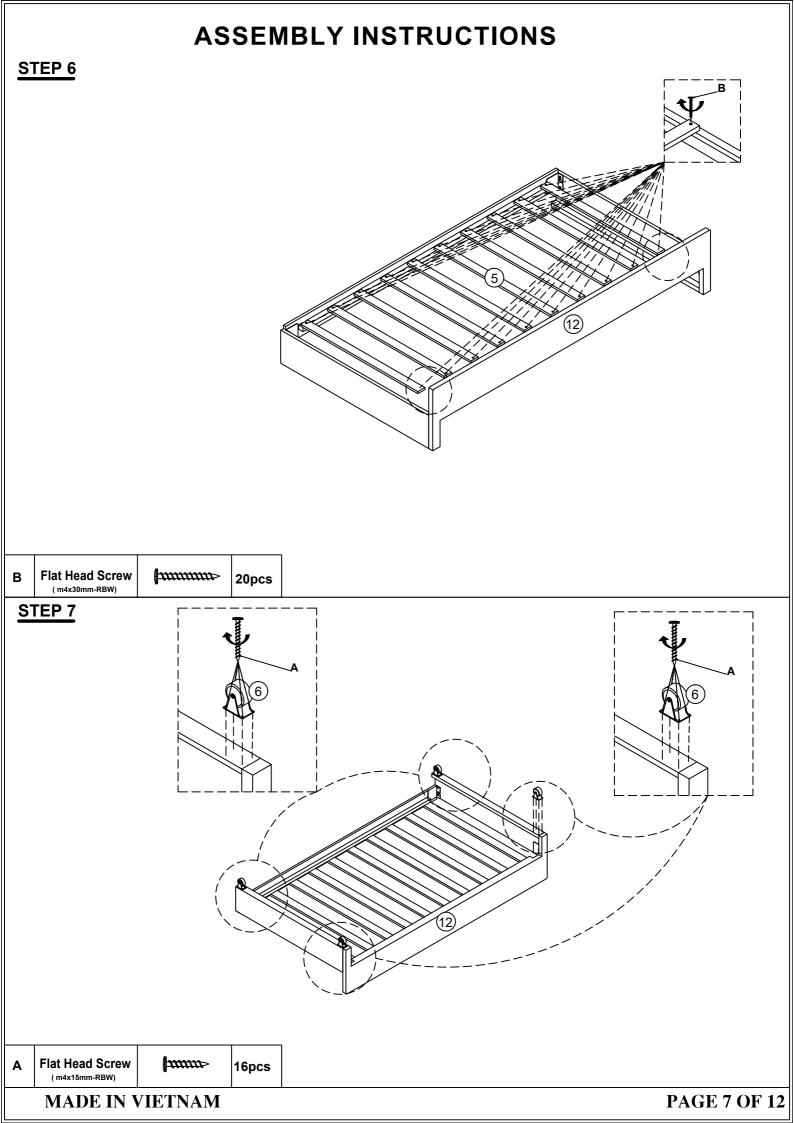

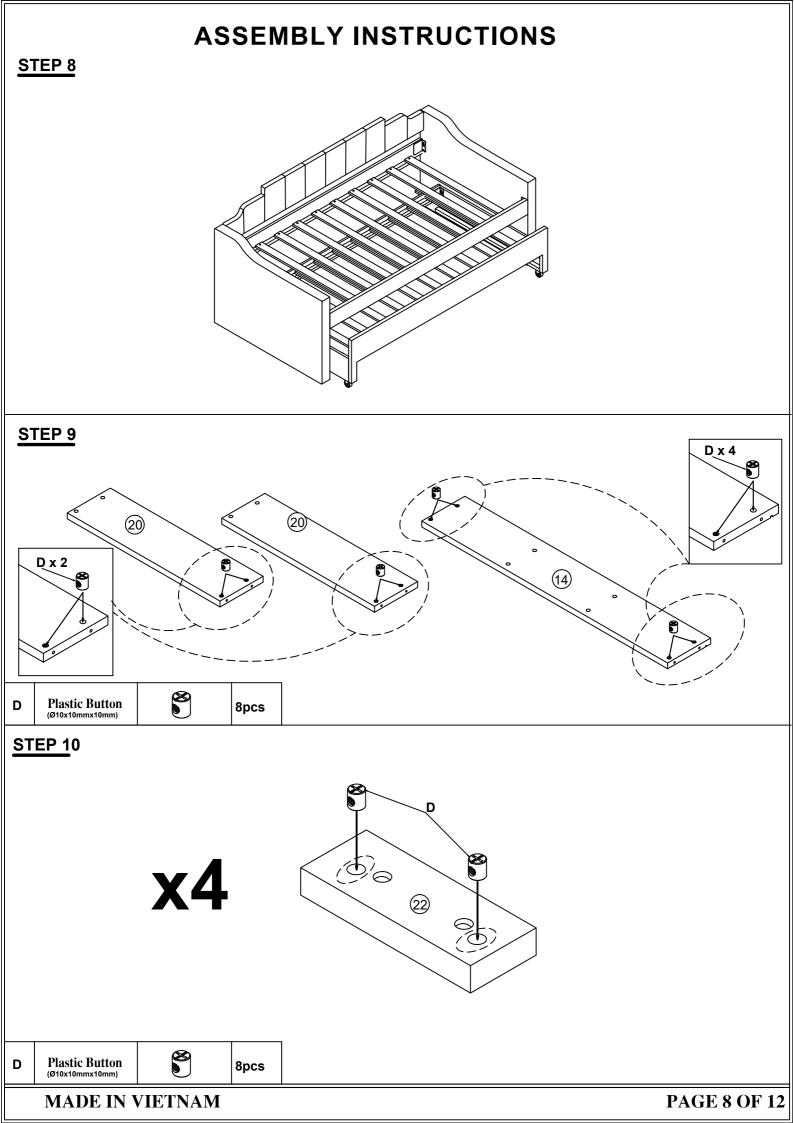

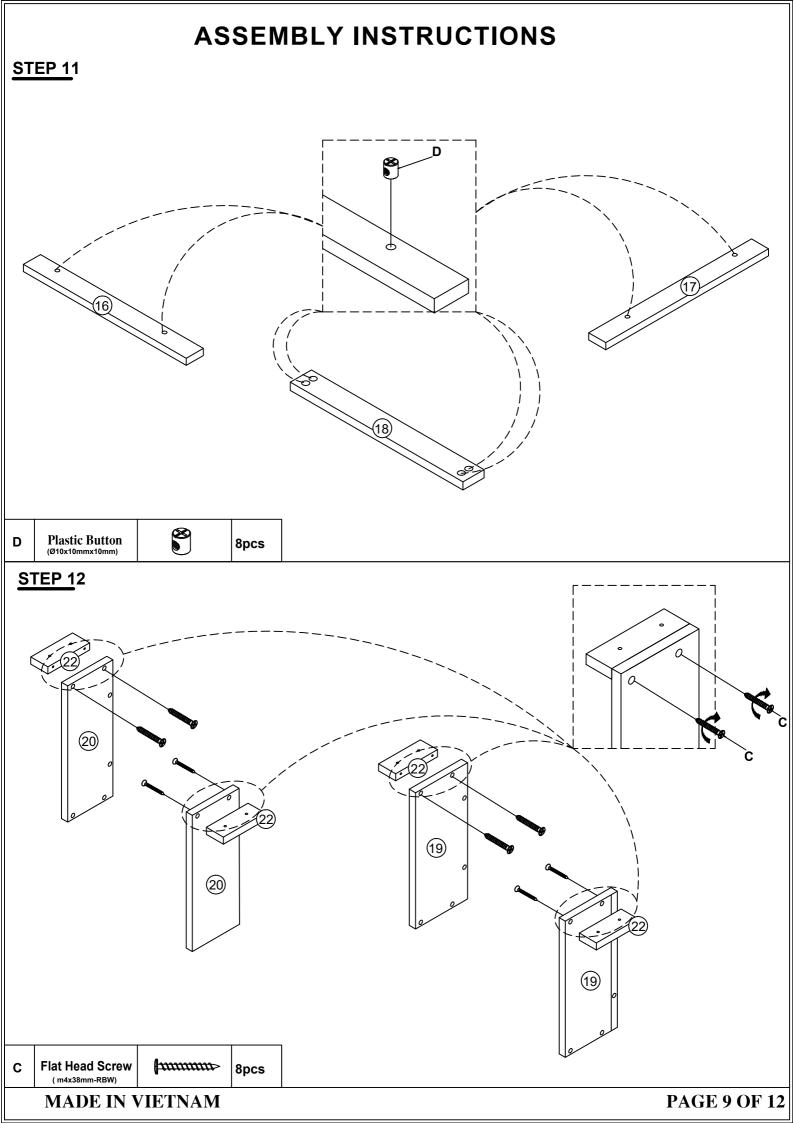

STEP 13

