
ASSEMBLY INSTRUCTIONS


WF 310876/WF 310877

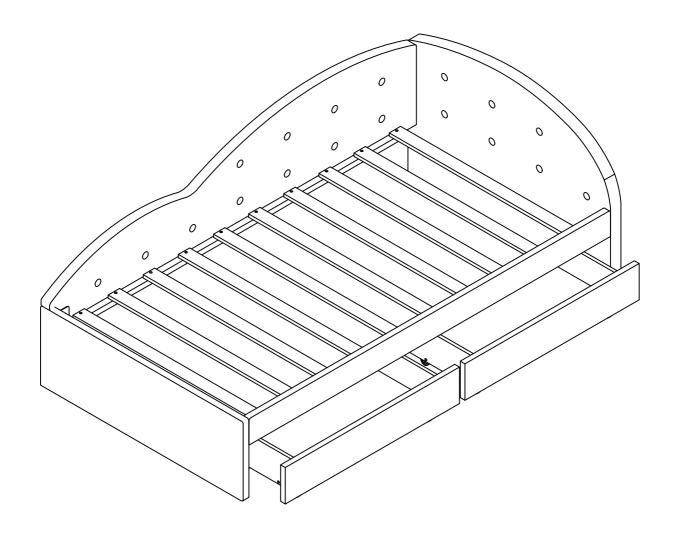

IMPORTANT NOTE


- **PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
- ** BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
- **DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP

MADE IN VIETNAM

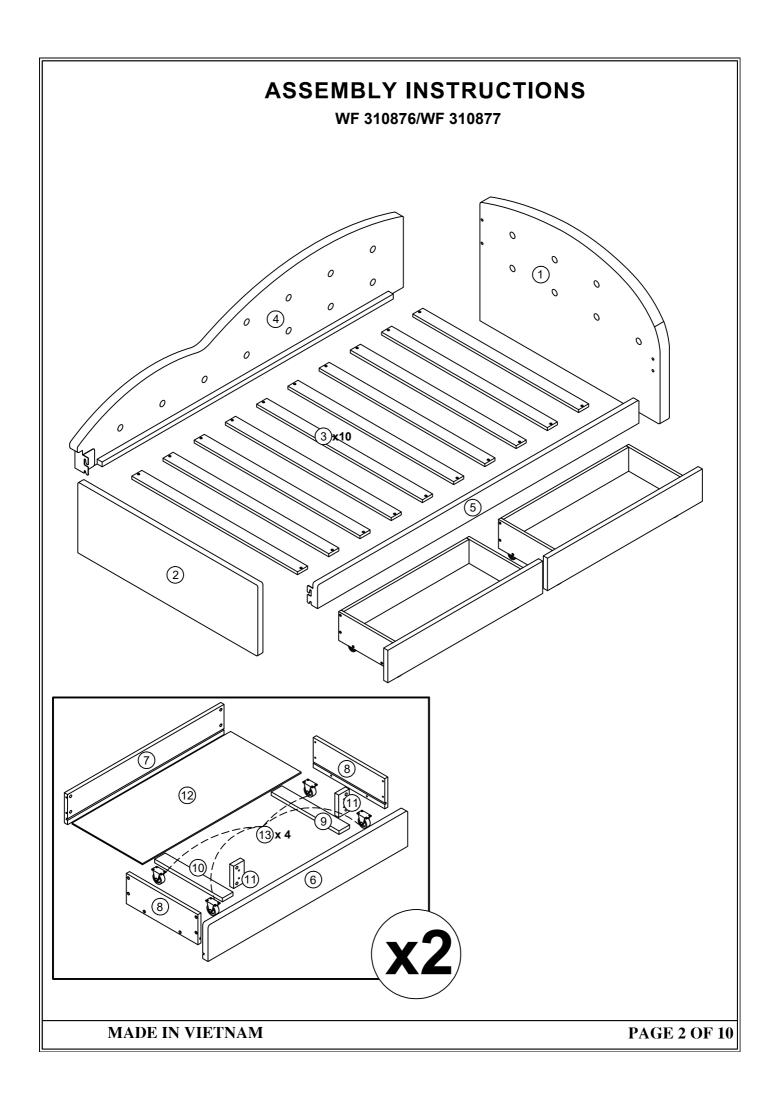

ASSEMBLY INSTRUCTION

WF 310876/WF 310877

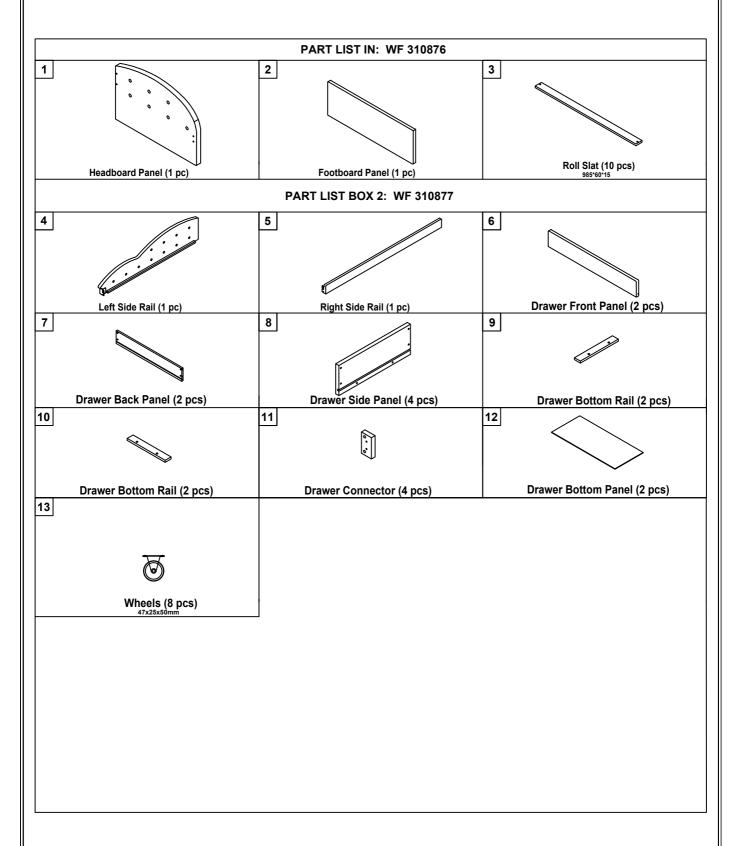


MADE IN VIETNAM


PAGE 3 OF 10

ASSEMBLY INSTRUCTIONS

WF 310876/WF 310877

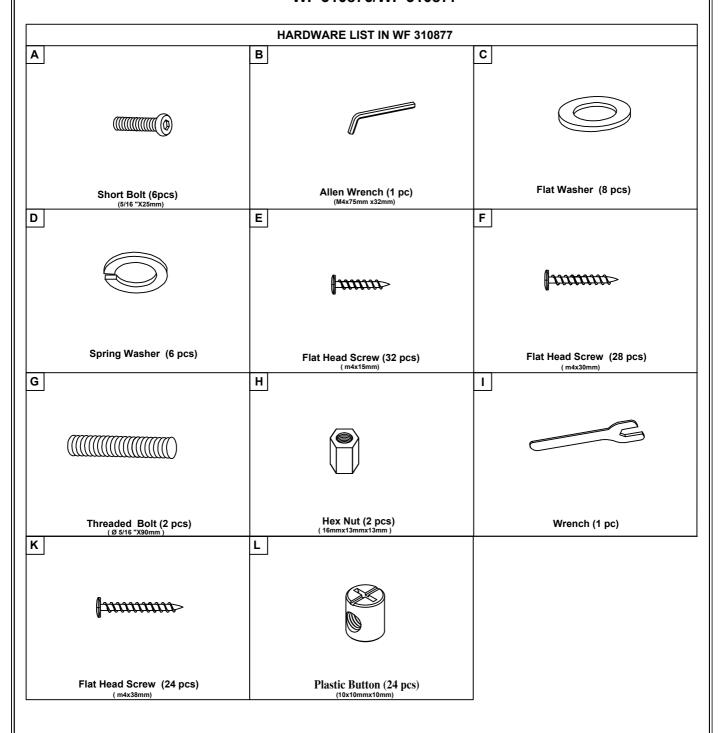


MADE IN VIETNAM PAGE 4 OF 10

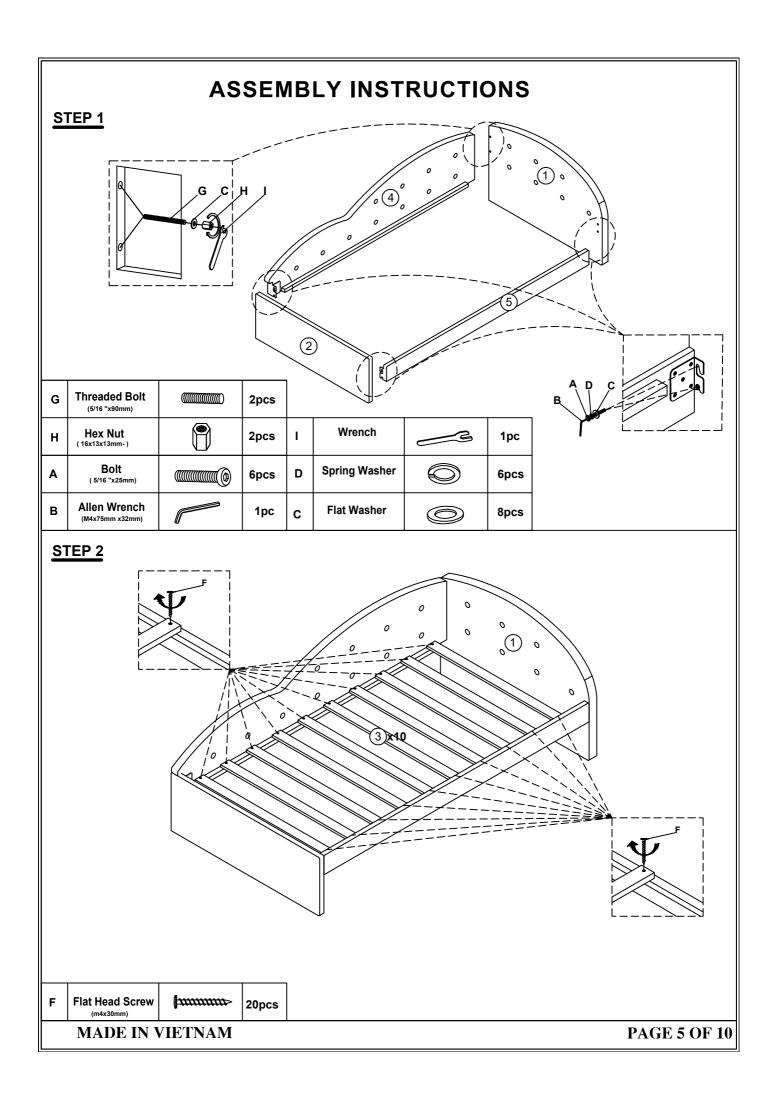

ASSEMBLY INSTRUCTIONS

STEP 5

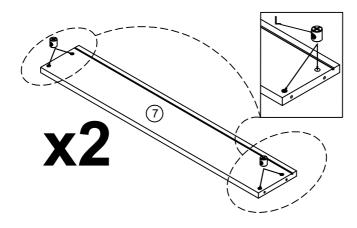


L Plastic Button



8pcs


STEP 6

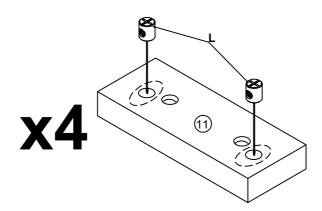


L Plastic Button




8pcs

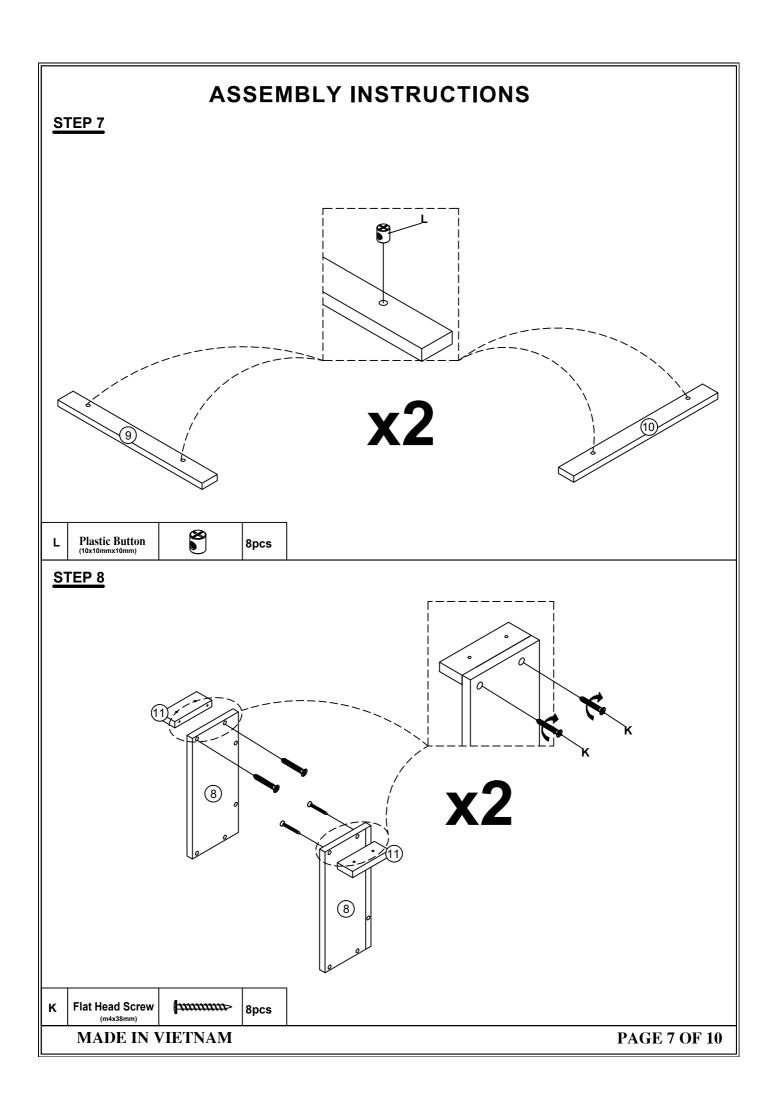

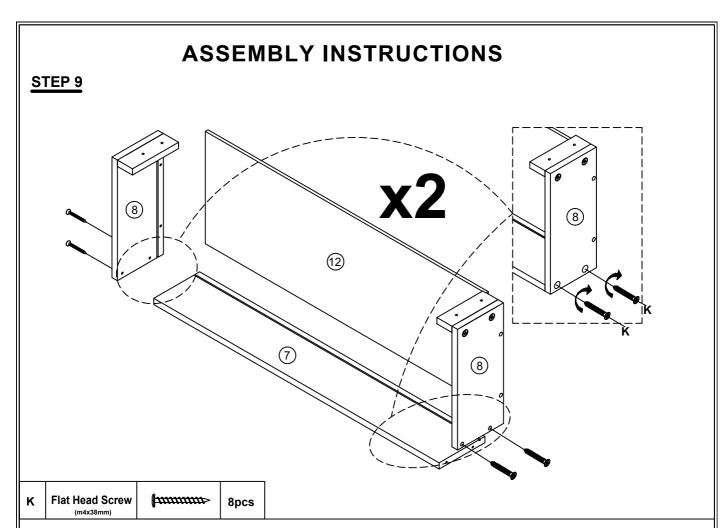

STEP 10

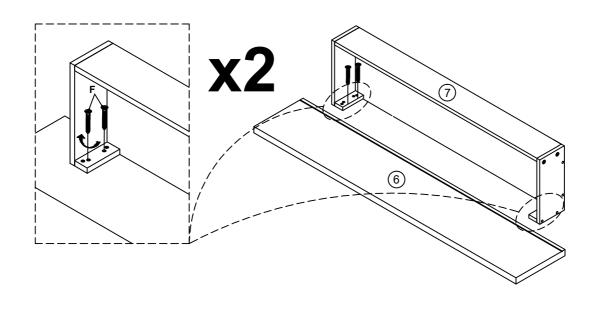

F Flat Head Screw (m4x30mm) 8pcs

MADE IN VIETNAM PAGE 8 OF 10

