








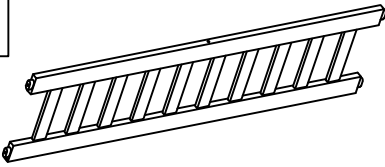

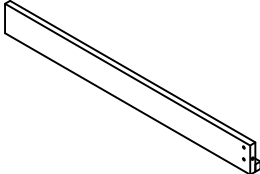
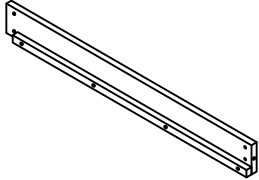

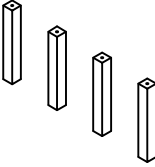

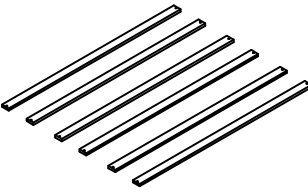
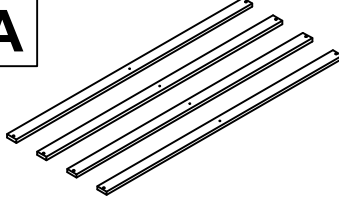
ASSEMBLY INSTRUCTIONS

FULL BED


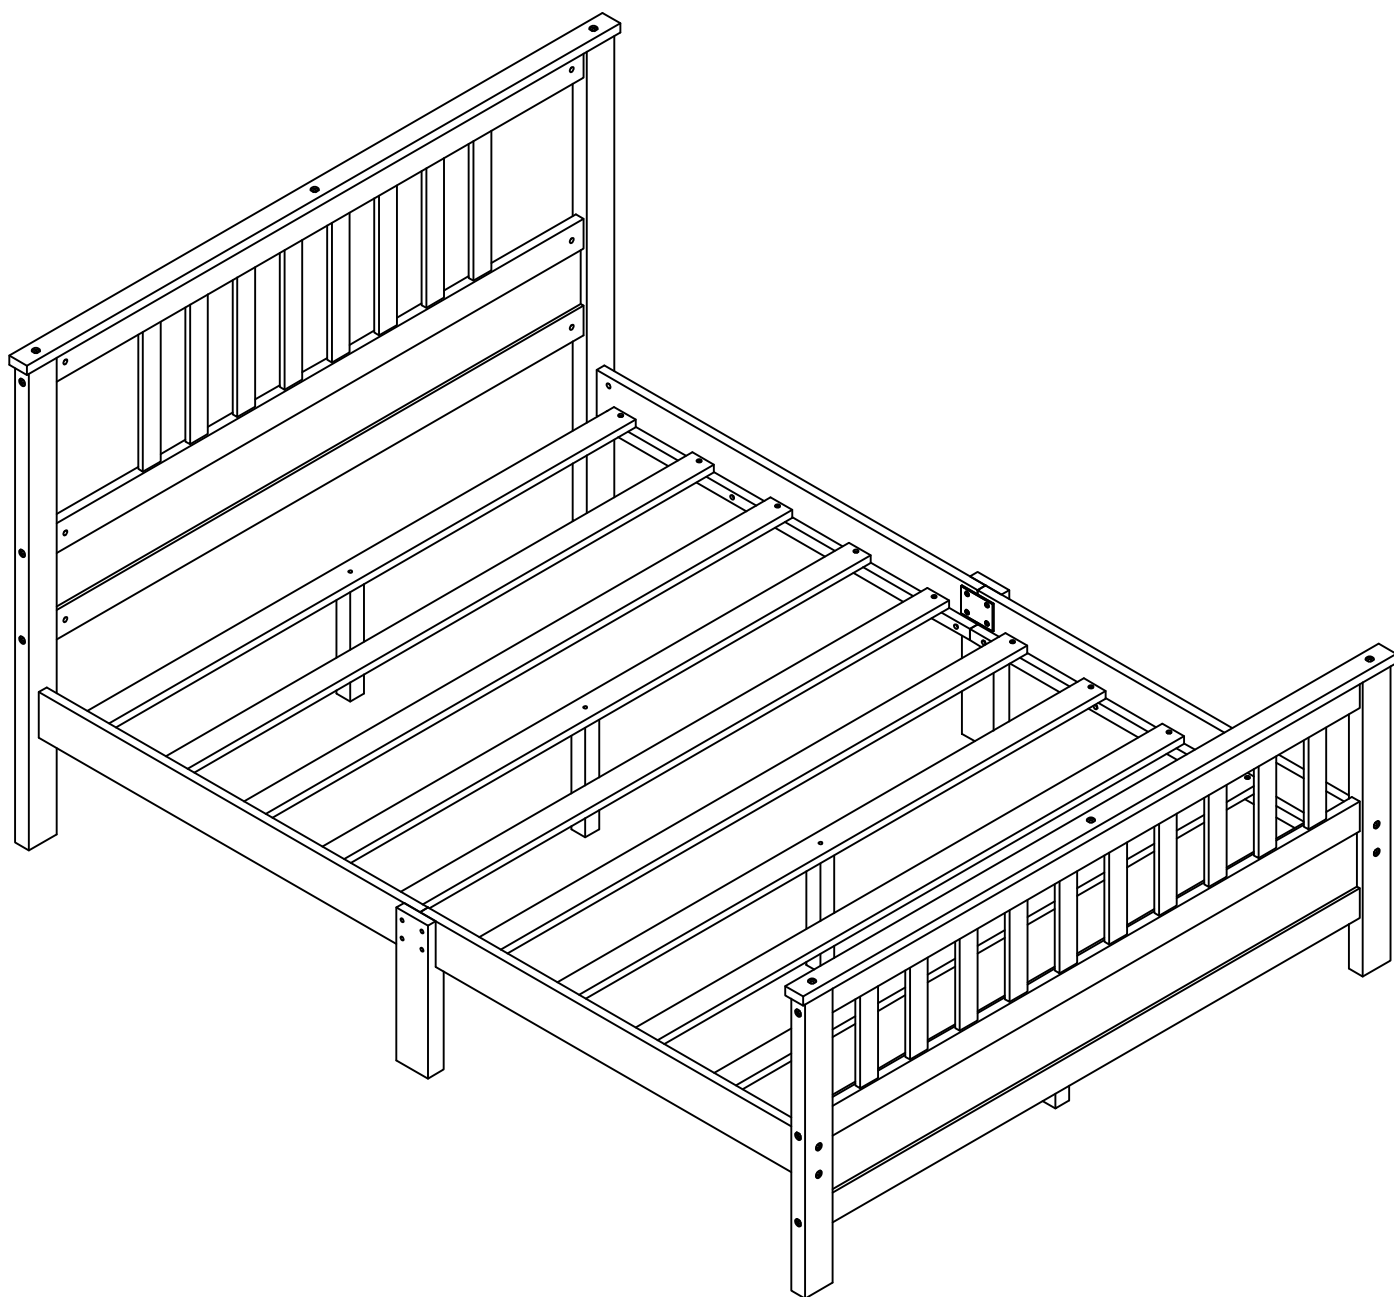










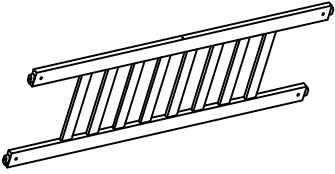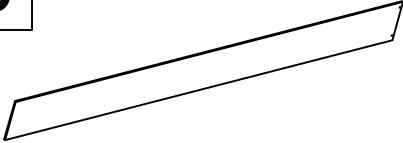WF192974


Part List : WF192974

A 	B 	C 
Horizontal bar - 2pcs	Headboard frame - 1pc	Headboard panel -2pcs
D 	E 	F 
Headboard bottom rail-2pc	Headboard Leg (Left) - 1pc	Headboard Leg (Right) - 1pc
G 	K 	L 
Footboard Frame - 1pc	Footboard leg (Right)-1pc	Side rail - 2pcs
L1 	J 	P 
Side rail - 2pcs	Footboard leg (Left)-1pc	Center support leg - 4pcs
M 	16 	16A 
Center rail Leg -2pcs	Slats - 6pcs	Slats 3 hole - 4pcs


Hardware List : WF192974

<p>1</p>  <p>Ø10 x 30mm Wood dowel (6pcs)</p>	<p>2</p>  <p>Ø1/4" x 110mm Hex-Head bolts (12pcs)</p>	<p>3</p>  <p>Ø1/4" x 35mm Hex-Head bolts (12pcs)</p>
<p>4</p>  <p>Ø6" x 40mm Hex-Head bolts (6pcs)</p>	<p>5</p>  <p>Ø1/4" x 9.5 x 12mm Horizontal-Hole bolts(20pcs)</p>	<p>6</p>  <p>Ø4*30mm Wood screws (20pcs)</p>
<p>7</p>  <p>3x80x60mm Pass - 2pcs</p>	<p>8</p>  <p>Ø1/4" Wood screws (8pcs)</p>	<p>9</p>  <p>(1/4")4.5*58mm Allen key (1pc)</p>
<p>10</p>  <p>Ø1/4" x 80mm Hex-Head bolts (8pcs)</p>		


Step 1

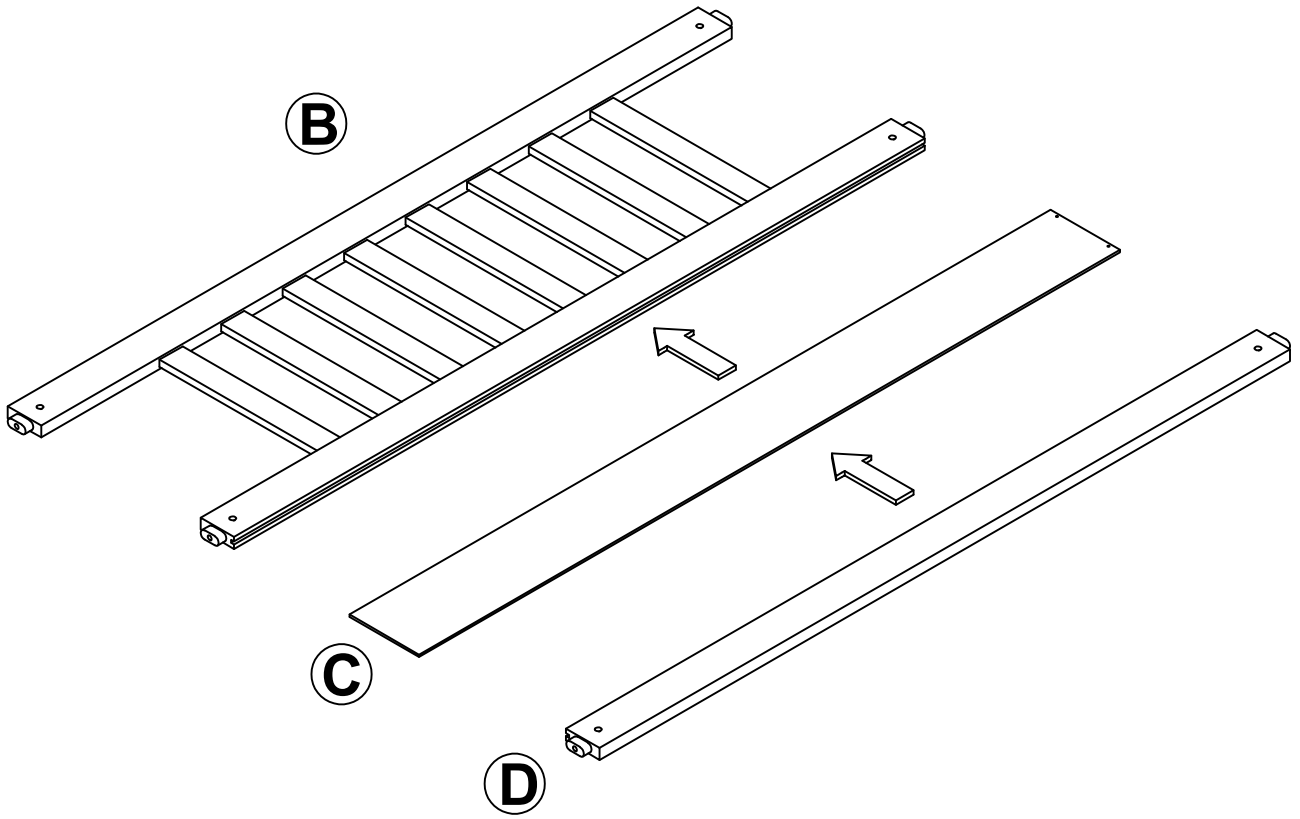


Step 2

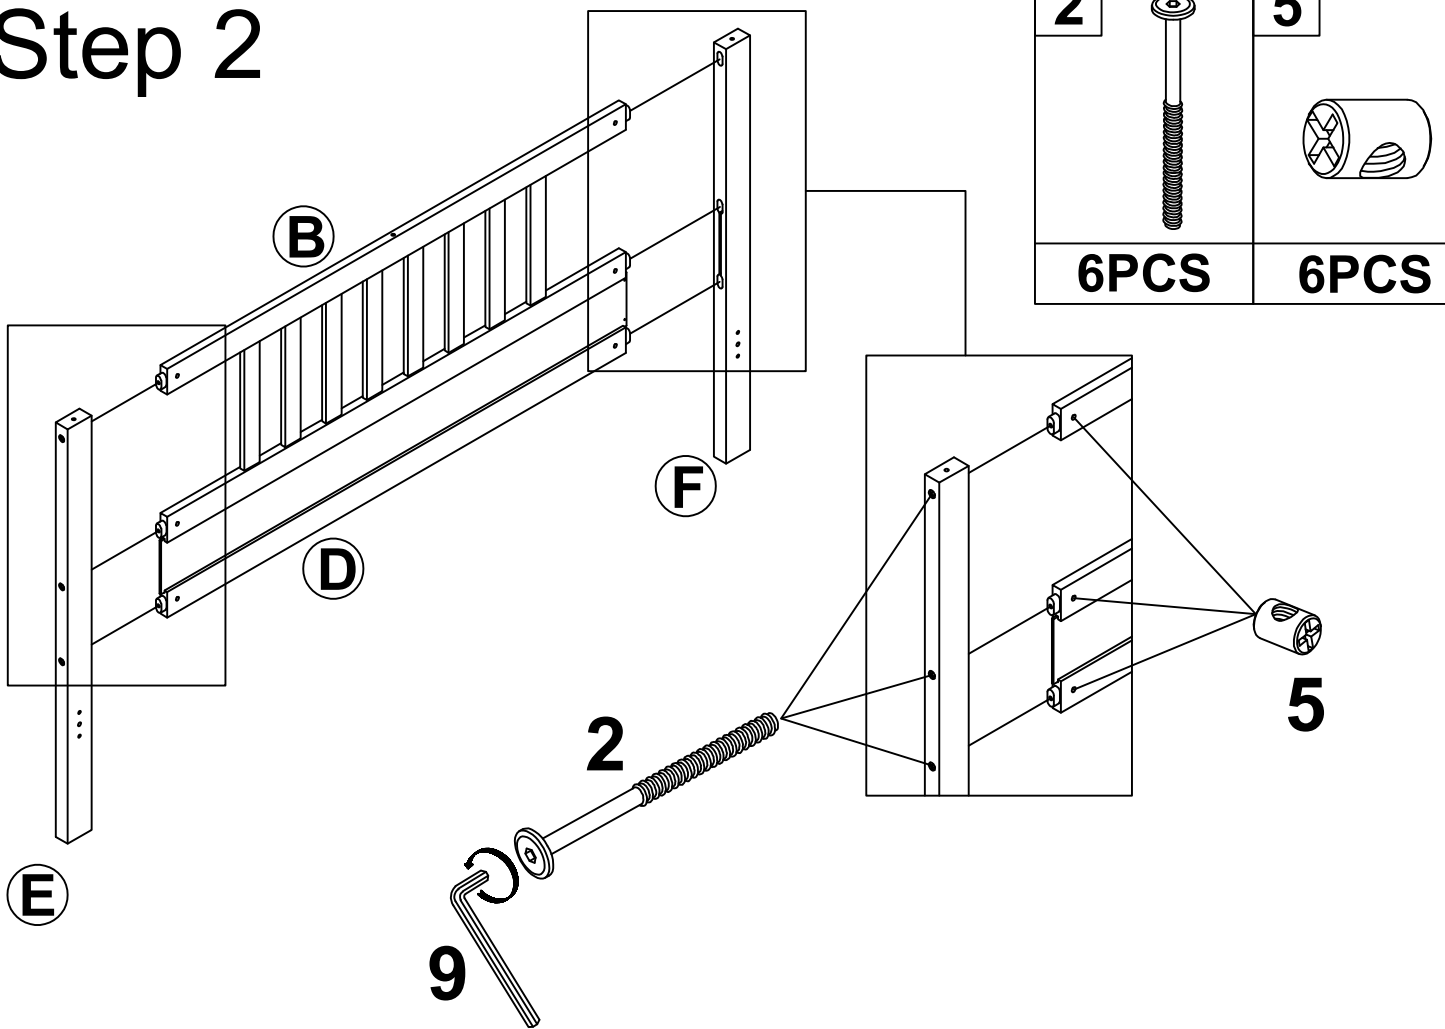


Step 3

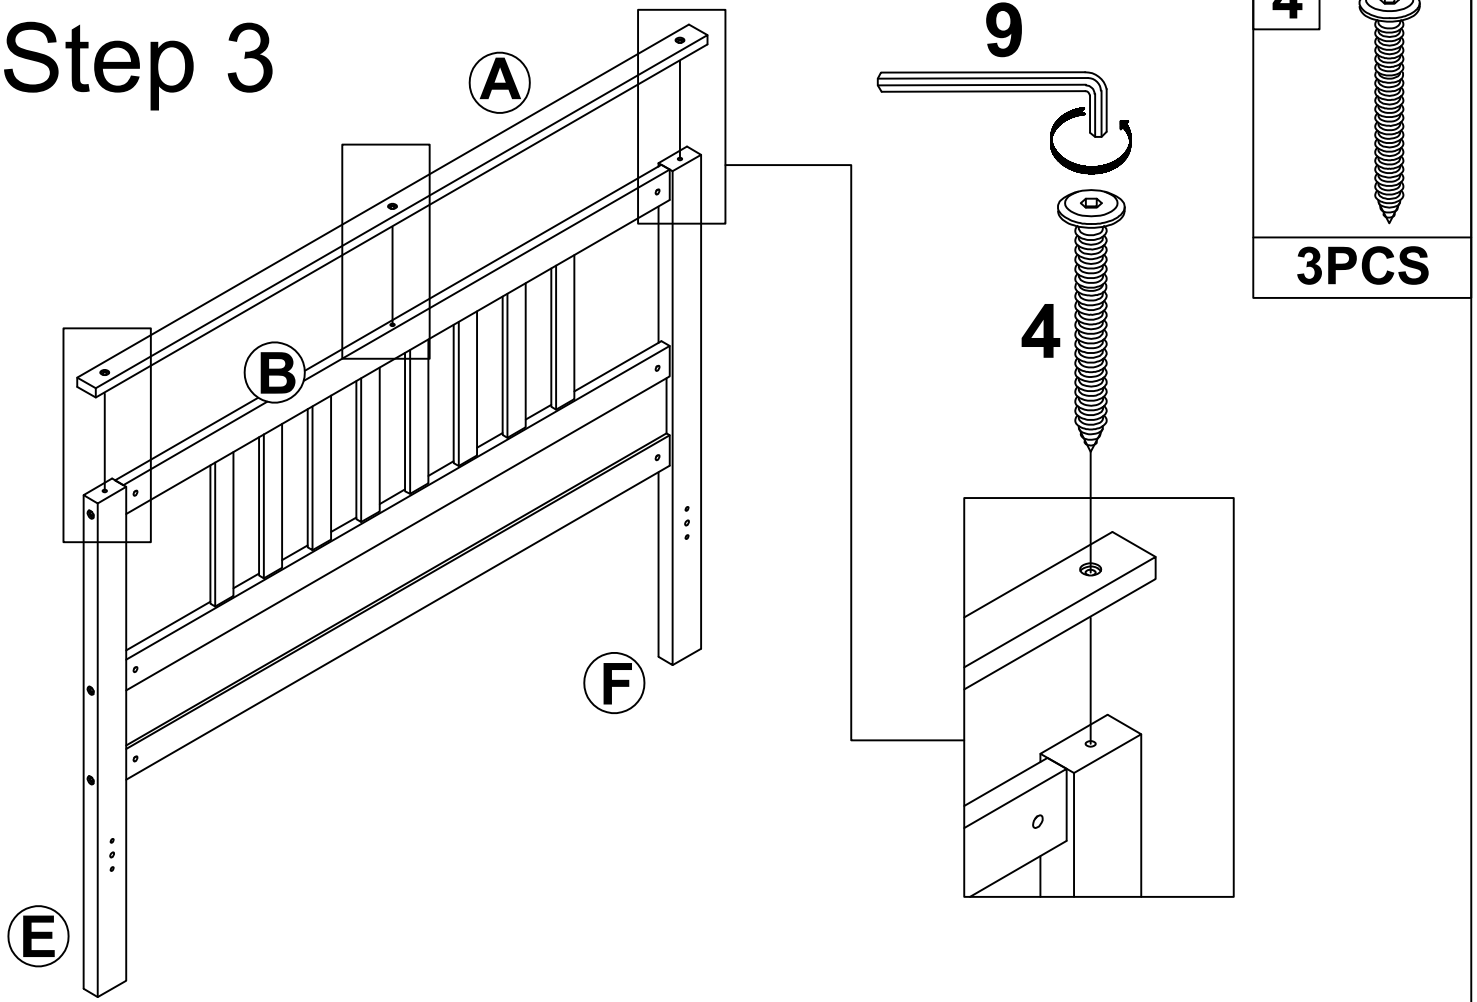


Step 4

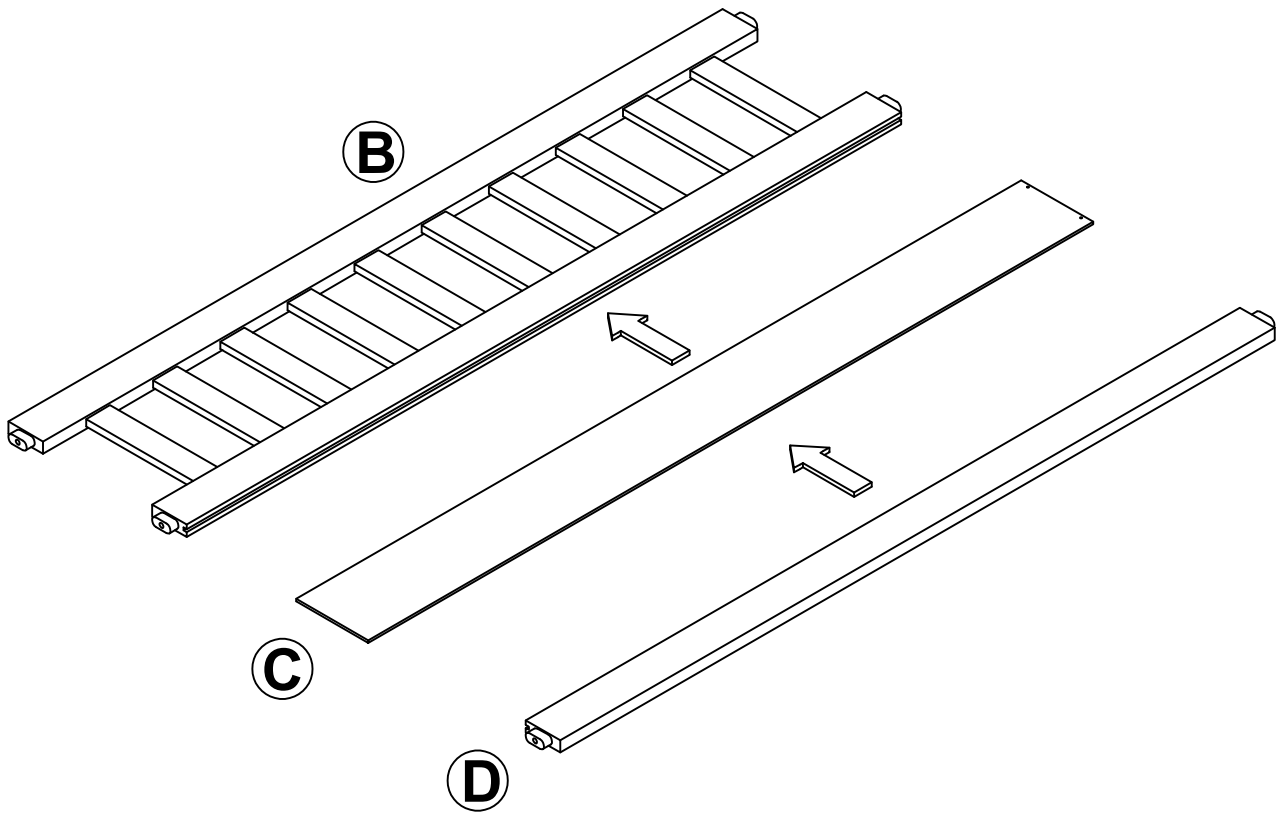


Step 5

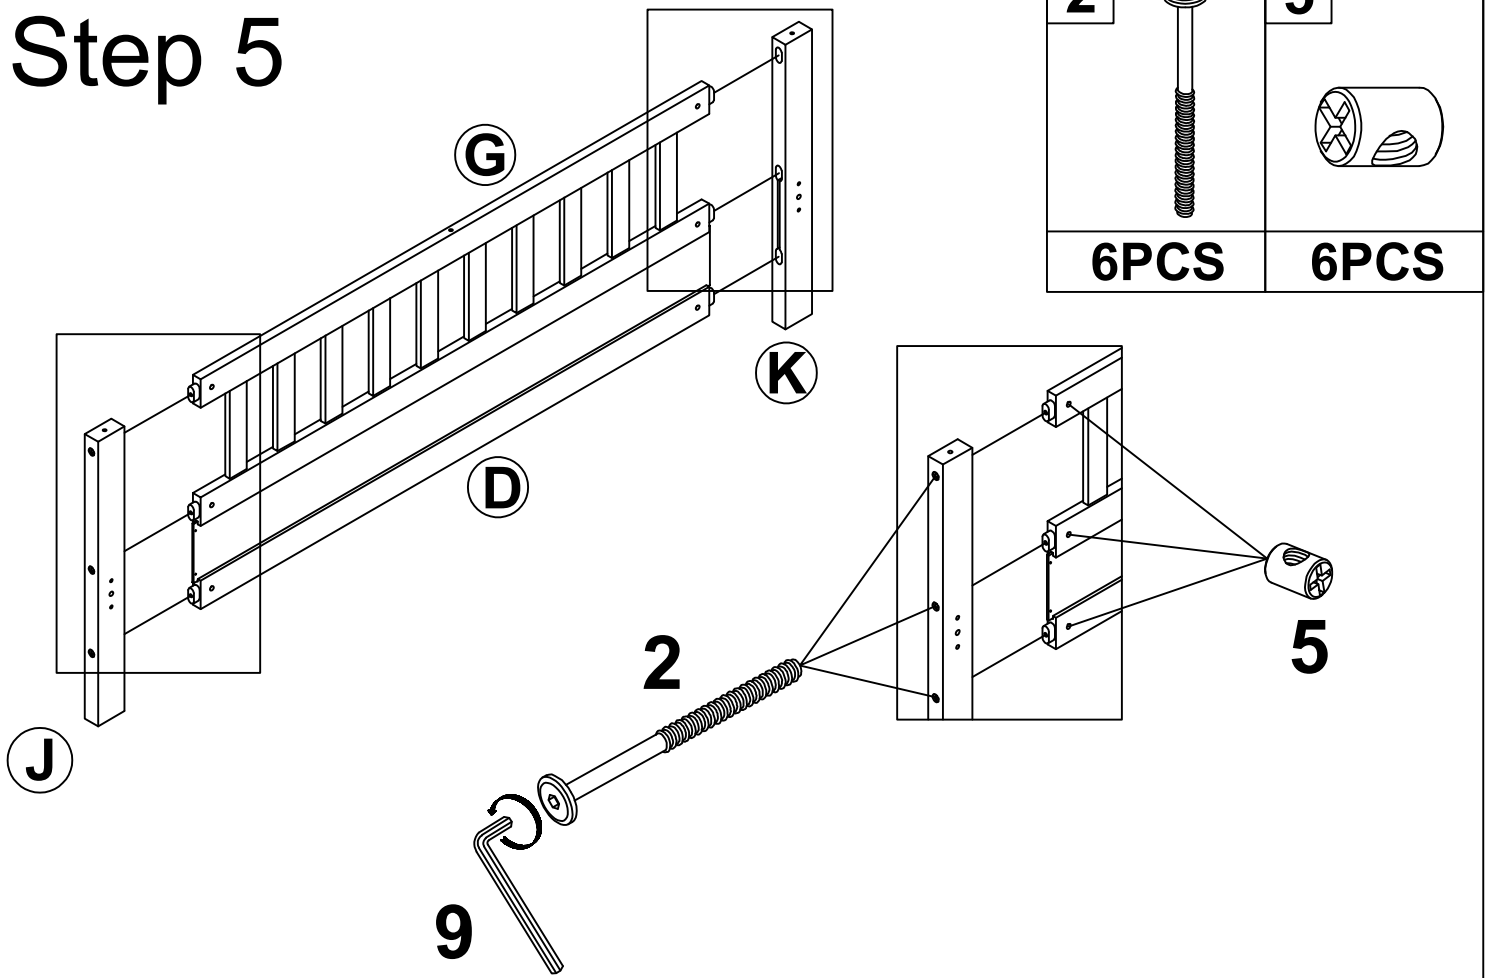





Step 6

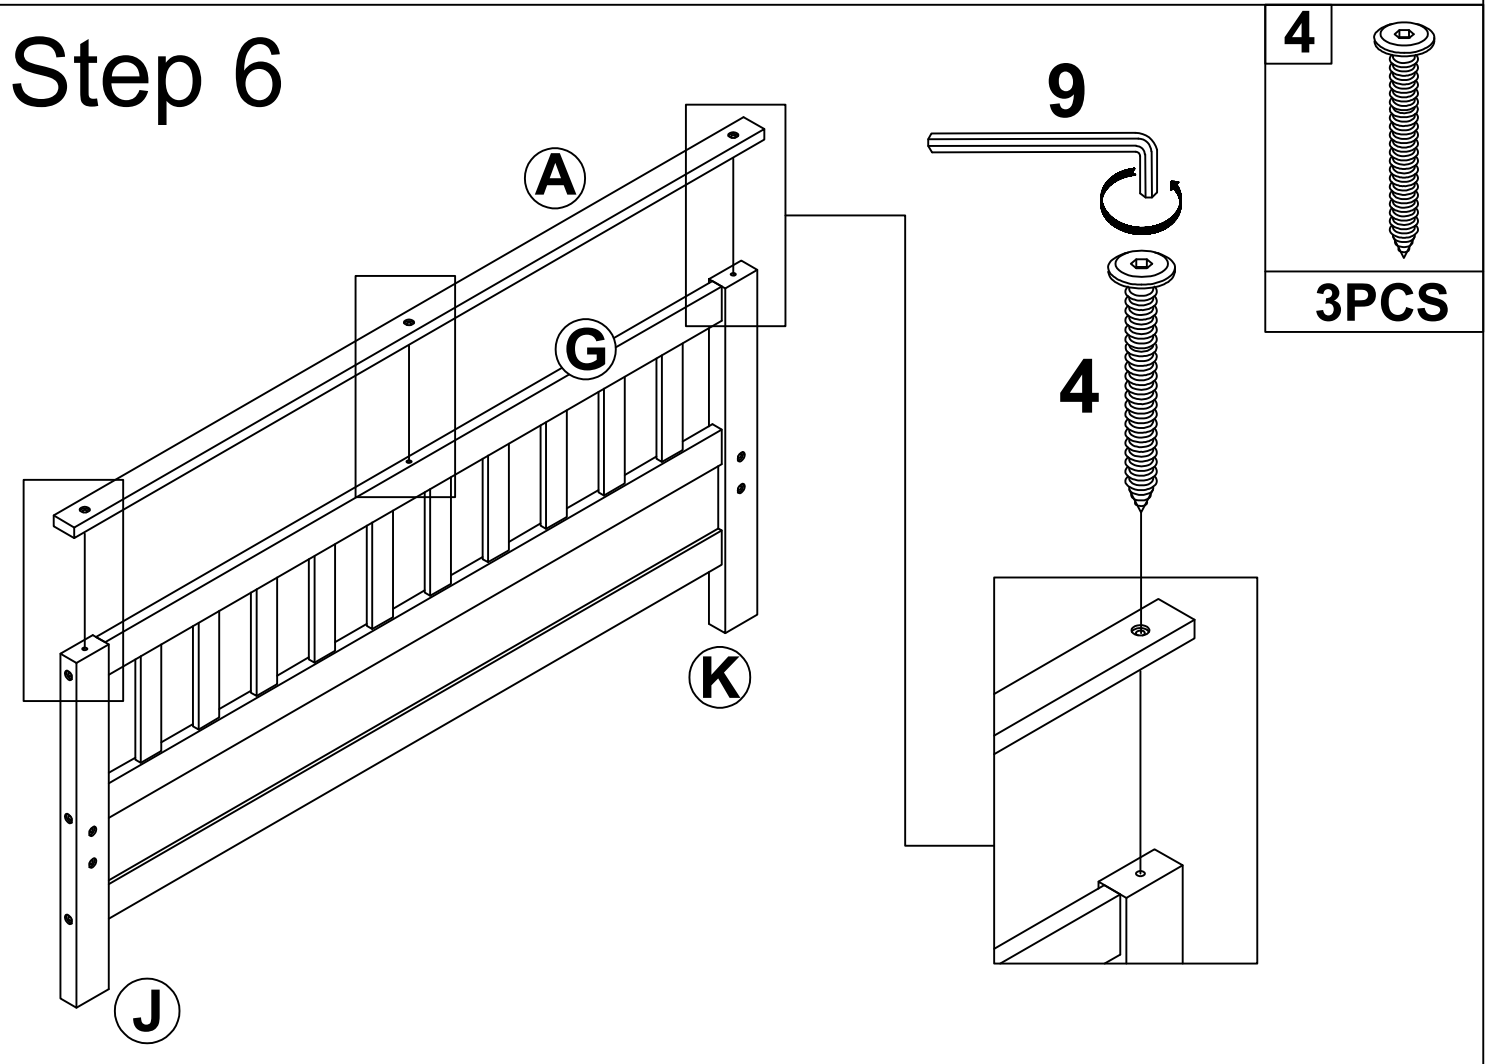





Step 7

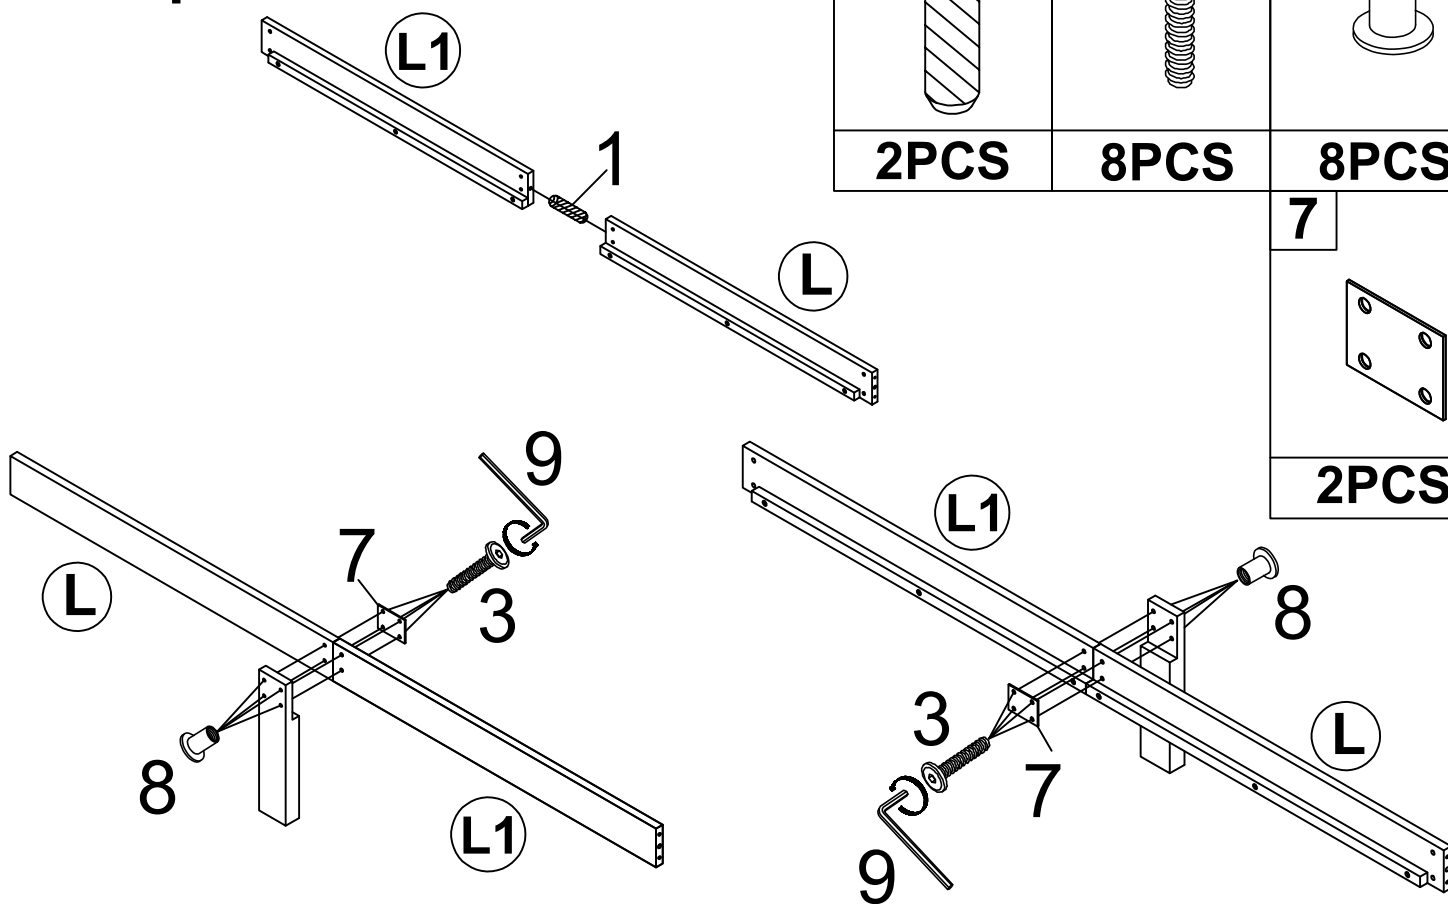


1		3		8	
2PCS		8PCS		8PCS	
				7	
				2PCS	

Step 8

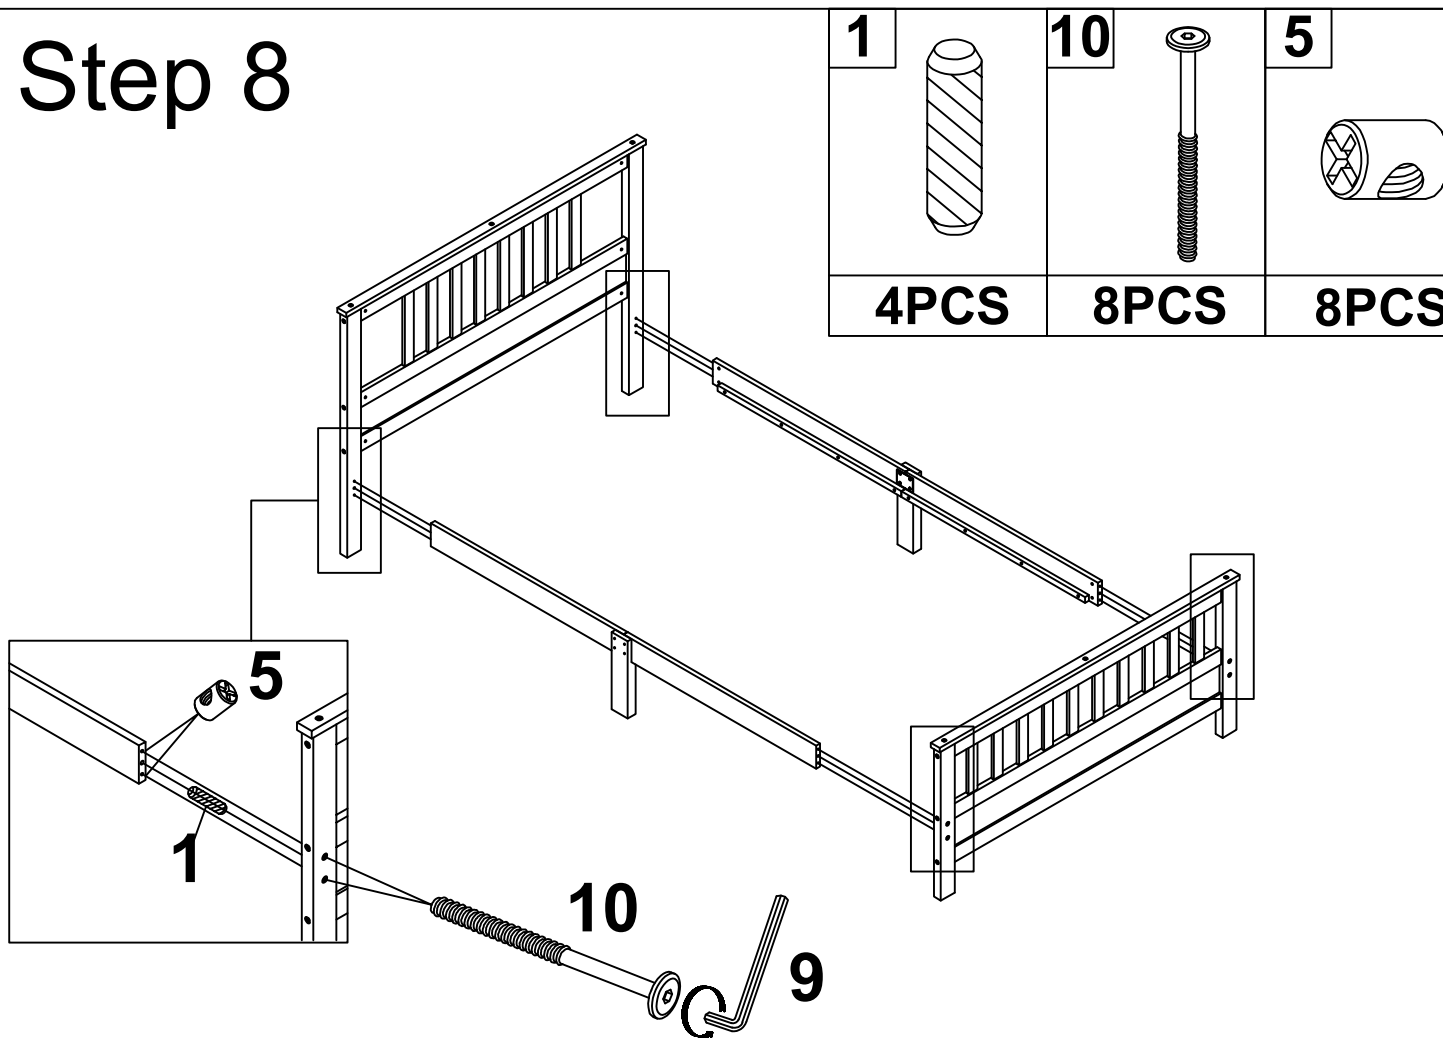


1		10		5	
4PCS		8PCS		8PCS	

Step 9

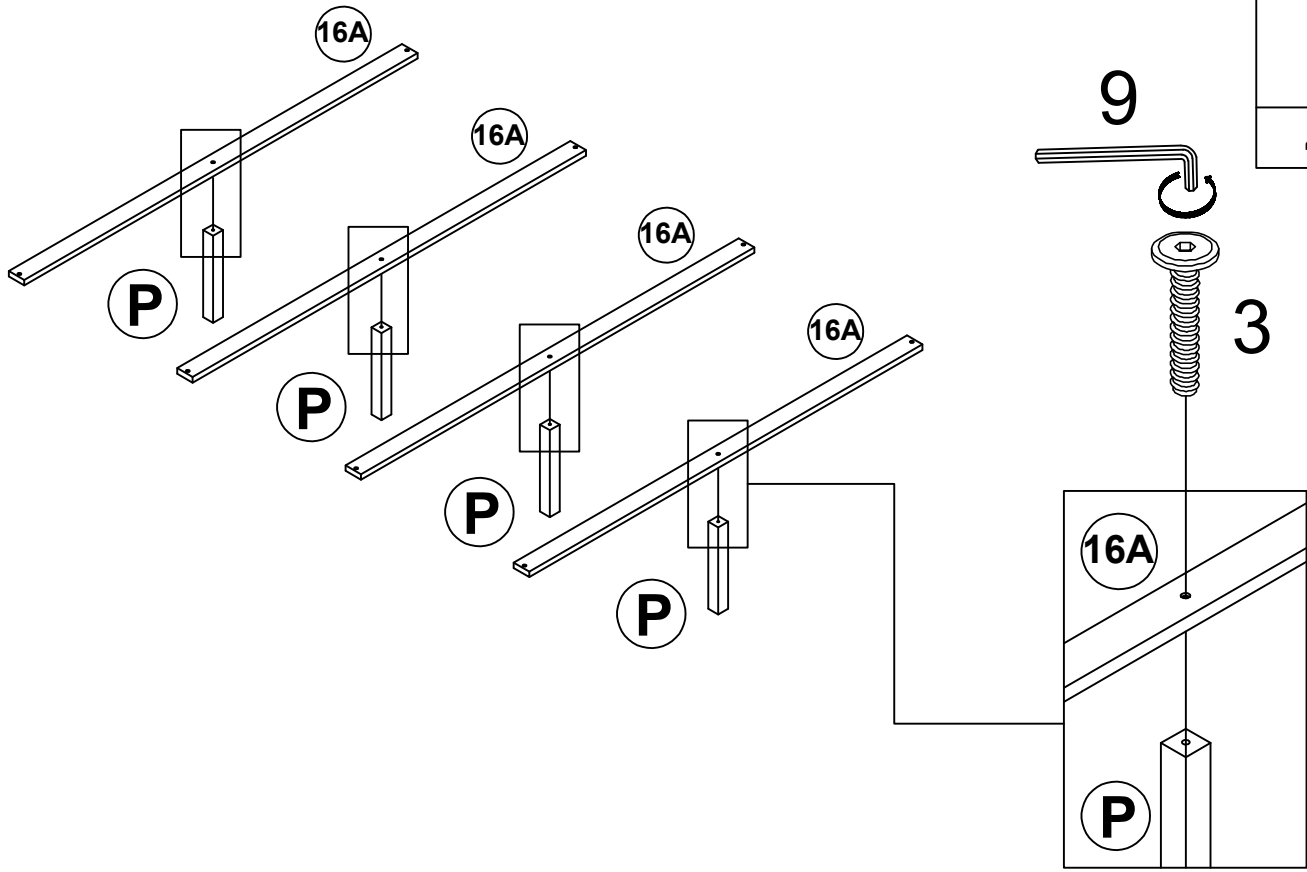


3




4PCS

9


3

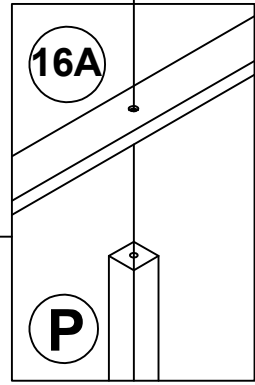

Step 10

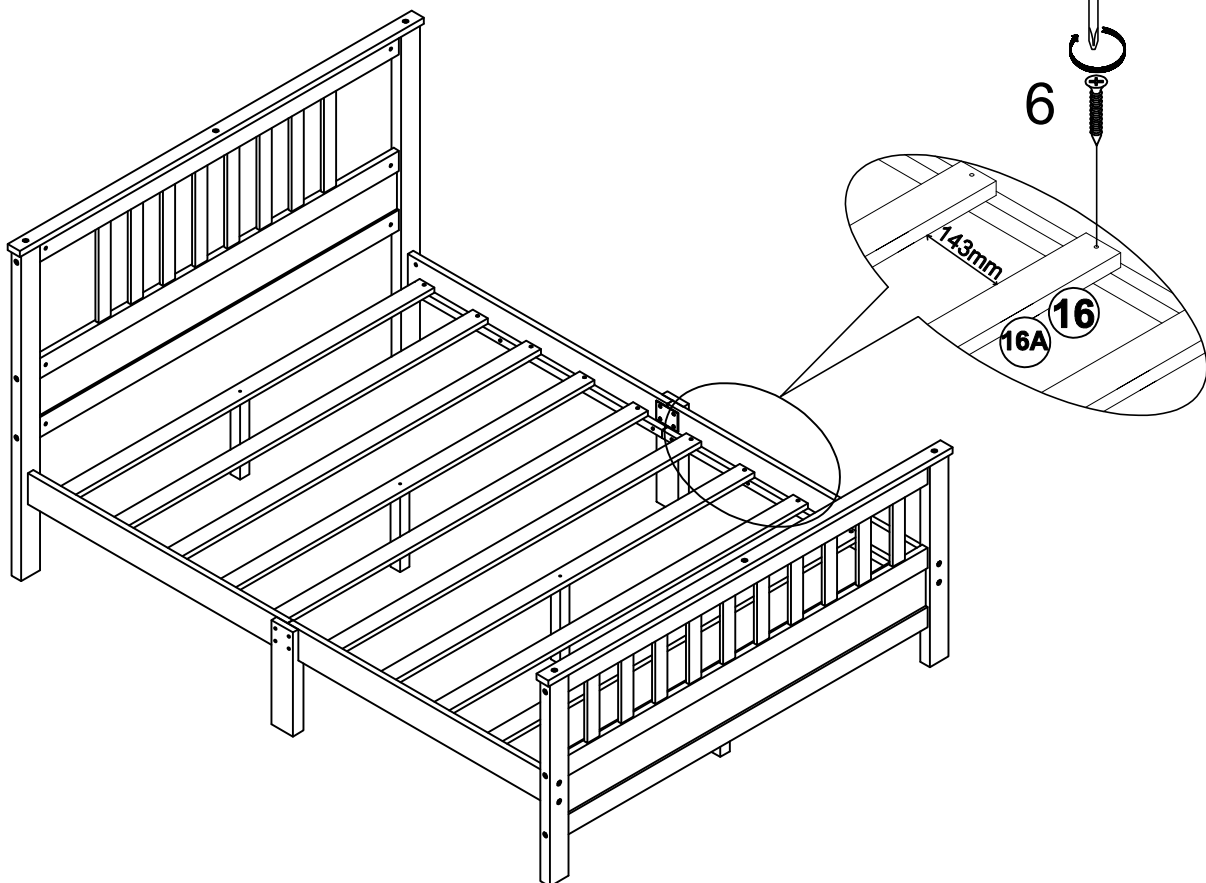

6



20PCS

6

143mm

16A 16

COMPLETED

