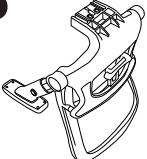

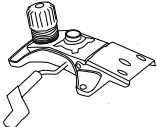
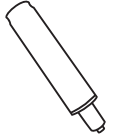

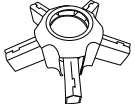






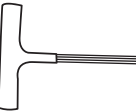


ErgoPro Ergonomic Mesh Office Chair

Parts List

 Chair Back x 1	 Chair Seat x 1	 Seat Mechanism x 1
 Gas Lift x 1	 Chair Legs x 5	 Chair Base x 1
 Headrest x 1	 Wheels x 5	 Screws x 10 M6x0.55"
 Screws x 4 M8x0.78"	 Screws x 3 M8x1.77"	 Screws x 2 M6x0.98"
 Allen Wrench x 1		

Assembly Instructions:

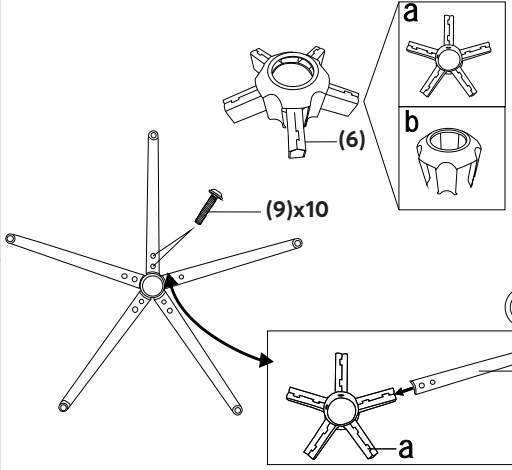
Tools Needed: Allen Wrench - Provided
Please read all instructions before assembly.

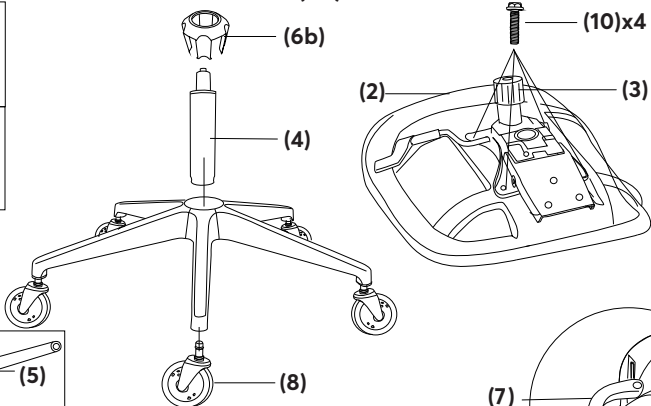
WEIGHT CAPACITY: 275 lbs.

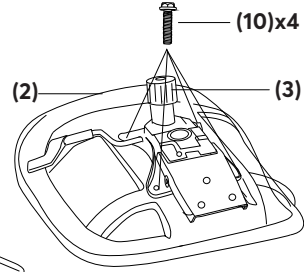
CAUTION:

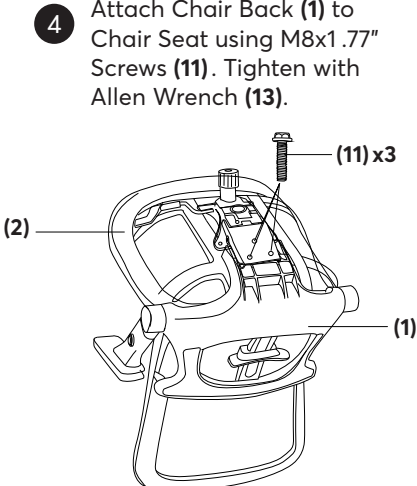
1. Do not use this chair as a step ladder.
2. Check for loose screws and tighten them every 6 months.

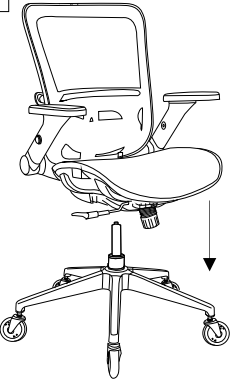
- Attach Chair Legs (5) to Chair Base (6) using M6x0.55" Screws (9). Tighten with Allen Wrench (13).

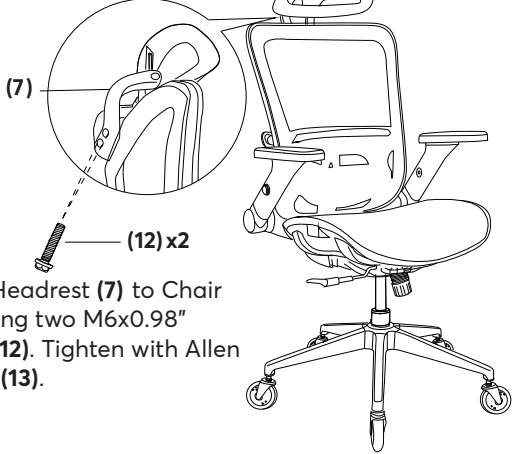

- Insert Wheels (8) into Chair Legs (5). Insert Gas Lift (4) into the hole in the center of the Chair Base (6). Next, install the Base Cover (6b).


- Attach Seat Mechanism (3) using M8x0.78" Screws (10). Tighten with Allen Wrench (13).


- Attach Chair Back (1) to Chair Seat using M8x1.77" Screws (11). Tighten with Allen Wrench (13).


- Carefully place the assembled Chair Frame onto the Gas Lift (4). Press down on the Chair Seat (2) to secure in place.


- Attach Headrest (7) to Chair Back using two M6x0.98" Screws (12). Tighten with Allen Wrench (13).





oline[®]

Help@HeyOline.com | HeyOline.com