

ASSEMBLY INSTRUCTION



Multifunctional Side Cabinet Installation Instructions



install video

▲ Count parts


① Laminate



② Side frame



③ Cabinet door

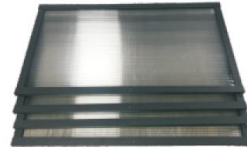

④ Backboard



⑤ Foot pads



⑥ Hexagon wrench



⑦ Screws



⑧ Handles



⑨ Block



⑩ Cross screws



⑪ Gloves



Installation warning

**For safety during installation,
Make sure you put on your gloves!**



▲ Installation steps

① Install the laminate;

Put the side frame down, align the screw hole of the laminate with the mounting hole of the side frame, and screw in half the length of the screw tooth by hand
(Note that the screws should not be tightened. Tighten the backboard after it is installed.)



② Install castor cabinet door handles



- ③ Install the backplane; Align the screw hole on the backplane with the mounting hole on the side frame, and screw in half the length of the screw by hand




- ④ Install all backplanes in turn. Tighten all screws to complete the installation of the lower cabinet



- ⑤ Install the upper cabinet in the same way (the backplane with holes is installed at the bottom).



- ⑥ Connect the upper and lower layers: align the mounting holes on the upper cabinet side with the threaded holes on the lower cabinet and tighten the screws

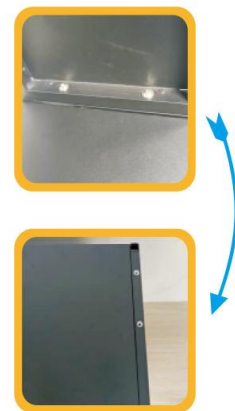

- ⑦ Installation of cabinet door: the cabinet door on both sides of the gap card into the side frame pin, you can complete the installation