Assembly Instructions


WARNING!!


Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip_restraint_help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over

- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product

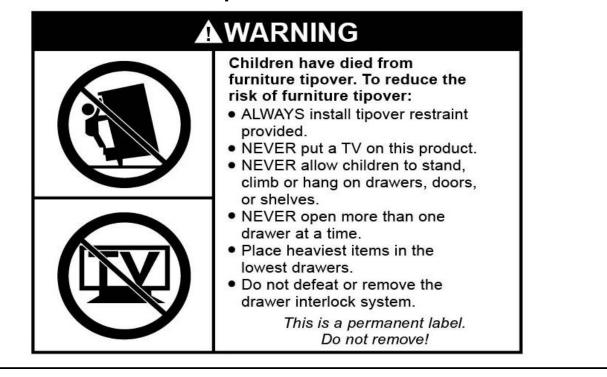


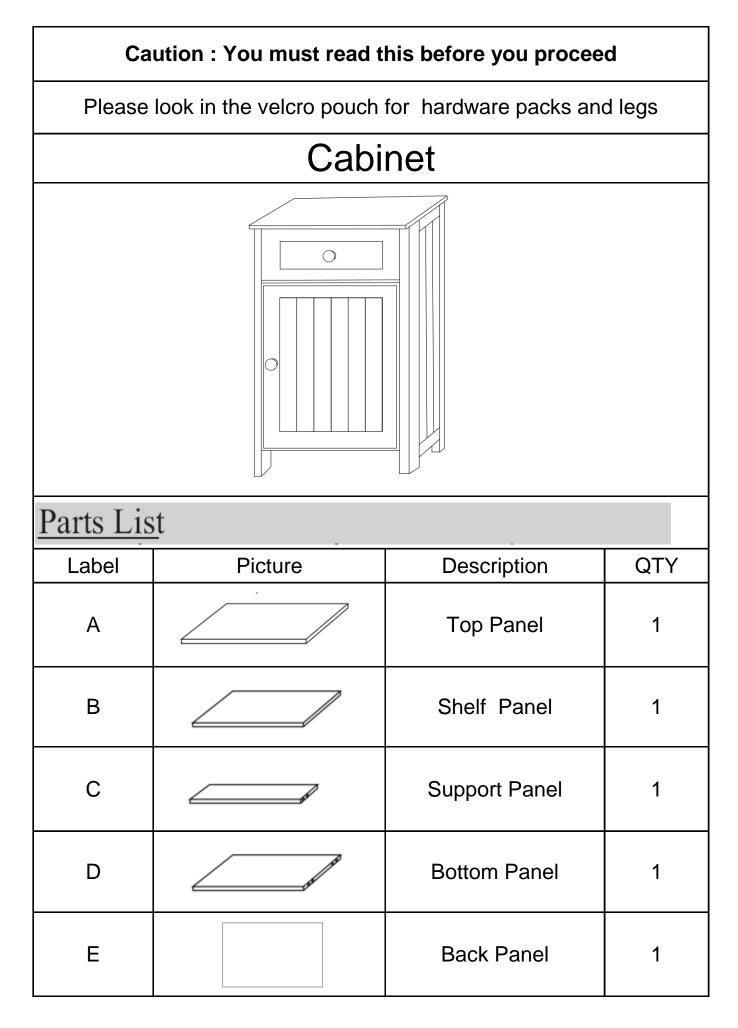


F		Left Side Panel	1		
G		Door Panel	1		
н		Right Side Panel	1		
I		Drawer Left Side Panel	1		
J		Drawer Right Side Panel	1		
к		Drawer Front Panel	1		
L		Drawer Back Panel	1		
м		Drawer Base Panel	1		
Hardware					
Label	Picture	Description	QTY		
1	62))))))	Dowel (M6x30mm)	11		
2		Cam Bolt	11		


	· · · · · · · · · · · · · · · · · · ·				
3		Cam Nut	11		
(4)	Ø	Door Knob	2		
5	E JIIII	Screw (M4x16mm)	3		
6		Shelf Support	4		
7		Magnet	1		
8	() Danne	Screw (M3x14mm)	3		
9	\bigcirc \bigcirc	Magnet Strip	1		
(10)		Screw (M2.5x10mm)	13		
1	6 mm	Screw (M3x25mm)	9		
(12)		Door Pin	2		
(13)		Stopper	1		
(14)		Screwdriver (Not provided)	1		
(15)		Pad	5		
(16)		Screw (M3x12mm)	4		
Restraint Device Hardware					
1)	(Duur-	Screw (M3x14mm)	3		


(18)		Screw (M4x40mm)	3		
(19		Hammer (Not Provided)	1		
20		Power Drill (Not Provided)	1		
2		Restraint Strap	2		
22		Wall Anchor	3		
23	0	Metal Gasket	5		
Assembly Preparation					
Before Beginning Assembly:					
(5)))))) * 11 (5))	*11 🛞 *11 🔘 *2 🝻 *3	3 *4 *1	фии»- фии»- фиинанти»- финантия-		
\$Daars- * 3 E	*1	*9 8 *2 *5	∯########## ;		
 Read instructions, cover to cover- Have 2 adults on hand for assembly- Do not assemble on flooring or carpet- Assemble on a clean non-marring surface (packing foam)- Save all packaging until finished- Noble House Home Furnishings LLC					

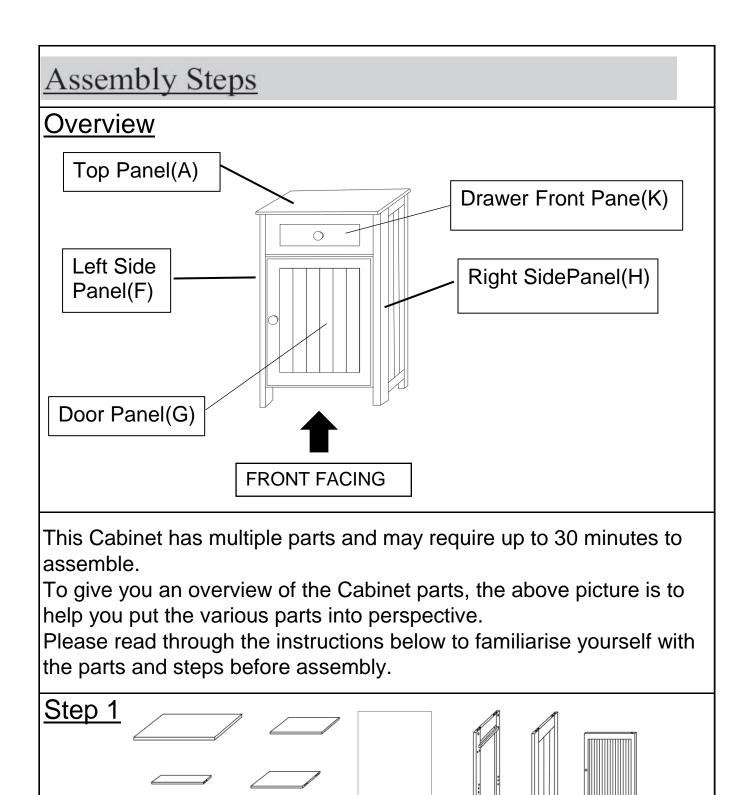


Unpack and place all parts on a clean, non-marring surface.

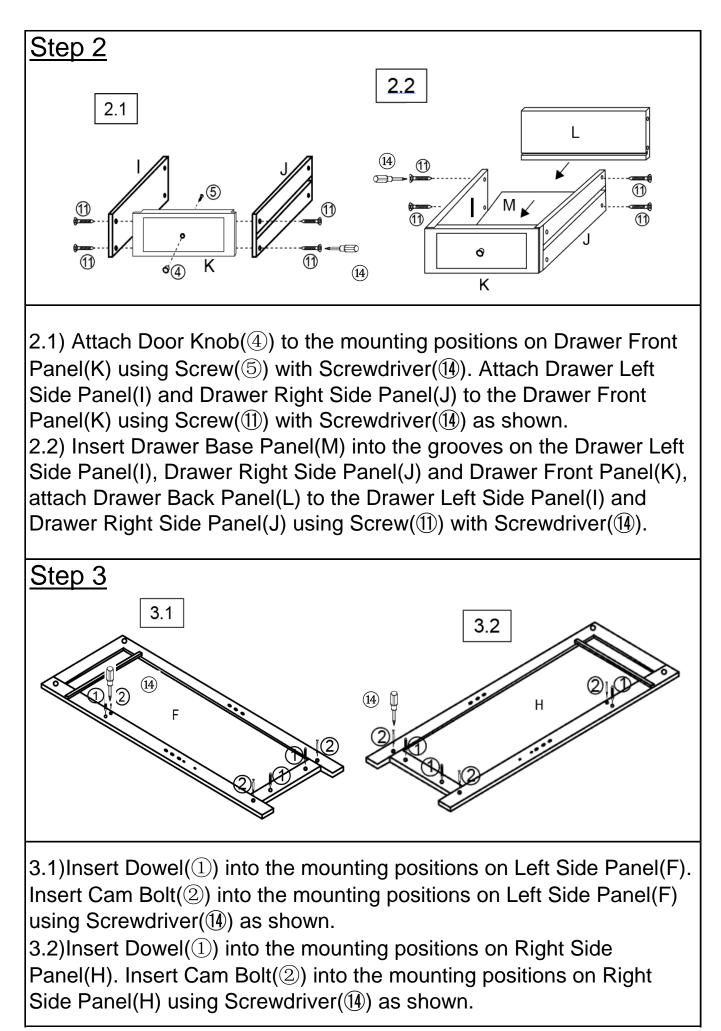

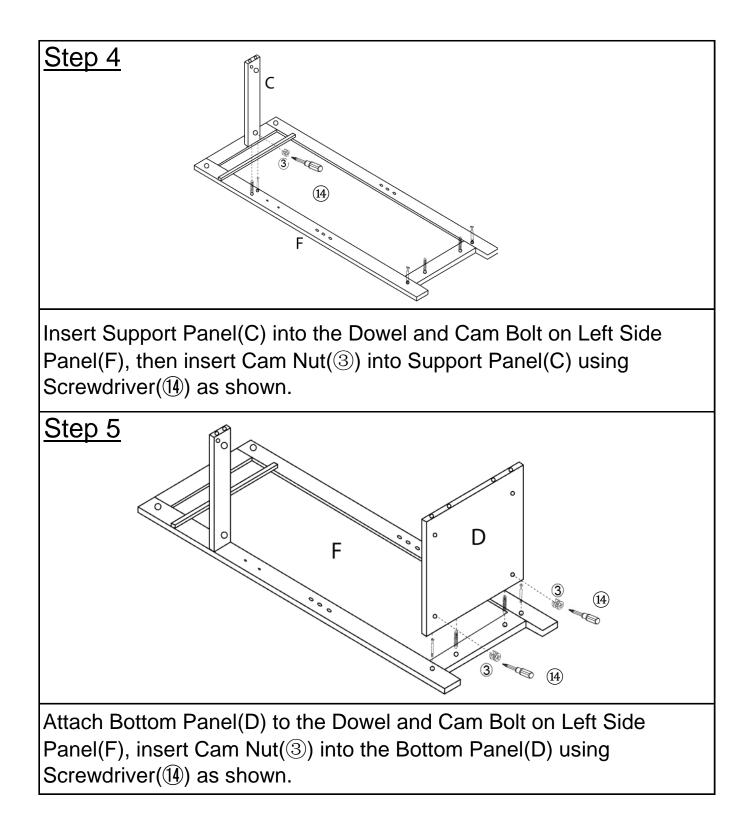


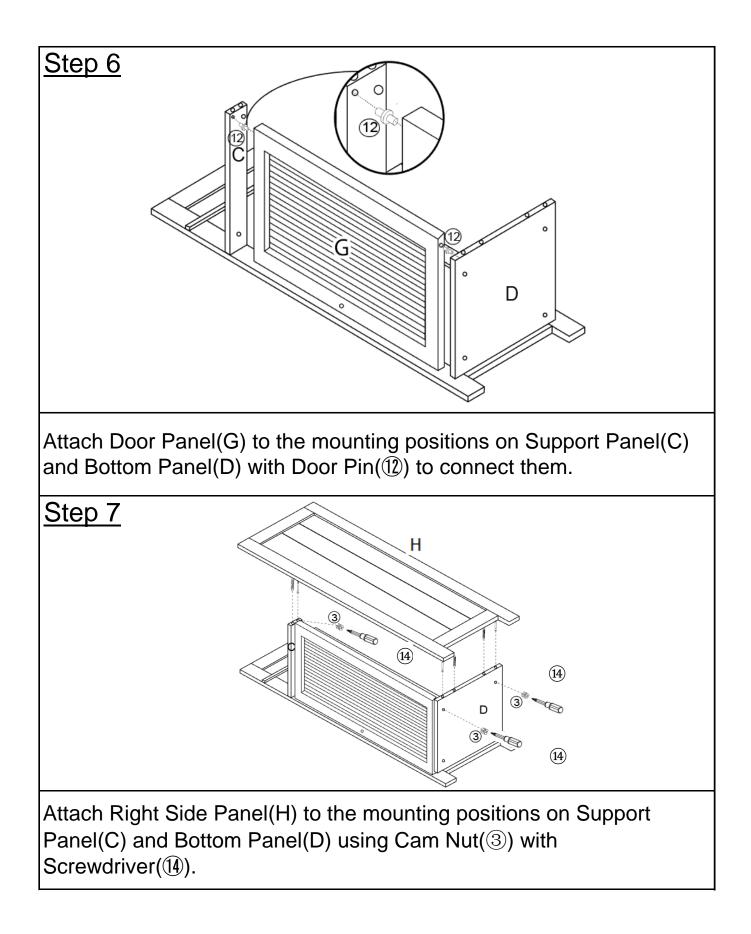

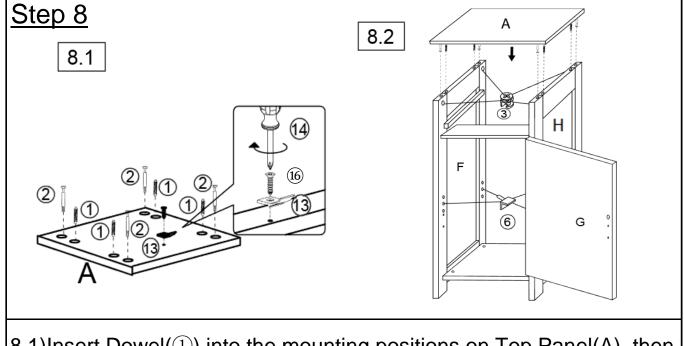


8.1)Insert Dowel(1) into the mounting positions on Top Panel(A), then attach Cam Bolt(2) to the mounting positions on Top Panel(A) using Screwdriver(1) as shown. Attach Stoper(1) to the Top Panel(A) using Screw(1) with Screwdriver(1).

8.2)Attach Top Panel(A) to the mounting positions on Left Side Panel(F) and Right Side Panel(H) using Cam Nut(③) with Screwdriver(④). Attach Shelf Support(⑥) to the mounting positions on Left Side Panel(F) and Right Side Panel(H).

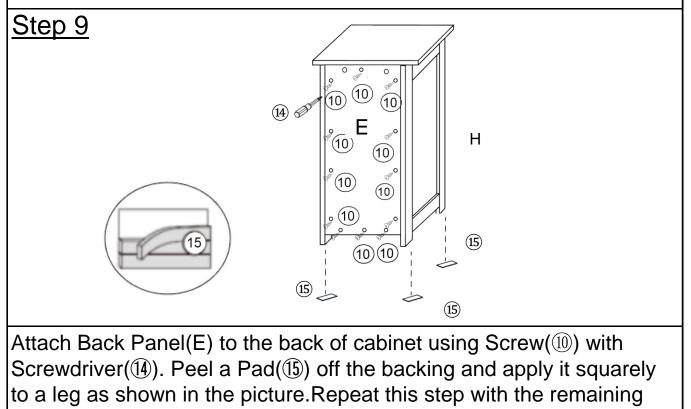

three feet.

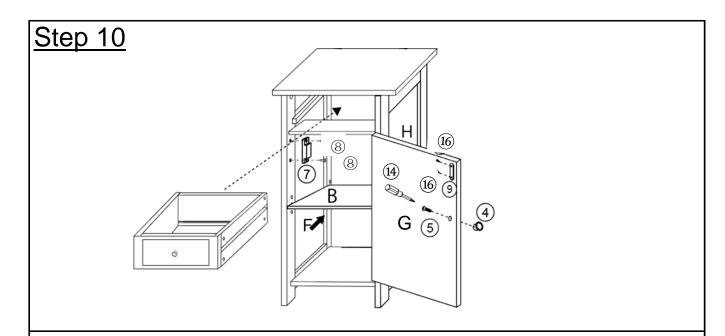

Attach Door Knob((4)) to the Door Panel(G) using Screw((5)) with Screwdriver((4)).

Attach Magnet Strip(9) the Door Panel(G) using Screw(16) with Screwdriver(14), then attach Magnet(7) the Left Side Panel(F) using Screw(8) with Screwdriver(14).


Place Shelf Panel(B) onto the Shelf Support(⁽⁶⁾) on Left Side Panel(F) and Right Side Panel(H).


Carefully insert the drawer into the Cabinet along the Runners and Runner Tracks.



Serious or fatal crushing injuries can occur from tipping furniture. To help prevent tip-over: ALWAYS secure this furniture to the wall using Cabinet Restraint Device.

See product instructions for more ways to help prevent furniture tip-over.

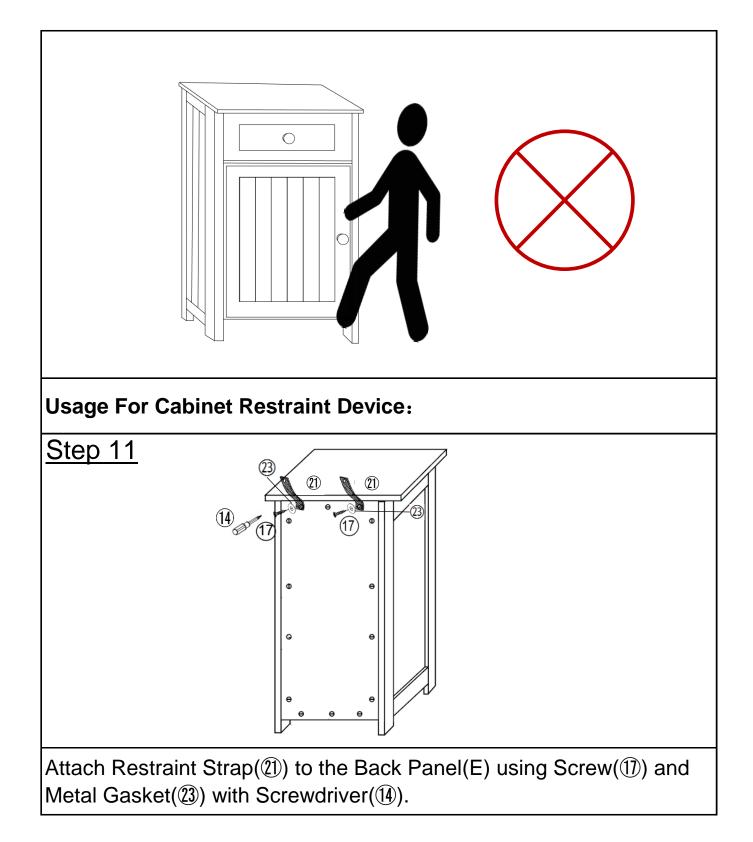

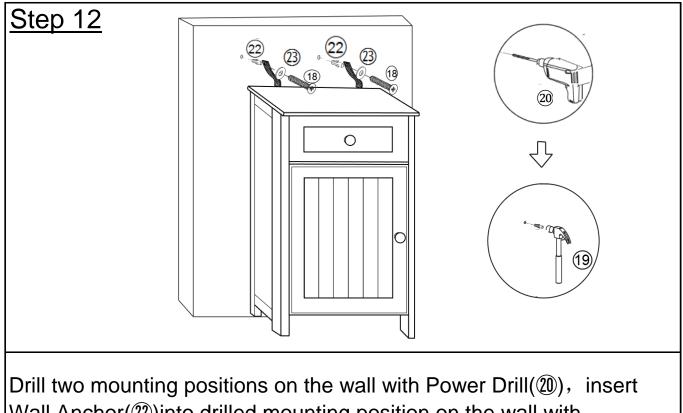

Wall Anchor((22)) into drilled mounting position on the wall with Hammer((19)). Move the cabinet back to the wall, lock by Screw((18)) and Metal Gasket((23)) with Screwdriver((14)).

