#### **WARNING!!**

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at tip restraint help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over


- 1. NEVER put a TV or other heavy objects on top of this product".
- 2. Do not stand on the product.



# Assembly Instructions

Caution: You must read this before you proceed

# **CABINET**

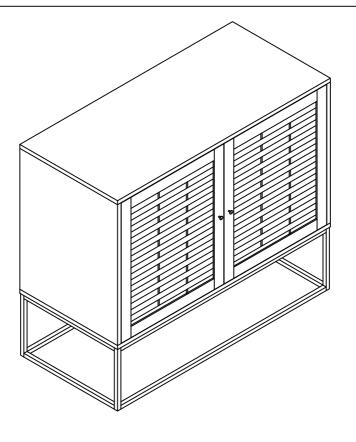

Part list					
Label	Picture	Description	QTY		
Α		WOODEN CABINET	1		


Noble House Home Furnishings LLC

Page 2 OF 13

Label	Picture	Description	QTY
В		Leg frame	2
С		Leg Top Part	2
D		Leg Bottom Part	2

<u>Hardware</u>				
Label	Picture	Description	QTY	
1		Flat Head Allen Bolt (M6x16mm)	18	
2		Washer (ID 8x17mm)	18	
3		Allen Key (4mm)	1	
4		Pan Head Allen Bolt (M6x10mm)	18	
(5)		Tipover Restraint Device	2	
6		Wall Plugs Screw (M6 x 32 MM)	4	
7		Wall Plugs (6 x 38 MM)	4	
8	•	Bracket	2	
9		Screwdriver (Not Provided)	1	
10		Hammer (Not Provided)	1	
11)		Power drill (Not Provided)	1	
Noble House Home Furnishings LLC Page 4 OF				

## Assembly preparation

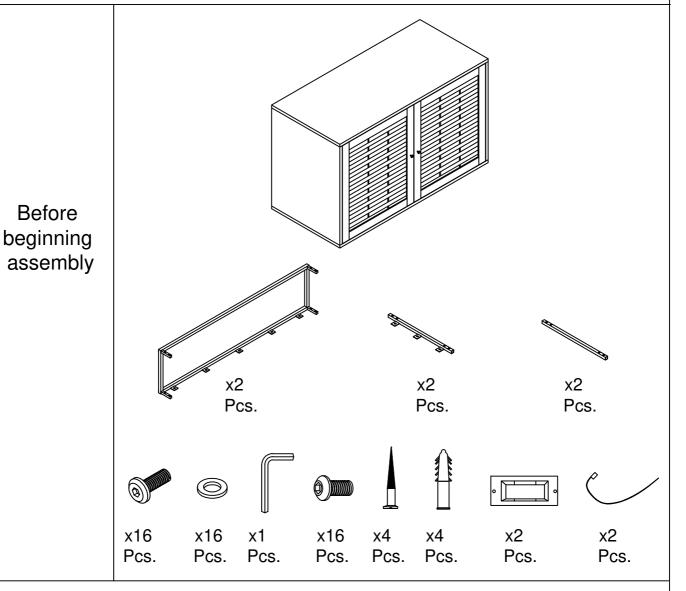



**Before** 

Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean, non-marring surface (packing foam)-



Save all packaging until finished-


#### Assembly steps

#### **Overview**

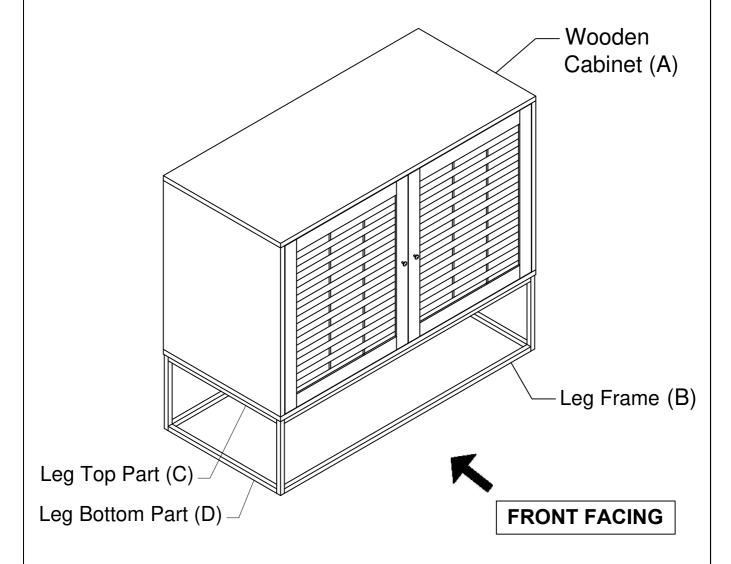


This Cabinet has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Cabinet parts, the picture above will help you, to put the various parts into perspective. Please read through the instructions below, to familiarize the parts and steps before assembly.


## Step 1

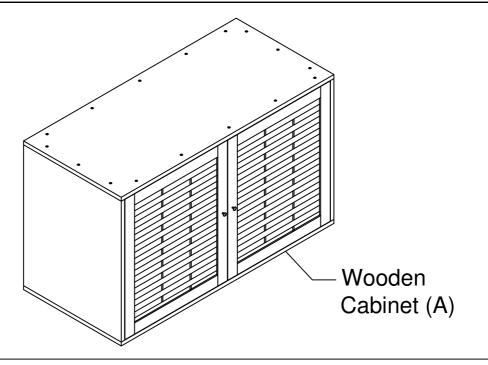


Unpack the Wooden Cabinet (A) and place it on a clean and non-marring surface in an upside down position.

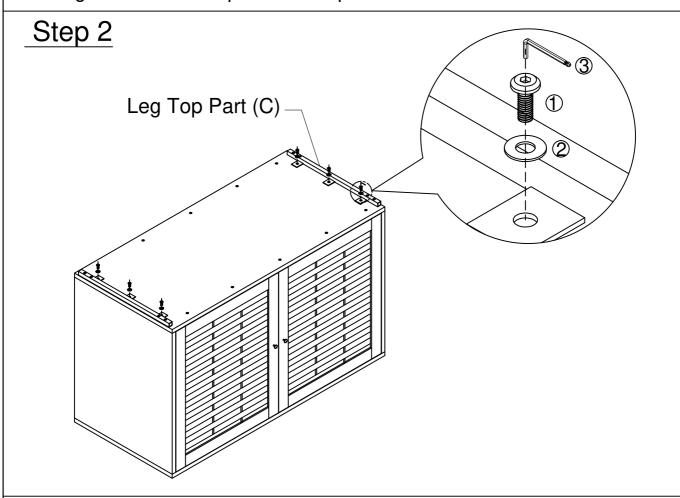


Take the Leg Top Part (C) and tighten it with Flat Head Allen Bolt (1) & Washer (2) with the help of Allen key (3) as shown in the picture above.

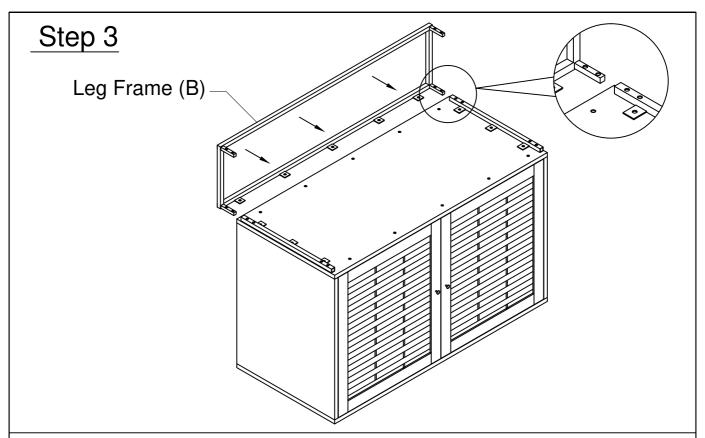


Insert the Leg Frame (B) with matching holes of Leg Top Part (C).

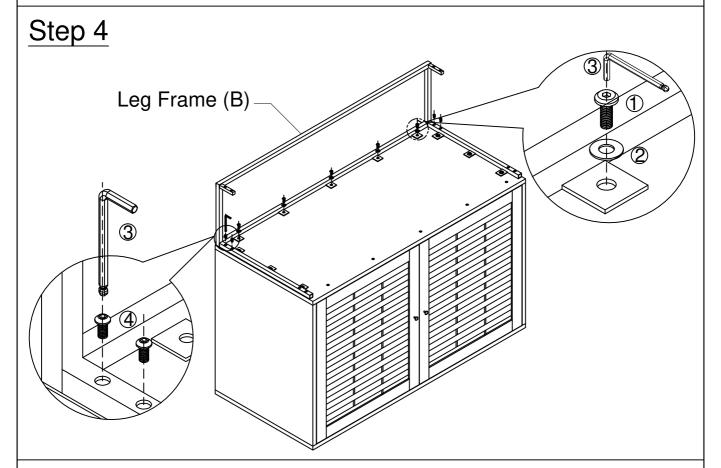


Tighten the Pan Head Allen Bolt (4) & Flat Head Allen Bolt (1) with Washer (2) with the help of Allen key (3).

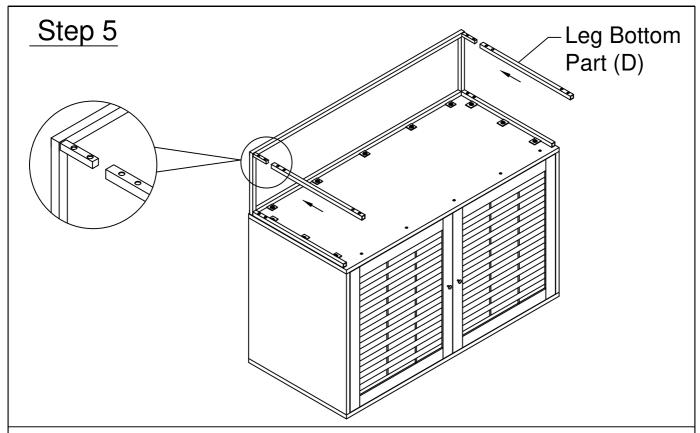


Insert the Leg Bottom Part (D) into Leg Frame (B).

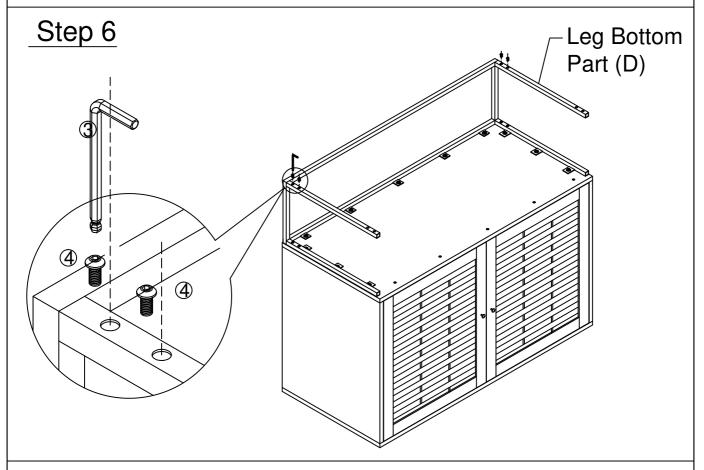

Tighten the Pan Head Allen Bolt (4) with matching holes with the help of Allen key (3).

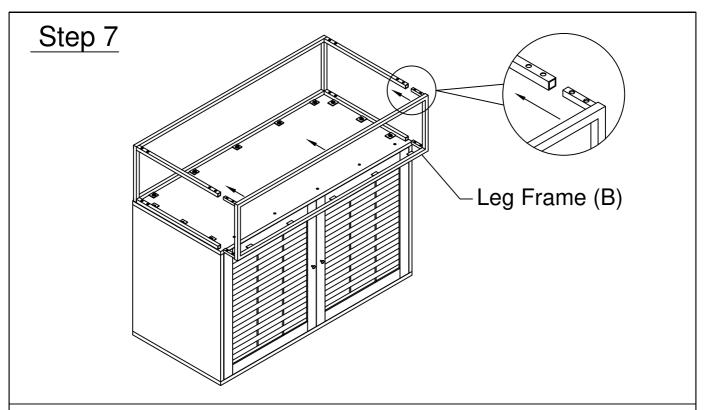

Insert the Leg Frame (B) with matching holes

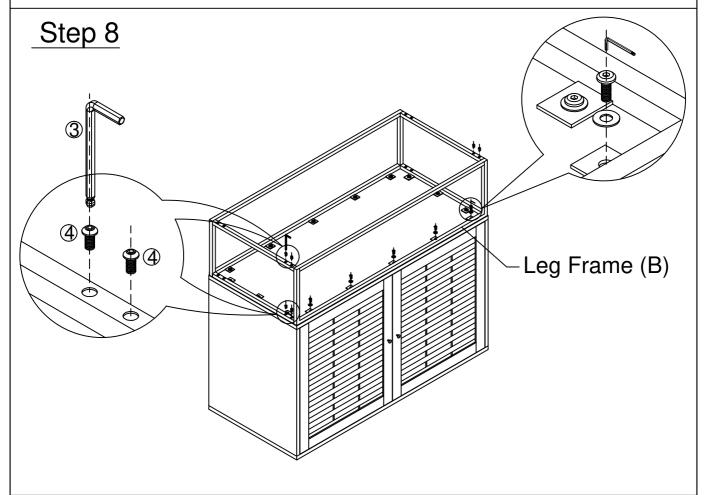


Tighten the Pan Head Allen Bolt (4) & Flat Head Allen Bolt (1) with Washer (2) in matching holes with the help of Allen key (3).

# Tipover Restraint Device Installation Instructions



Serious or fatal crushing injuries can occur from tipping furniture.


To help prevent tip-over: ALWAYS secure this furniture to the wall using Tipover Restraint Device. See product instructions for more ways to help prevent furniture tip-over.

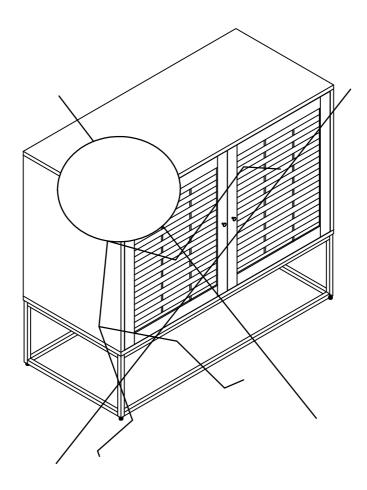

#### **Usage For Tipover Restraint Device:**

To secure Cabinet against wall, attach two Brackets (8) on wall and product, use Tipover Restraint Strap (5) to connect the Brackets (8).

### Step 9

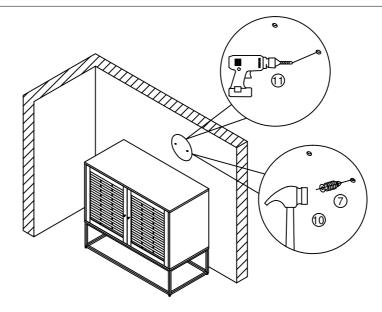

9.1) Drill two holes on wall at same height as Brackets ((8)) on Cabinet with Power Drill ((11)).


You can mark these points in two ways as below:

1) Move the Cabinet back to the wall. Mark two points same height as Cabinet on the wall.

Note: The Brackets need to be secured to solid, load bearing surface. Please use a Stud Finder(not supplied) if needed to locate the Wall Frame.


- 2) Measure the height of the Brackets (8) with ruler/measuring tape and mark on wall to keep them accurate and same height.
- 9.2) Insert Wall Plugs (7) into drilled holes on wall with Hammer (10).

## Step 10

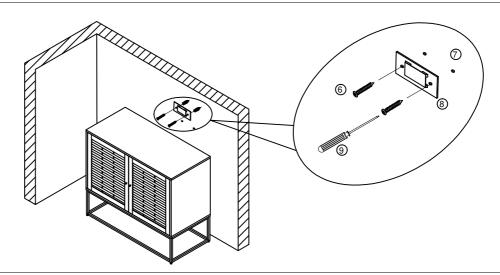

Attach Brackets (8) to Wall Plugs (7) using Wall Plug Screws (6) with Screw driver (9).

#### Step 11

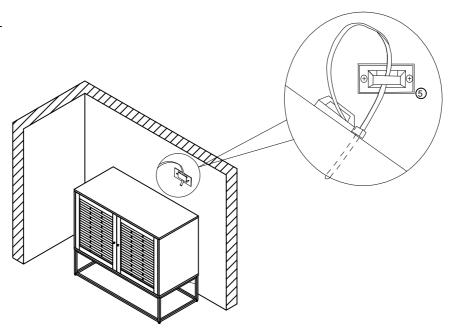

Move Cabinet to the wall.

Pull the Tipover Restraint Strap (5) through the Brackets (8) on the wall and Cabinet one by one, and pull the Tipover Restraint Straps (5) tight.

This Cabinet is now ready to use.

Caution: This Cabinet can only be used on flat, level surface.

#### **Care & Maintenance**



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface



• Do not clean furniture with harsh cleansers or polish.



• Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



Do not write on furniture without a passed barner to protect the surface.



Do not place furniture outside. for indoor use only.



Not for commercial use. for residential use only.



Stains may be removed with mild soap solution and damp cloth.



• Children should not climb or jump on the furniture.



Dust and pick - up shills using a clean, non-colored, lint-free cloth.