



## ASSEMBLY INSTRUCTION


HARDWARE - WF297646						
NO	DESCRIPTION	SKETCH	QTY			
A	Long Bolt (Ø 5/16 "X45mm)		7 pcs			
в	Spring Washer (Ø 5/16 "-RBW)		7 pcs			
с	Flat Washer (Ø 5/16 "-RBW)		7 pcs			
D	Allen Wrench (M4x75mm x32mm)		1 pc			
PARTS LIST WF297646						
NO	DESCRIPTION	SKETCH	QTY			
1	Chaise Seat		1 pc			
2	Chaise Arm		1 pc			
3	Chaise Back	AND .	1 pc			
4	Round Leg		4 pcs			
5	Support Leg		1 pc			

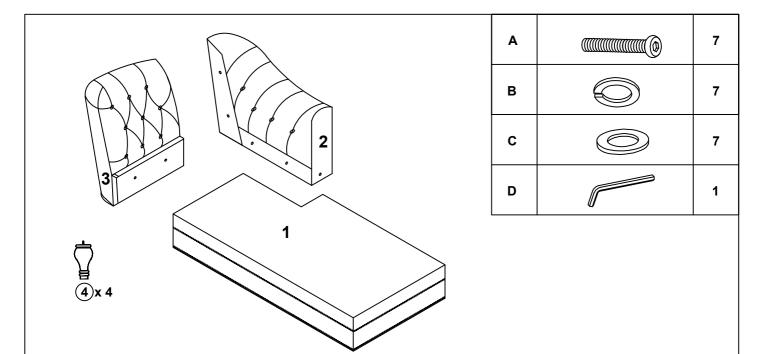

## **DIAGRAM 1:**

Use A\*3/B\*3/C\*3 and D to connect the chaise seat (part 1) and the chaise arm (part 2). Don't screw any bolt all in until the others are all put into the holes. To ensure the good looking of the chaise, remember to keep the bottom of the frame align. Tighten all the bolts.

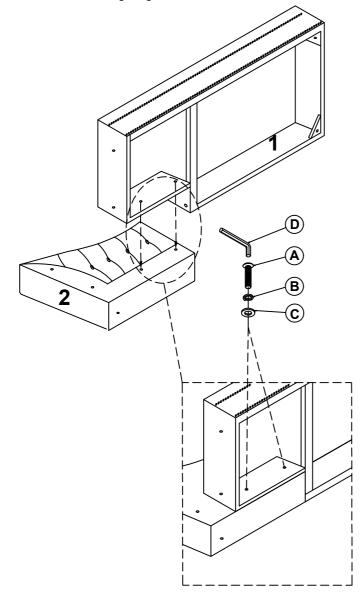


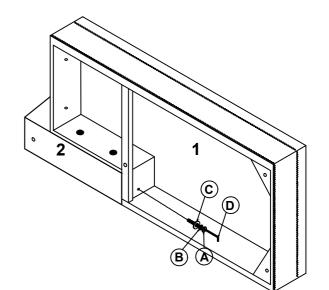

			-
A	Bolt (Ø 5/16 "X45mm)		3pcs
в	Spring Washer (Ø 5/16 "-RBW)	$\bigcirc$	3pcs
с	Flat Washer (Ø 5/16 "-RBW)	$\bigcirc$	3pcs
D	Allen Wrench (M4x75mm x32mm)		1рс

## **DIAGRAM 2:**

Use A\*2/B\*2/C\*2 and D to connect the chaise arm (part 2) and chaise back (part 3). Don't screw any bolt all in until the others are all put into the holes. To ensure the good looking of the chaise, remember to keep the bottom of the frame align. Tighten all the bolts.

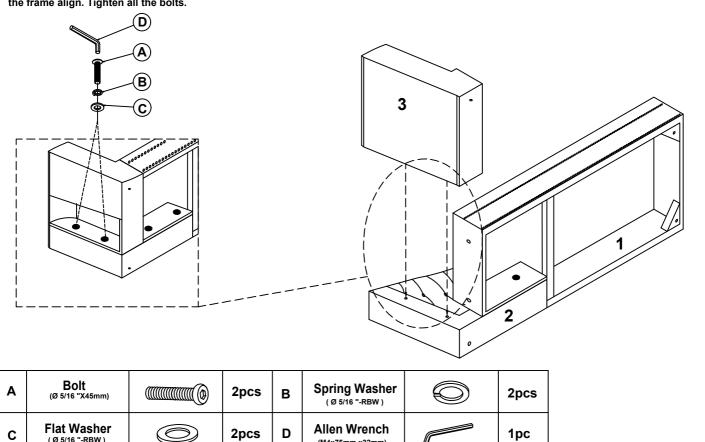

(M4x75mm x32mm)

## **DIAGRAM 3:**

(Ø 5/16 "-RBW)

Use A\*2/B\*2/C\*2 and D to connect the chaise seat (part 1) and chaise back (part 3). Don't screw any bolt all in until the others are all put into the holes. To ensure the good looking of the chaise, remember to keep the bottom of the frame align. Tighten all the bolts.

A	<b>Bolt</b> (Ø 5/16 "X45mm)		2pcs		
в	Spring Washer (Ø 5/16 "-RBW)	$\bigcirc$	2pcs		
с	Flat Washer (Ø 5/16 "-RBW)	$\bigcirc$	2pcs		
D	Allen Wrench (M4x75mm x32mm)		1рс		

