



ASSEMBLY INSTRUCTIONS

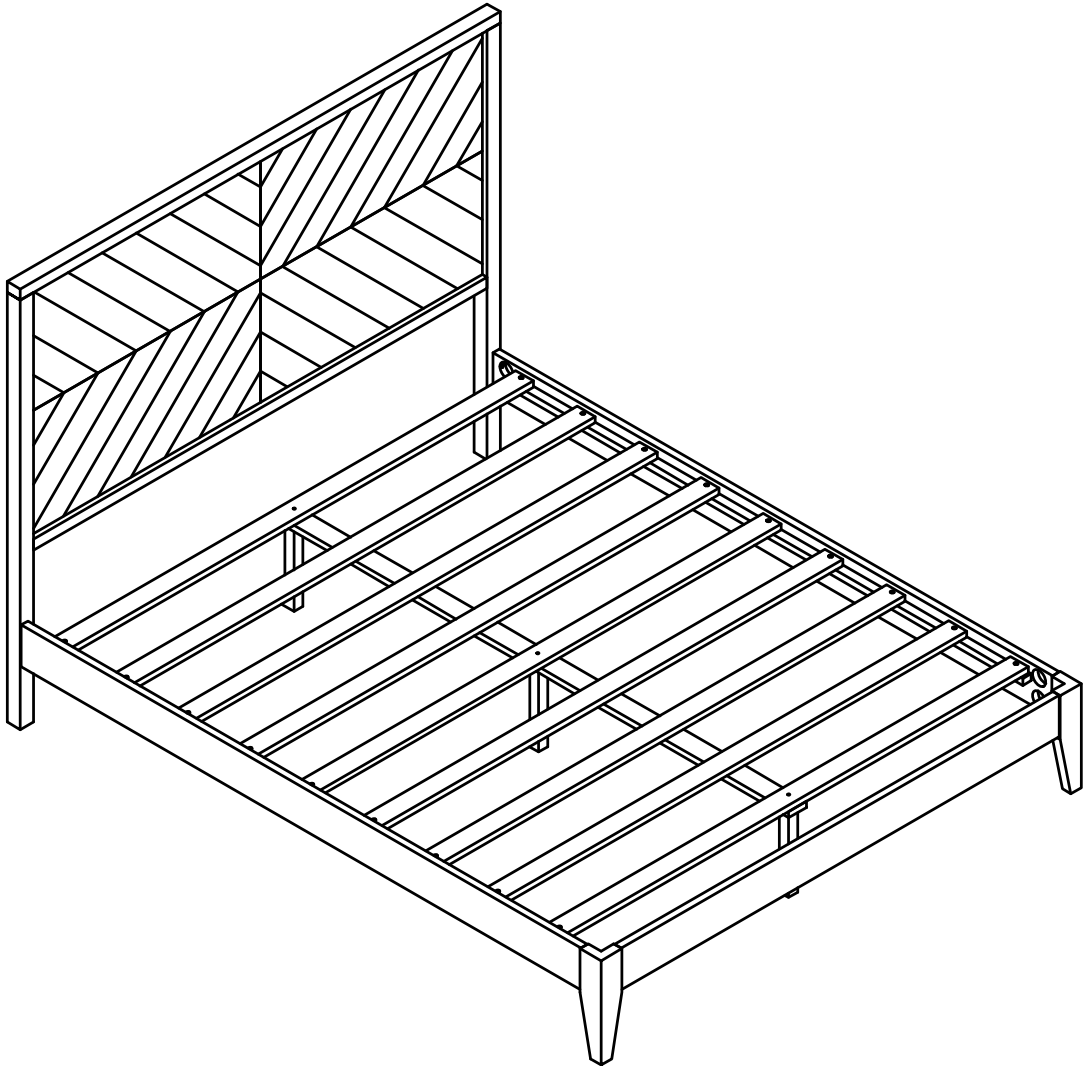

WF531566AAA



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

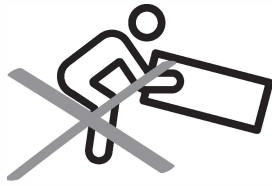

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

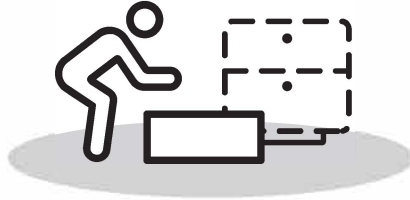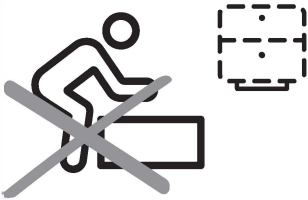



Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.

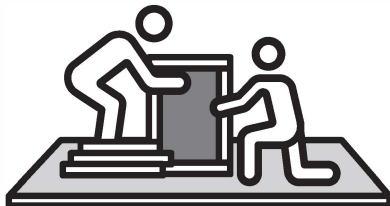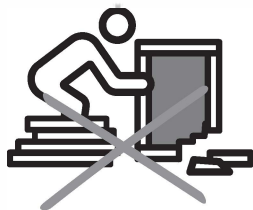

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

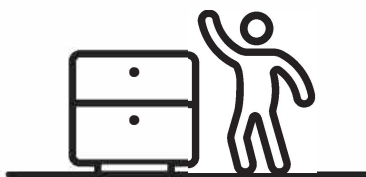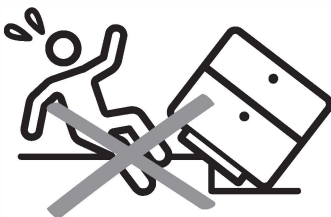


Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


PARTS

#A 1pc

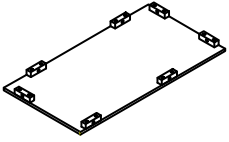


Panel HB

#B 1pc

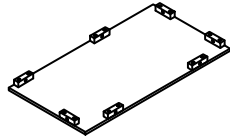


Panel HB

#C 1pc

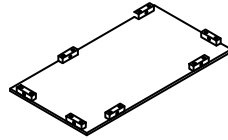


Panel HB

#D 1pc

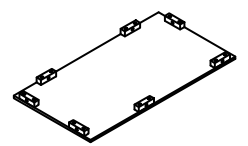


Panel HB

#E 1pc

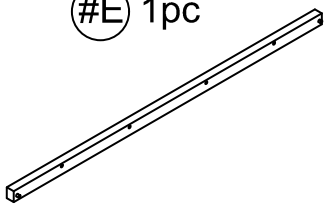


Top bar

#F 1pc

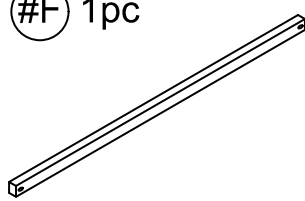


Bottom bar

#G 1pc

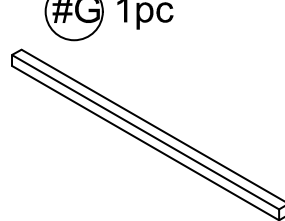

Leg HB right

#H 1pc

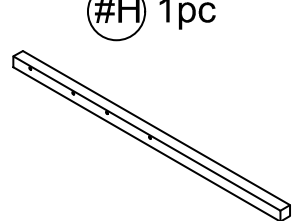


Leg HB left

#I 2pcs




Legs FB

#J 1pc

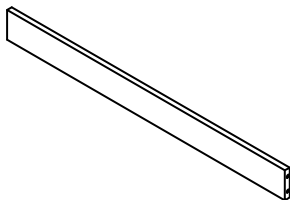


Panel FB

#K 2pcs

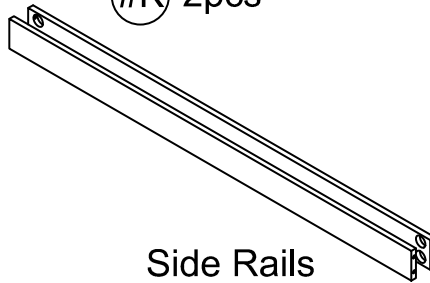


Side Rails

#L 9pcs

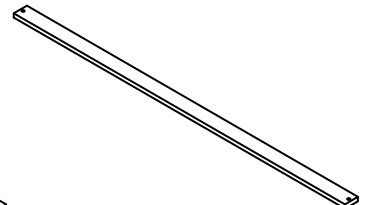


Slat

#M 3pcs



Support leg


#N 1pc

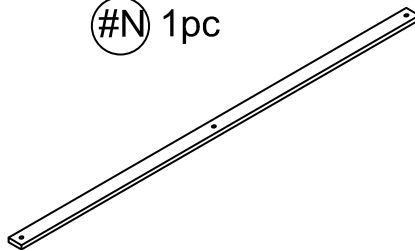

Support slat

HARDWARE

#1



Flat Washer Ø1/4" x 20pcs

#2




Lock Washer Ø1/4" x 32pcs

#3



Bolt Ø1/4" x 35mm x 20pcs

#4




Screw Ø8 x 45mm x 4pcs

#5



Allen Key 4mm x 1pc

#6



Wooden dowel Ø8 x 30mm x 2pcs

#7



Wooden dowel
Ø12 x 40mm x 4pcs

#8




Bolt Ø8 x 70mm x 12pcs

#9




Curved washers Ø8 x 70mm x 12pcs

#10




Nut Ø8x 10mm x 12pcs

#11



Allen Wrench 12mm x 1pc

#12



Screw Ø8 x 25mm x 18pcs

ASSEMBLY INSTRUCTIONS

Attach all Panel Left HB (top) (#A), Panel Left HB (bottom) (#B), Panel Right HB (bottom) (#C), Panel Right HB (top) (#D) together by using Flat washer (#1), Lock washer (#2), Bolt (#3) with Allen key (#5).

Step 1

Part (#A) 1pc

Part (#B) 1pc

Part (#C) 1pc

Part (#D) 1pc


Hardware (#1) 4pcs

Hardware (#2) 4pcs

Hardware (#3) 4pcs

Hardware (#5) 1pc

Hardware (#6) 2pcs

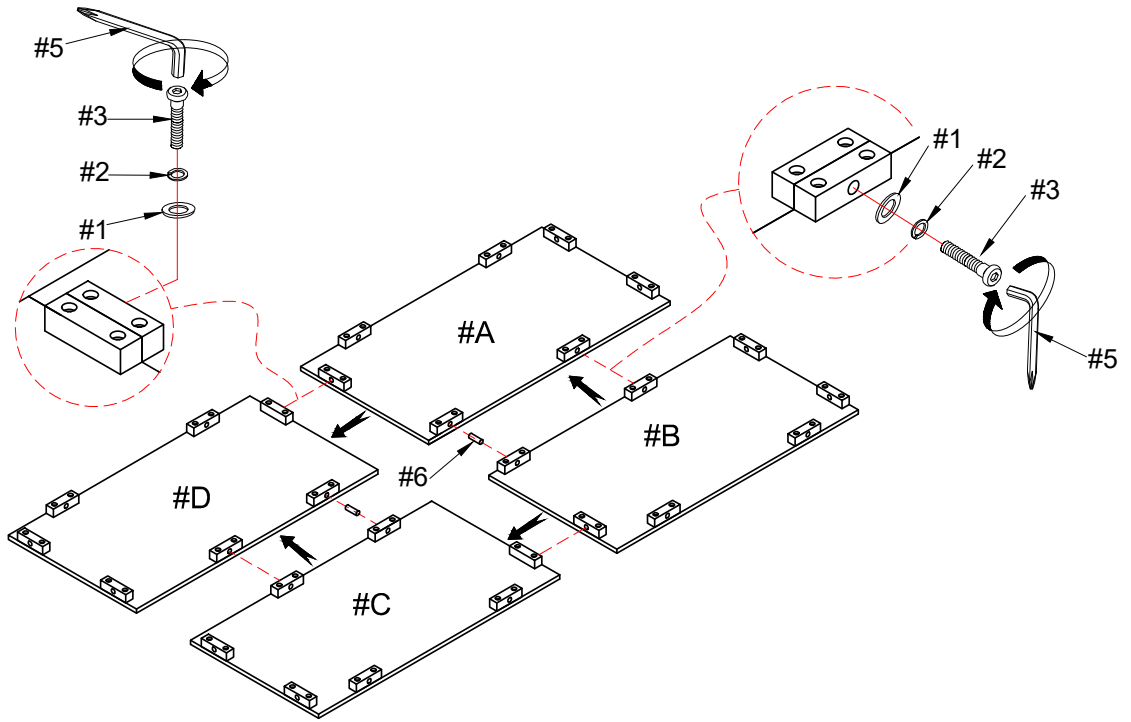

Attach Top bar (#E), Bottom bar (#F), Leg HB right (#G), Leg HB left (#H) on the Panel HB of Step 1 by using Flat washer (#1), Lock washer (#2), Bolt (#3) with Allen Key (#5) and Screw (#4), Wooden dowel (#7).

Step 2

Part (#E) 1pc

Part (#F) 1pc

Part (#G) 1pc

Part (#H) 1pc

Hardware (#1) 16pcs


Hardware (#2) 16pcs

Hardware (#3) 16pcs

Hardware (#4) 2pcs

Hardware (#5) 1pc

Hardware (#7) 4pcs

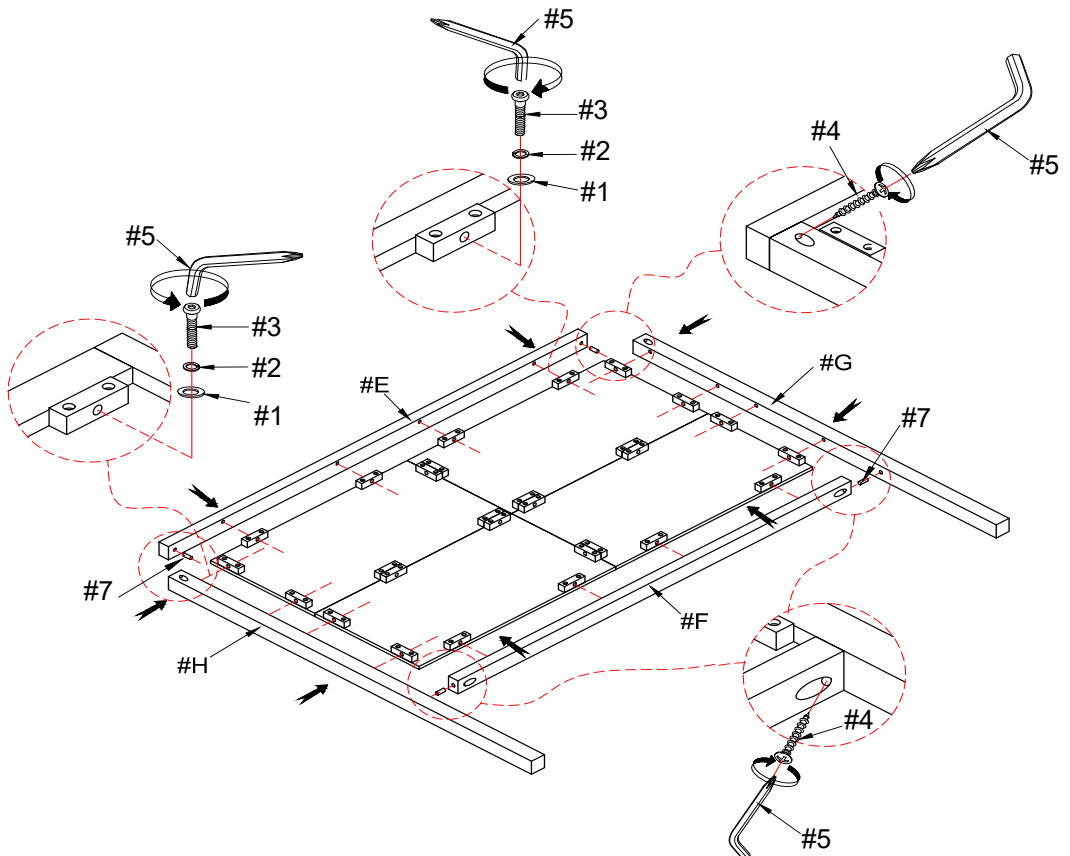


ASSEMBLY INSTRUCTIONS

Attach Panel FB (#J), on the Leg FB (#I) by using Nut (#10), Lock washer (#2), Curved washer (#9), Bolt (#8) with Allen Wrench (#11).

Step 3


- Part (#I) 2pcs
- Part (#J) 1pc
- Hardware (#8) 4pcs
- Hardware (#9) 4pcs
- Hardware (#2) 4pcs
- Hardware (#10) 4pcs
- Hardware (#11) 1pc

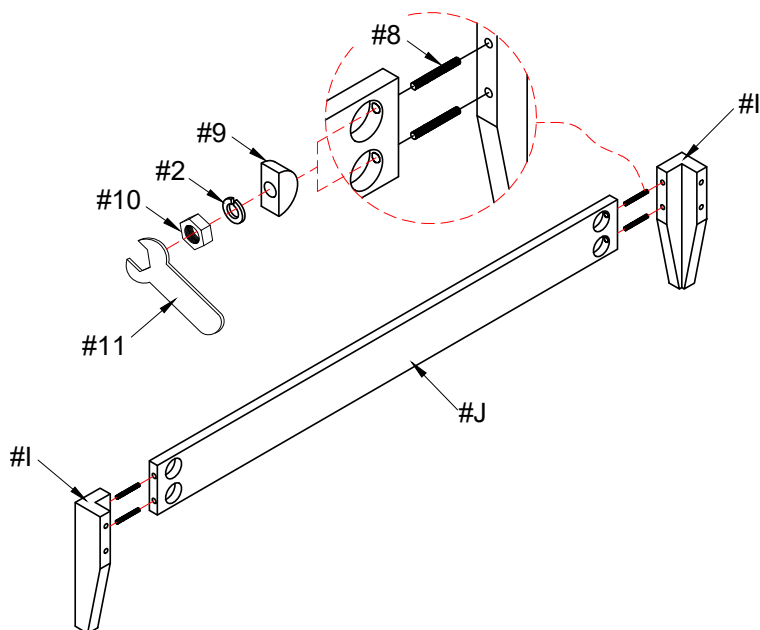

Step 4

Attach Side rails (#K), on the Head board and Footboard by using Nut (#10), Lock washer (#2), Curved washer (#9), Bolt (#8) with Allen Wrench (#11).

- Part (#K) 2pcs
- Hardware (#8) 8pcs
- Hardware (#9) 8pcs
- Hardware (#2) 8pcs
- Hardware (#10) 8pcs
- Hardware (#11) 1pc

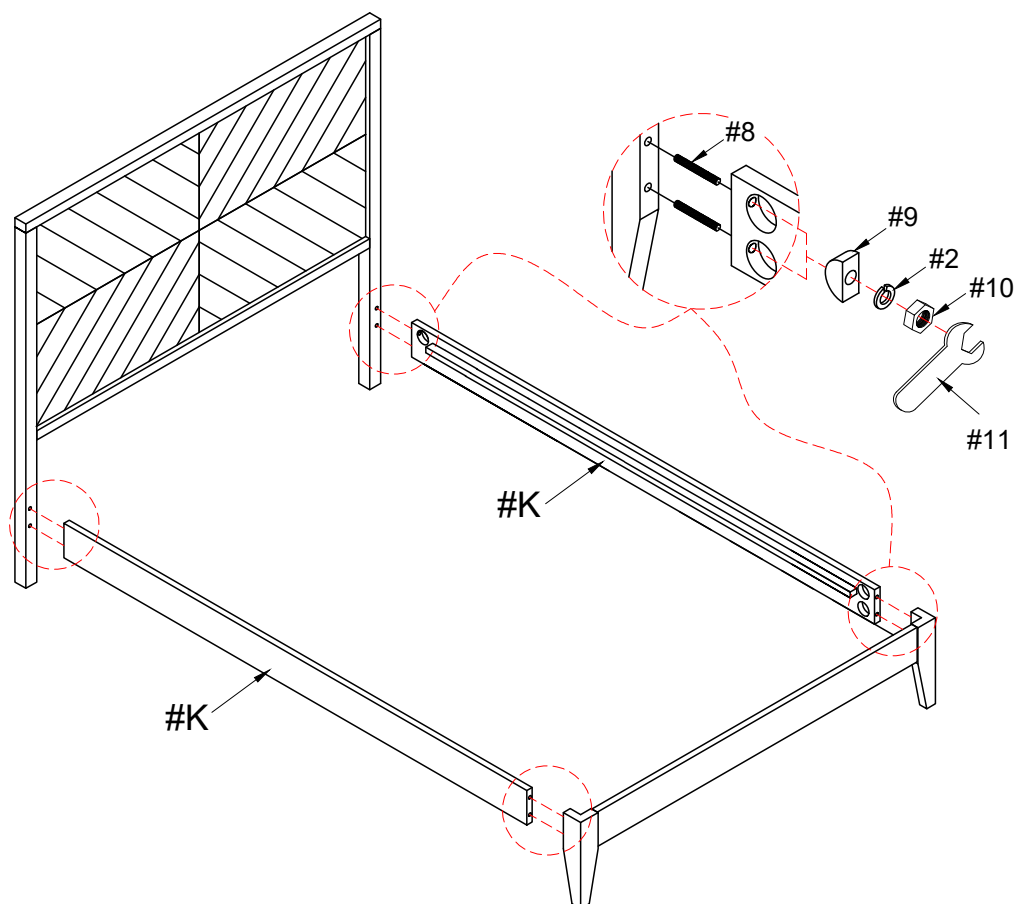

ASSEMBLY INSTRUCTIONS

Step 5


Then using Screw (#12) to connect Slats (#L) with Side rails (#K).

Hardware (#11) 18pcs

Part (#L) 9pcs

Part (#M) 3pcs

Part (#N) 1pc

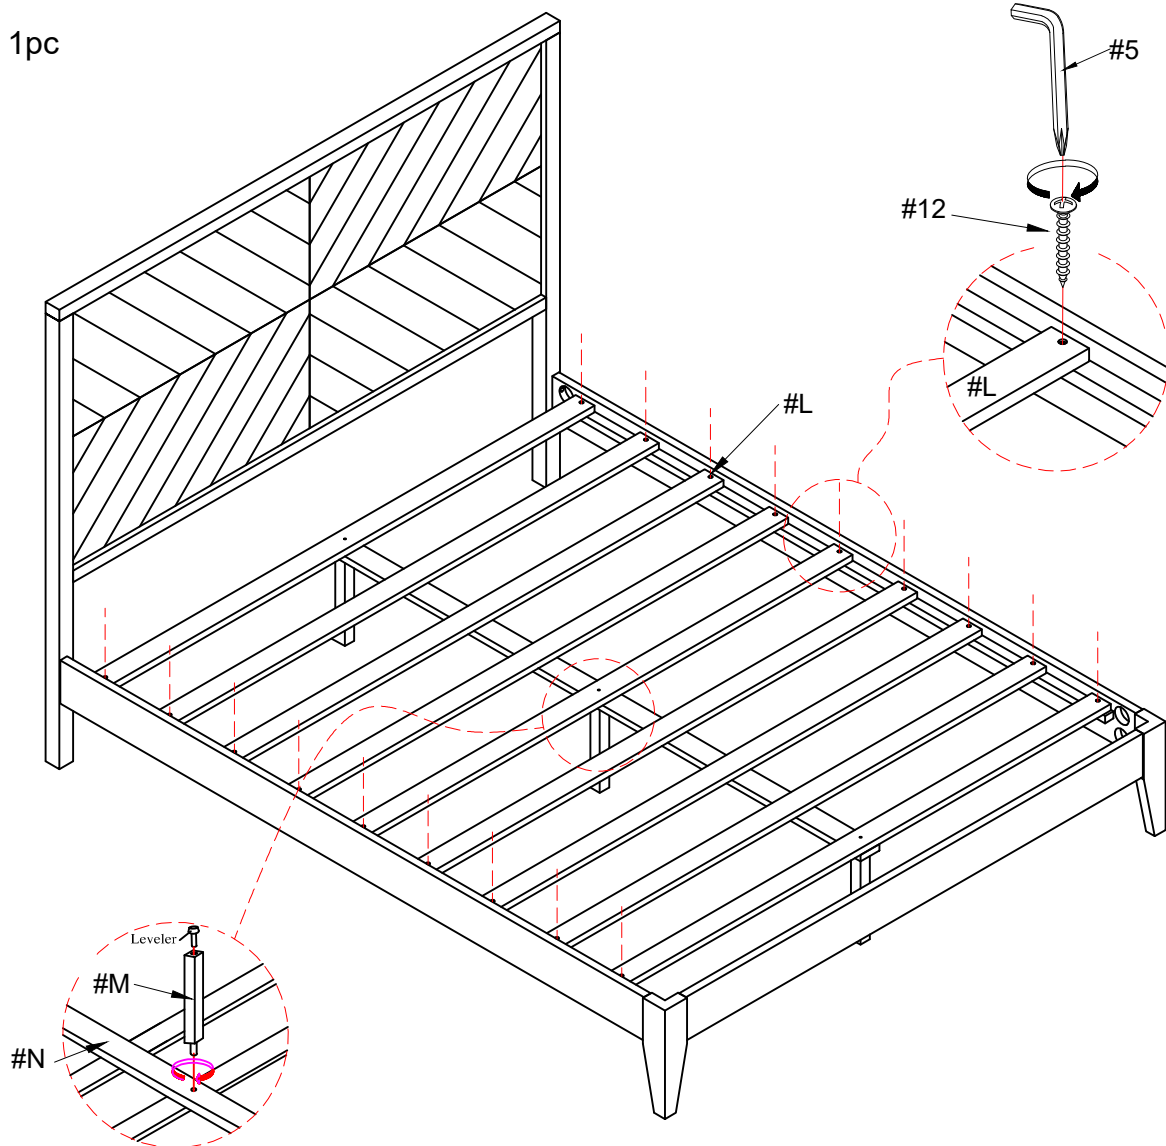

MADE IN VIETNAM