



Assembly Instructions







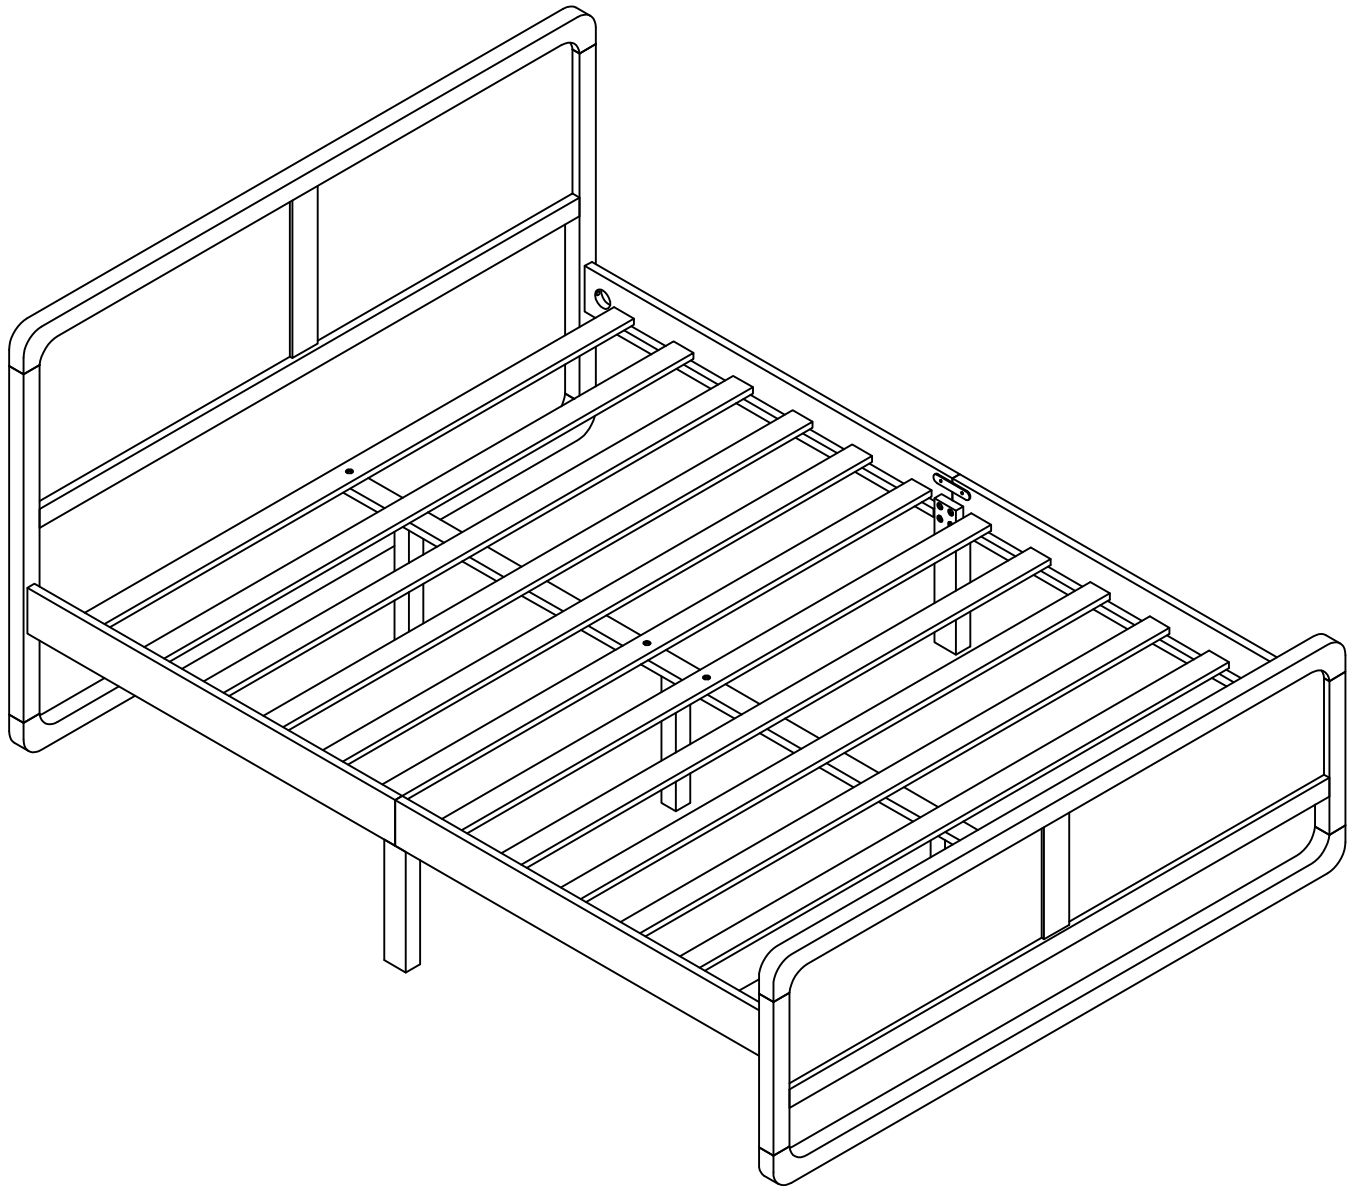












ITEM CODE: WF530455

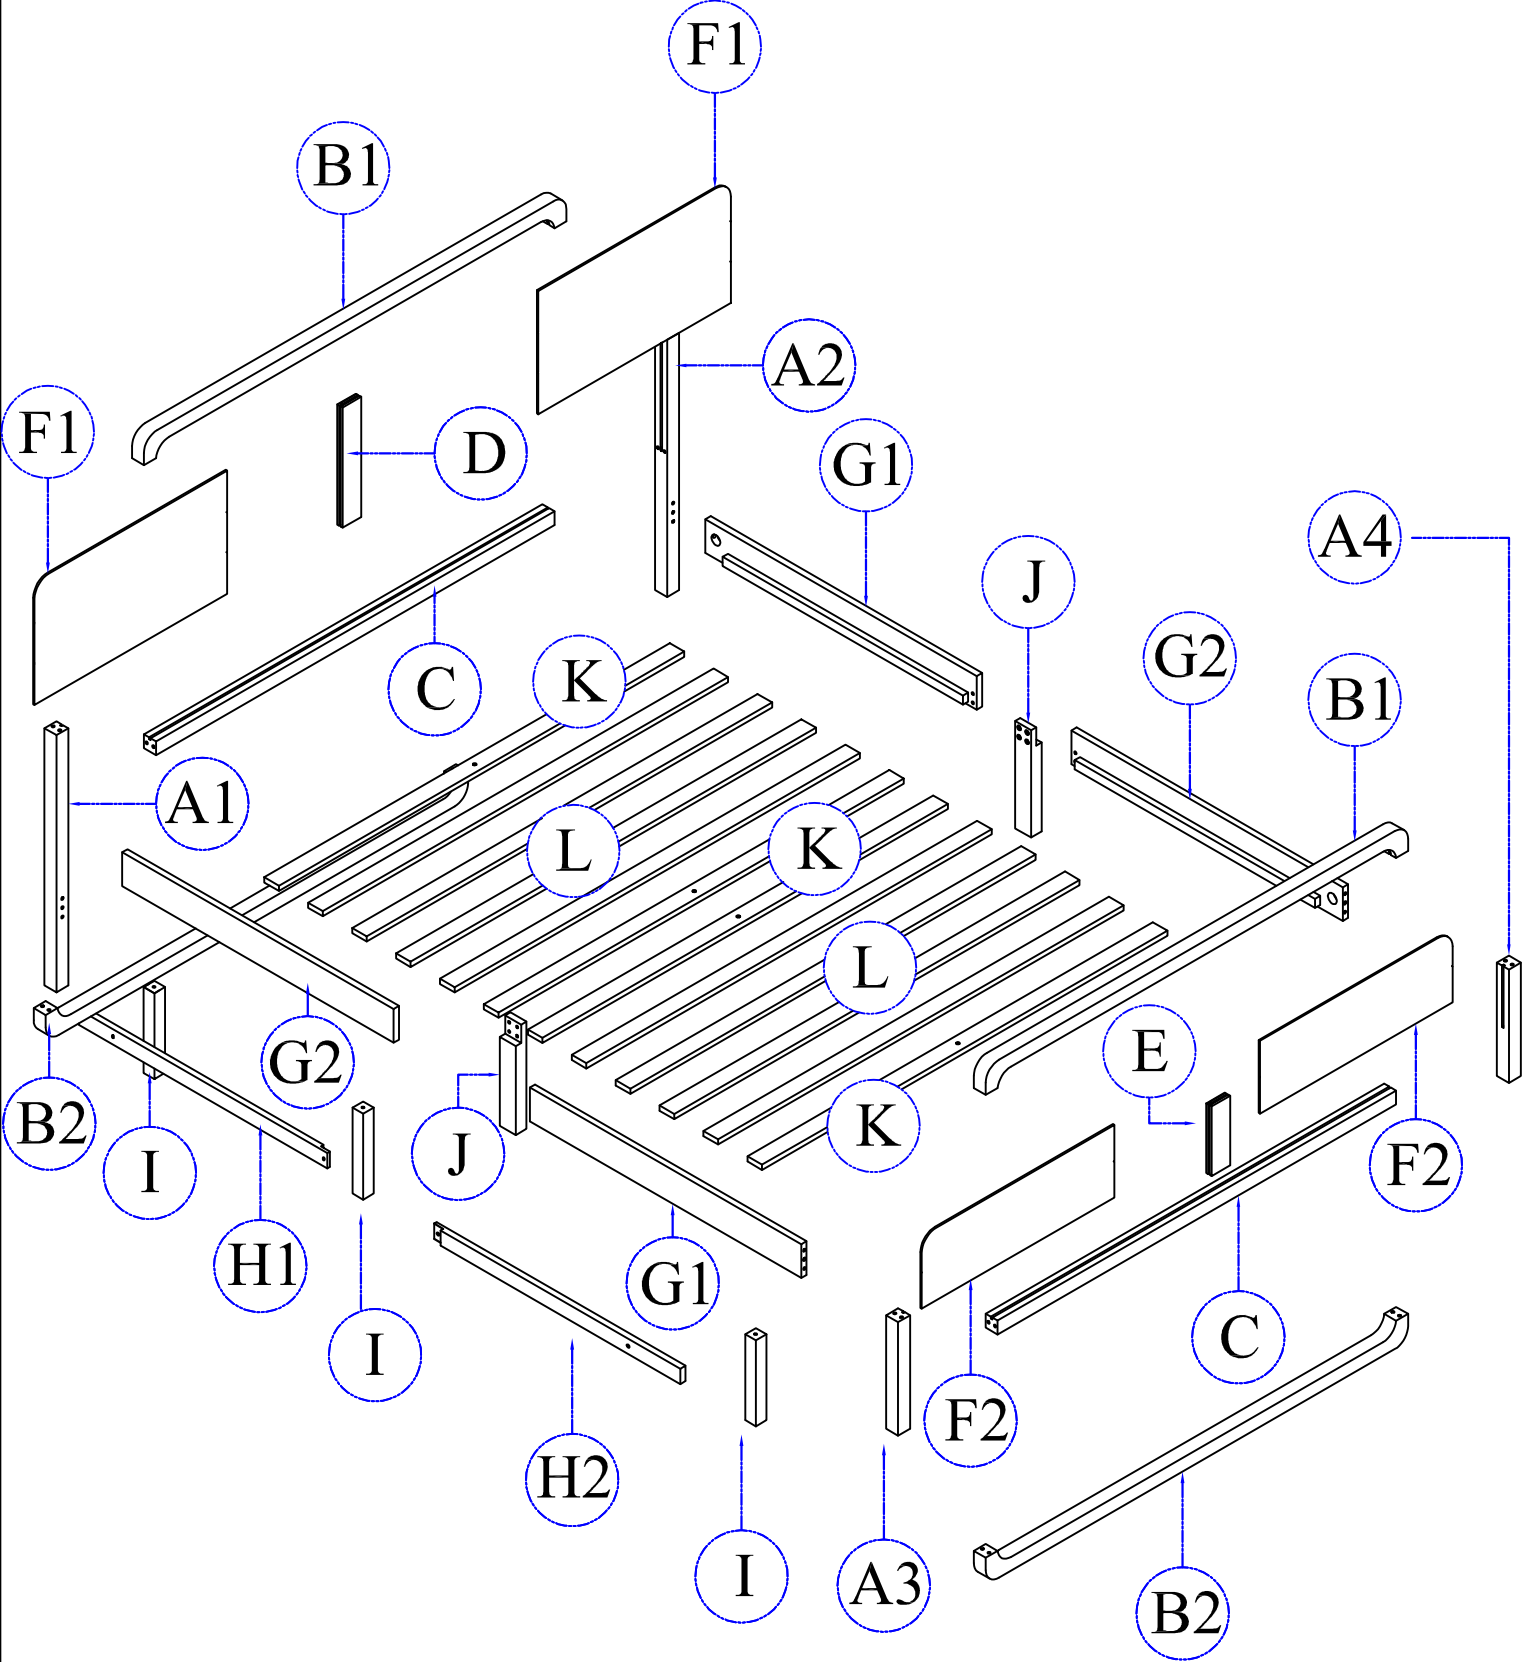






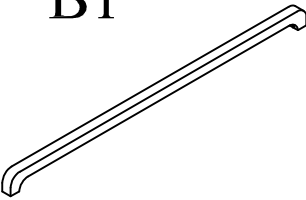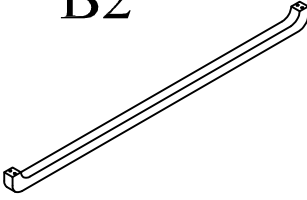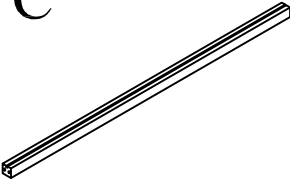

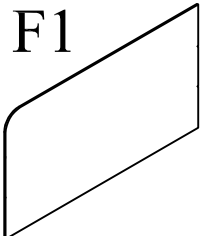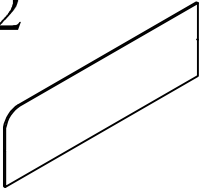

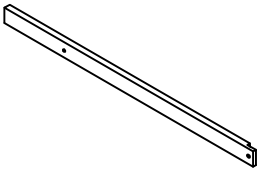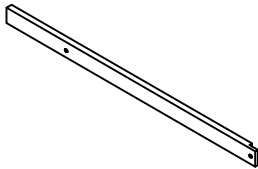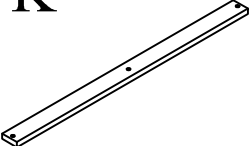
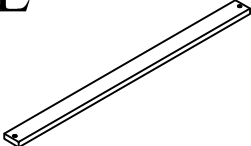



DETAIL VIEW




BOX : WF530455

<p>A1</p>  <p>Headboard post (L) (1 pc)</p>	<p>A2</p>  <p>Headboard post (R) (1 pc)</p>	<p>A3</p>  <p>Footboard post (L) (1 pc)</p>	<p>A4</p>  <p>Footboard post (R) (1 pc)</p>
<p>B1</p>  <p>Top slat (2 pcs)</p>	<p>B2</p>  <p>Bottom slat (2 pcs)</p>	<p>C</p>  <p>Middle slat (2 pcs)</p>	<p>D</p>  <p>Headboard Center bar (1 pc)</p>
<p>E</p>  <p>Footboard Center bar (1 pc)</p>	<p>F1</p>  <p>Headboard panel (2 pcs)</p>	<p>F2</p>  <p>Footboard panel (2 pcs)</p>	<p>G1</p>  <p>Side Rail (2 pcs)</p>
<p>G2</p>  <p>Side Rail (2 pcs)</p>	<p>H1</p>  <p>Center slat (1 pc)</p>	<p>H2</p>  <p>Center slat (1 pc)</p>	<p>I</p>  <p>Support post (3 pcs)</p>
<p>J</p>  <p>Support post side rail (2 pcs)</p>	<p>K</p>  <p>Slat with one center hole (4 pcs)</p>	<p>L</p>  <p>Slats no center hole (8 pcs)</p>	


HARDWARE LIST : WF530455


<p>1</p>  <p>Hex - Head bolts Ø1/4" * 40 - 12pcs</p>	<p>2</p>  <p>Hex - Head bolts Ø1/4" * 30 - 8pcs</p>	<p>3</p>  <p>Hex - Head bolts Ø1/4" * 65 - 3pcs</p>	<p>4</p>  <p>Wood dowel Ø8 * 30 - 12pcs</p>
<p>5</p>  <p>Wood dowel Ø10 * 40 - 8pcs</p>	<p>6</p>  <p>Adjusting screw Ø1/4" * 30 - 3 pcs</p>	<p>7</p>  <p>Allen key M4*100 - 1pc</p>	<p>8</p>  <p>Wood crews M3.5 * 15 - 4pcs</p>
<p>9</p>  <p>Wood crews M4 * 30 - 28pcs</p>	<p>10</p>  <p>Connecting Metal=2 pcs</p>	<p>11</p>  <p>Wrench Metal =1 pc</p>	<p>12</p>  <p>Stud bolt Ø5/16" * 75 - 4pcs</p>
<p>13</p>  <p>connecting rod -4 pcs</p>	<p>14</p>  <p>Hexanon nut =4 pcs</p>		

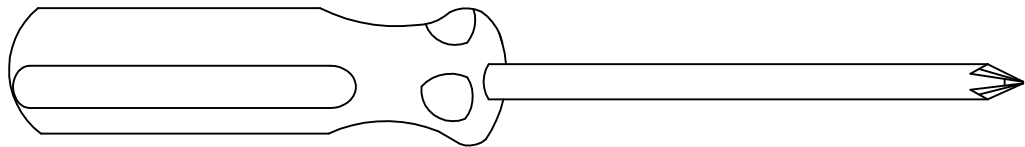



Assembly Tools Required (Not Included)

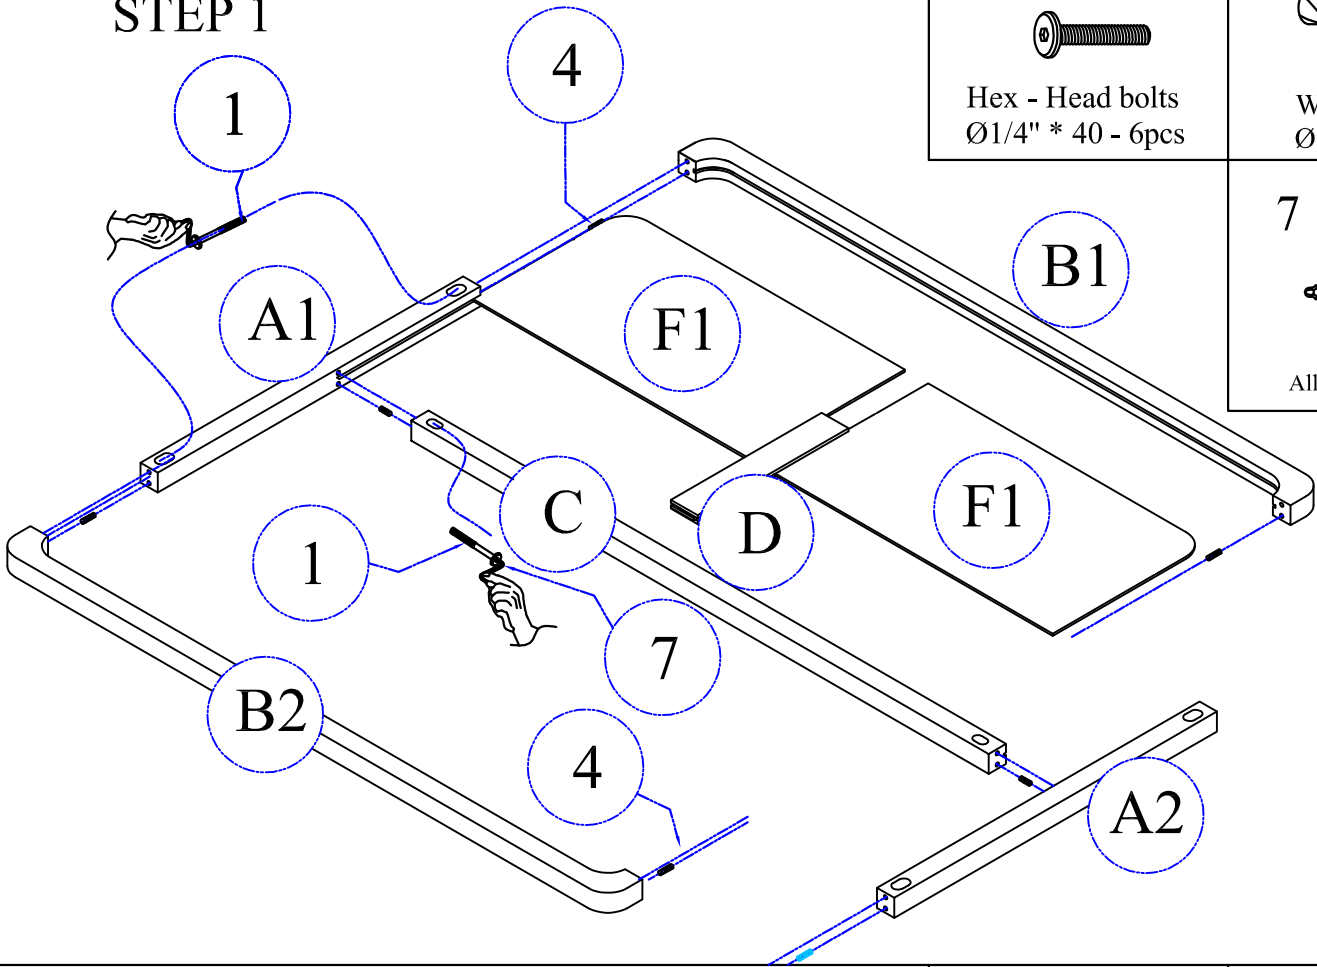STEP 1





1

 Hex - Head bolts
 Ø1/4" * 40 - 6pcs


4

 Wood dowel
 Ø8 * 30 - 6pcs

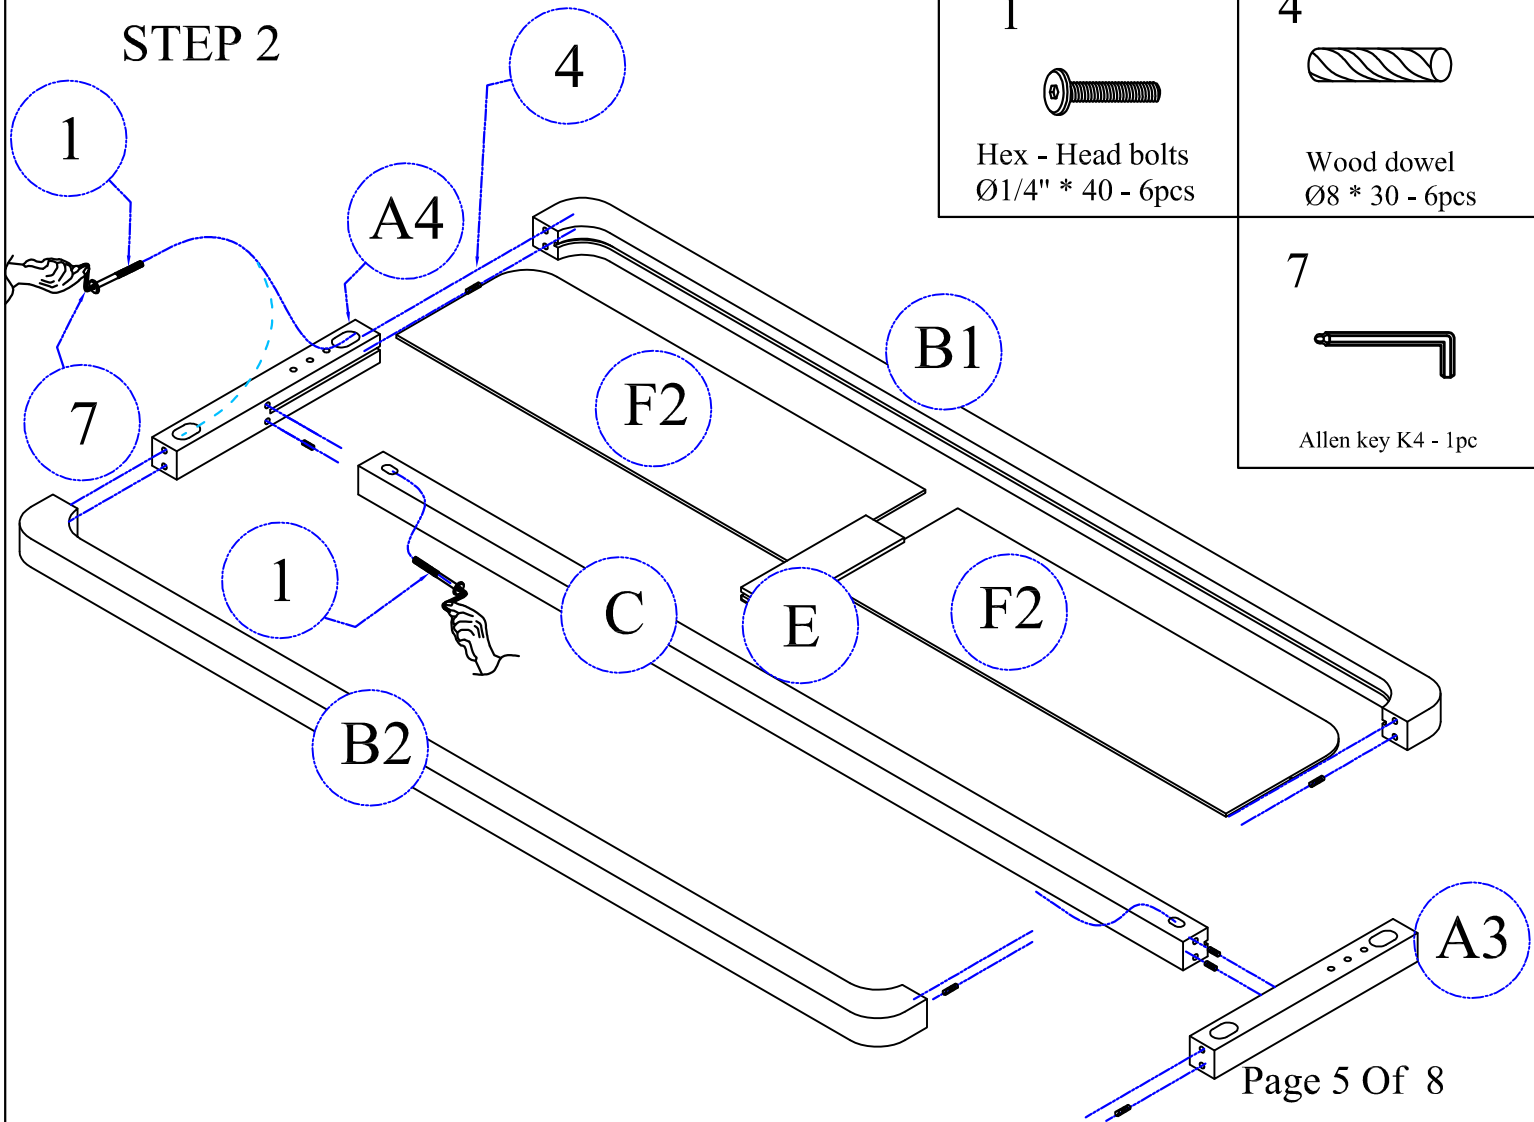
7

 Allen key K4 - 1pc

STEP 2





1

 Hex - Head bolts
 Ø1/4" * 40 - 6pcs


4

 Wood dowel
 Ø8 * 30 - 6pcs

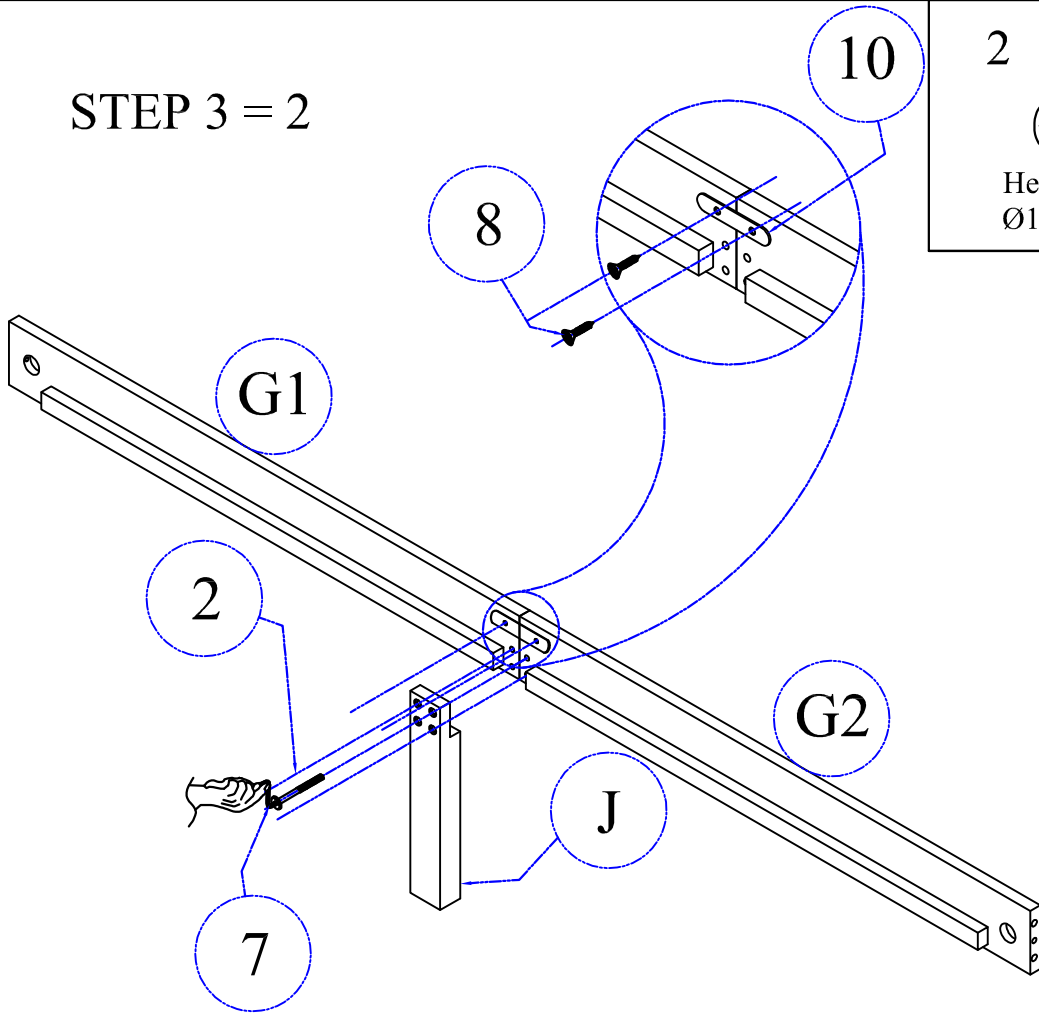
7

 Allen key K4 - 1pc


STEP 3 = 2




2

 Hex - Head bolts
 Ø1/4" * 30 - 4pcs


7

 Allen key K4 - 1pc


8

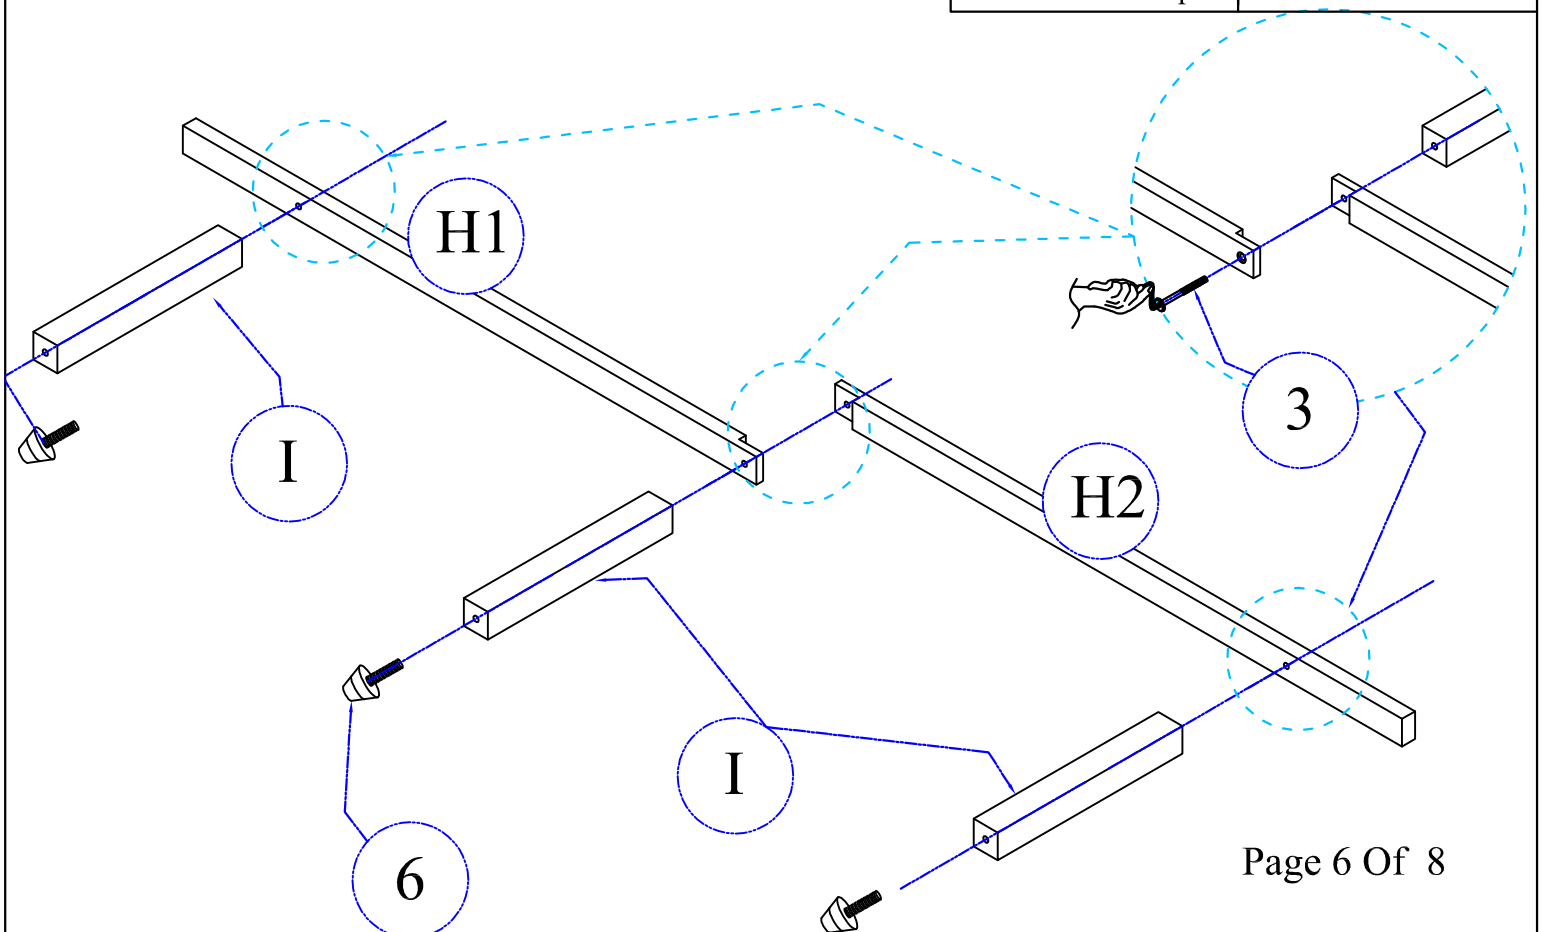 Wood crews
 M3.5 * 15 - 2pcs

10

 Connecting Metal = 1 pc


STEP 4





6

 Adjusting screw
 Ø1/4" * 30 - 3 pcs


3

 Hex - Head bolts
 Ø1/4" * 65 - 3pcs


STEP 5


5

Wood dowel
Ø10 * 40 - 8pcs

11

Wrench Metal=1 pc


12

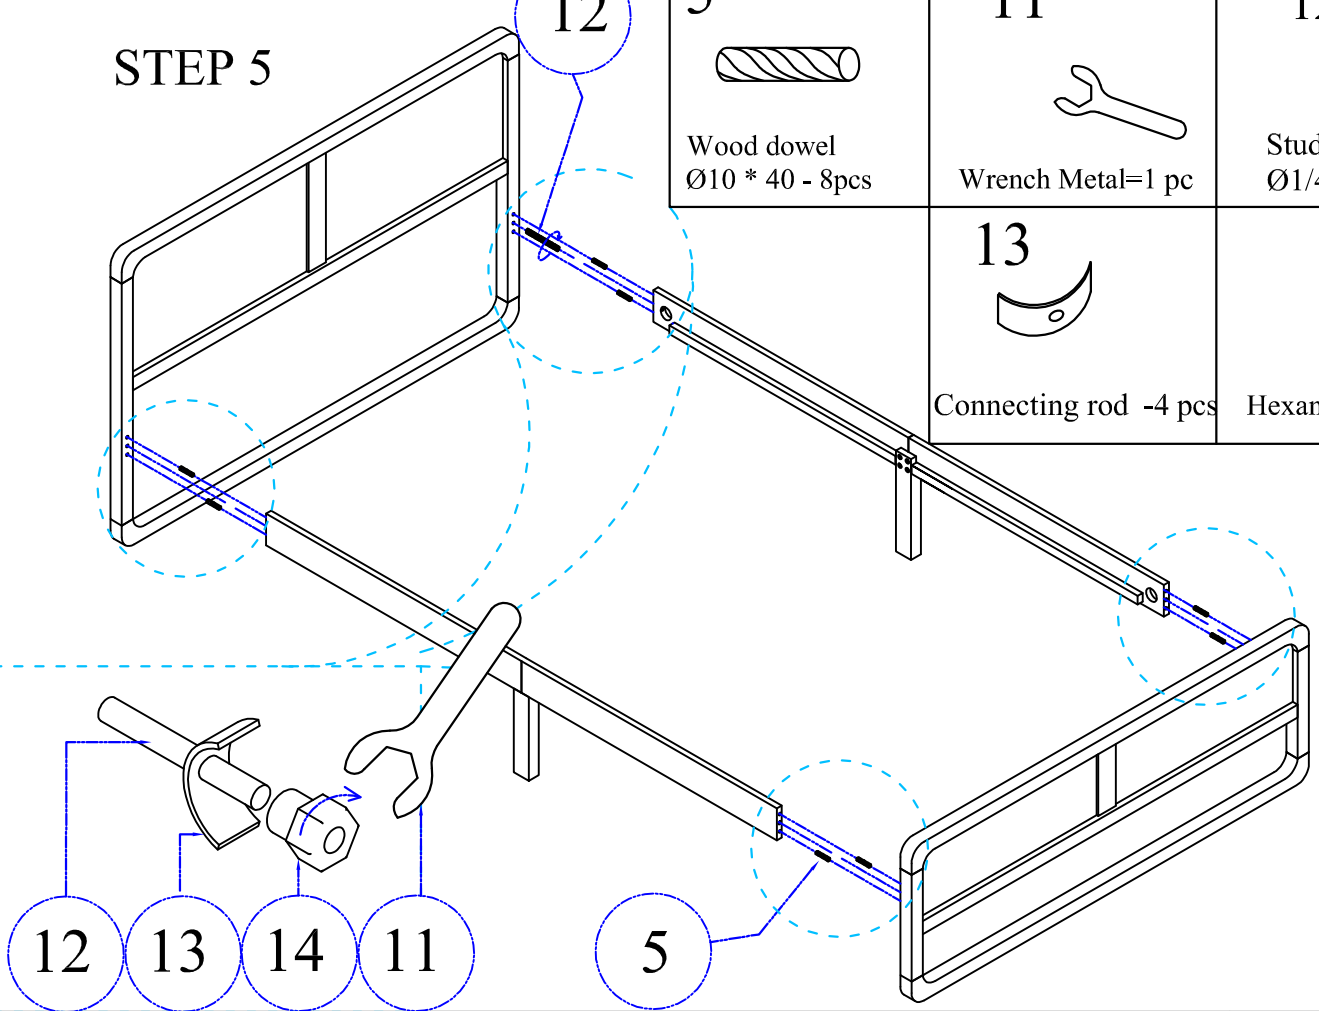Stud bolt
Ø1/4" * 75 - 4pcs


13

Connecting rod -4 pcs

14

Hexanon nut = 4 pcs

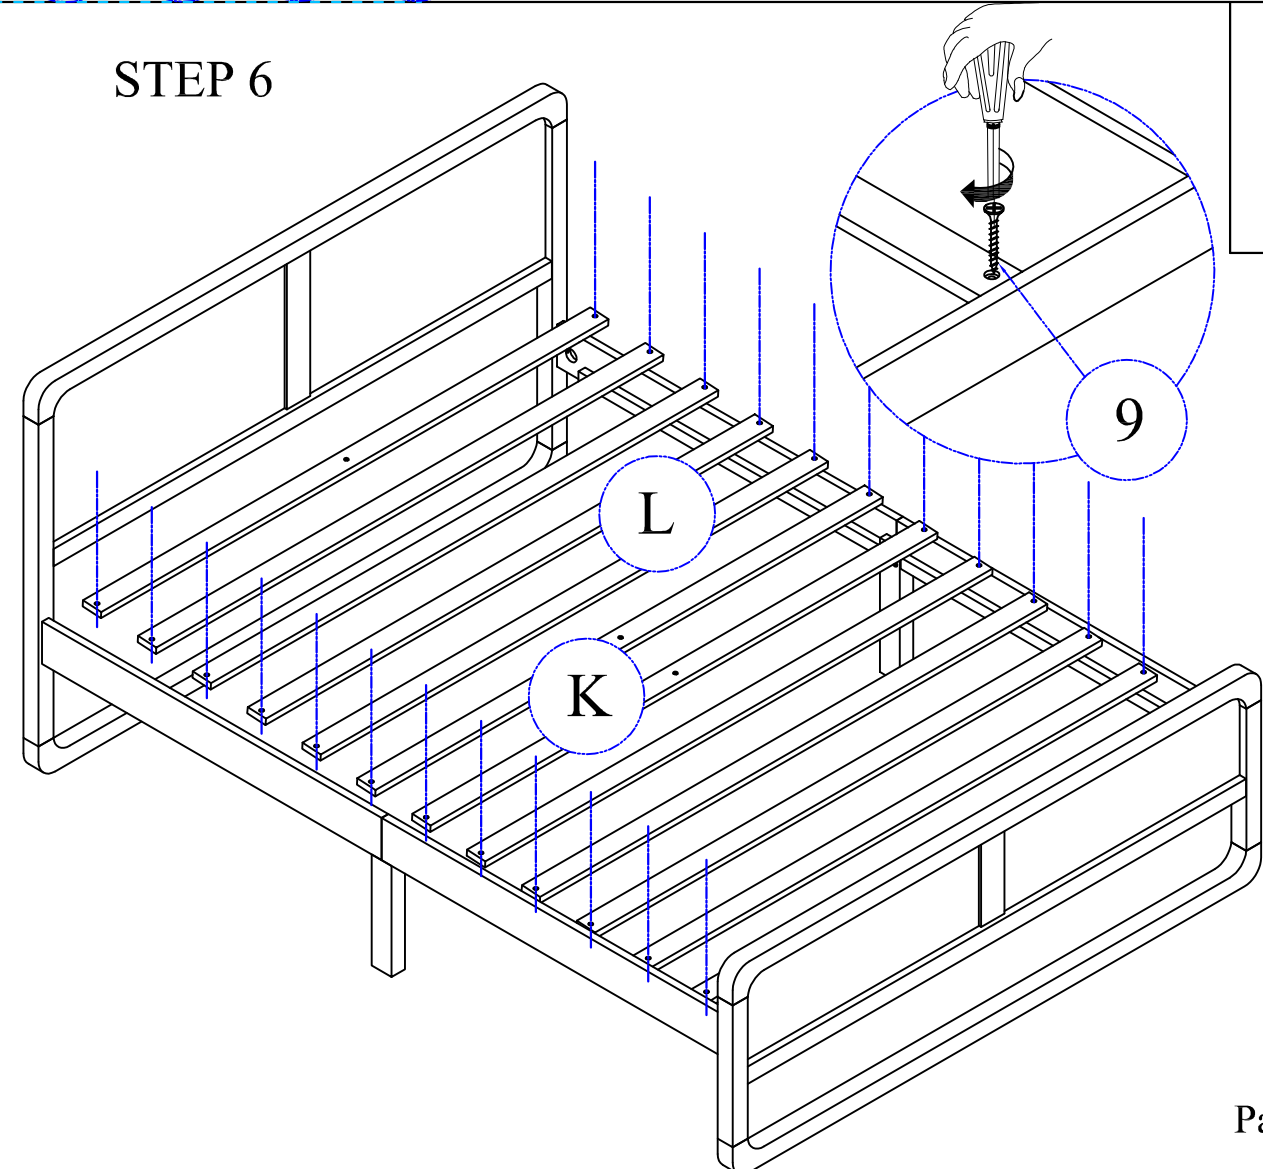

STEP 6

9

Wood crews
M4 * 30 - 24pcs




STEP 7


9



Wood crews
M4 * 30 - 4 pcs

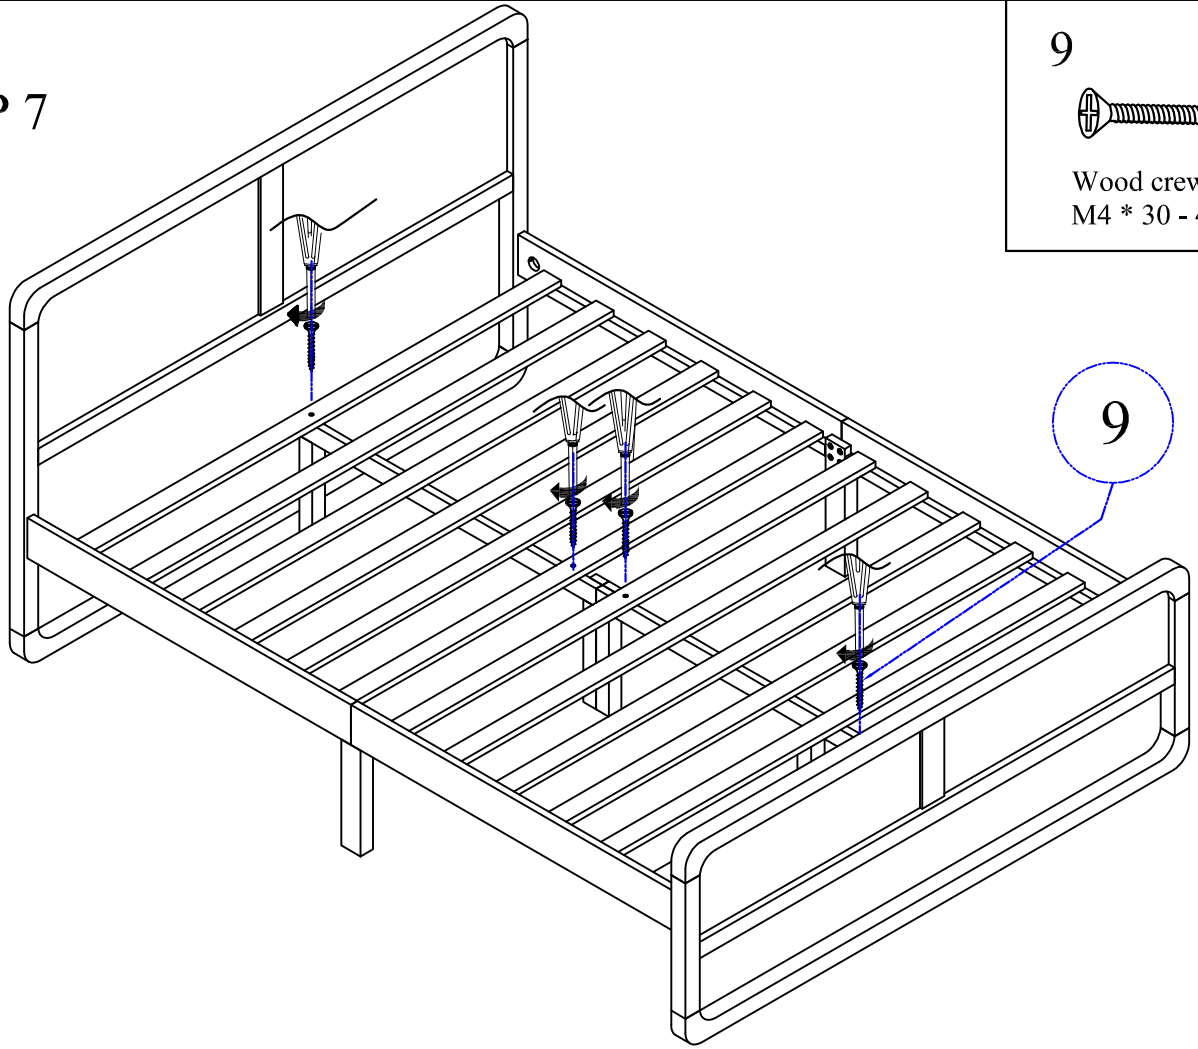

STEP 8

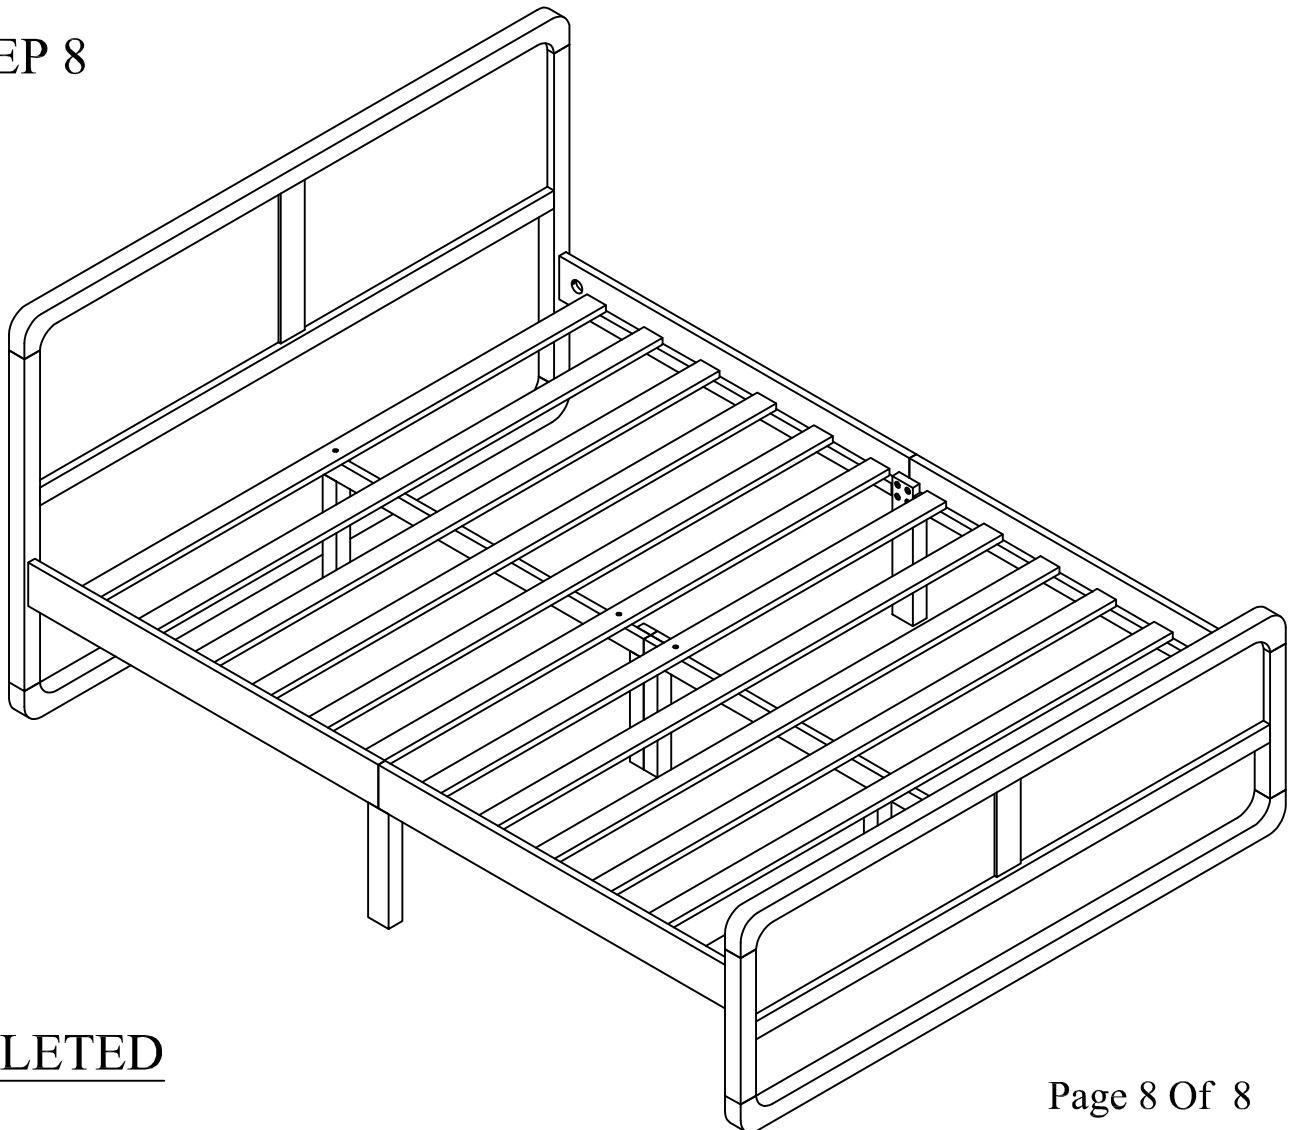

COMPLETED