
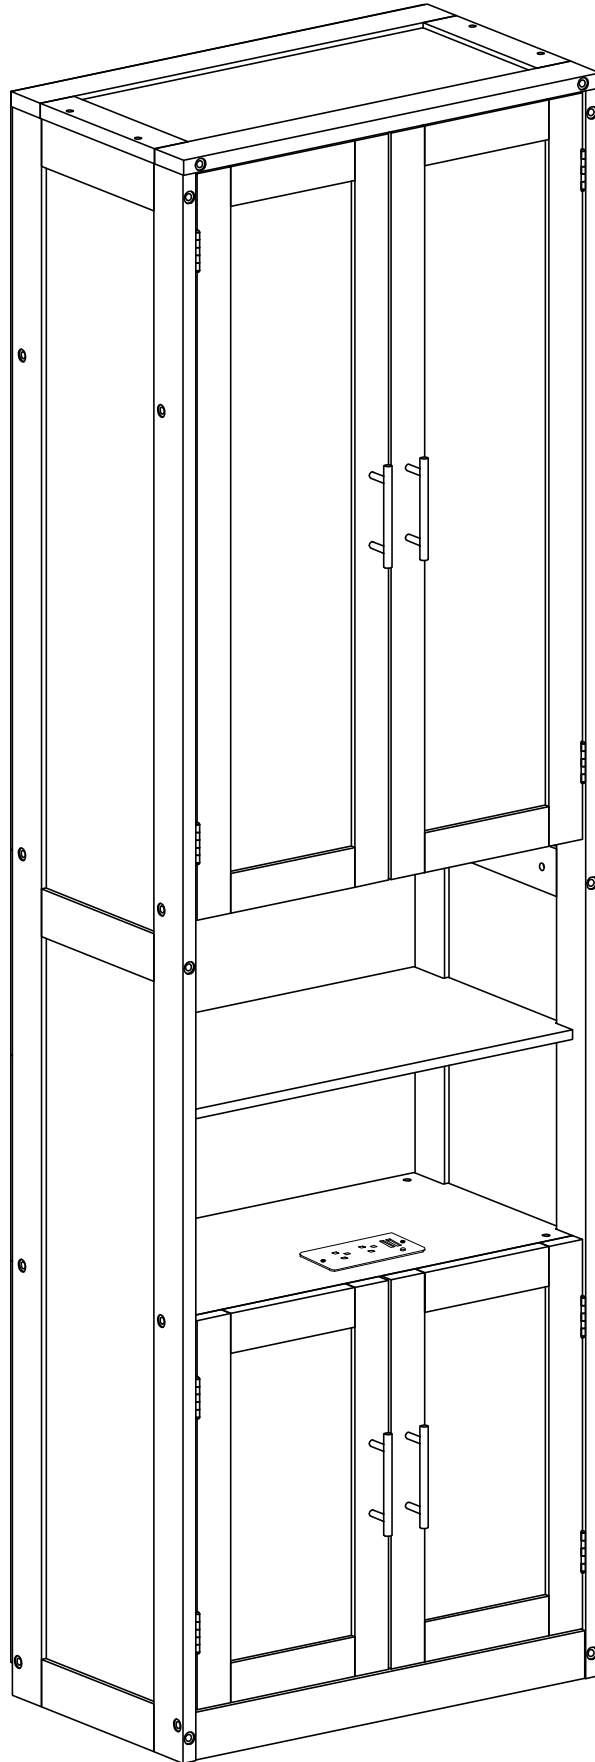


ASSEMBLY INSTRUCTION

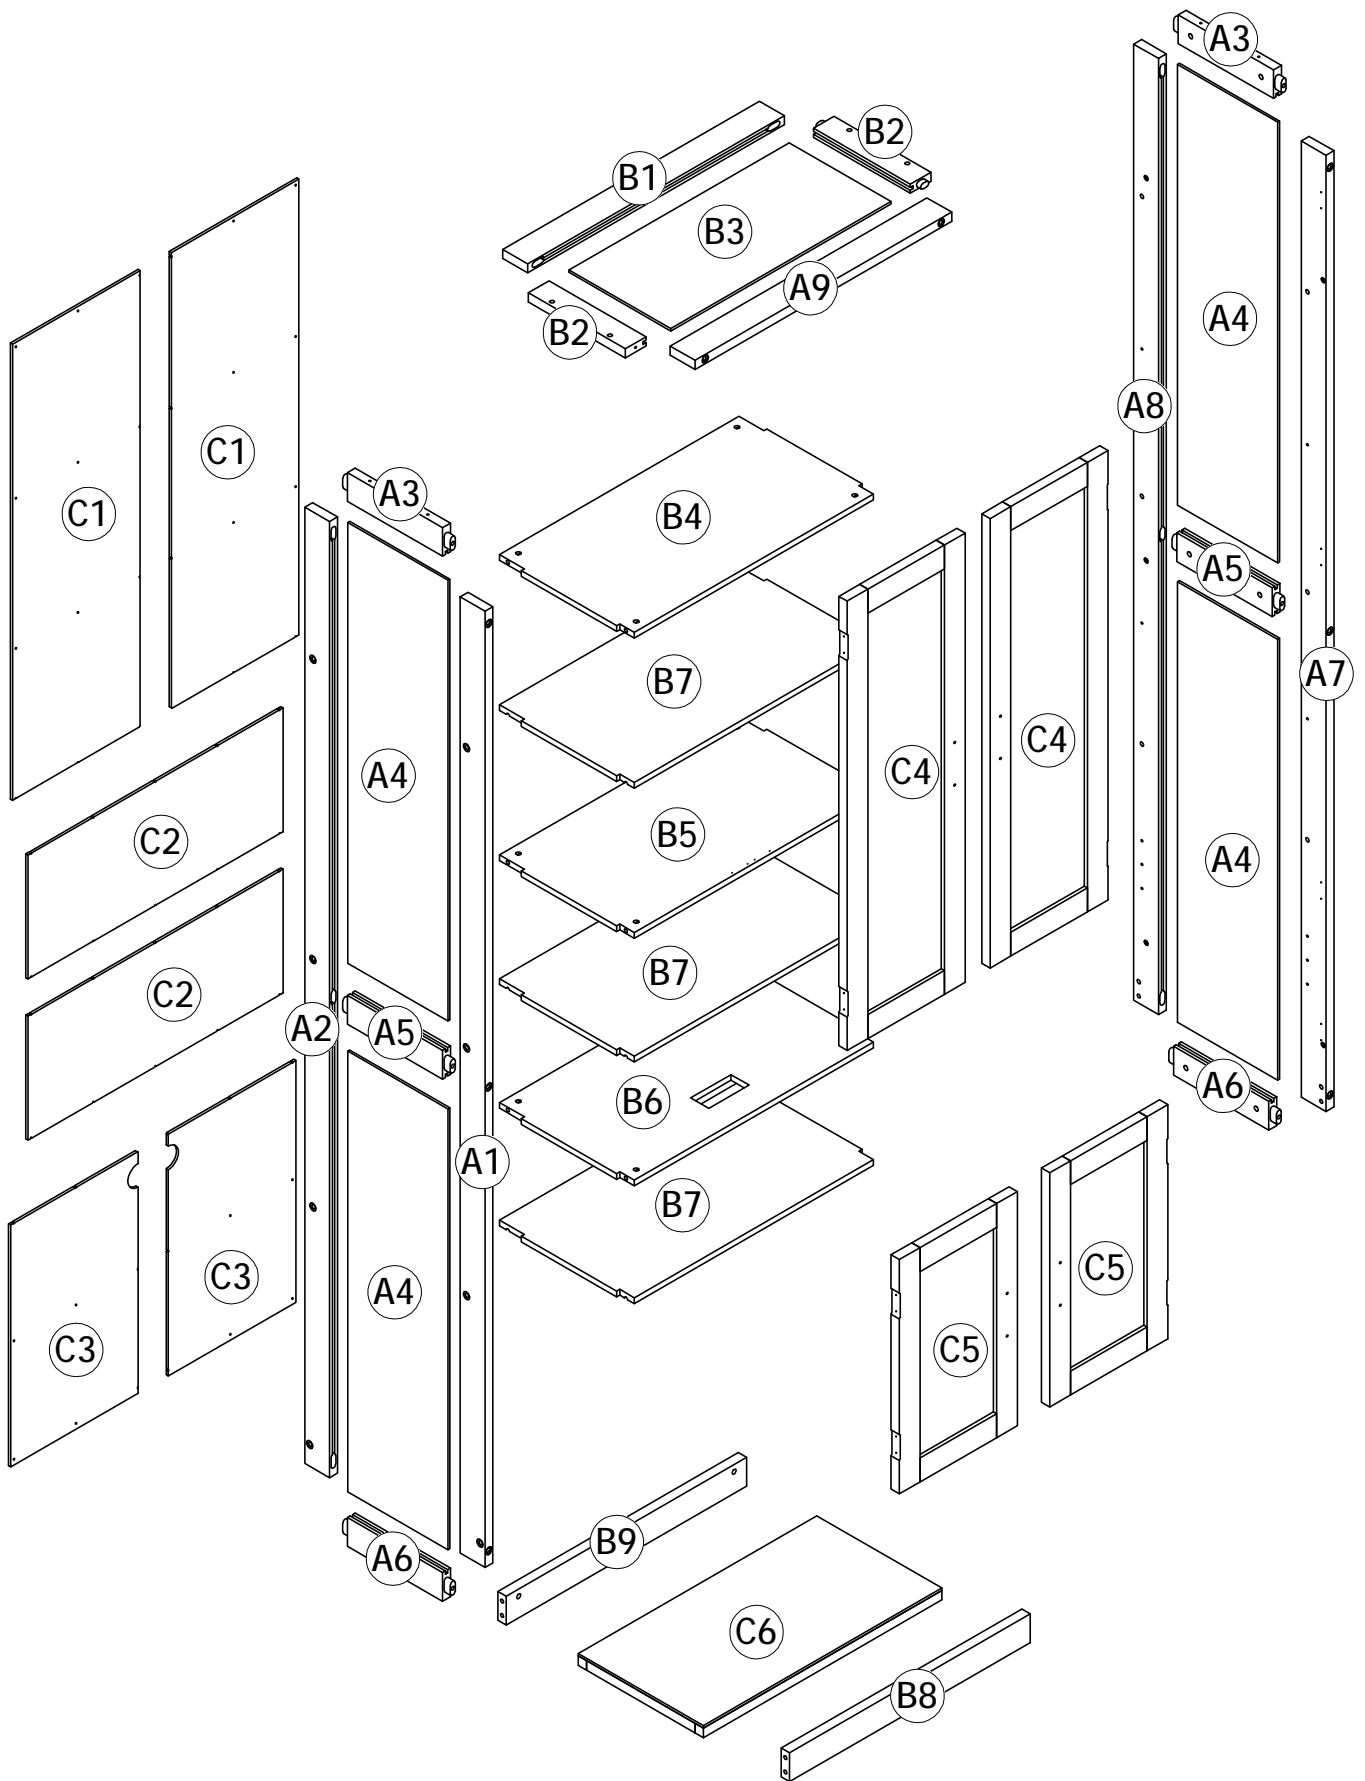



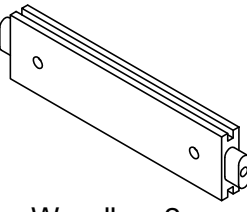
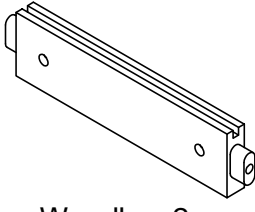



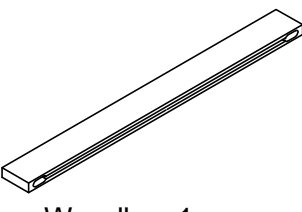
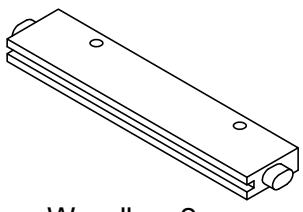
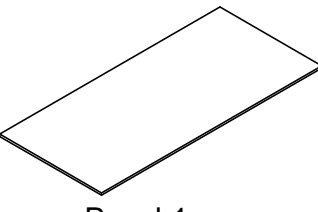
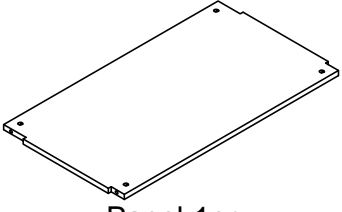
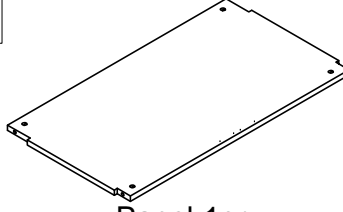
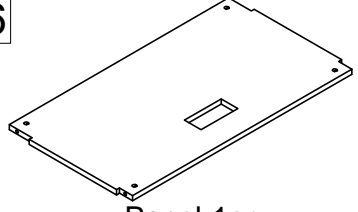
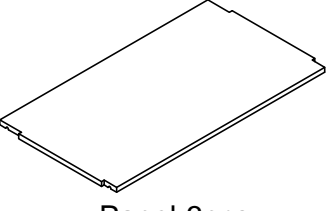


SKU CODE: (WF311493)




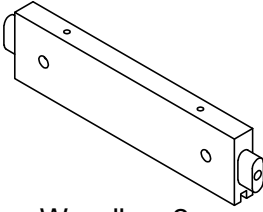




ASSEMBLY INSTRUCTION









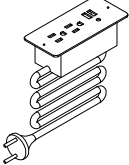



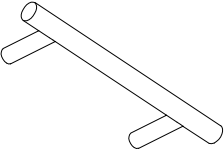






Part List & Hardware List (WF311493)

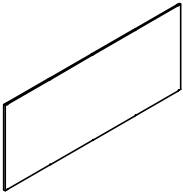
<p>A1</p>  <p>Woodbar-1pc</p>	<p>A2</p>  <p>Woodbar-1pc</p>	<p>A3</p>  <p>Woodbar-2pcs</p>
<p>A4</p>  <p>Panel-4pcs</p>	<p>A5</p>  <p>Woodbar-2pcs</p>	<p>A6</p>  <p>Woodbar-2pcs</p>
<p>A7</p>  <p>Woodbar-1pc</p>	<p>A8</p>  <p>Woodbar-1pc</p>	<p>A9</p>  <p>Woodbar-1pc</p>
<p>B1</p>  <p>Woodbar-1pc</p>	<p>B2</p>  <p>Woodbar-2pcs</p>	<p>B3</p>  <p>Panel-1pc</p>
<p>B4</p>  <p>Panel-1pc</p>	<p>B5</p>  <p>Panel-1pc</p>	<p>B6</p>  <p>Panel-1pc</p>
<p>B7</p>  <p>Panel-3pcs</p>	<p>B8</p>  <p>Woodbar-1pc</p>	<p>B9</p>  <p>Woodbar-1pc</p>

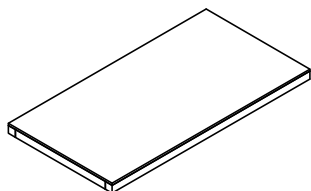Part List & Hardware List (WF311493)

C1  Panel-2pcs	C2  Panel-2pcs	C3  Woodbar-2pcs
C4  Door frame-2pcs	C5  Door frame-2pcs	C6  Woodframe-1pc



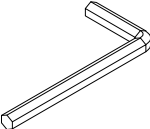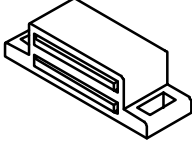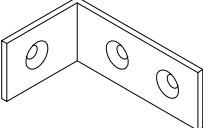Hardware List (WF311493)


<p>1</p>  <p>Ø1/4" x 100 mm Hex-Head bolts 12pcs</p>	<p>2</p>  <p>Ø1/4" x 12 mm Horizontal-Hole bolts 28pcs</p>	<p>3</p>  <p>Ø8 x 30 mm Wood dowel 4pcs</p>
<p>4</p>  <p>Ø1/4" x 60 mm Hex-Head bolts 16pcs</p>	<p>5</p>  <p>Screws 1/4" x80 4pcs</p>	<p>6</p>  <p>Screws 1/4" x40 4pcs</p>
<p>7</p>  <p>USB 1pc</p>	<p>8</p>  <p>M3 x 12 mm Wood Screws 2pcs</p>	<p>9</p>  <p>Ø5 x 20 mm Metal dowel 12pcs</p>
<p>10</p>  <p>M4 x 15 mm Wood Screws 52pcs</p>	<p>11</p>  <p>Handle - 4pcs</p>	<p>12</p>  <p>Bolt Ø1/6" x 20 mm 8pcs</p>
<p>13</p>  <p>M4 x 15 mm Wood Screws 32pcs</p>	<p>14</p>  <p>Allen Key 1pc</p>	<p>15</p>  <p>Magnet Door Catcher 6pcs</p>
<p>16</p>  <p>M4 x 35 mm Wood Screws 10pcs</p>	<p>17</p>  <p>Angle Metal - 4pcs</p>	






Assembly Tools Required (Not Included)


STEP1: Following below illustration.

1	2
	
12pcs	12pcs

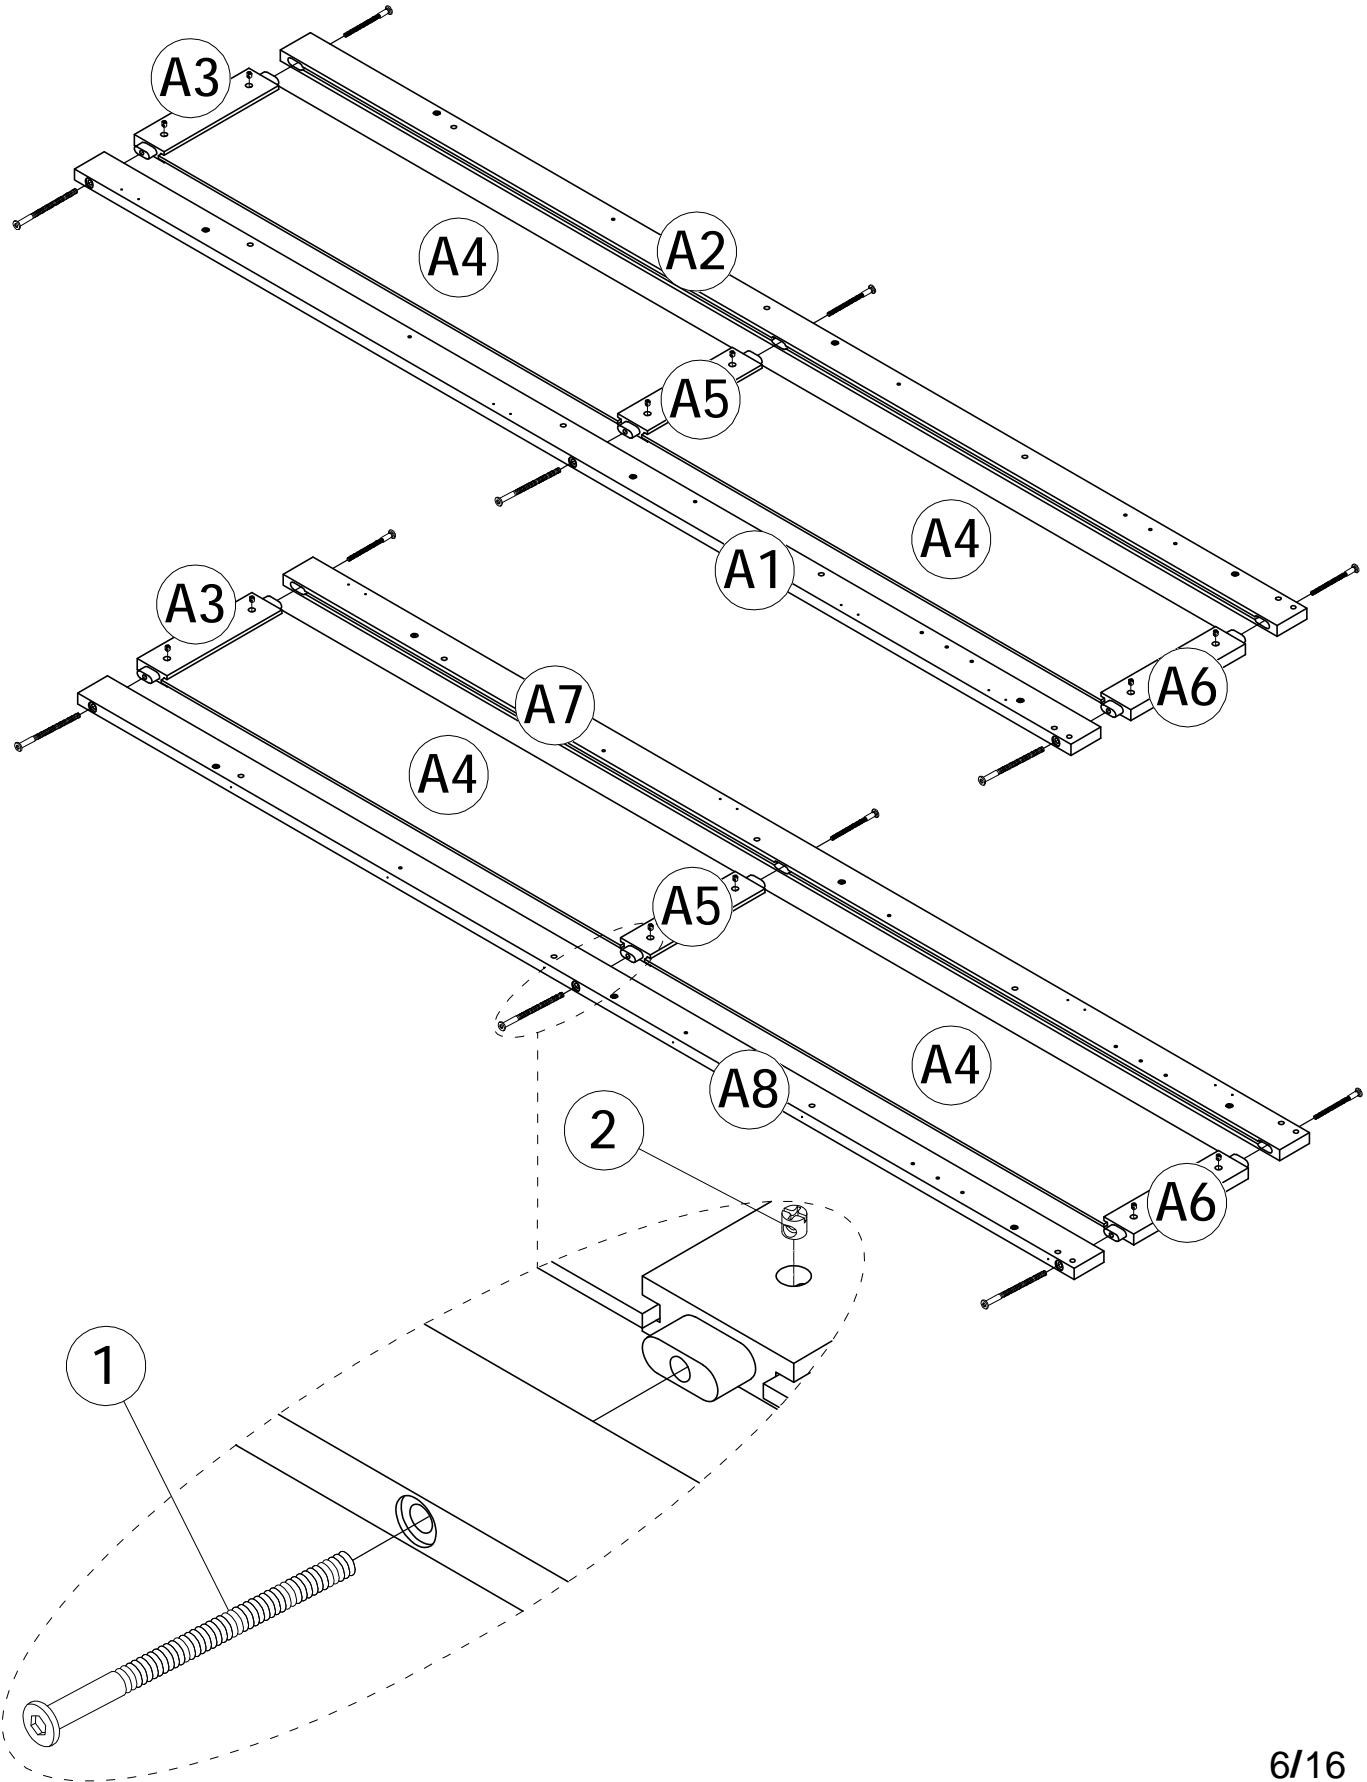


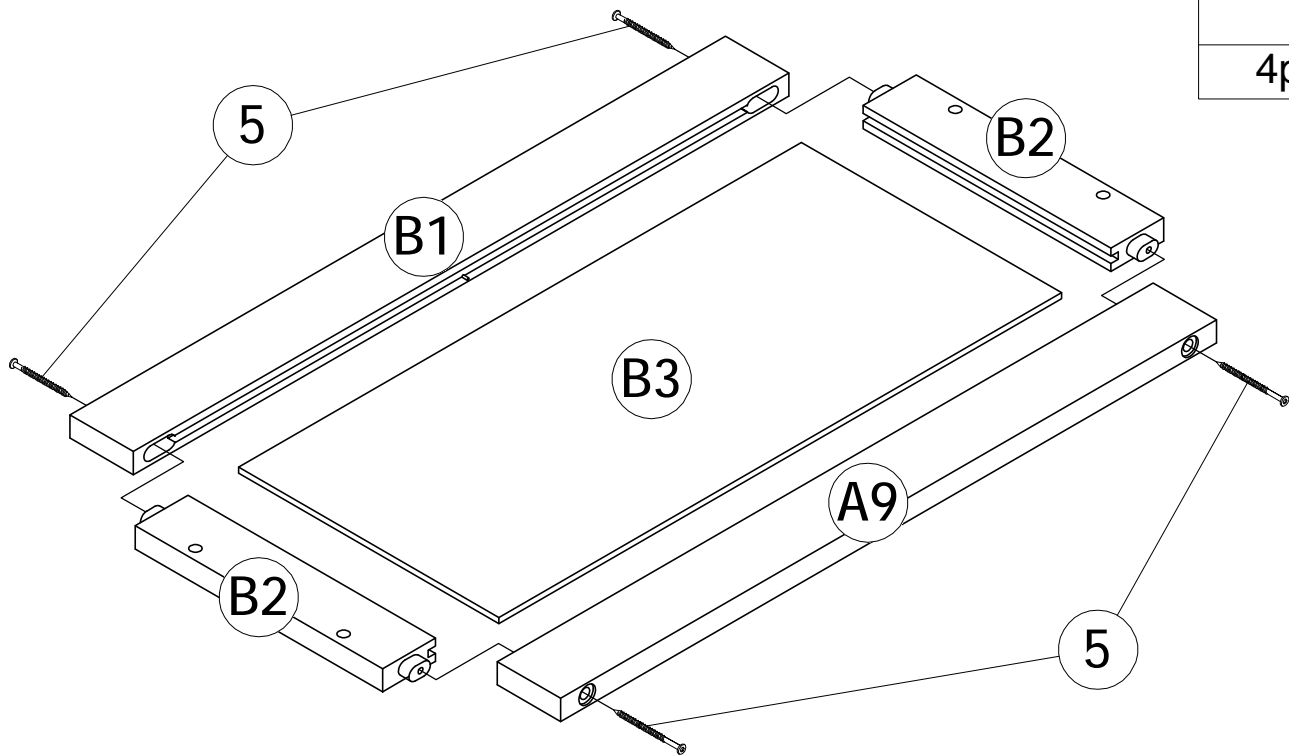
STEP2: Following below illustration.

2		3		4	
4pcs		4pcs		4pcs	

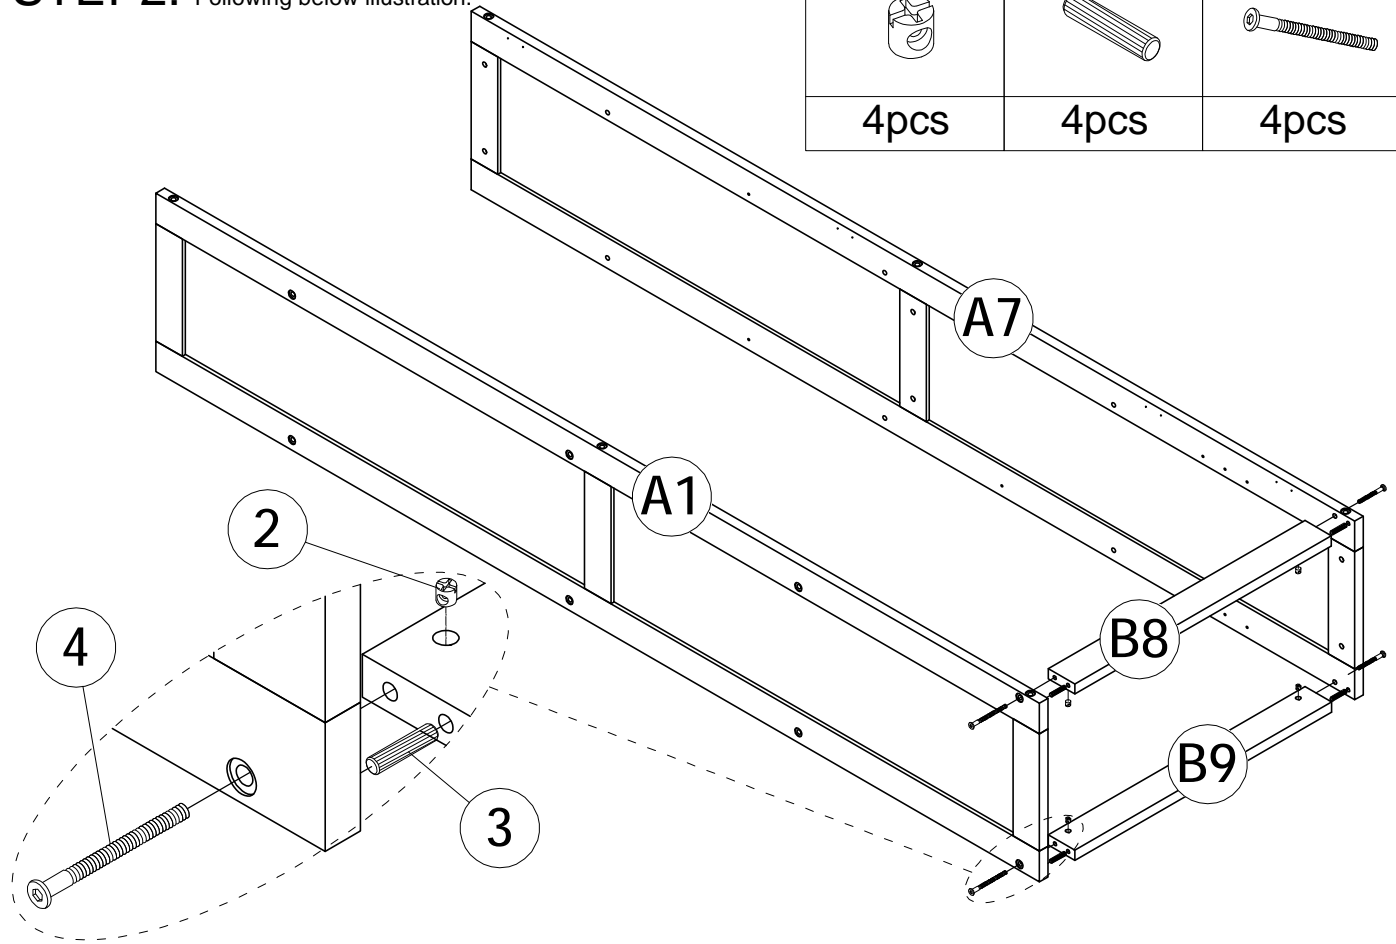

STEP3: Following below illustration.

5	
4pcs	




STEP4: Following below illustration.

6



4pcs

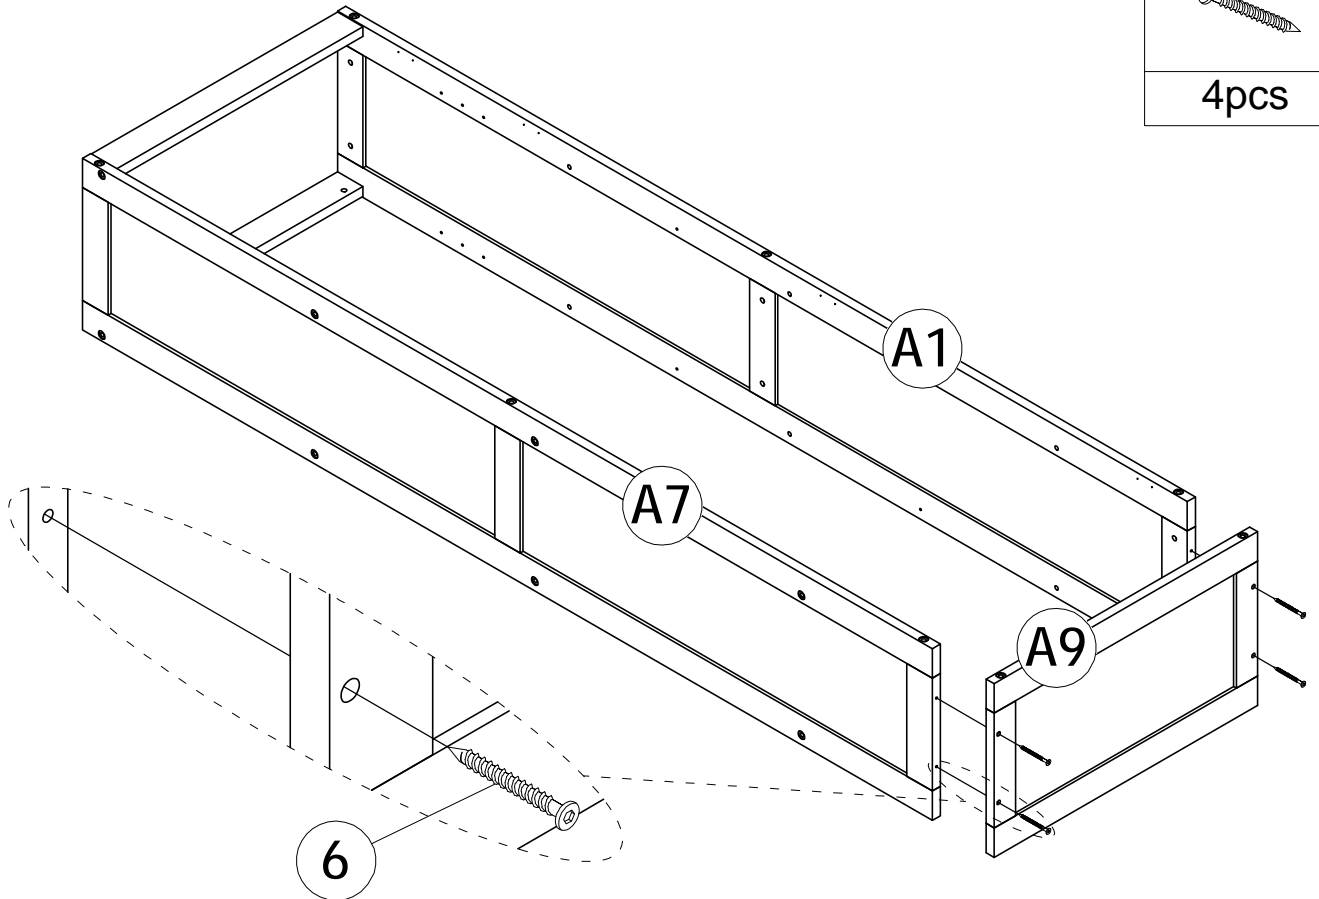

STEP5: Following below illustration.

2




12pcs


4








12pcs

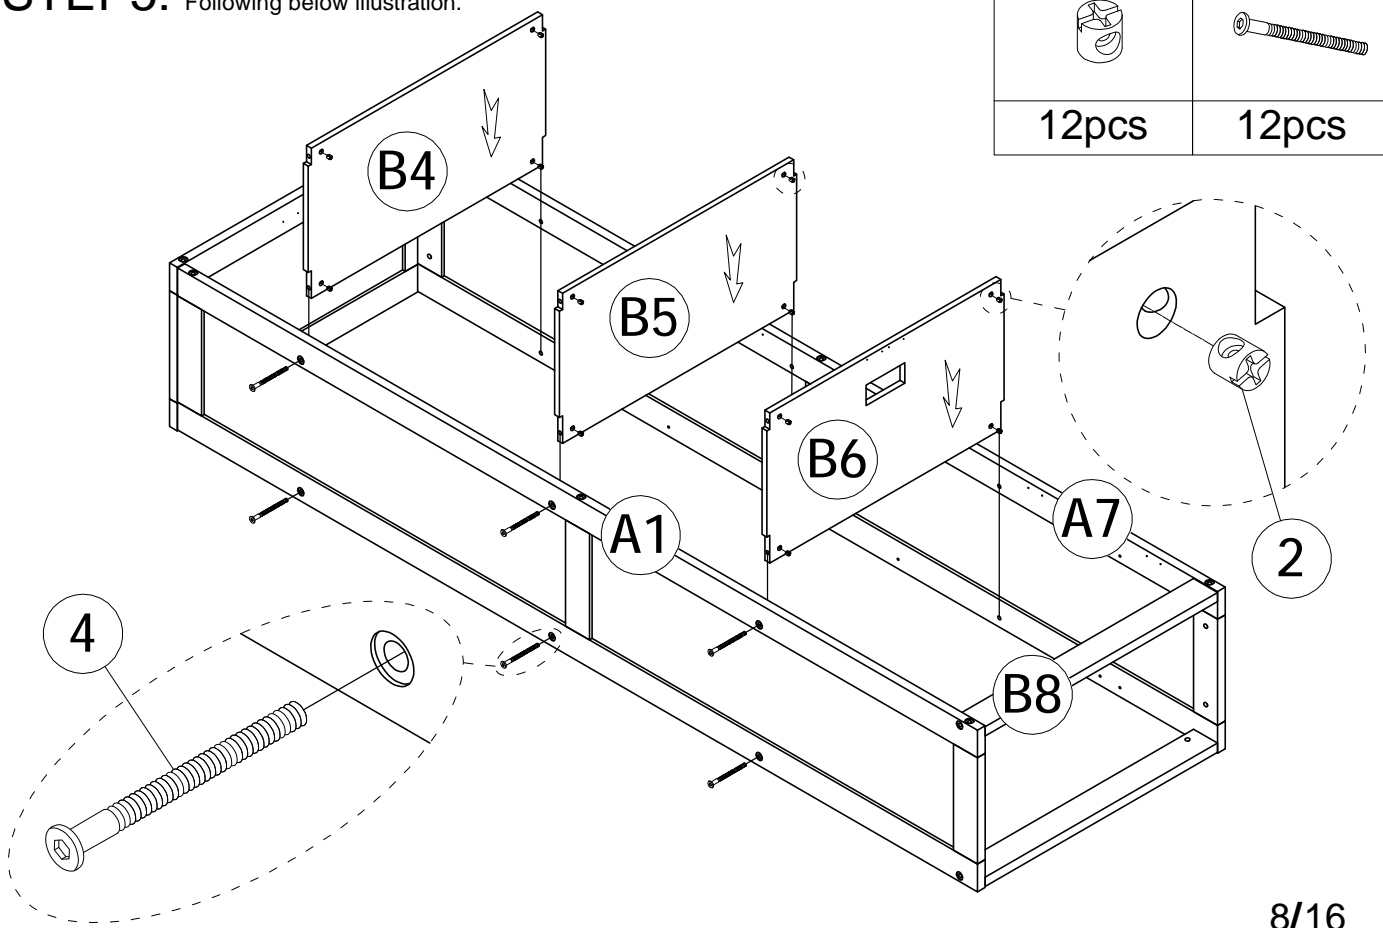


STEP6: Following below illustration.

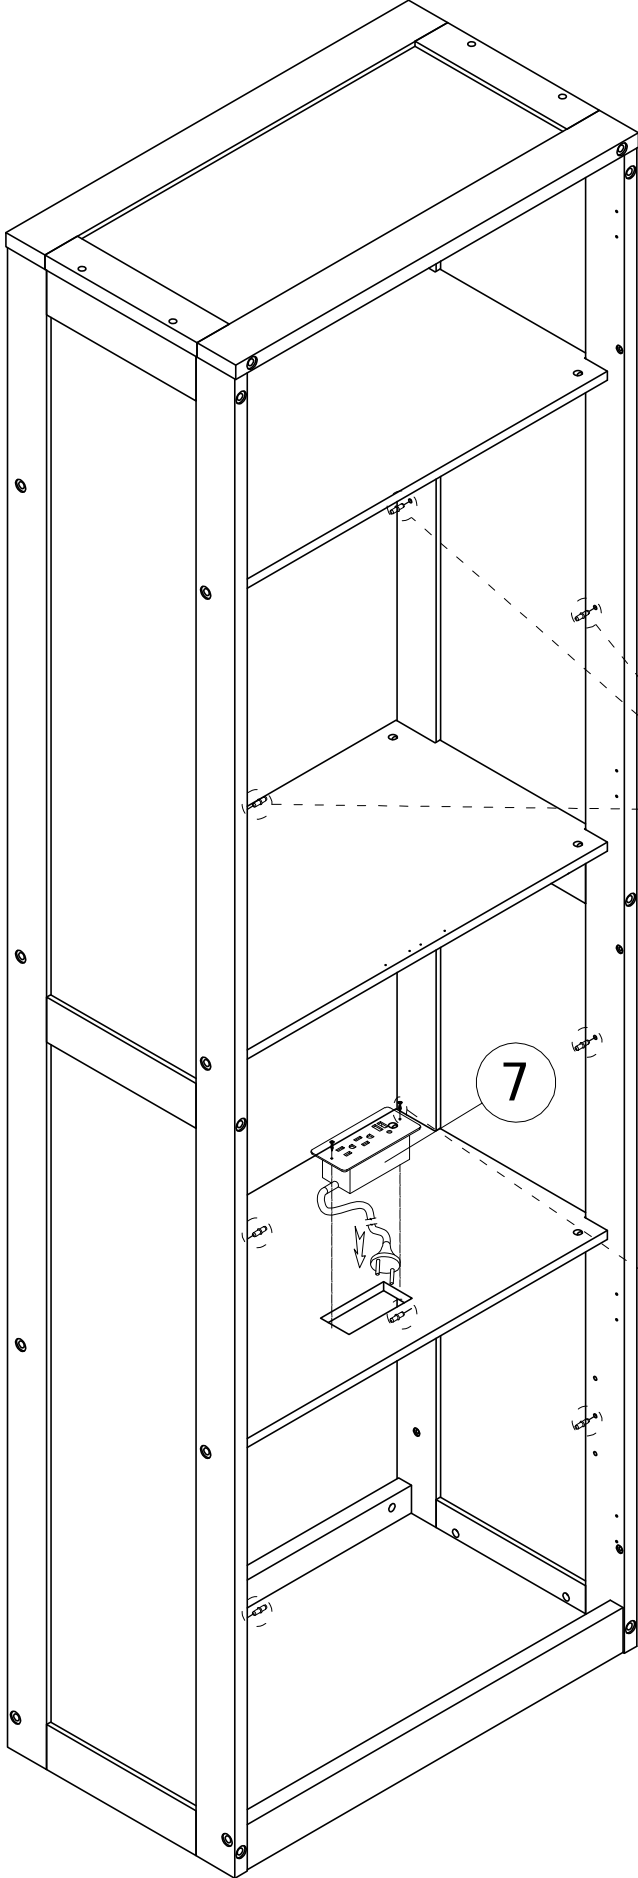

7	
	1pc
8	
	2pcs
9	
	12pcs

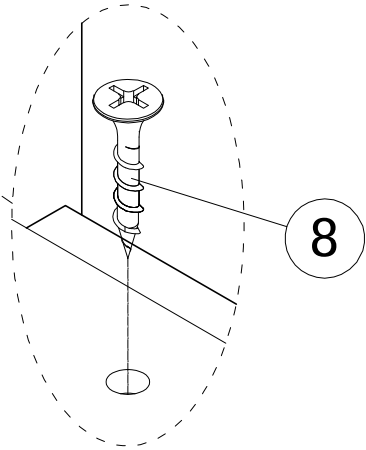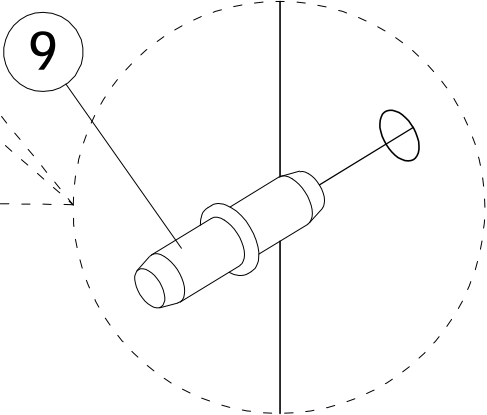


STEP7: Following below illustration.


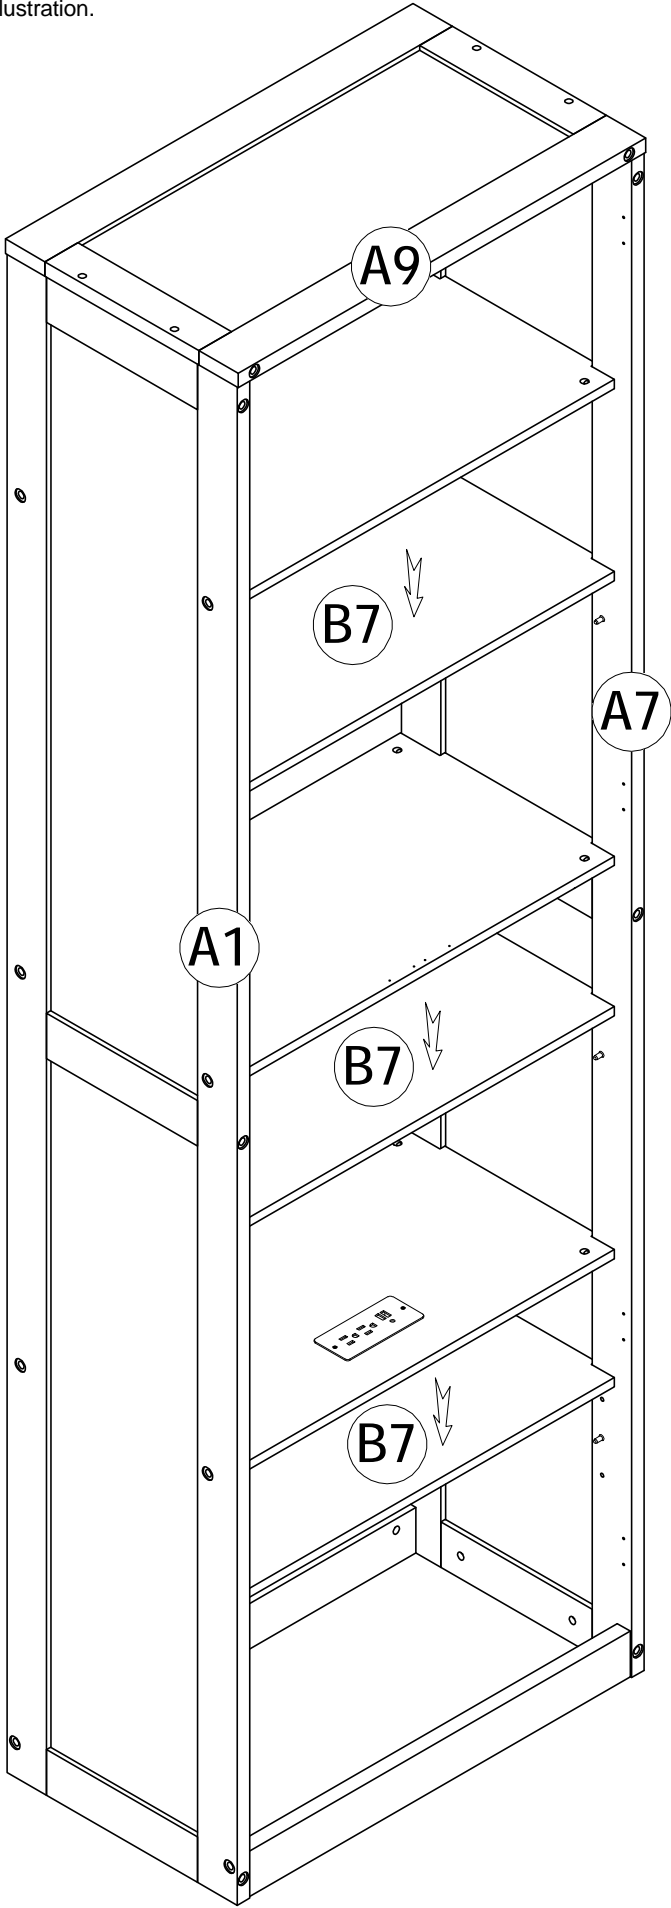


STEP8: Following below illustration.


10



40pcs

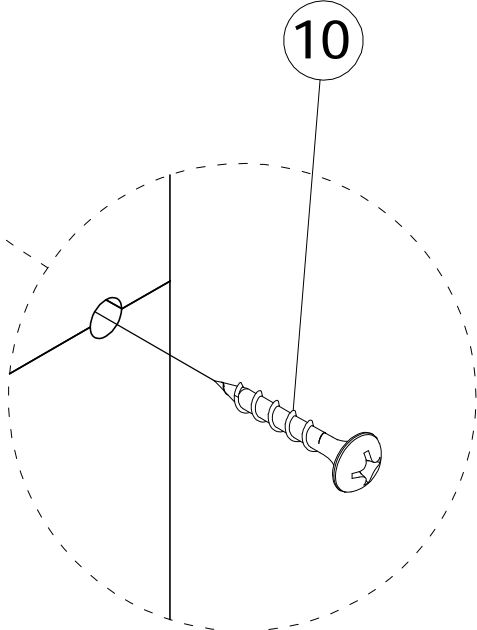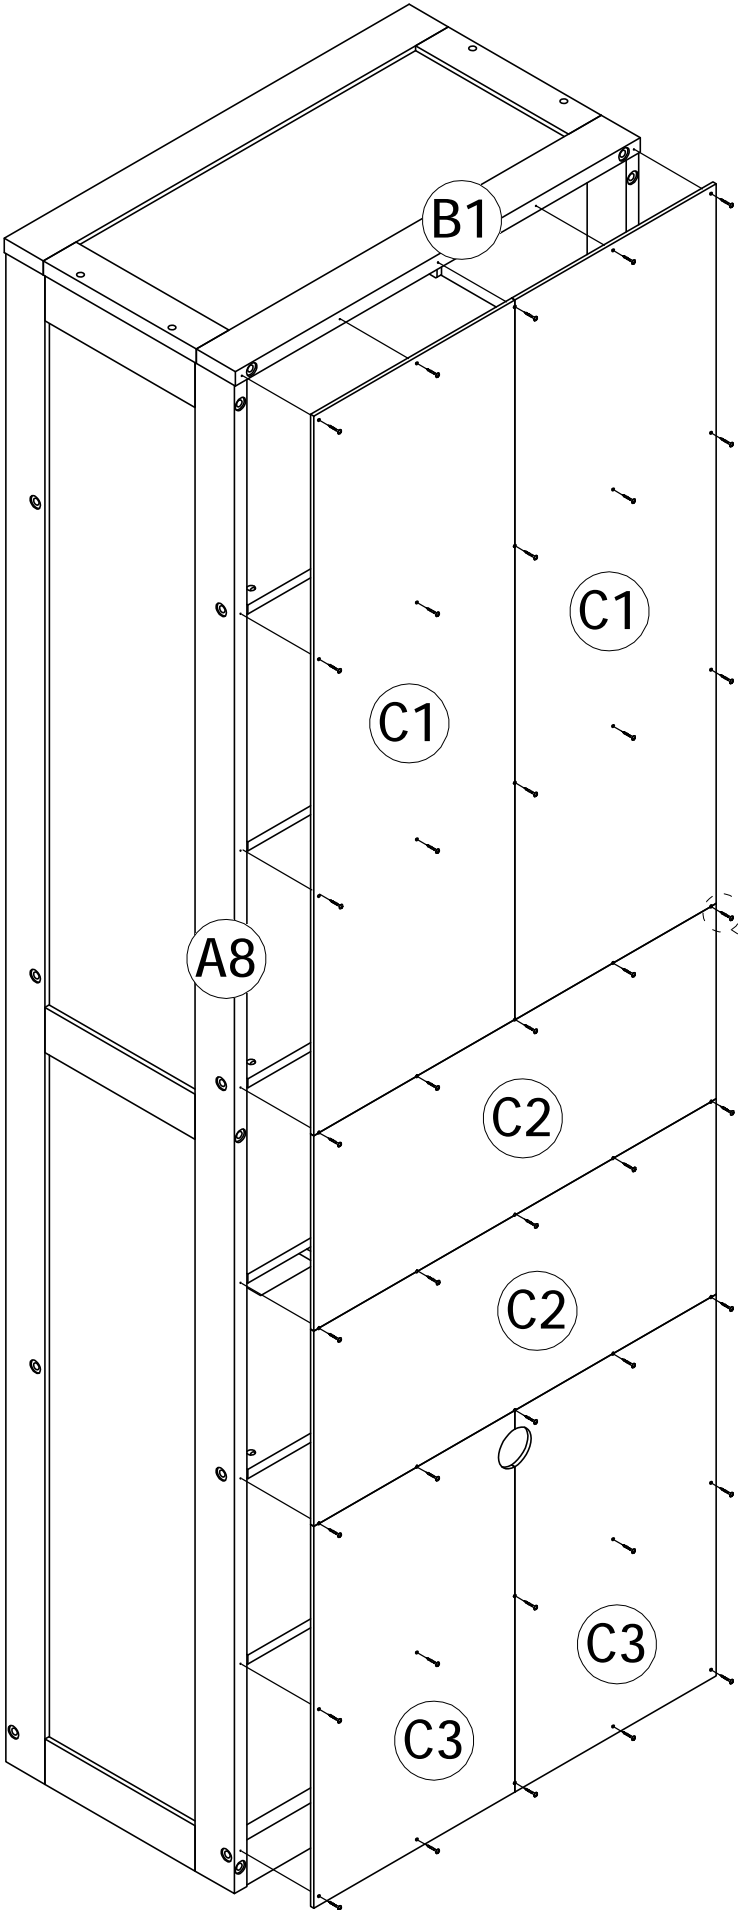

STEP9: Following below illustration.

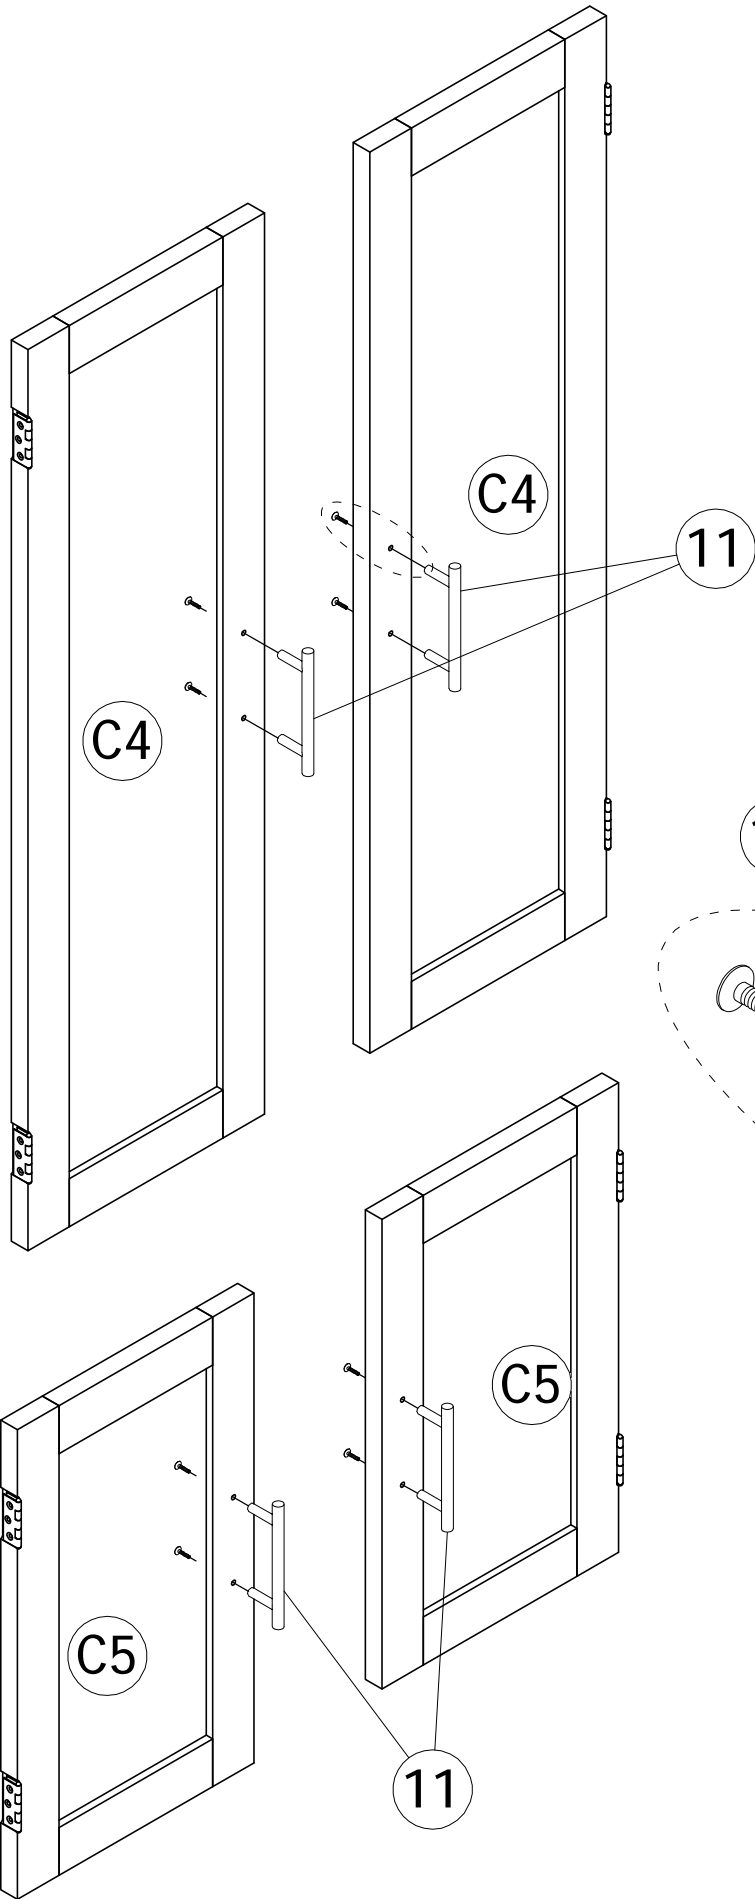



11	
	4pcs
12	
	8pcs

STEP10: Following below illustration.

13




24pcs

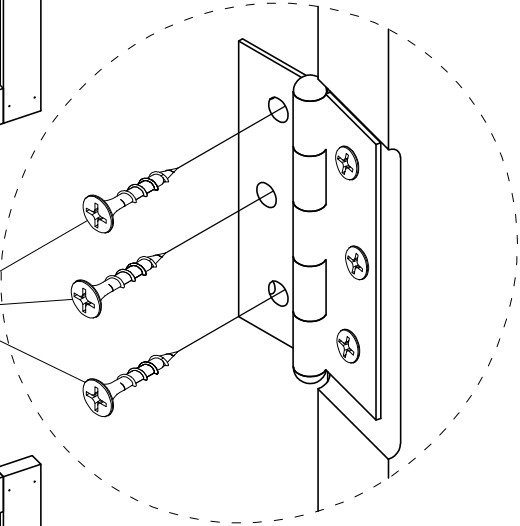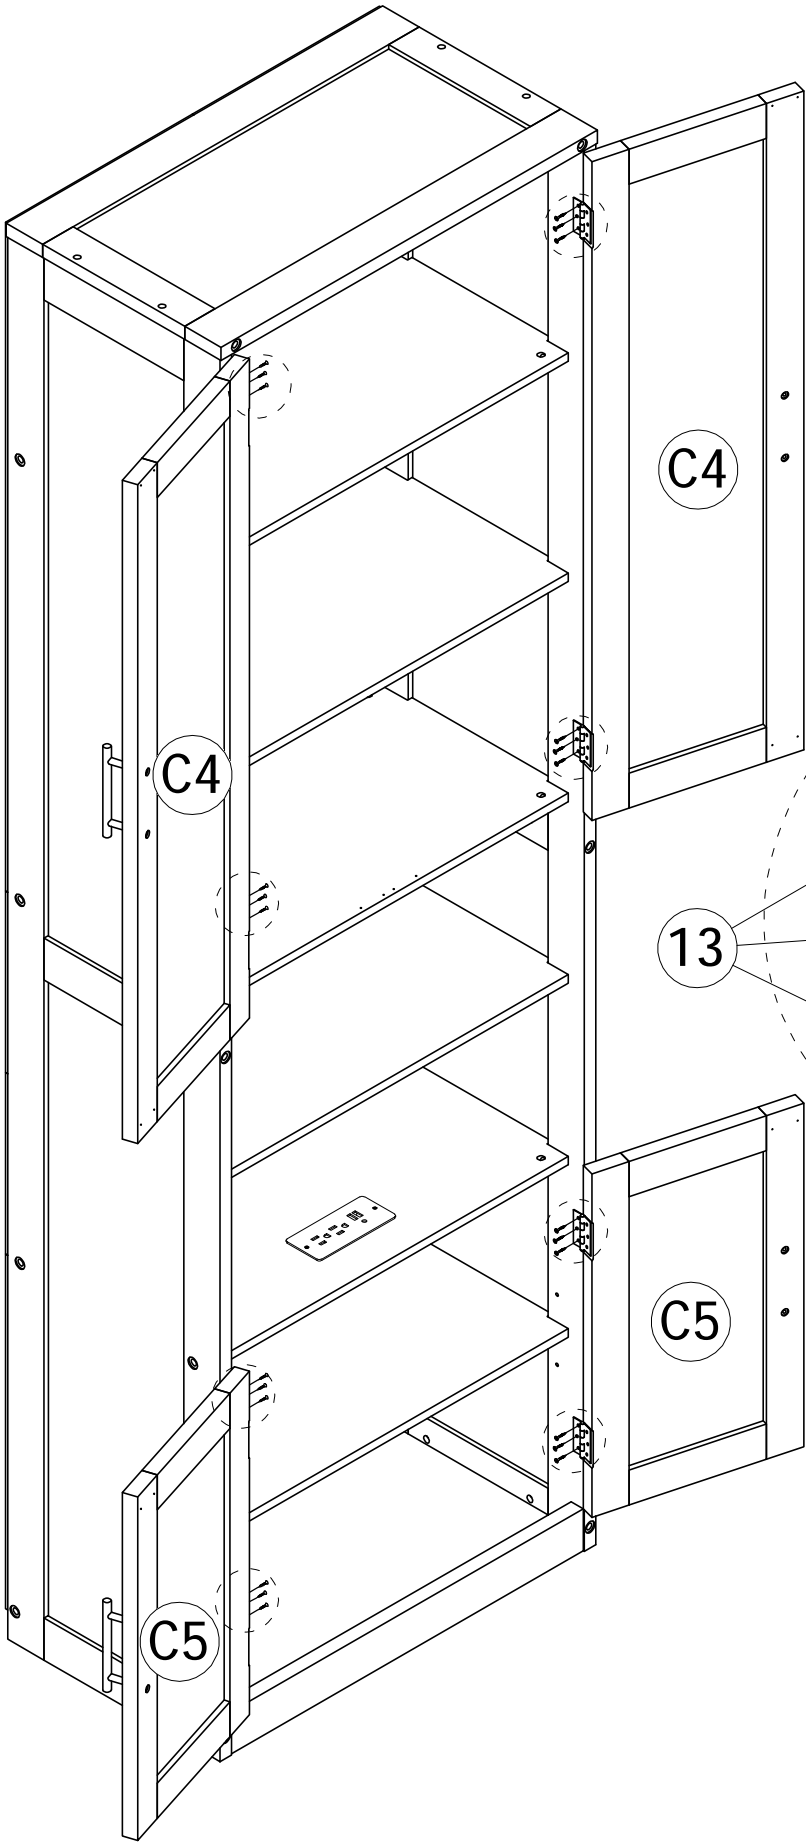


STEP11: Following below illustration.

10




12pcs

15



6pcs



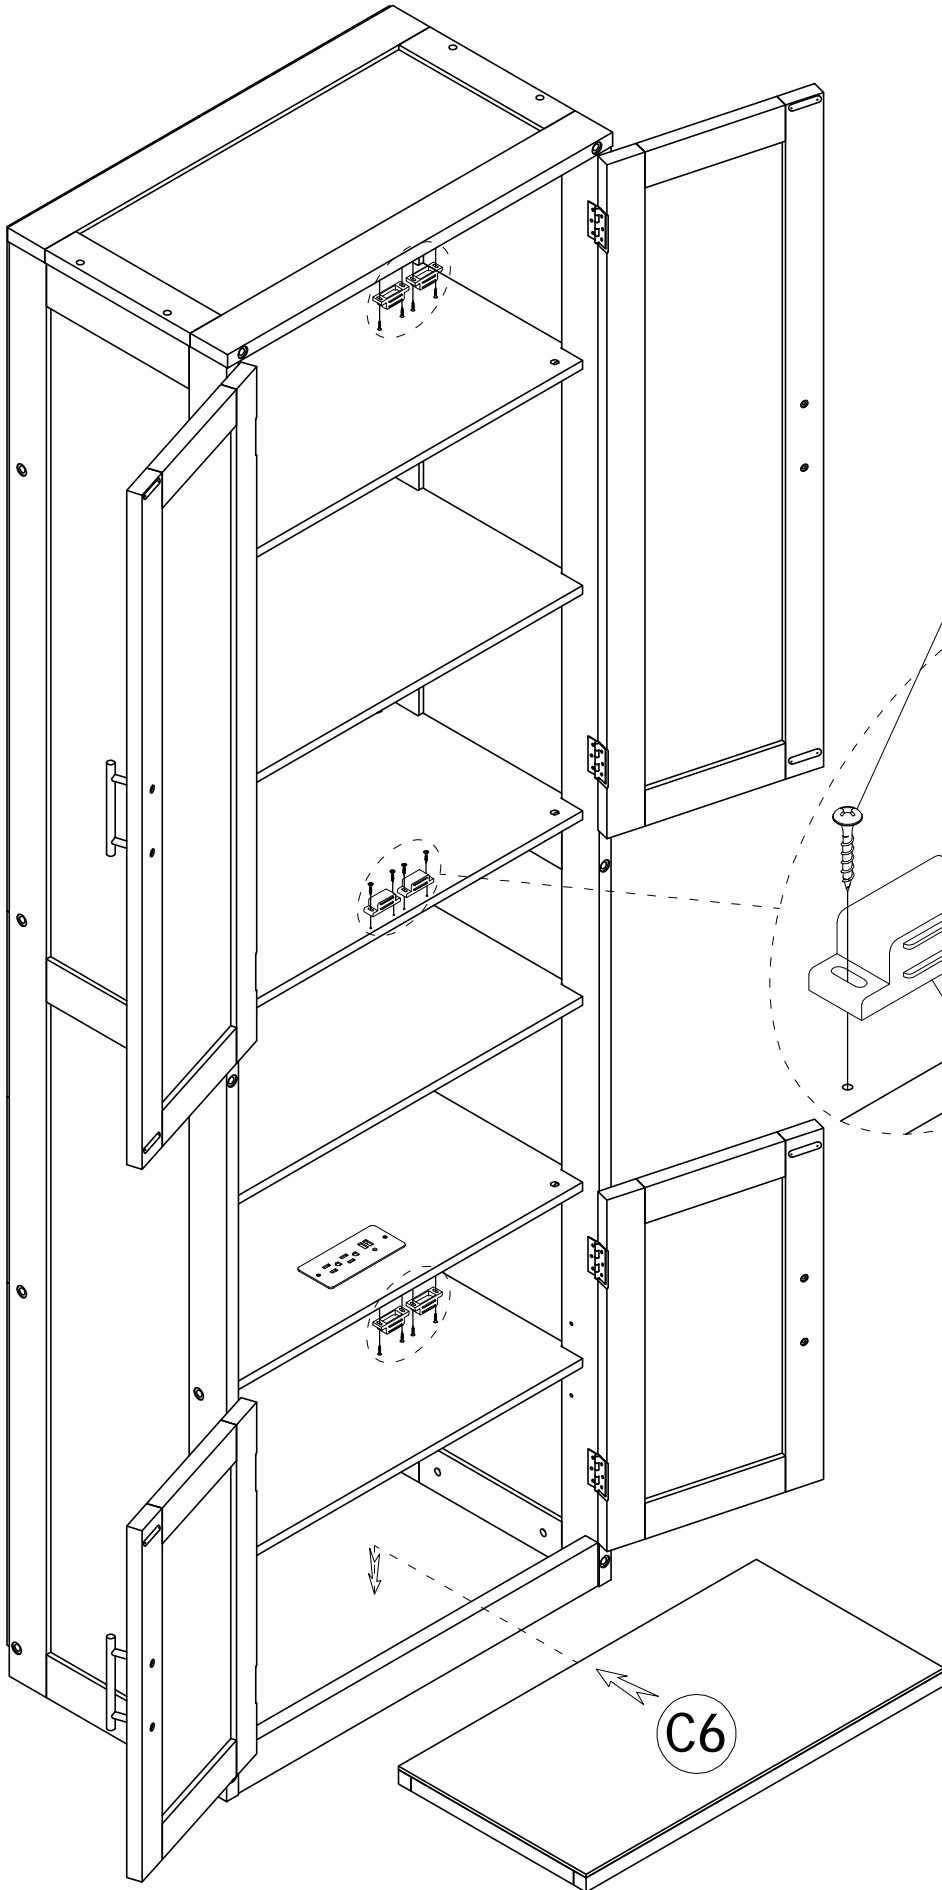



10

15

C6

STEP12: Following below illustration.

13 	16 	17 
8pcs	4pcs	4pcs

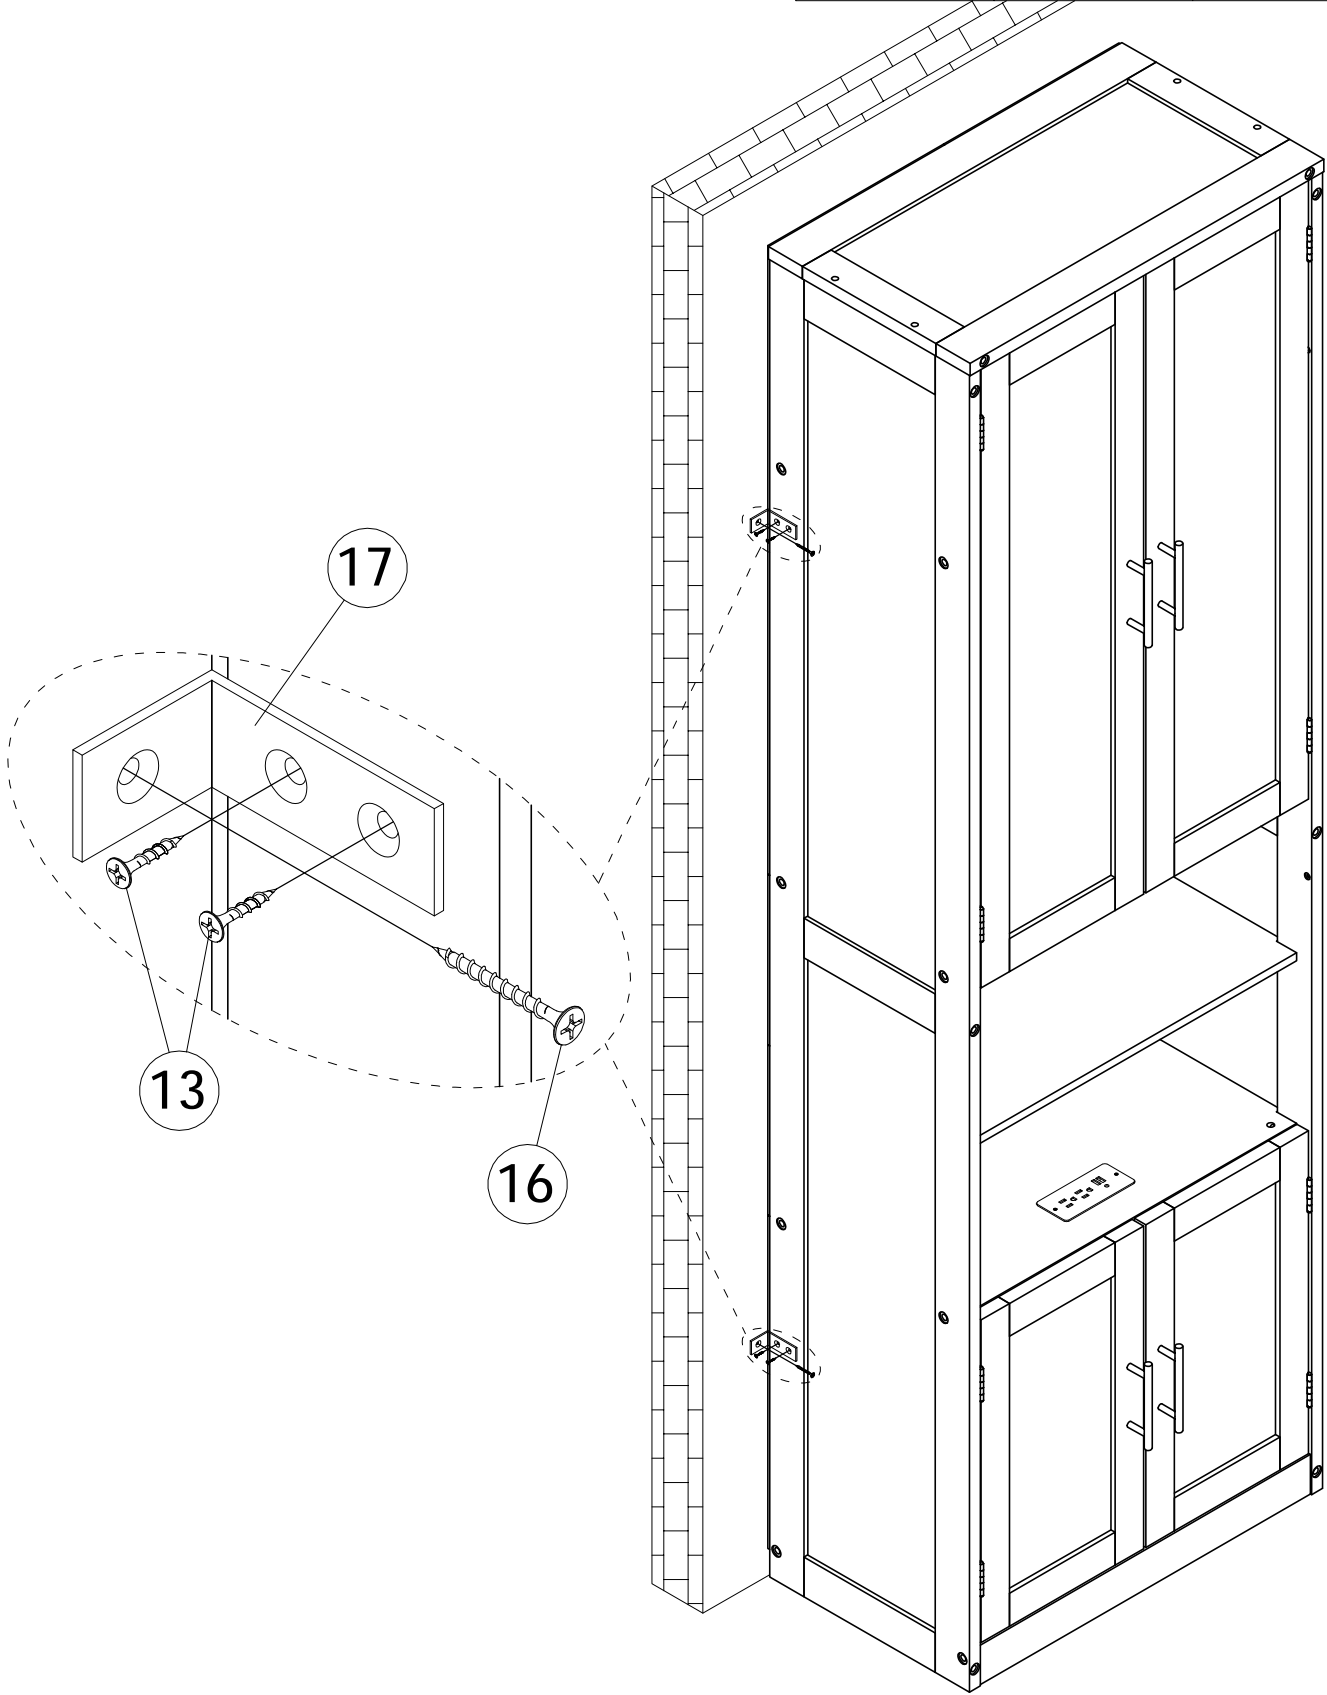

FINISH:

