


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

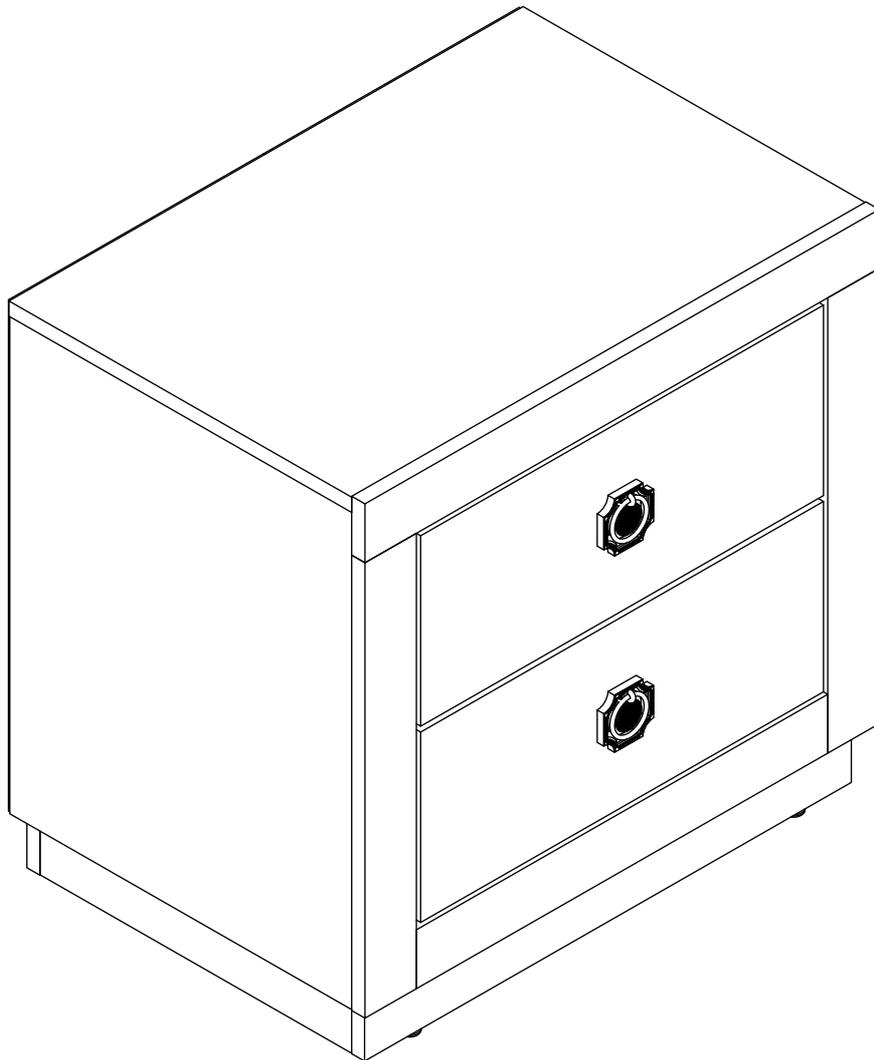


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

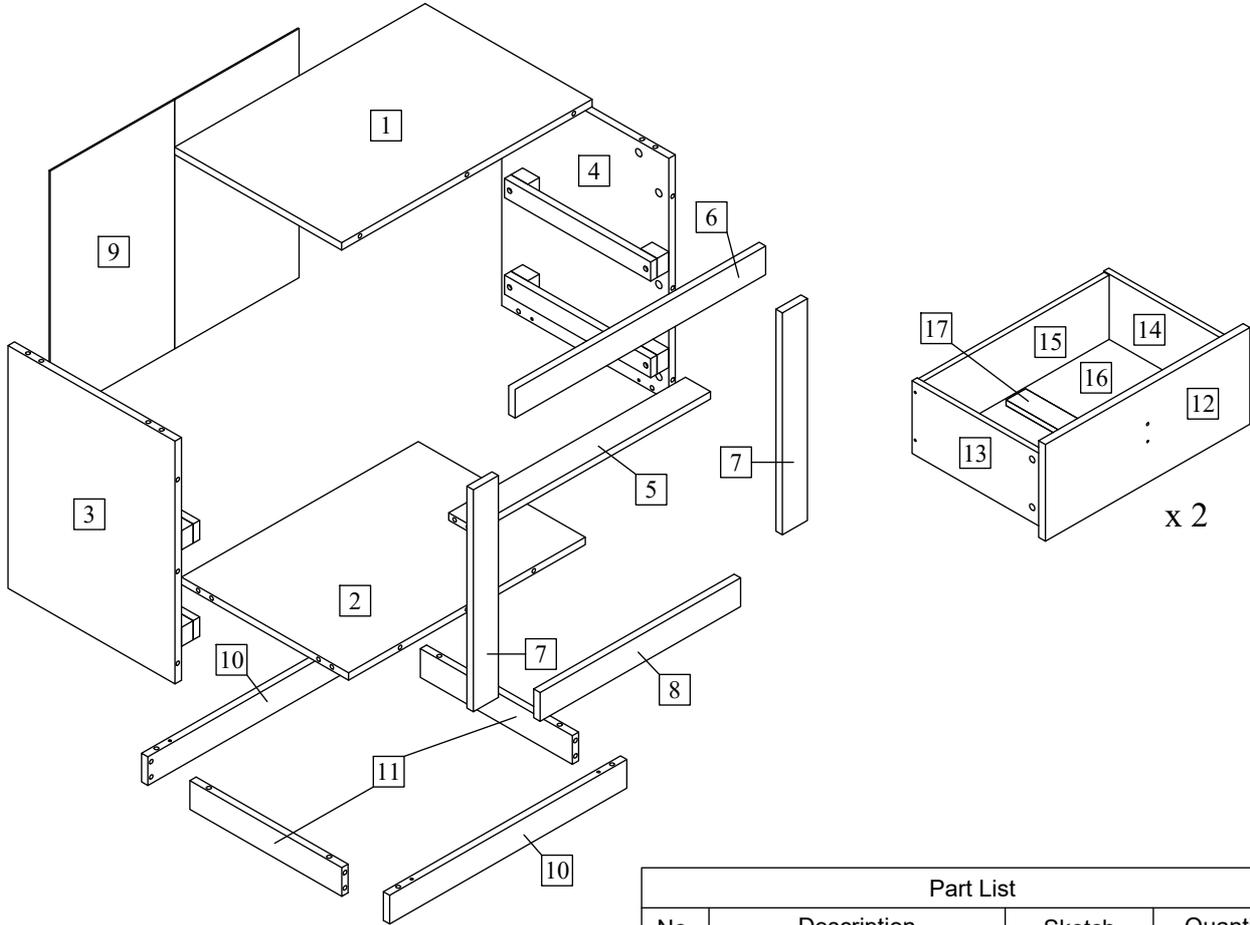

TOOLS REQUIRED (Not provided)



Screwdriver

Hardware List

No.	Description	Sketch	Quantity
A	Minifix Bolt		34PCS
B	Minifix Cam		34PCS
C	Wood Dowel M8 x 25mm		26PCS
D	CSK Screw M3.5 x 12mm		28PCS
E	CSK Screw M4 x 32mm		8PCS
F	Panhead Screw M4 x 12mm		16PCS
G	Panhead Screw M4 x 45mm		4PCS
H	Handle Screw 5/32" x 12mm		2PCS
I	Handle		2PCS
J	Drawer Slide 12" J1 (L/R) J2 (L/R)		2SETS
K	C100 Plastic Nail		4PCS

Part List

No.	Description	Sketch	Quantity
1	Top Panel		1PC
2	Bottom Panel		1PC
3	Side Panel - L		1PC
4	Side Panel - R		1PC
5	Middle Support Rail		1PC
6	Front Frame - Top		1PC
7	Front Frame - Side		2PCS
8	Front Frame - Bottom		1PC
9	Back Panel		1PC
10	Leg - Front		2PCS
11	Leg - Side		2PCS
12	Drawer Front		2PCS
13	Drawer Side - L		2PCS
14	Drawer Side - R		2PCS
15	Drawer Back		2PCS
16	Drawer Bottom		2PCS
17	Drawer Bottom Support		2PCS


ASSEMBLY INSTRUCTIONS


Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 1 : Attach Minifix Bolt (A) to Top Panel (1), Side Panel - L (2), Side Panel - R (3), Front Frame - Top (6), Front Frame - Side (7), Front Frame - Bottom (8), Drawer Front Panel (12), Drawer Back Panel (15). Attach Wood Dowel M8 x25mm (C) to Bottom Panel (2), Side Panel - L (2), Side Panel - R (3), Middle Support Rail (5), Leg - Front (10), Leg - Side (11).

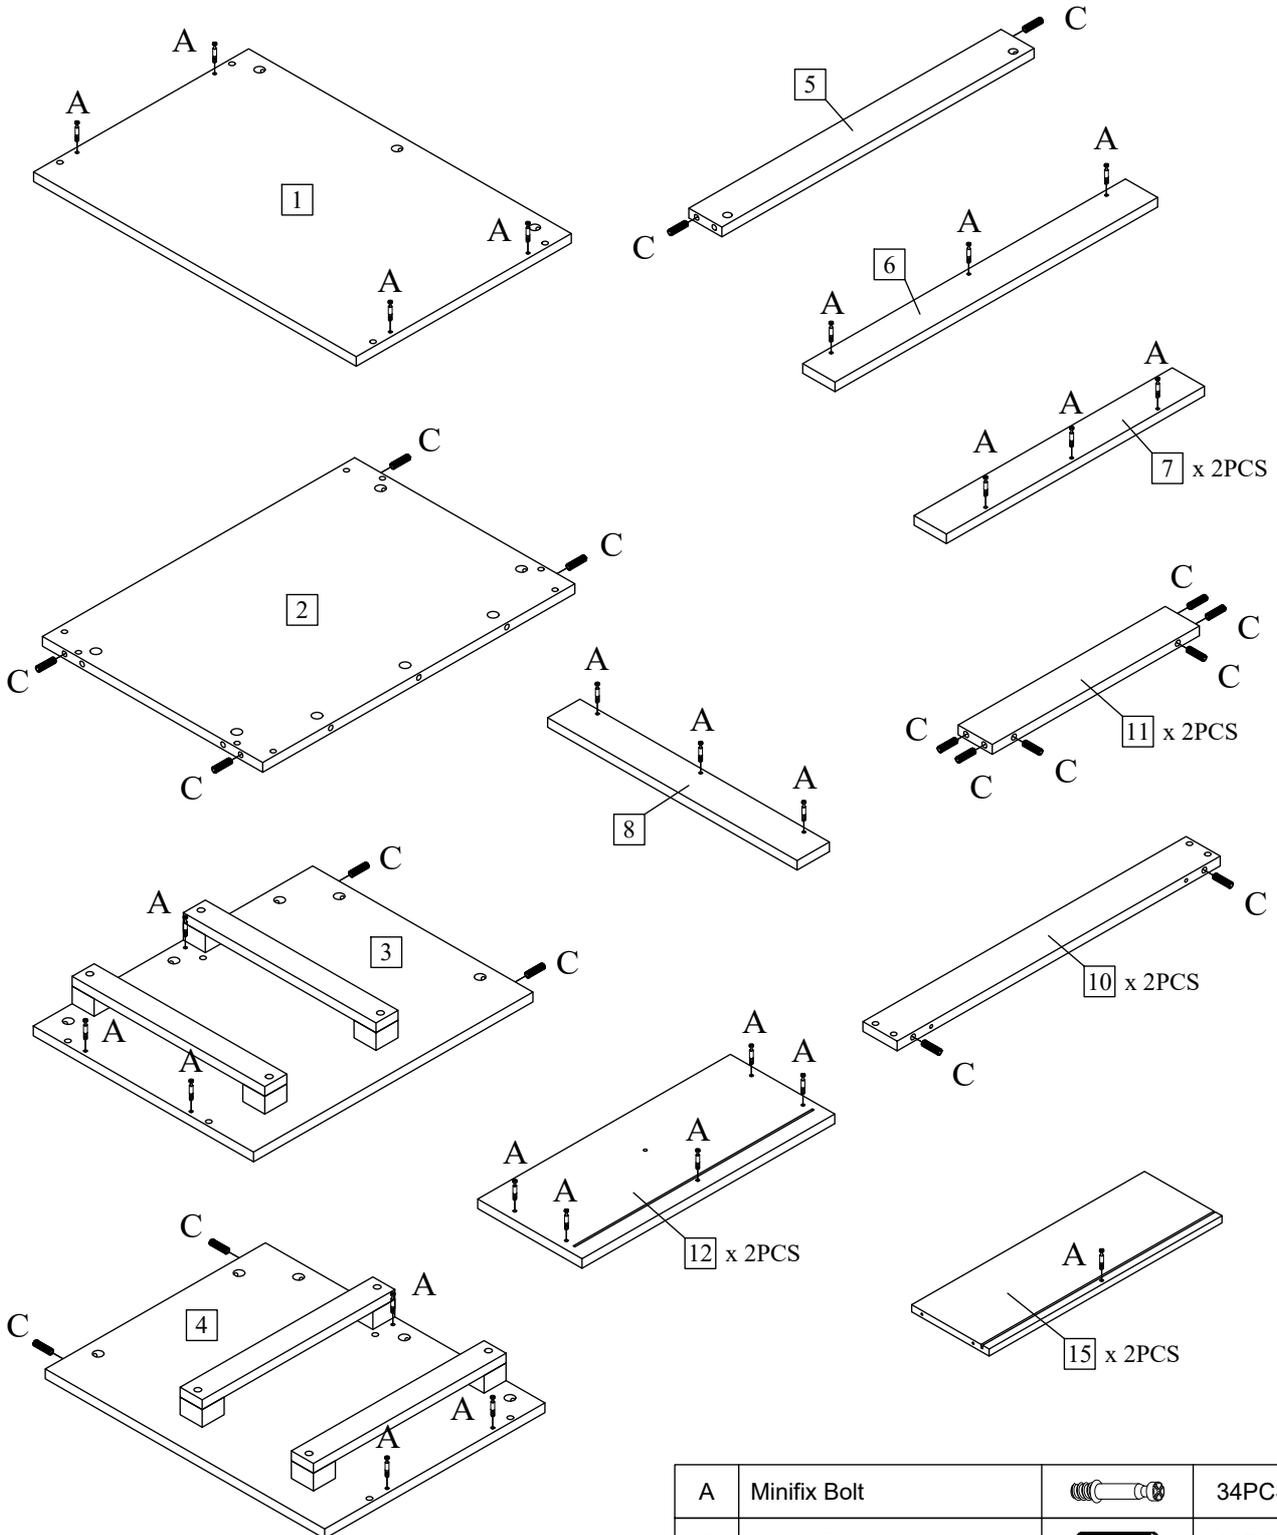

A	Minifix Bolt		34PCS
C	Wood Dowel M8 x 25mm		26PCS


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.


Step 2 : Connect the Front Frame - Top (6) to the Top Panel (1) and lock Minifix Cam (B).

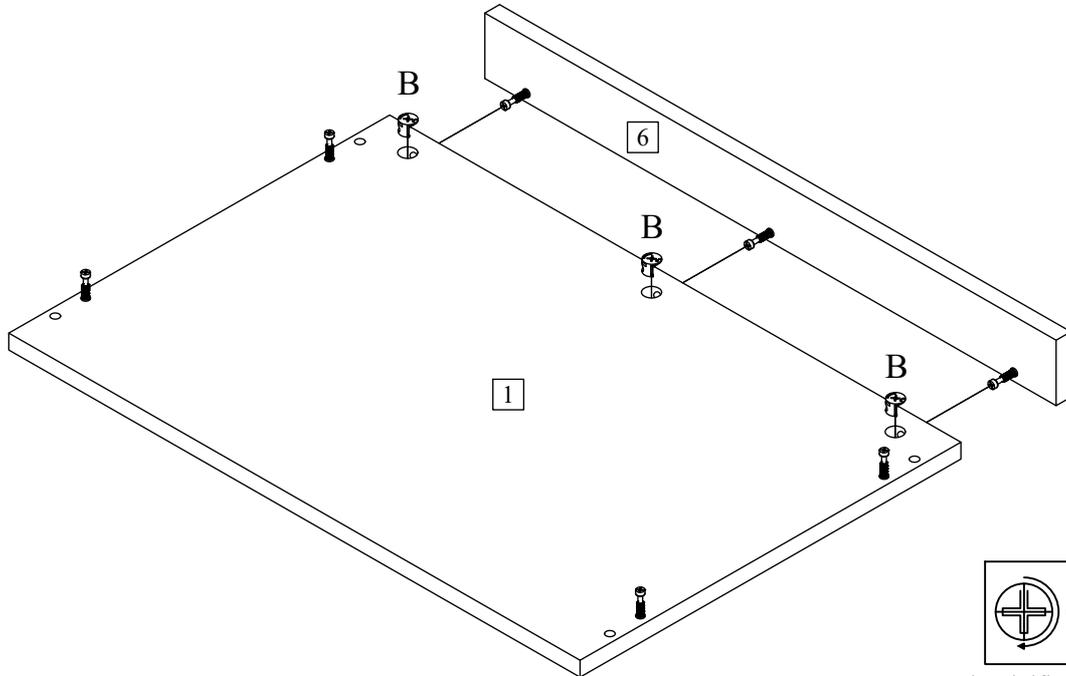

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		3PCS
---	---------------------	---	------

Step 3 : Connect the Front Frame - Bottom (8) to the Bottom Panel (2) and lock Minifix Cam (B).

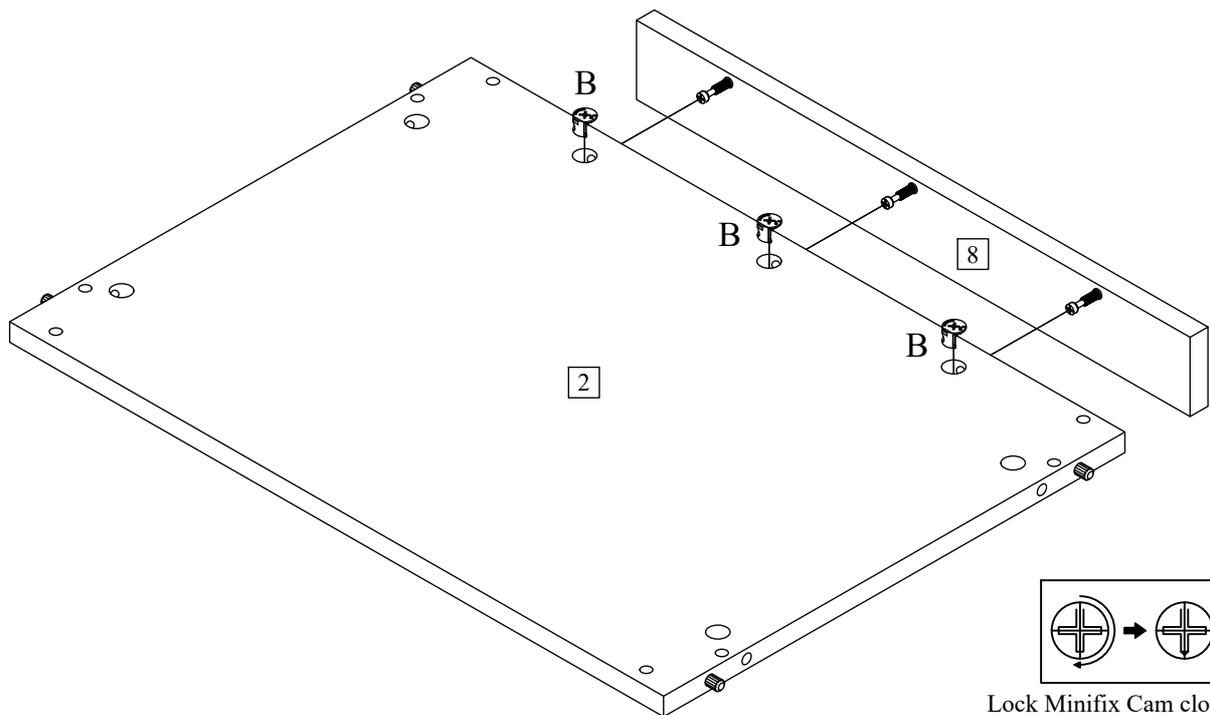

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		3PCS
---	---------------------	---	------


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.


Step 4 : Connect the Front Frame - Side (7) to the Side Panel - L (3) and lock Minifix Cam (B).

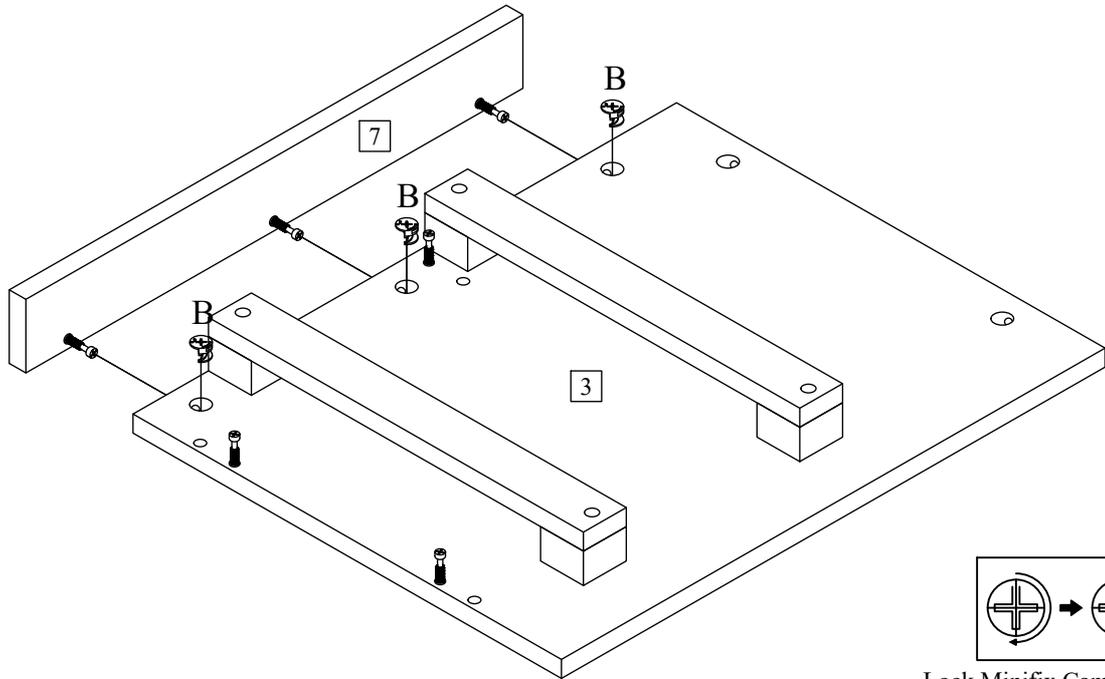

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		3PCS
---	---------------------	---	------

Step 5 : Connect the Front Frame - Side (7) to the Side Panel - R (4) and lock Minifix Cam (B).

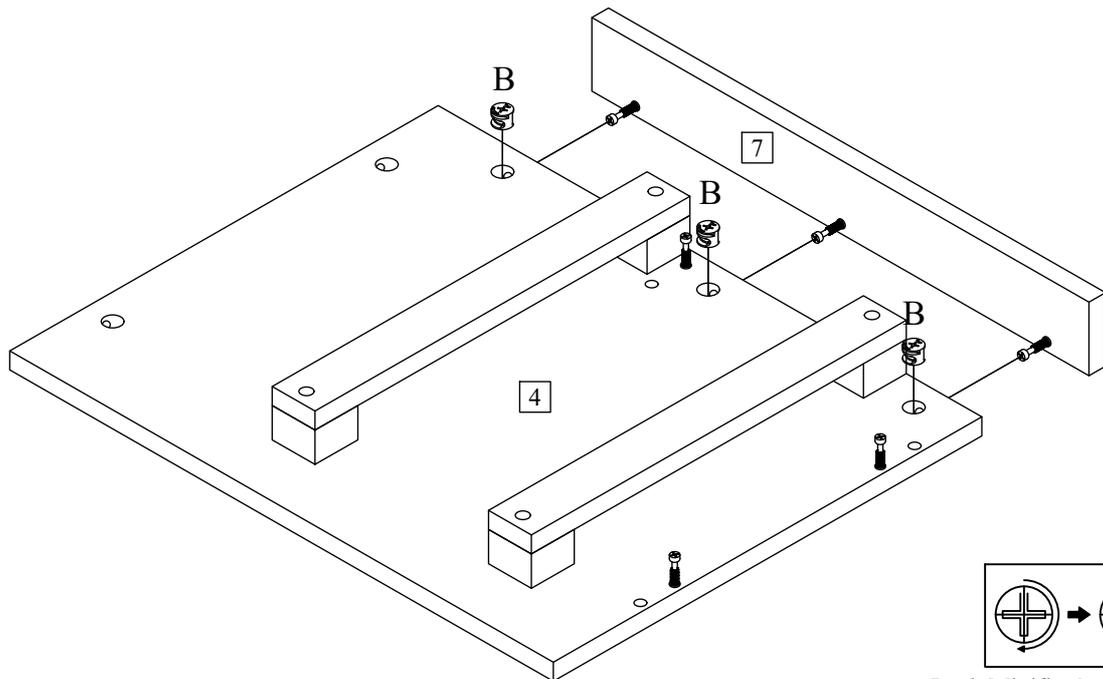

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		3PCS
---	---------------------	---	------


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 6 : Attach Drawer Slide (J1) to Slide Support - L (9) and Slide Support - R (10) with CSK Screw M3.5 x 12MM (D).

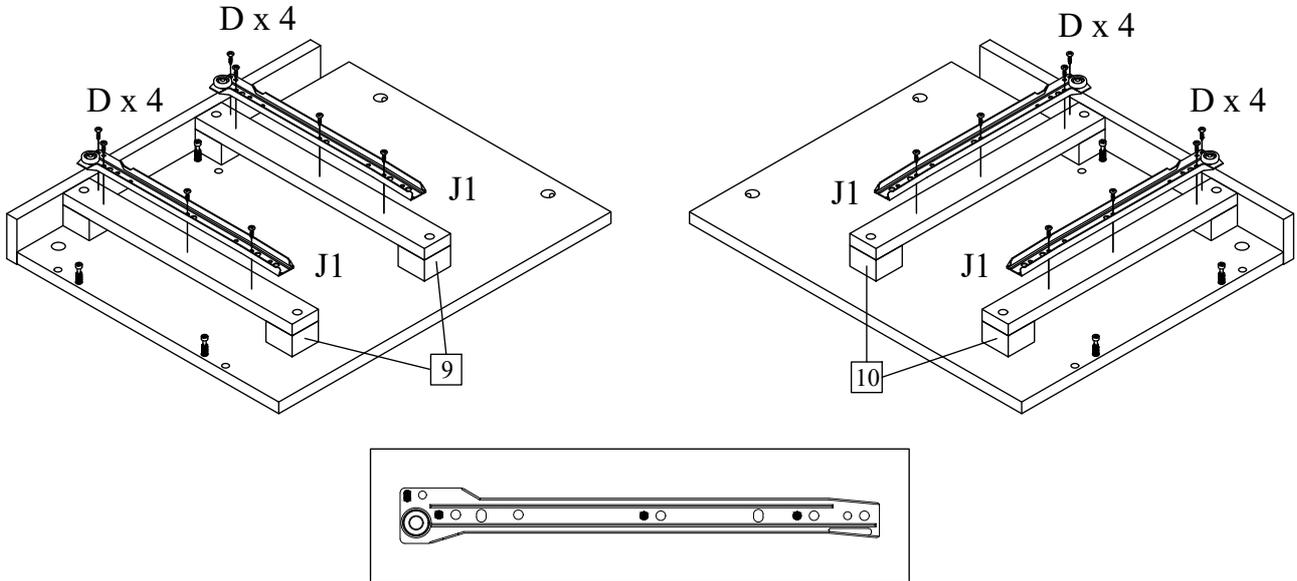

D	CSK Screw M3.5 x 12mm		16PCS
J1	Drawer Slide 12"		4PCS

Step 7 : Connect Side Panel - L (3) and Side Panel - R (4) to Bottom Panel (2) and Middle Support Rail (5) then lock Minifix Cam (B).

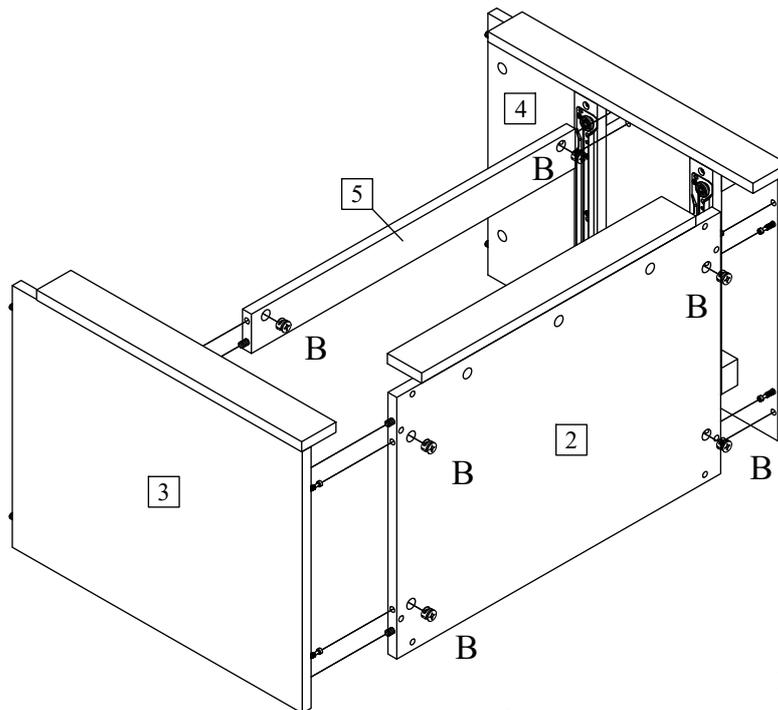

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		6PCS
---	---------------------	---	------


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.


Step 8 : Top Panel (1) to Side Panel - L (3) and Side Panel - R (4) then lock Minifix Cam (B).

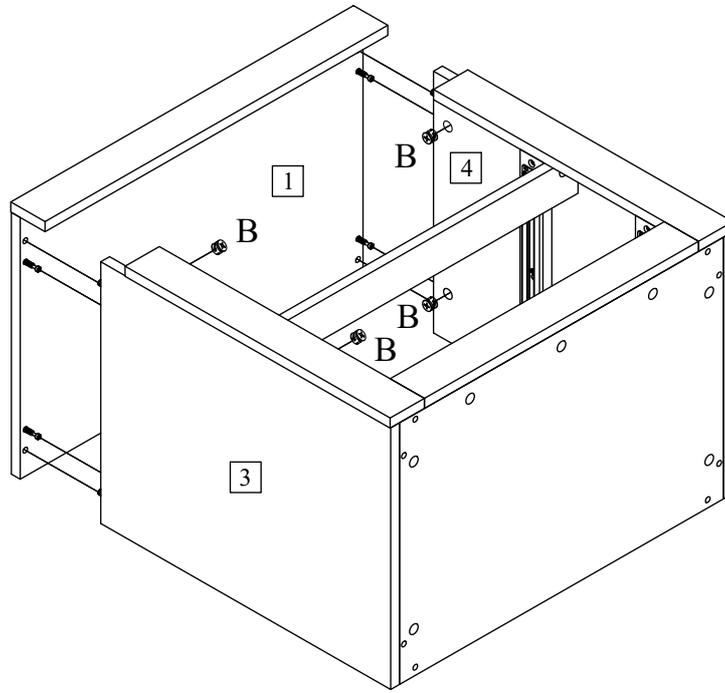

Lock Minifix Cam clockwise

B	Minifix Cam (Ø15mm)		4PCS
---	---------------------	---	------

Step 9 : Insert the Back Panel (9) from behind using Panhead Screw M4 x12MM (F).

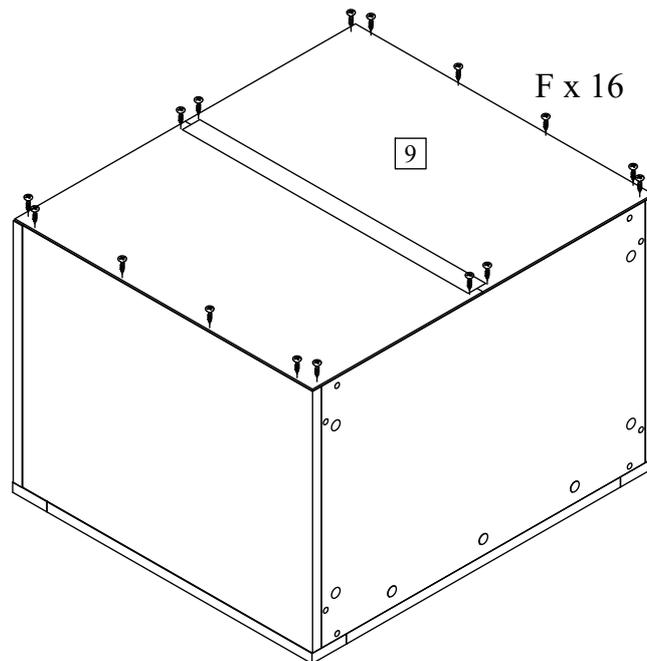

F	Panhead Screw M4 x 12mm		16PCS
---	-------------------------	---	-------



ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 10 : Connect Leg - Front (10) to Leg - Side (11). Then, attach the connected part onto body using Panhead Screw M4 x 45mm (G) with C100 Nail Pin (K).

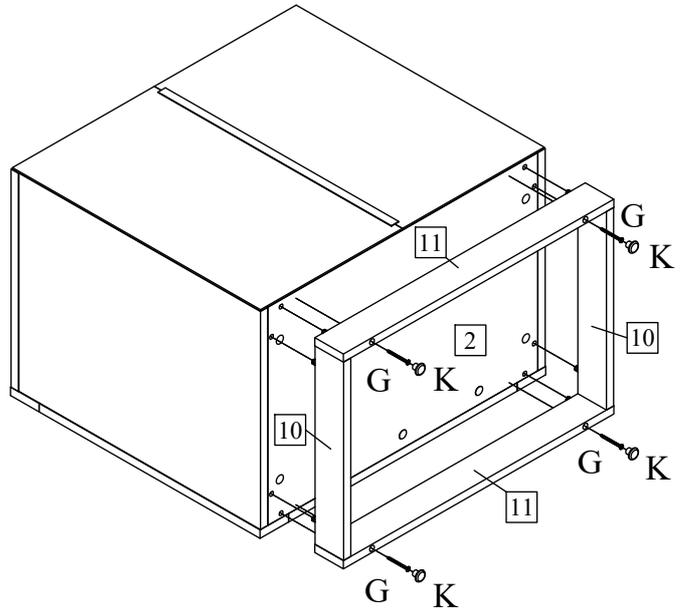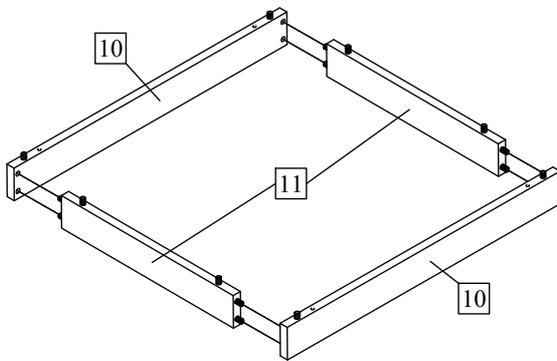

G	Panhead Screw M4 x 45mm		4PCS
K	C100 Plastic Nail		4PCS

Step 11 : Drawer assembly.


First connect Drawer Back (15) to Drawer Side - L (13) and Drawer Side - R (14) with CSK Screw M4 x 32MM (E).

Slot the Drawer Bottom Support (17) into Drawer Back (15). Next, slot in the Drawer Bottom (16).

Then, install the Handle (I) with Handle Screw 5/32" x 12mm (H) onto Drawer Front (12). Attach the Drawer Front (12) to the drawer box and lock the Minifix Cam (B).

Finally, install Drawer Slide (K2) onto the drawer box using CSK Screw M3.5 x 12MM (D).

Drawer assembly x 2

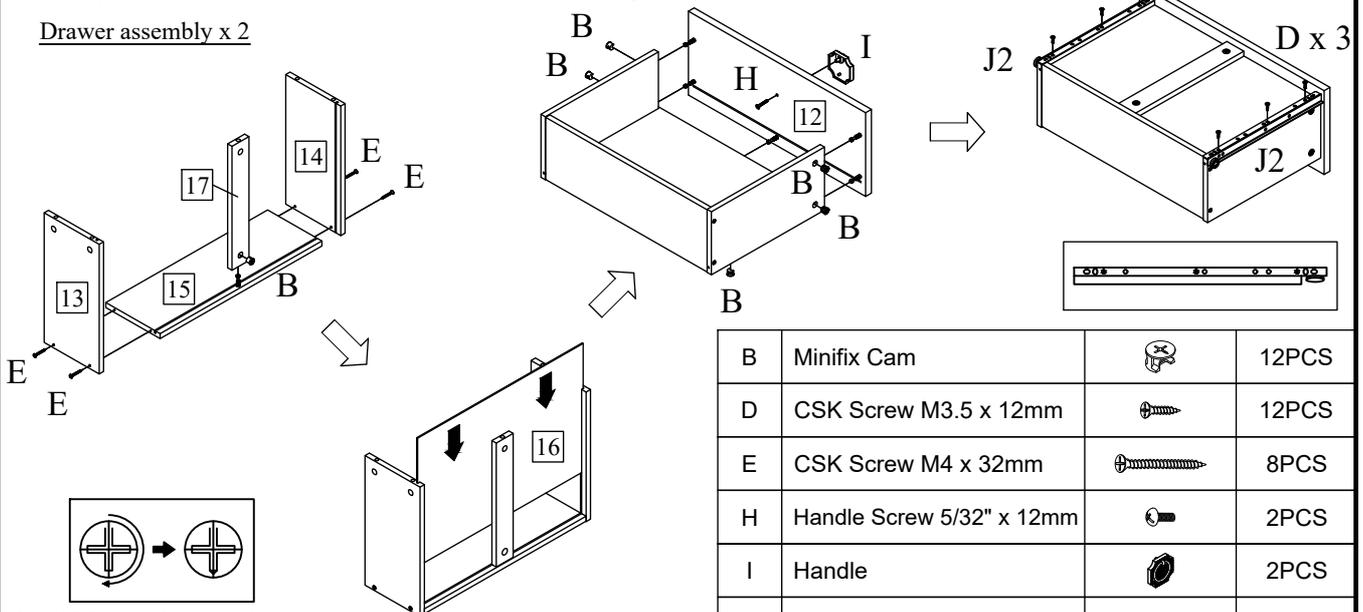

B	Minifix Cam		12PCS
D	CSK Screw M3.5 x 12mm		12PCS
E	CSK Screw M4 x 32mm		8PCS
H	Handle Screw 5/32" x 12mm		2PCS
I	Handle		2PCS
J2	Drawer Slide 12"		2SETS


ASSEMBLY INSTRUCTIONS

Item No : WF316109

Description : NIGHTSTAND

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 12 : Insert the drawer box.

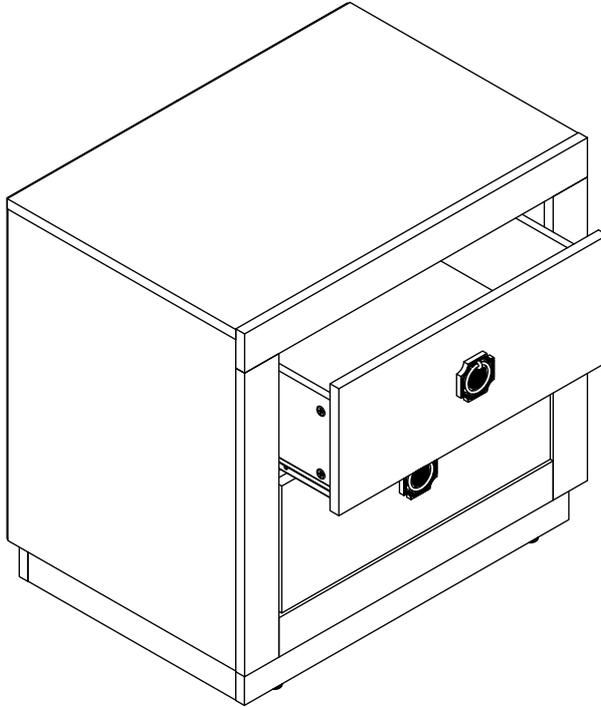

Completed assembly.

