


ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

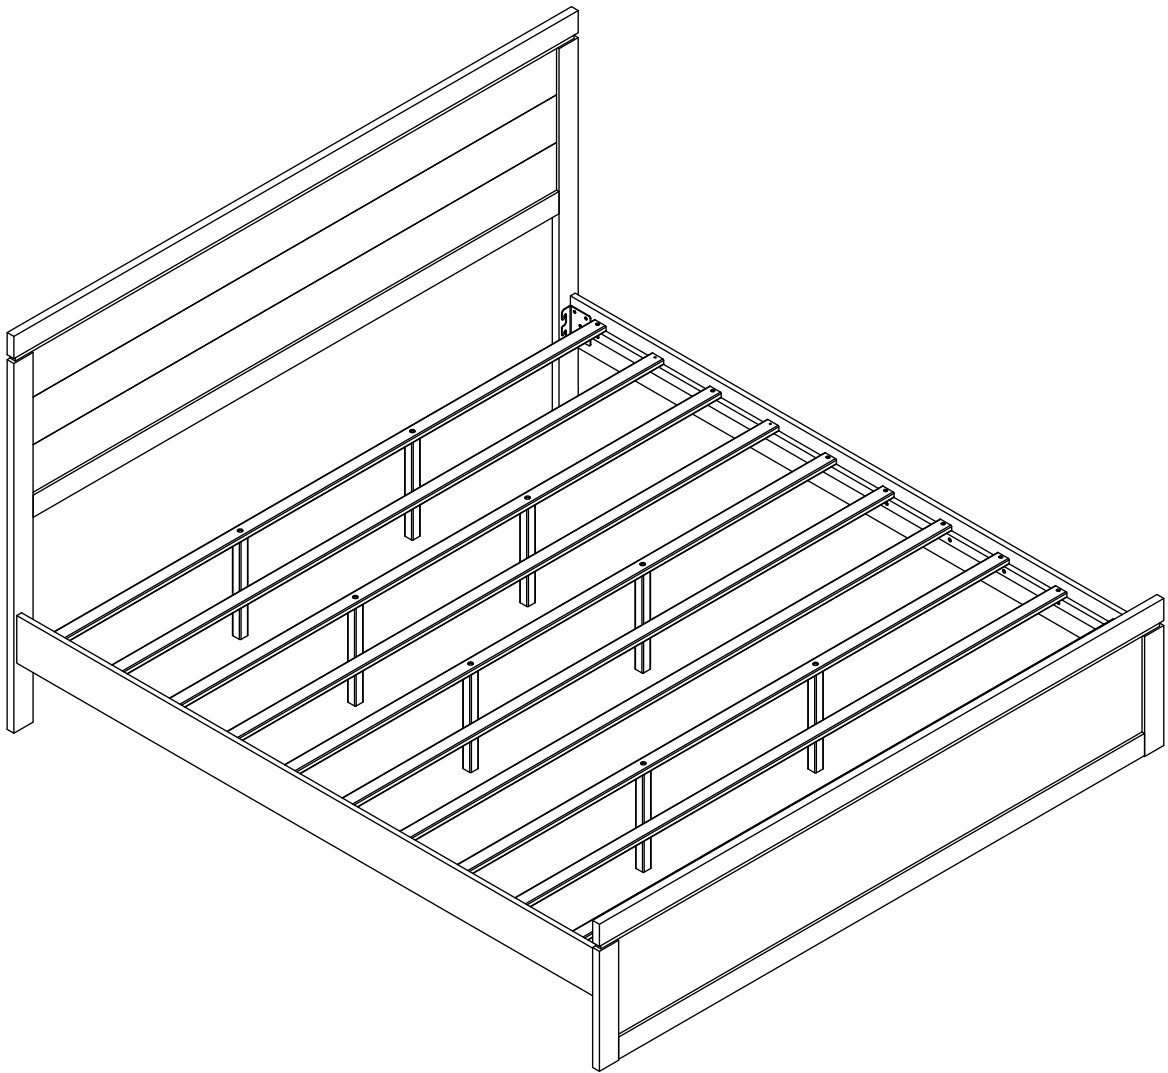


ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

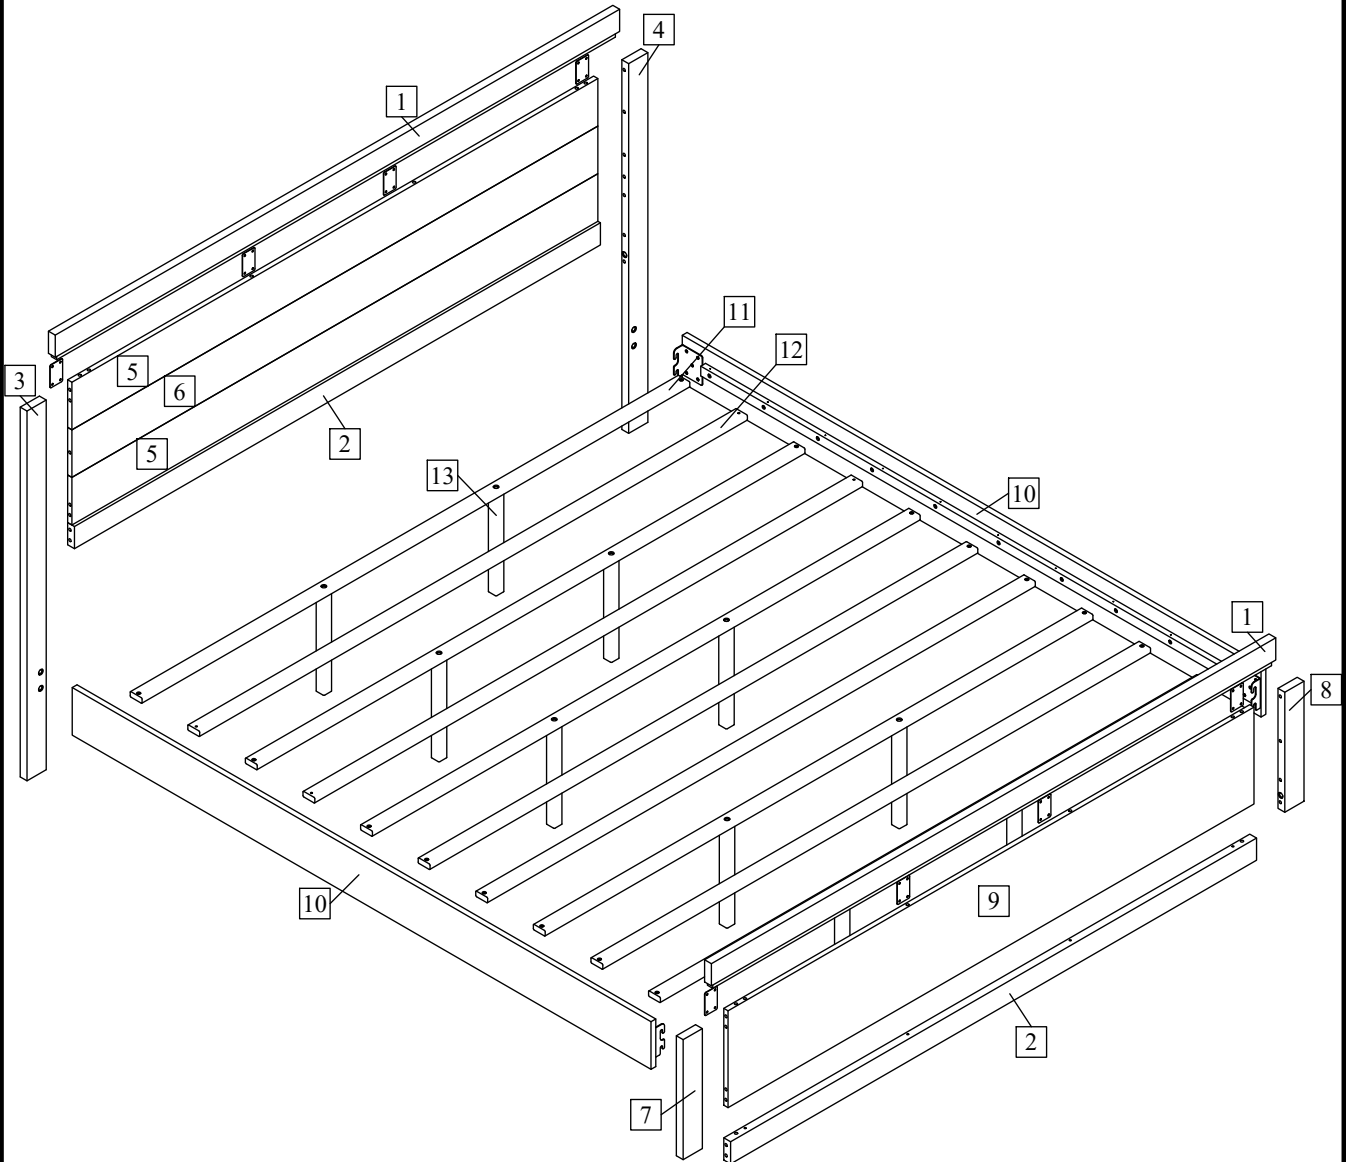
































ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Part List				Hardware List			
No.	Description	Sketch	Quantity	No.	Description	Sketch	Quantity
1	Top Rail		2PCS	A	Minifix Bolt		16PCS
2	Bottom Rail		2PCS	B	Minifix Bolt (Double Head)		10PCS
3	Headboard - Leg Left		1PC	C	Minifix Cam		36PCS
4	Headboard - Leg Right		1PC	D	Wood Dowel M8 x 30mm		38PCS
5	Headboard - Top & Btm. Panel		2PCS	E	Panhead Screw M4 x 30mm		20PCS
6	Headboard - Center Panel		1PC	F	C100 Plastic Nail		4PCS
7	Footboard - Leg Left		1PC	G	JCBB M8 x 20mm		8PCS
8	Footboard - Leg Right		1PC	H	Flat Washer M8		8PCS
9	Footboard - Center Panel		1PC	I	Allen Key M5		1PC
10	Side Rail		2PCS	J	JCBC M6 x 50mm		14PCS
11	Slat - 1		5PCS	K	Adjustable Glider		10PCS
12	Slat - 2		5PCS	L	Allen Key M4		1PC
13	Vertical Leg		10PCS	M	Bed Bracket L/R		2 SETS
TOOLS REQUIRED (Not provided)				N	4H Metal Plate		8PCS
 Screwdriver				O	CSK Screw M3.5 x 16mm		52PCS
				P	Spring Washer M6		4PCS
				Q	Flat Washer M6 x 13mm		4PCS


ASSEMBLY INSTRUCTIONS





Item No : WF531611

Description : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

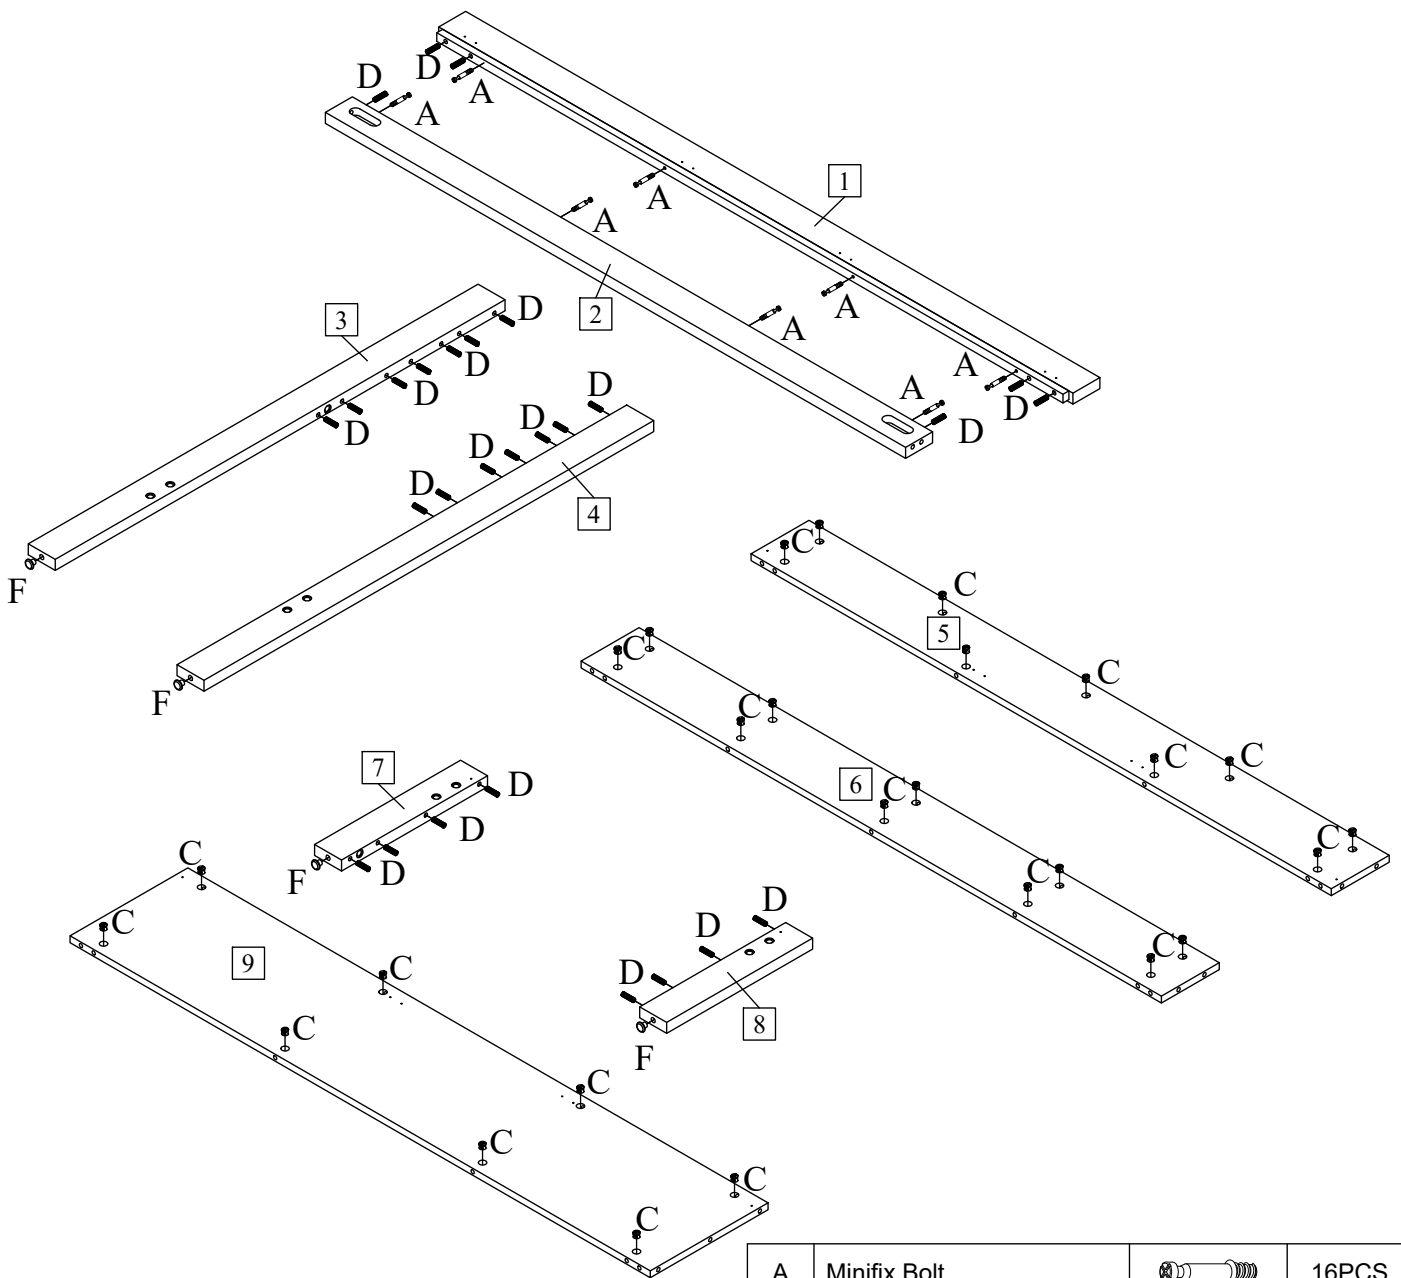Step 1 : Attach Minifix Bolt (A), Minifix Cam (C) and Wood Dowel (D) to Top Rail (1), Btm. Rail (2), Headboard - Leg Left (3), Leg Right (4), Headboard - Top & Btm. Panel (5), Headboard - Center Panel (6), Footboard - Leg Left (7), Leg Right (8) and Footboard - Canter Panel (9). Attach C100 Plastic Nail (F) to Headboard - Leg Left (3), Leg Right (4), Footboard - Leg Left (7), Leg Right (8).



A	Minifix Bolt		16PCS
C	Minifix Cam		36PCS
D	Wood Dowel M8 x 30mm		34PCS
F	C100 Plastic Nail		4PCS



ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.



Step 2 : Assembly Btm. Rail (2), Headboard - Top & Btm. Panel (5), Headboard - Center Panel (6) by using Minifix Bolt (Double Head) (B) and Wood Dowel (D).

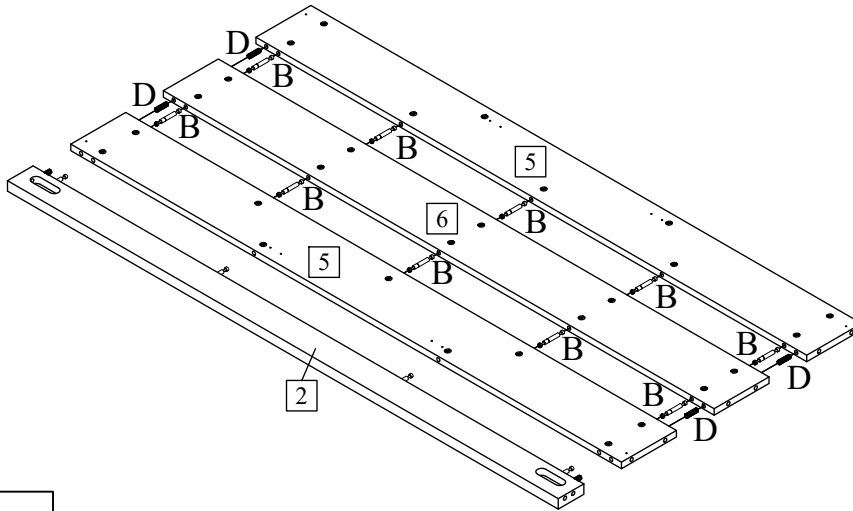

Lock Minifix Cam clockwise

B	Minifix Bolt (Double Head)		10PCS
D	Wood Dowel M8 x 30mm		4PCS

Step 3 : Attach Headboard - Leg Left (3), Leg Right (4), by using Allen Key M4 (L) to tighten JCBC (J), Spring Washer (P) and Flat Washer (Q). Assembly Top Rail (1), after that attach 4H Metal Plate (N) by using CSK Screw M3.5 x 16mm (O), tighten with Screw Driver.

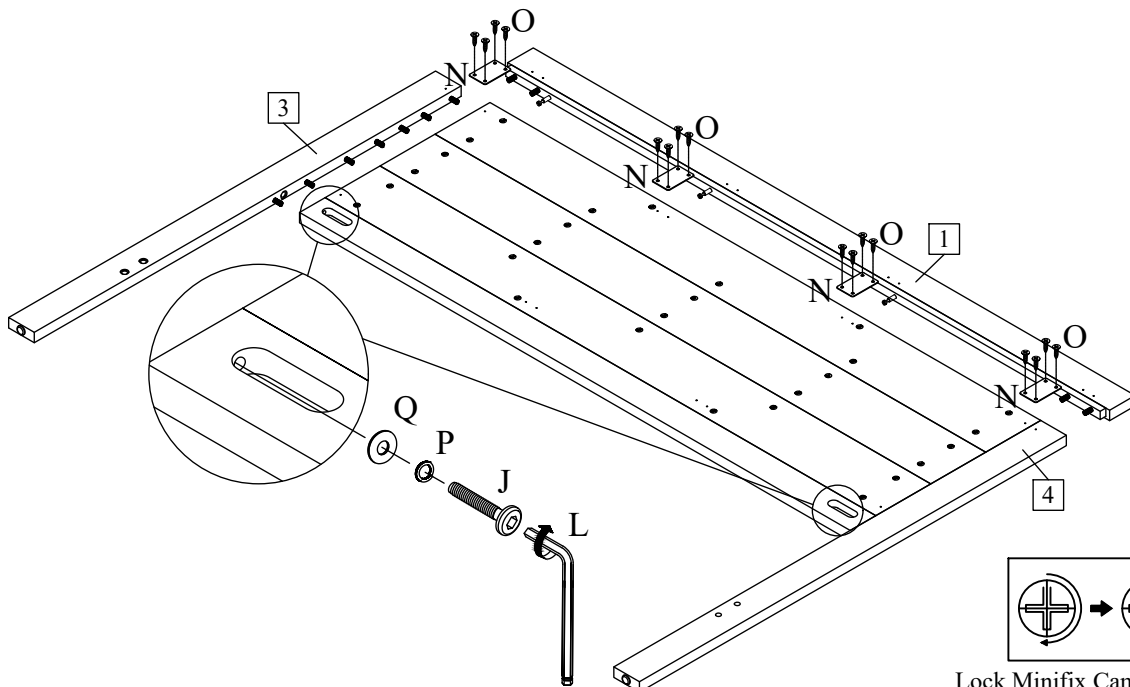

Lock Minifix Cam clockwise

J	JCBC M6 x 50mm		2PCS	Q	Flat Washer M6 x 13mm		2PCS
L	Allen Key M4		1PC	N	4H Metal Plate		4PCS
P	Spring Washer M6		2PCS	O	CSK Screw M3.5 x 16mm		16PCS



ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 4 : Assembly Btm. Rail (2), and Footboard - Center Panel (9).

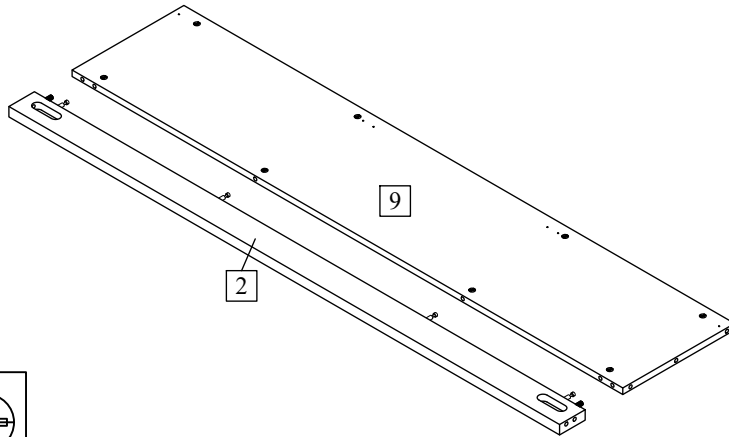

Lock Minifix Cam clockwise

Step 5 : Attach Footboard - Leg Left (7), Leg Right (8) by using Allen Key M4 (L) to tighten JCBC (J), Spring Washer (P) and Flat Washer (Q). Assembly Top Rail (1), after that attach 4H Metal Plate (N) by using CSK Screw M3.5 x 16mm (O), tighten with Screw Driver.

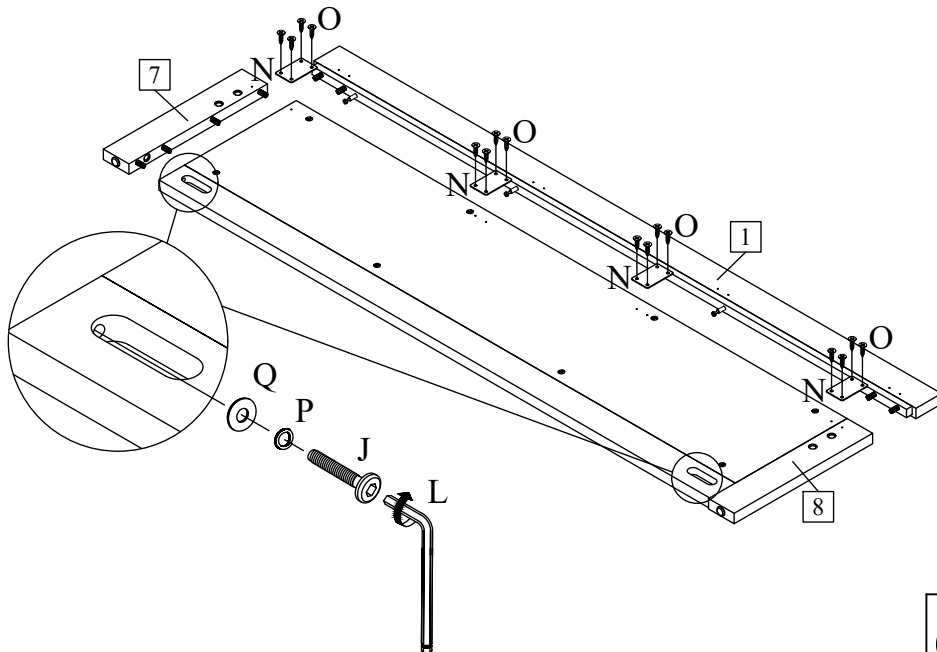

Lock Minifix Cam clockwise

J	JCBC M6 x 50mm		2PCS	Q	Flat Washer M6 x 13mm		2PCS
L	Allen Key M4		1PC	N	4H Metal Plate		4PCS
P	Spring Washer M6		2PCS	O	CSK Screw M3.5 x 16mm		16PCS


ASSEMBLY INSTRUCTIONS




Item No : WF531611

Description : KING BED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

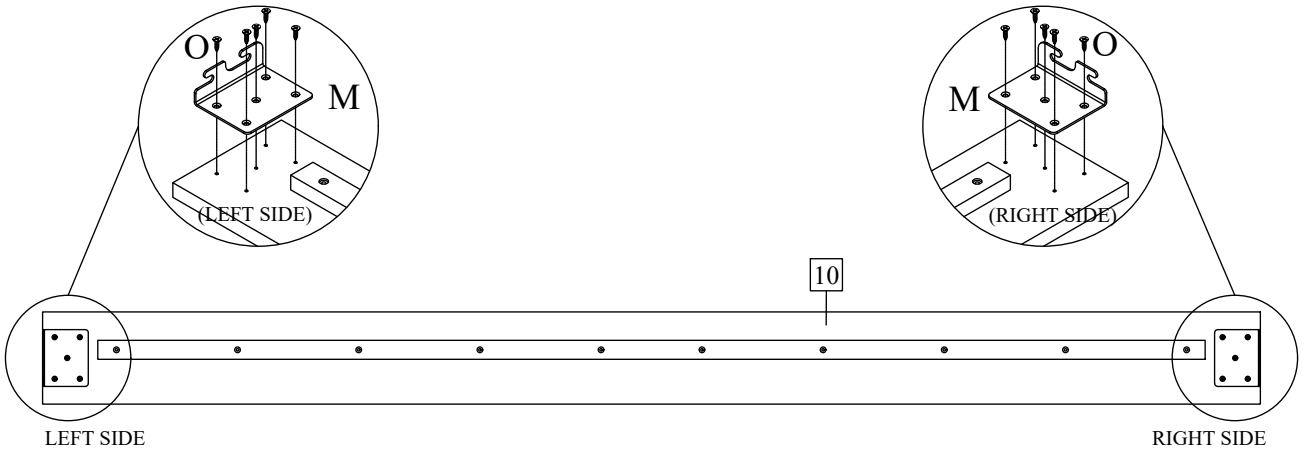


Step 6 : Attach Bed Bracket L/R (M) to Side Rail (10) by using CSK Screw M3.5 x 16mm (O) and tighten with Screw Driver.



M	Bed Bracket L/R	 (LEFT)  (RIGHT)	2 SETS
O	CSK Screw M3.5 x 16mm		20PCS

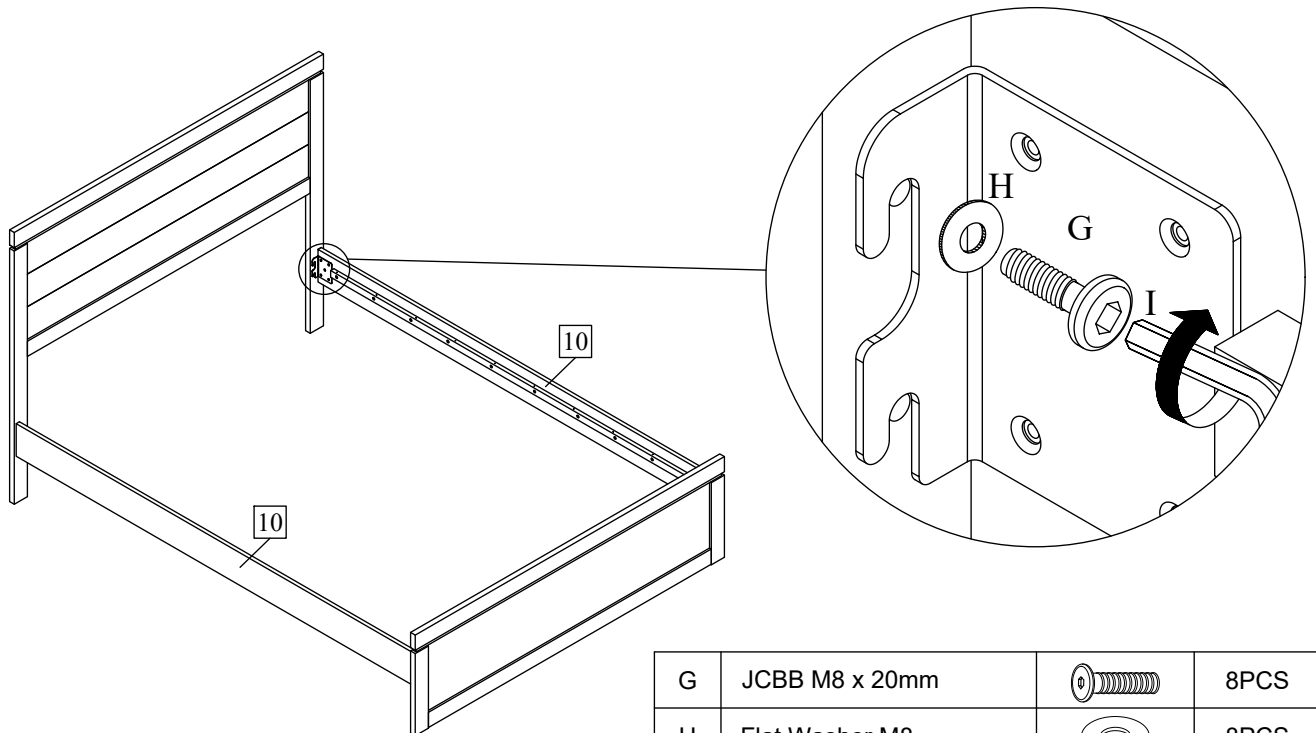Step 7 : Attach Side Rail (10) to Headboard and Footboard. Insert Flat Washer M8 (H) to JCBB (G) and tighten by Allen Key M5 (I).



G	JCBB M8 x 20mm		8PCS
H	Flat Washer M8		8PCS
I	Allen Key M5		1PC


ASSEMBLY INSTRUCTIONS

Item No : WF531611

Description : KING BED



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small part that may have come loose inside carton during shipment.

Step 8 : Attach Adjustable Glider (K) to Vertical Leg (13).

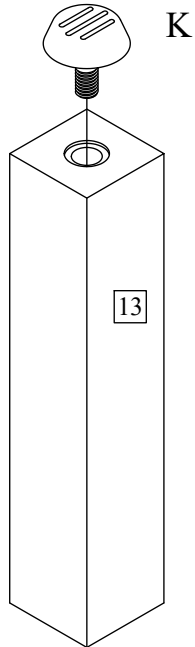

K	Adjustable Glider		10PCS
---	-------------------	--	-------

Step 9 : Attach Slat - 1 (11) and Slat - 2 (12) to Side Rail (10) by follow marking, use Panhead Screw M4 x 30mm (E) tighten with Screw Driver. Attach Vertical Leg (13) to Slat -1 (11) using JCBC (J) and tighten by Allen Key M4 (L).

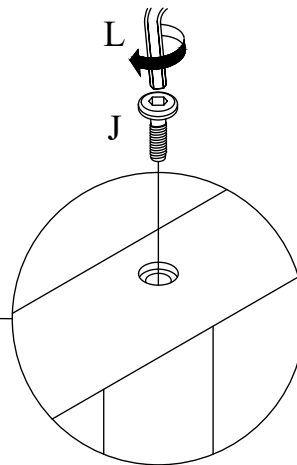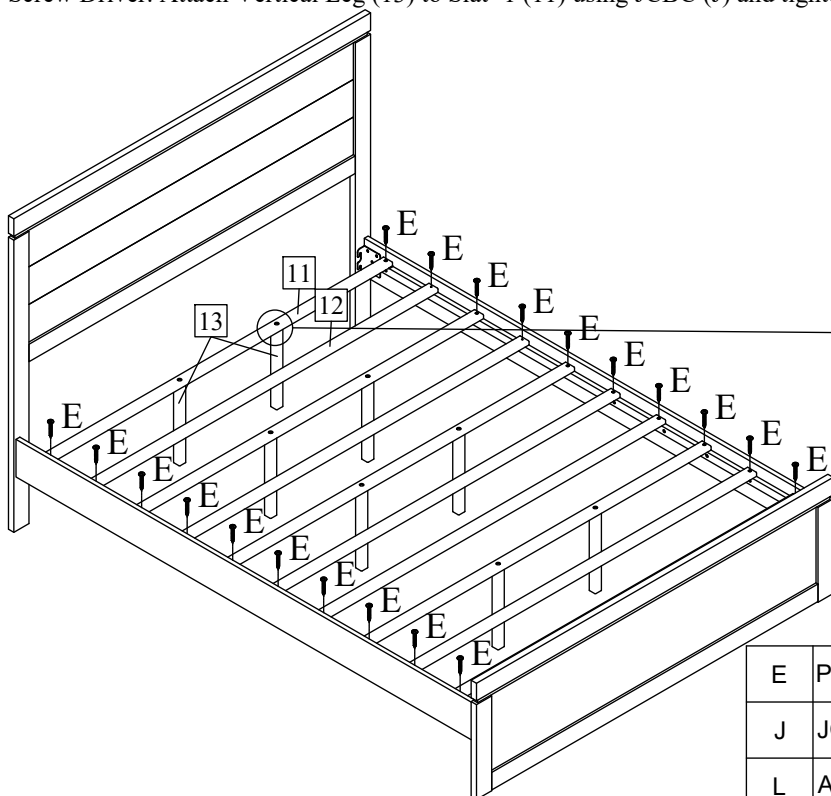

E	Panhead Screw M4 x 30mm		20PCS
J	JCBC M6 x 50mm		10PCS
L	Allen Key M4		1PC