



# ASSEMBLY INSTRUCTIONS

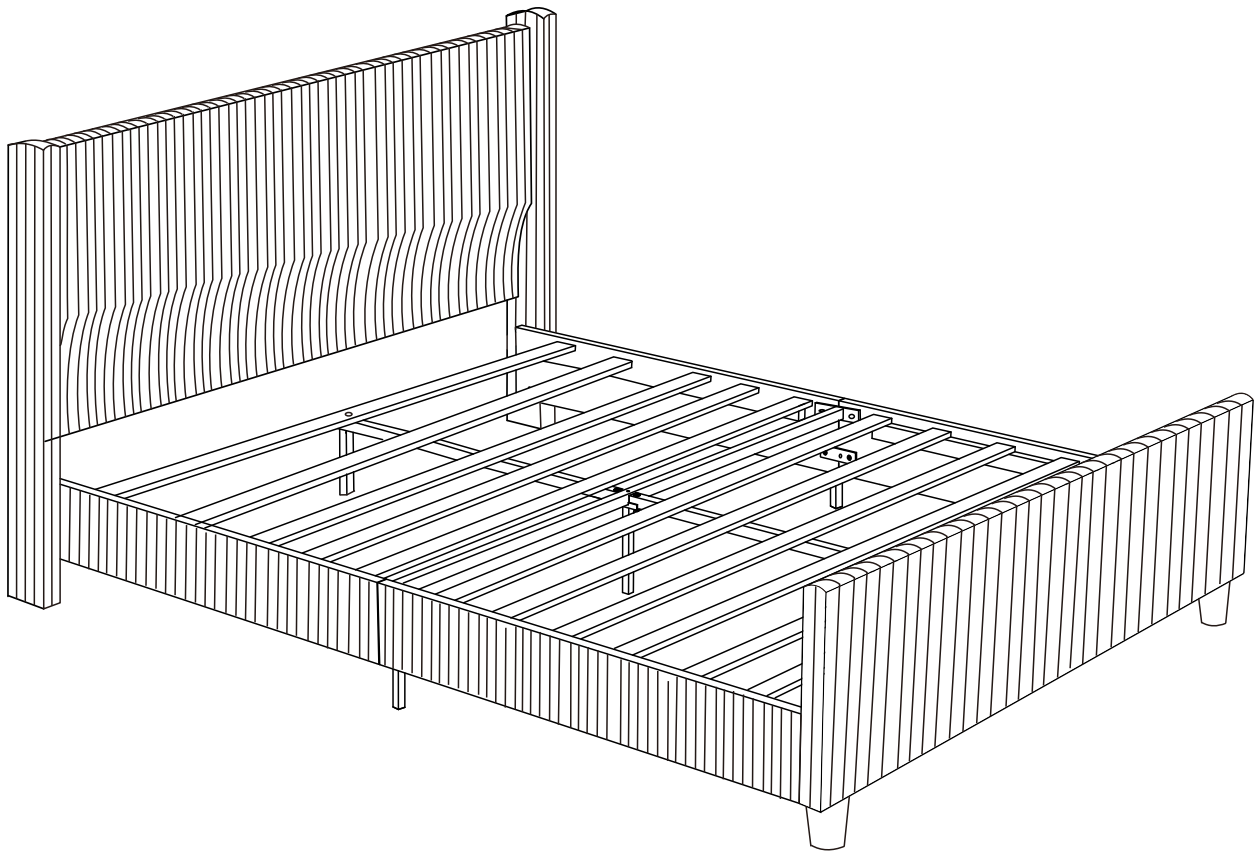

N701P70360/N701P170362




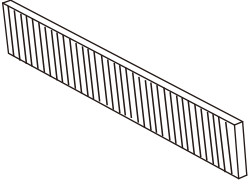
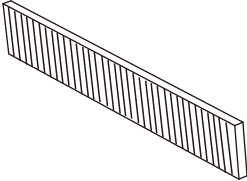




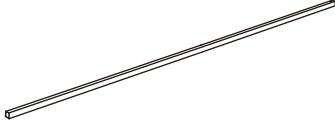
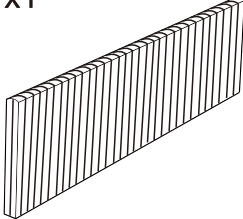



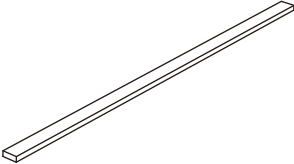
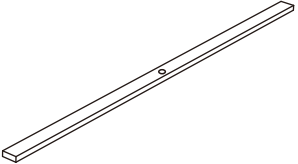

# ASSEMBLY INSTRUCTIONS

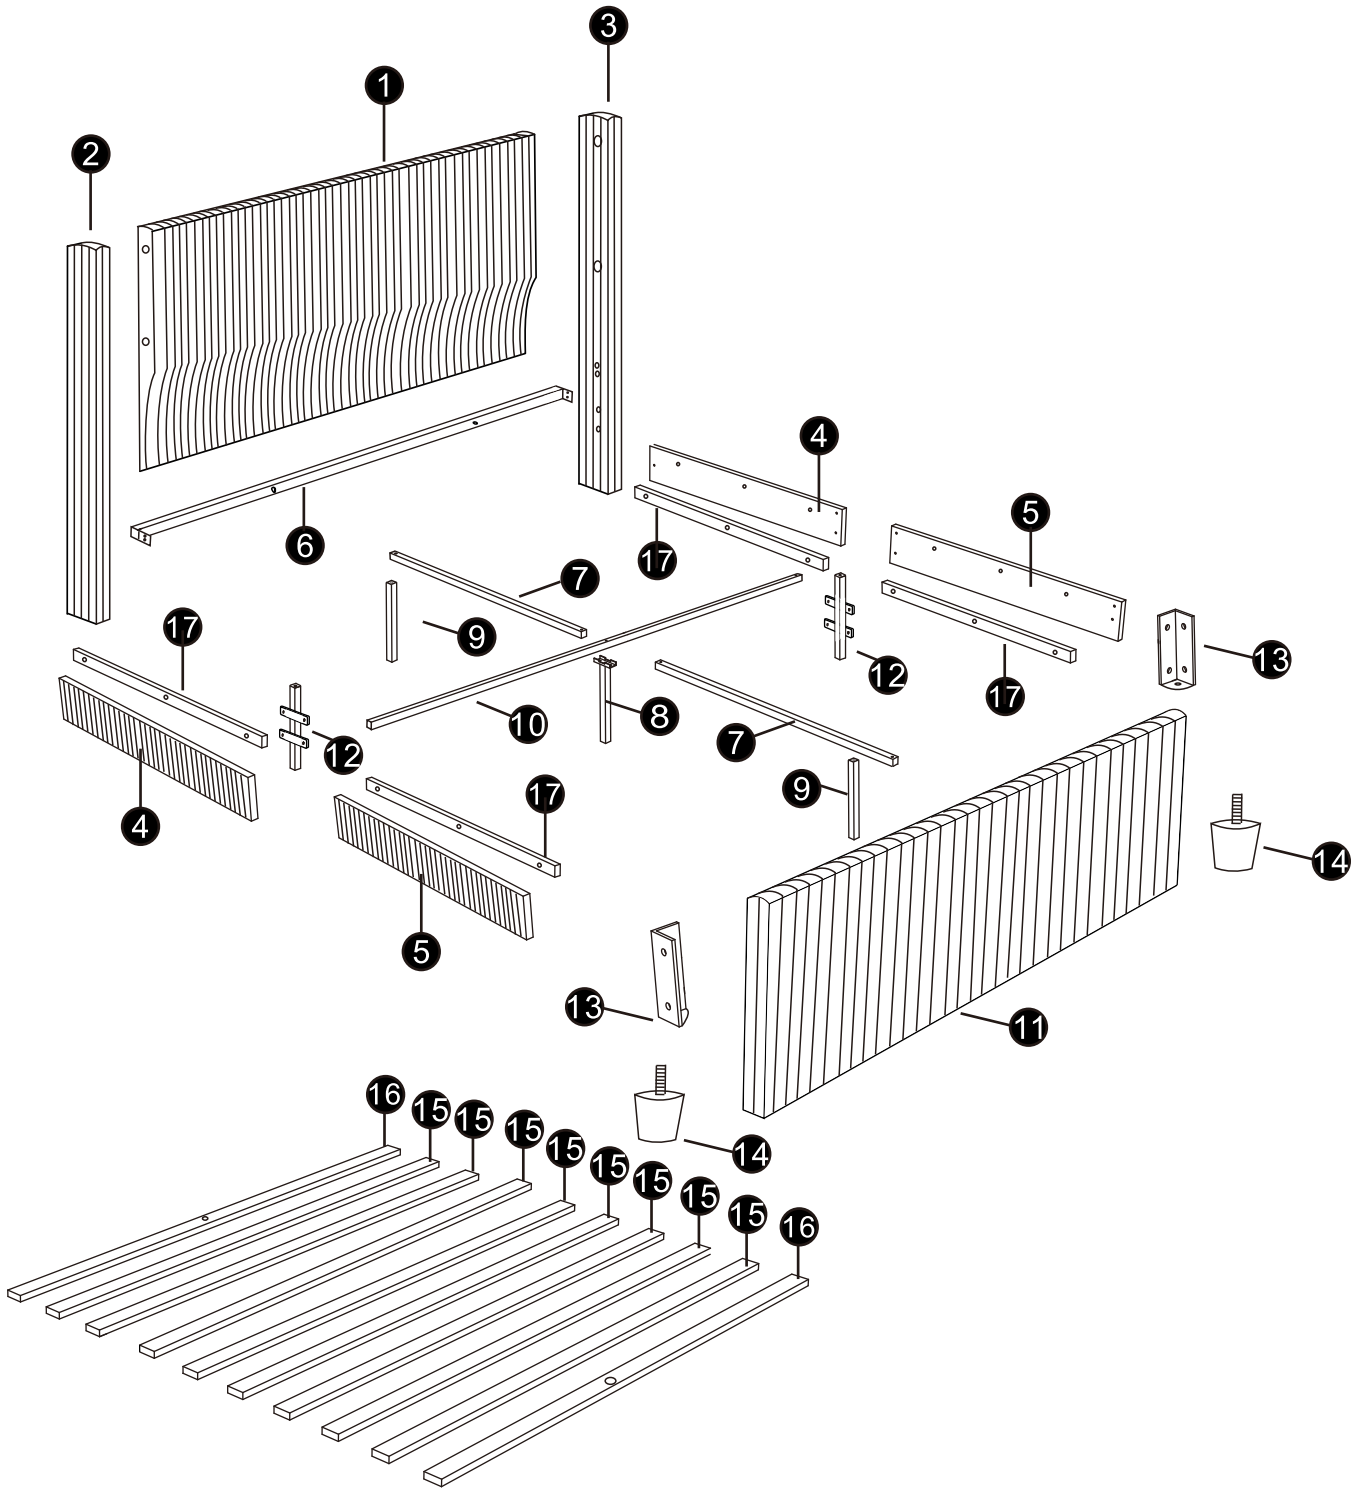

# ASSEMBLY INSTRUCTIONS

## PARTS LIST






N701P70360/N701P170362
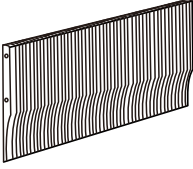
<b>1</b> x1 	<b>2</b> x1 	<b>3</b> x1 	<b>4</b> x2 
<b>5</b> x2 	<b>6</b> x1 	<b>7</b> x2 	<b>8</b> x1 
<b>9</b> x2 	<b>10</b> x1 	<b>11</b> x1 	<b>12</b> x2 
<b>13</b> x2 	<b>14</b> x2 	<b>15</b> x8 	<b>16</b> x2 
<b>17</b> x4 			

# ASSEMBLY INSTRUCTIONS


## PARTS LIST

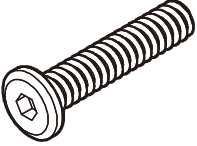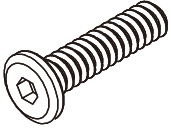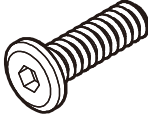

N701P70360/N701P170362

<p>A: x 6</p>  <p>M6*50mm</p>	<p>B: x 21</p>  <p>M6*35mm</p>	<p>C: x 20</p>  <p>M6*20mm</p>	<p>D: x 8</p>  <p>M8</p>
<p>E: x 1</p>  <p>Allen Key M6</p>			

# ASSEMBLY INSTRUCTIONS

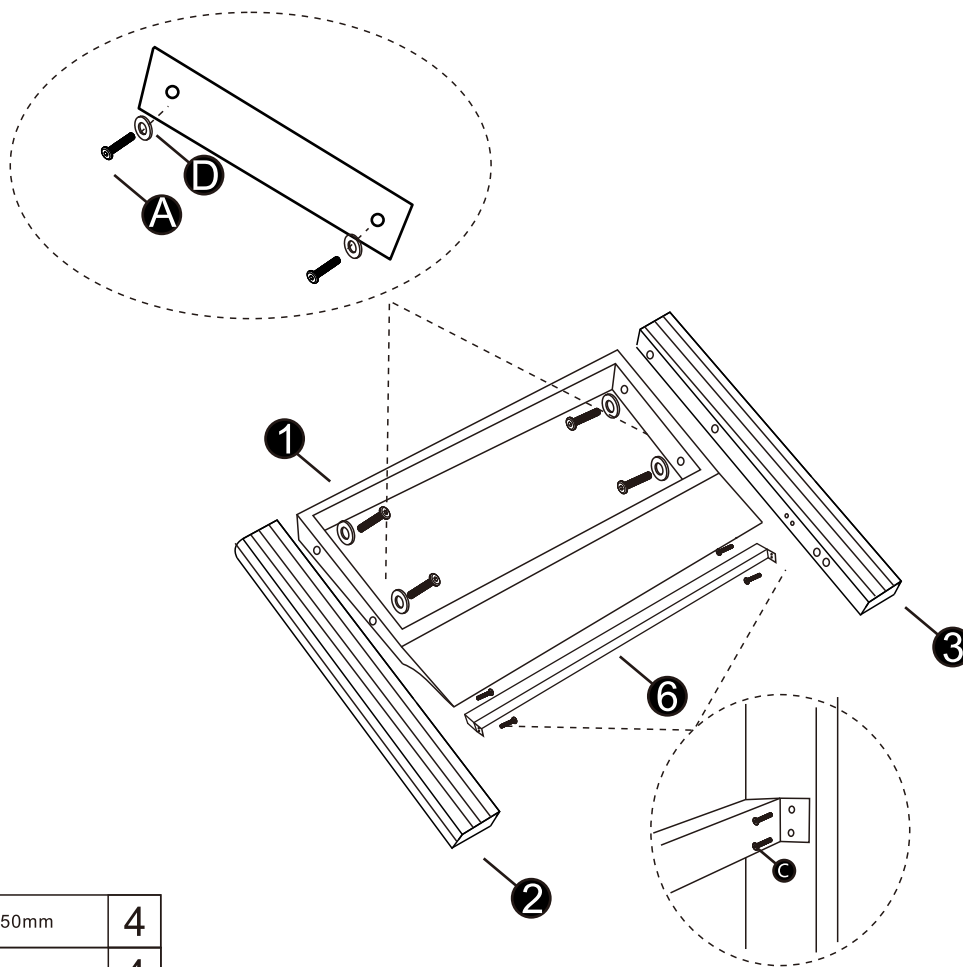
## STPE 1



A		M6*50mm	4
C		M6*20mm	4

## STPE 2


Left

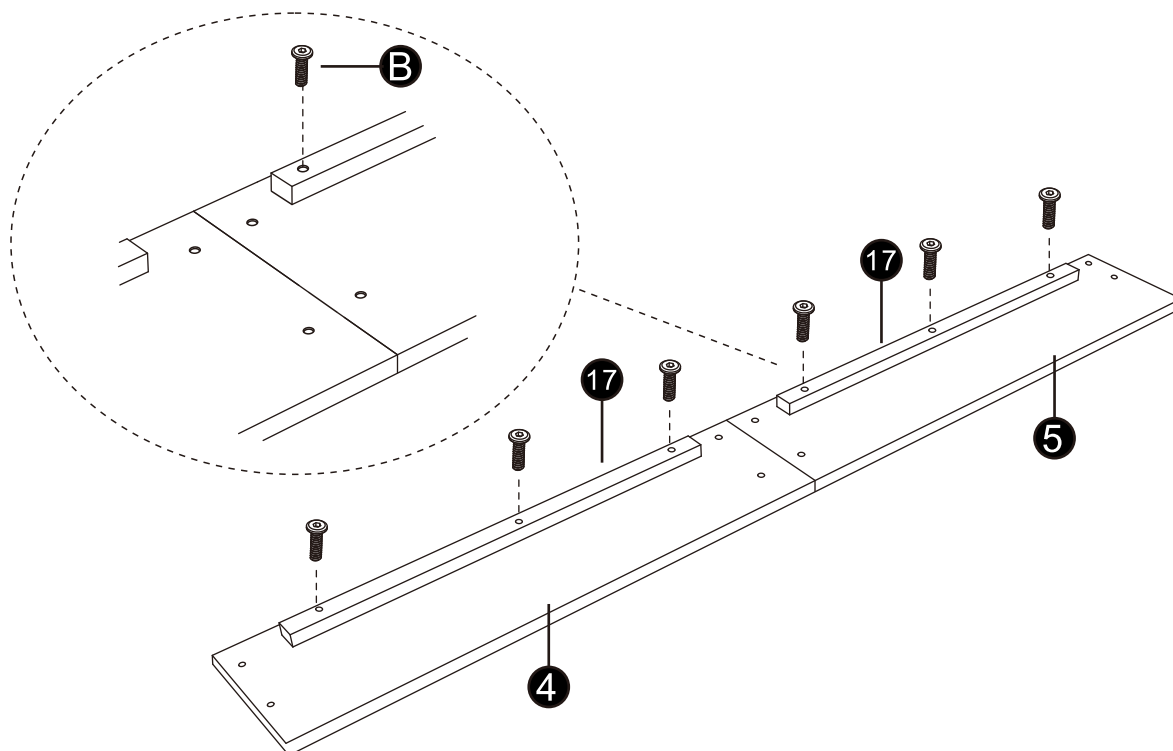

B		M6*35mm	6
---	---	---------	---


# ASSEMBLY INSTRUCTIONS

## STPE 3 Right

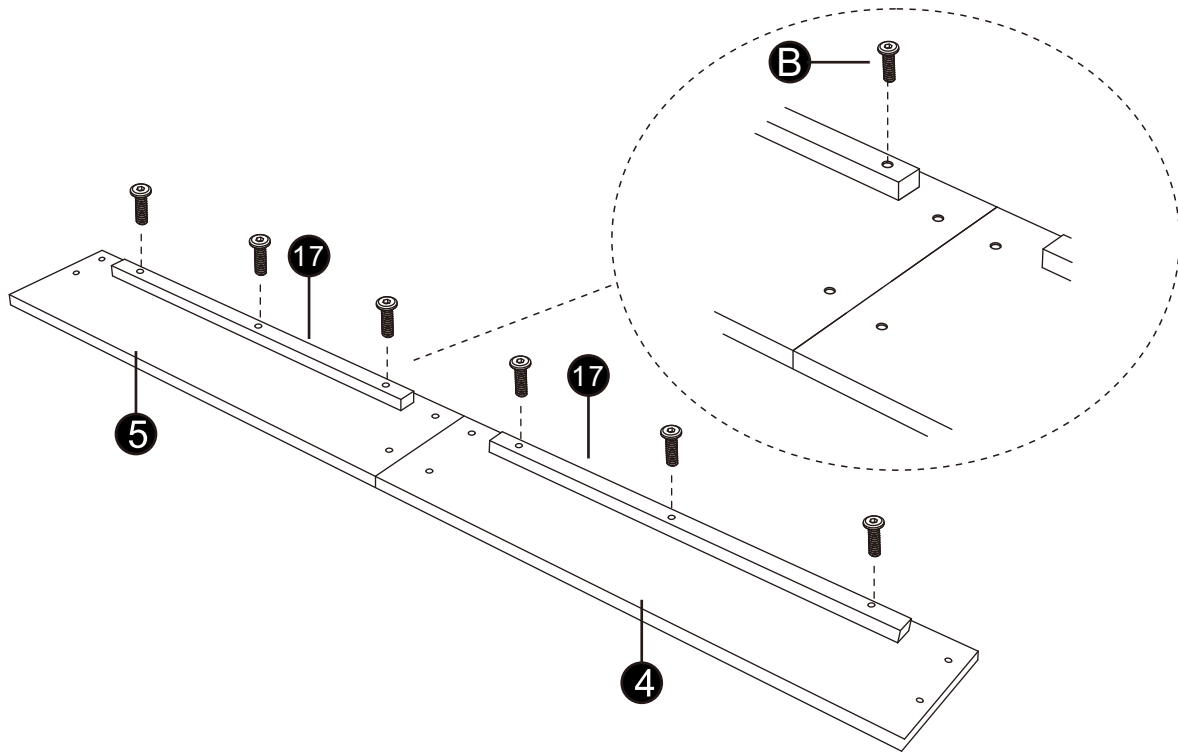

B		M6*35mm	6
---	---	---------	---

## STPE 4 Left

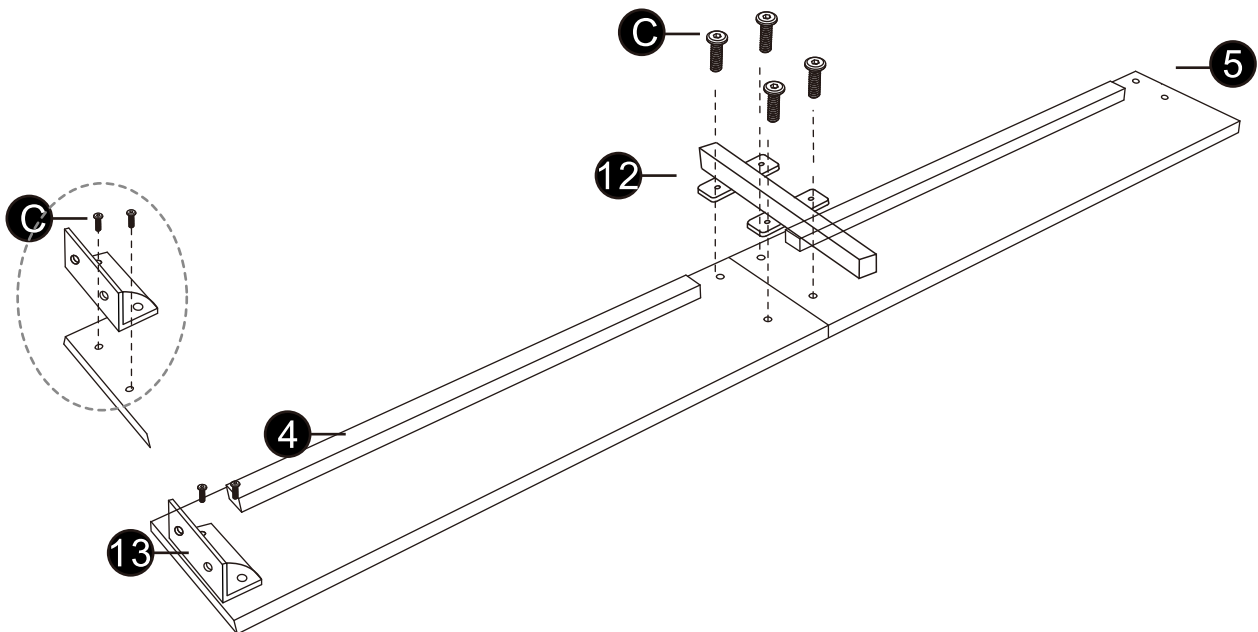


C		M6*20mm	6
---	---	---------	---

# ASSEMBLY INSTRUCTIONS


## STPE 5

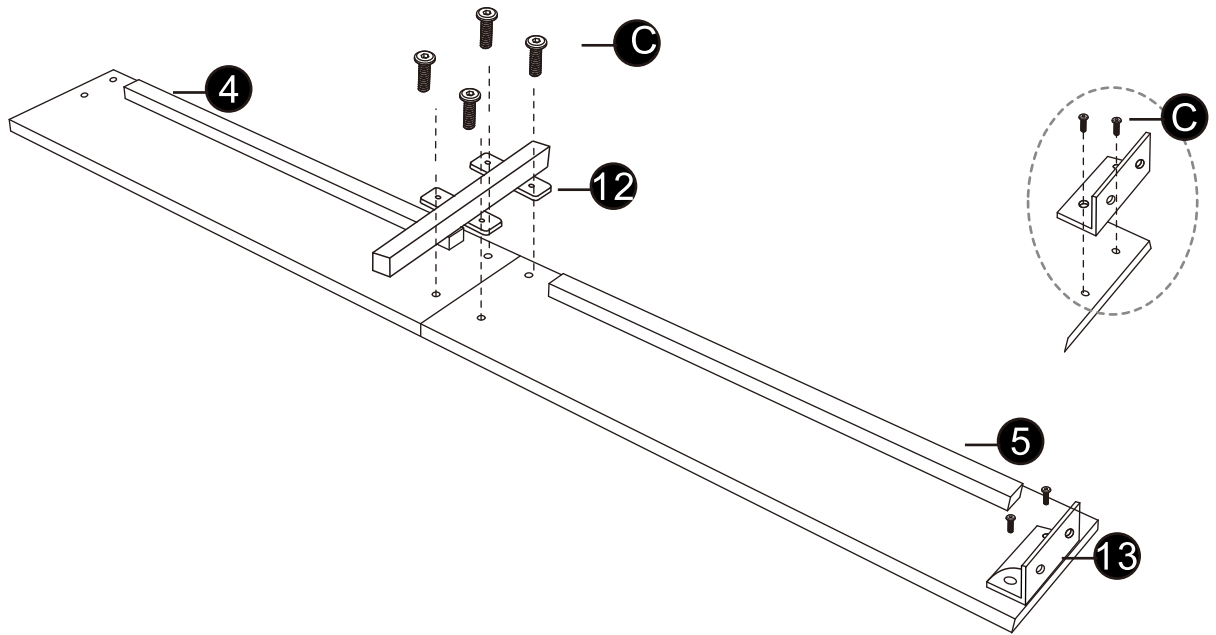

Right



C		M6*20mm	6
---	---	---------	---

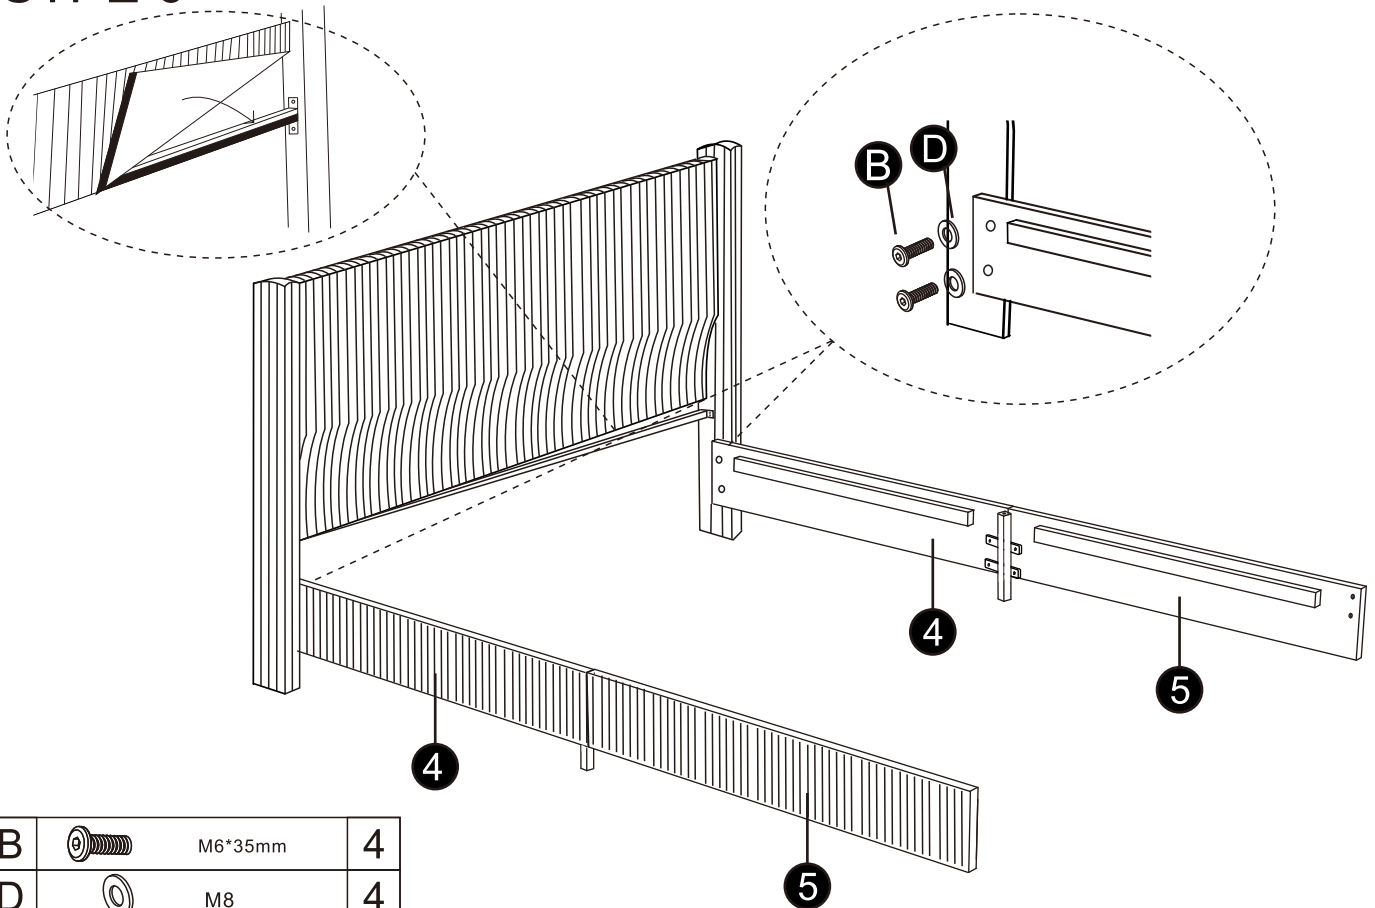
## STPE 6



B		M6*35mm	4
D		M8	4


# ASSEMBLY INSTRUCTIONS

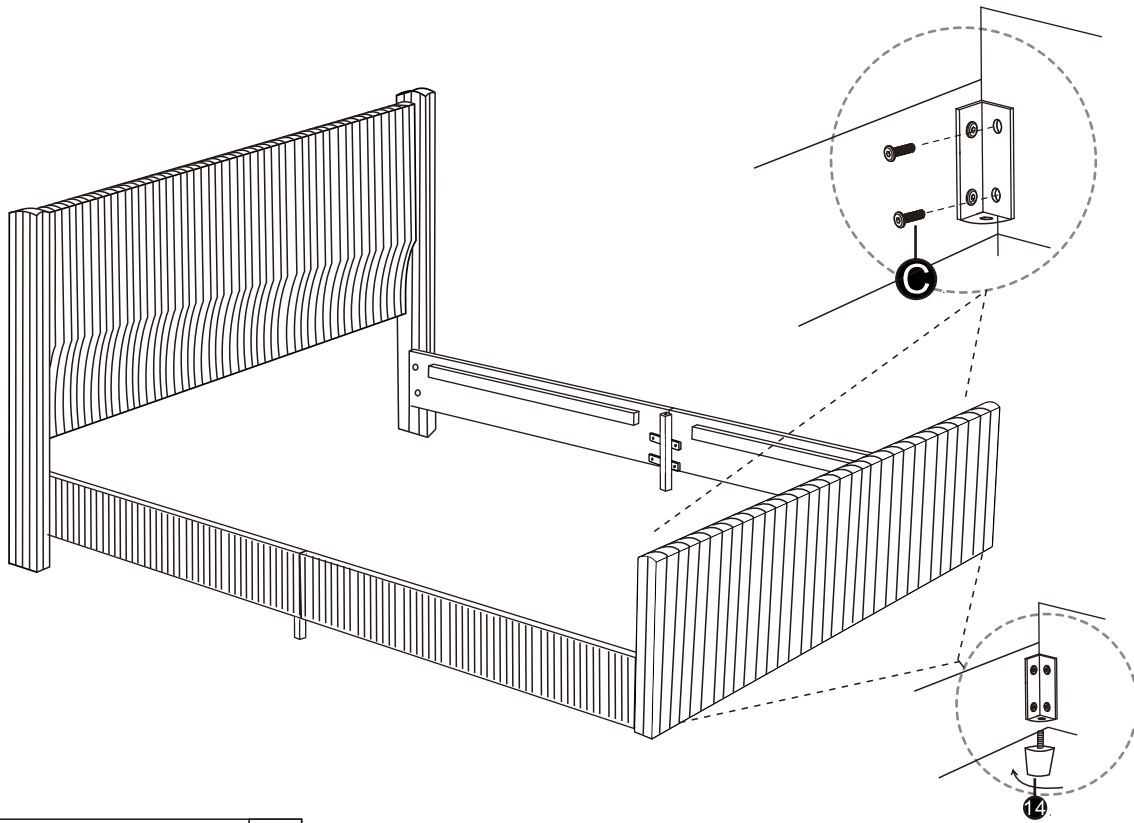

## STPE 7



C		M6*20mm	4
---	---	---------	---
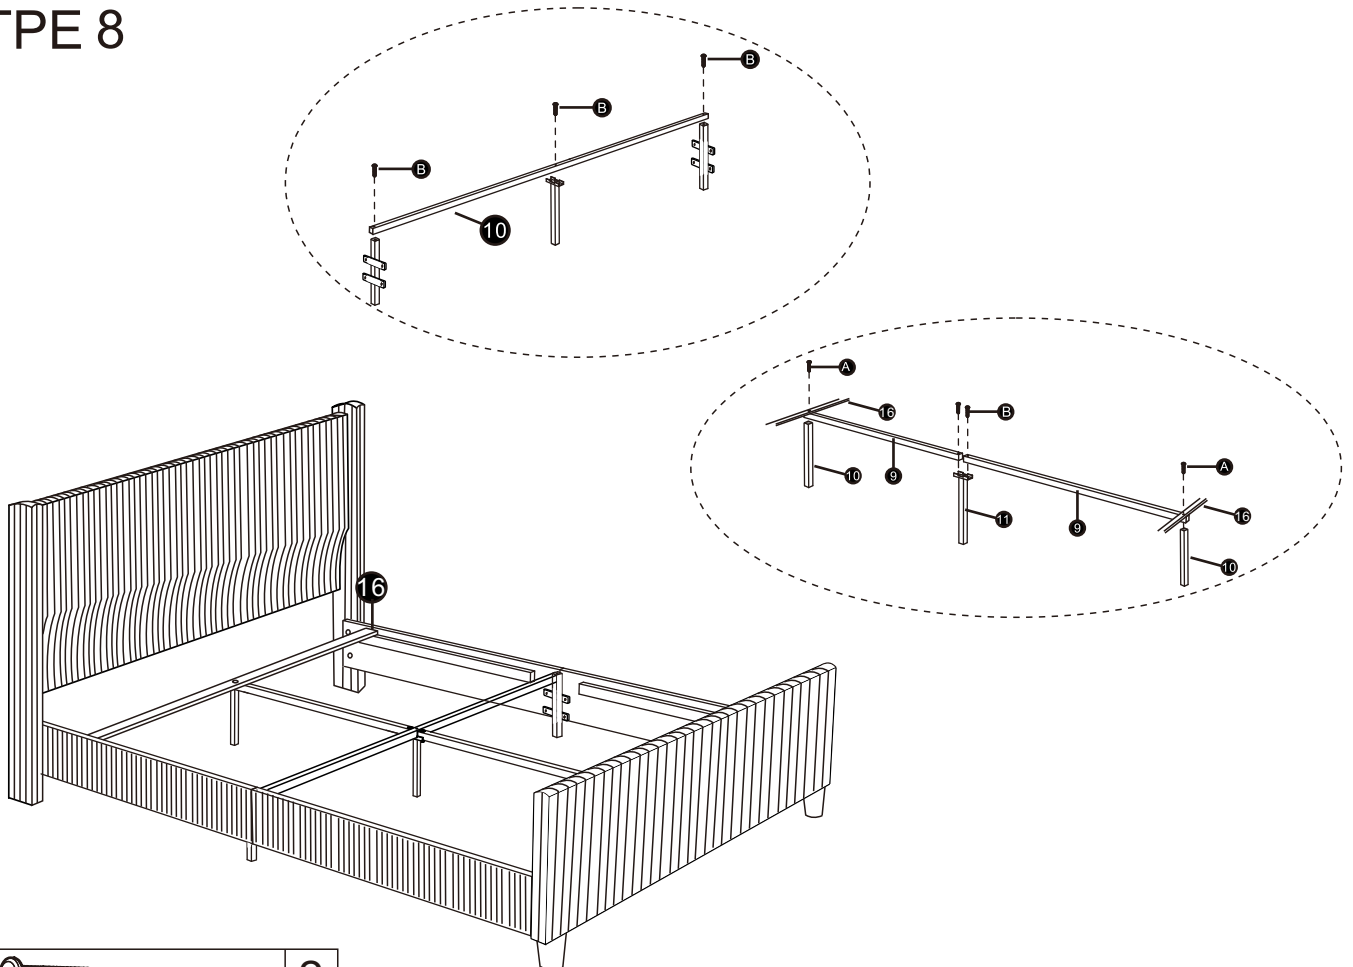
## STPE 8



A		M6*50mm	2
B		M6*35mm	5



# ASSEMBLY INSTRUCTIONS

## STPE 9

