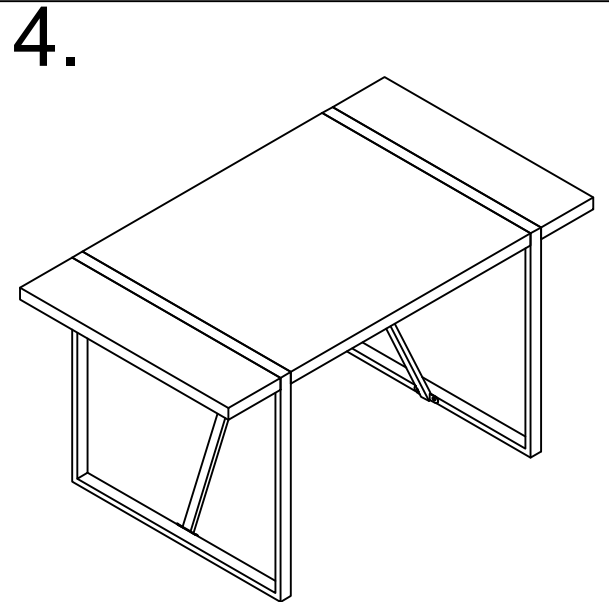
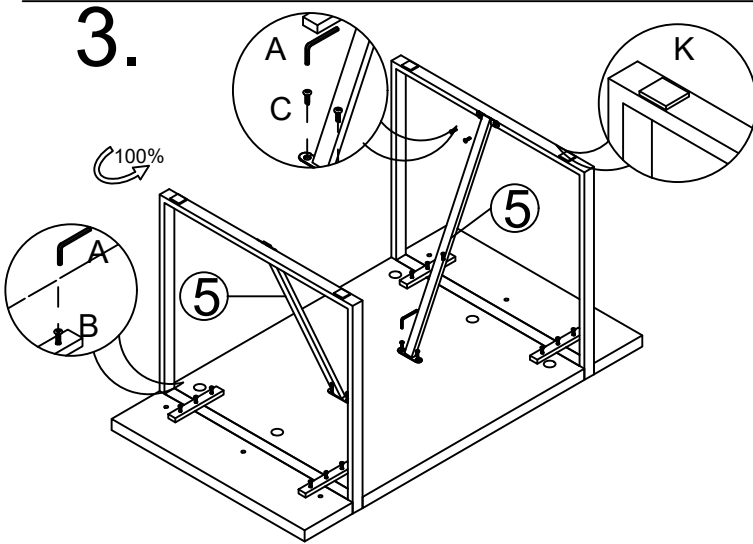
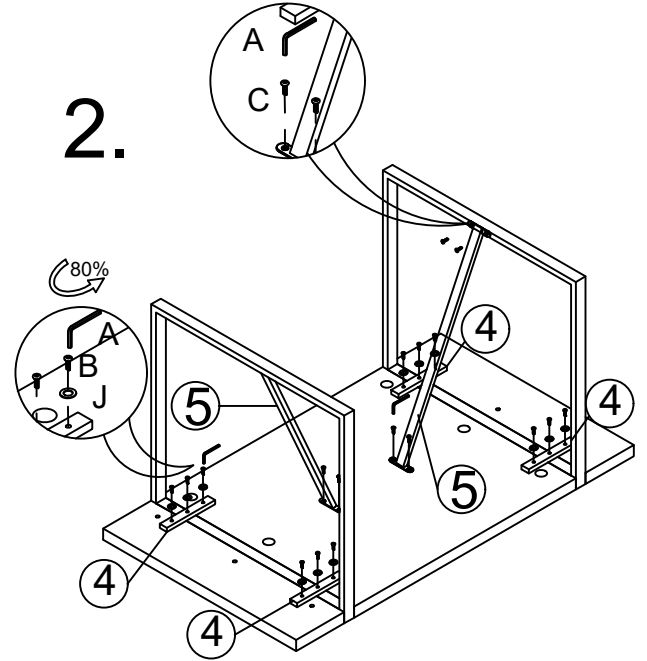
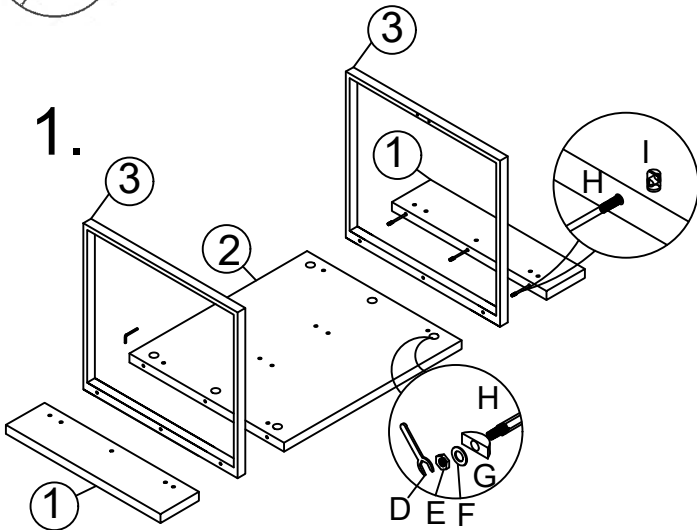
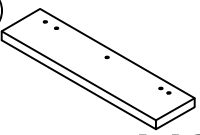
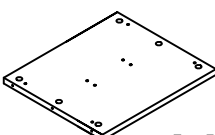



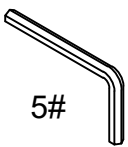












!WOODEN MATERIALS ! NO ELECTRIC DRILL!

# ASSEMBLY INSTRUCTION



 X2	 X1	 X2	 X4	 X2	
 5# X1	 M6X15 X8	 M6X40 X12	 X1	 M8 X6	
 M8 X6	 M8 X6	 M8*140 X6	 M8 X6	 M6*18 X12	 X4