

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Do Not Return This Product!

Contact our customer service team
for help first.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to)
- Do Not allow children to climb on unit.
- put heavy items on lower shelves or drawers.

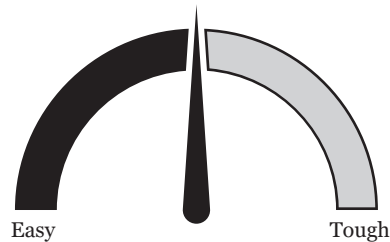

Assembly Difficulty Meter



CONTACT US!

Do NOT return this product!

Contact our friendly customer service team first for help.

Assembly Tips



HELPFUL HINTS

PEOPLE NEEDED FOR ASSEMBLY:2

ESTIMATED ASSEMBLY TIME:2 HOUR

-Open your item in the area you plan to keep it to avoid excessive heavy lifting.

-Identify,sort and count the parts before attempting assembly.

-Back panel must be used to make sure your unit is sturdy.

-Do NOT use harsh chemicals or abrasive cleaners on this item.

-Never push,pull,or drag your furniture.




BEFORE YOU START














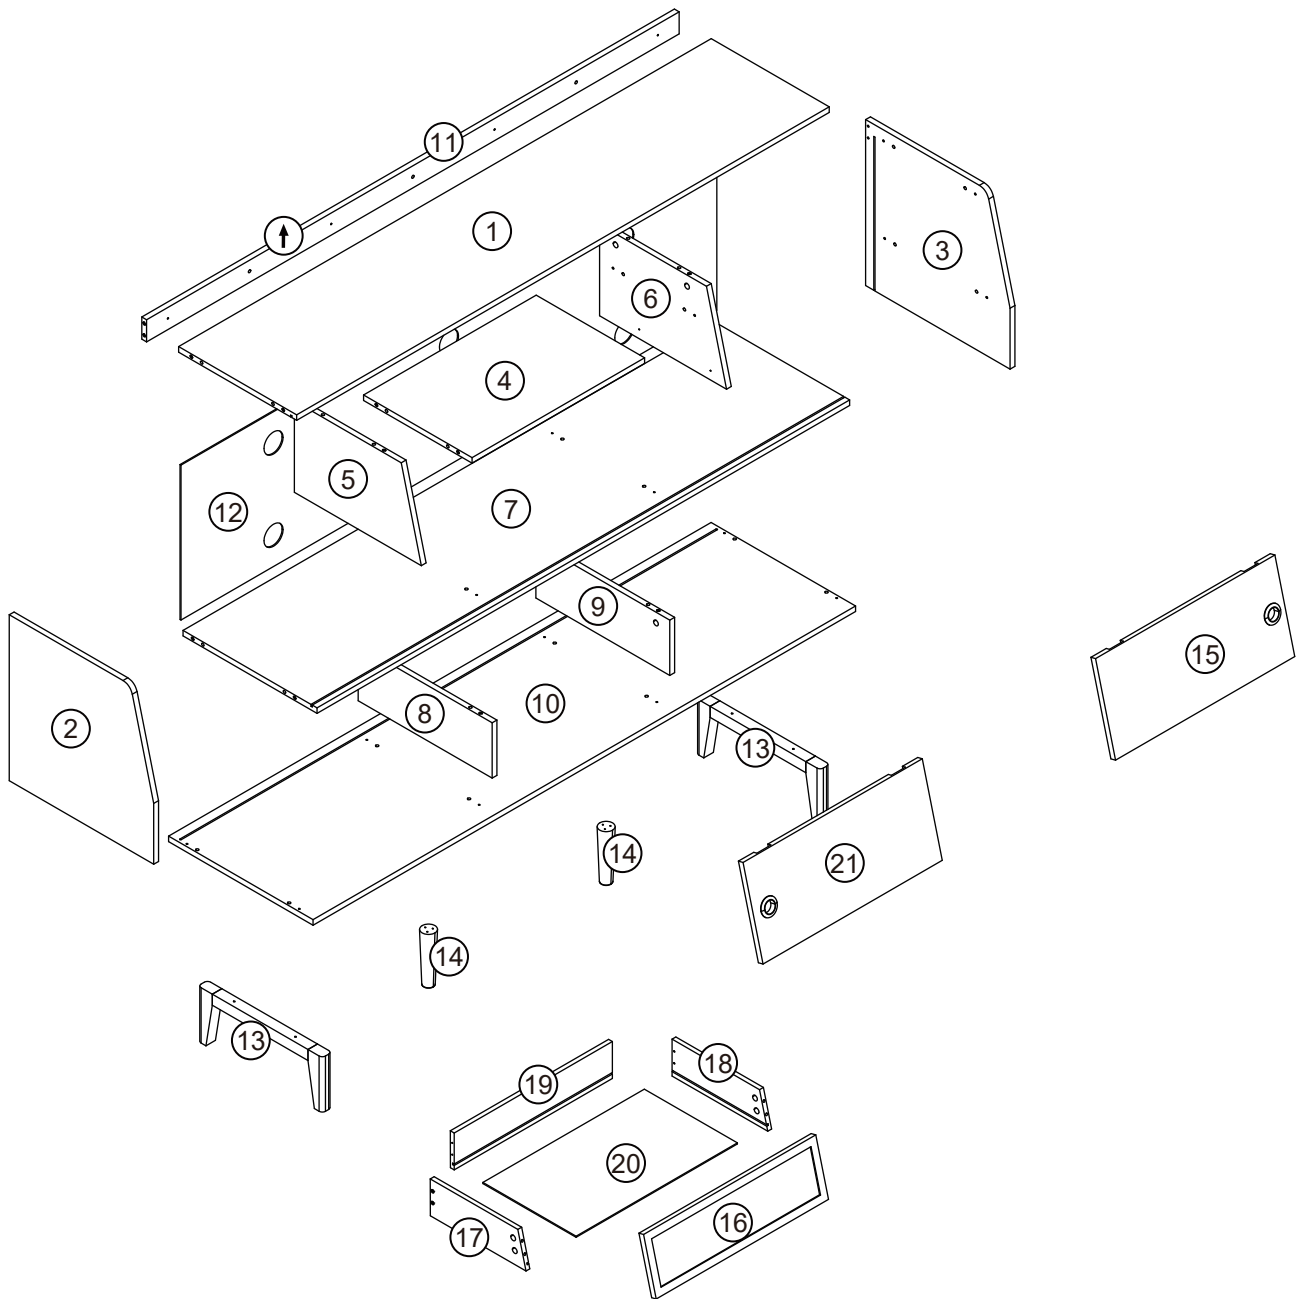






- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools:Flat Head Screwdriver,#2 Phillips Head Screwdriver and Hammer
- Caution: IF using a power drill or power screwdriver for screwing,please be aware to slow down and stop when screw is tight.Failure to do so may result in stripping the screw.




BOARD IDENTIFICATION



THE HARDWARE

A ×28+2(Spare)	B ×28+2(Spare)	C ×35+2(Spare)	D ×26+2(Spare)	E ×28+2(Spare)
				
Cam Bolt	Cam Lock	Wood Dowel	Screw	Screw
M6×25mm	Ø15×12mm	Ø6×30mm	Ø4×35mm	Ø3×12mm
F ×10+2(Spare)	G ×10+2(Spare)	H ×4	I ×2	J ×4
				
Backplane Buckle	Screw	Screw	Adjustable foot	Screw
	Ø3×14mm	Ø6×60mm		Ø4×12mm
K ×2	L ×8+2(Spare)	M ×4	N ×4	O ×8
				
Foot connector	Screw	Slide rail	Slide rail	Cam Cover
	Ø4×16mm			Ø20mm
P ×4	CL ×1	CR ×1	DL ×1	DR ×1
				
Washer	runner	runner	runner	runner
	300mm	300mm	300mm	300mm



Phillips Screwdriver Power Tool NOT Recommended


IMPORTANT :

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping.
3. Please use hand tools to assemble this product. Do not use power tools.
4. Must need 2 people to assemble this product.




CAM LOCK FASTENING SYSTEM


This Cam Lock Fastening System will be used throughout the assembly process.

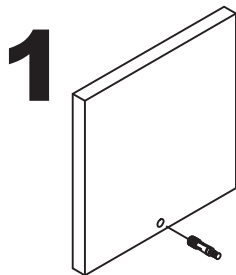


1
Press CAM BOLT into hole.

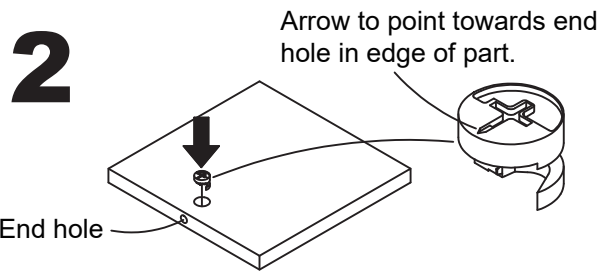


2
Press CAM LOCK into hole.

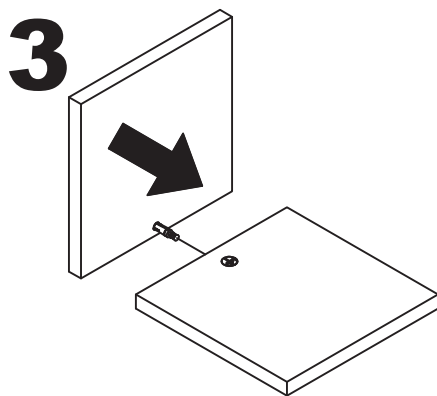


3
Press parts together so CAM BOLT inserts into edge hole.

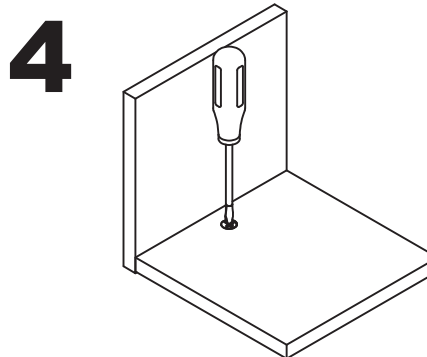



4
Using a screwdriver, turn the CAM LOCK clockwise to lock the CAM LOCK and CAM BOLT into their holes and fastening parts together.

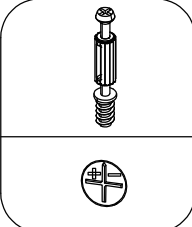



Notice: Proper orientation of CAM LOCK






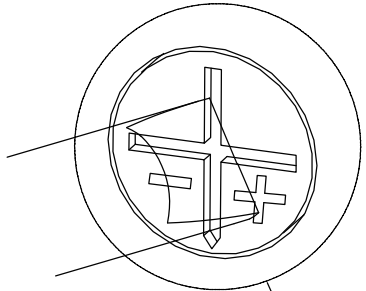

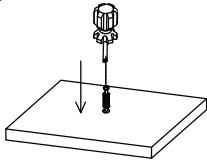








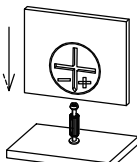


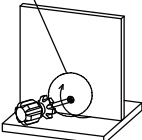




INSTALLATION STEPS



STEP 1

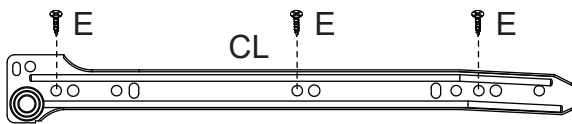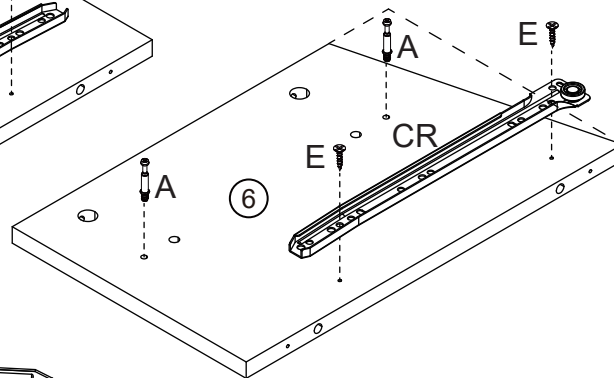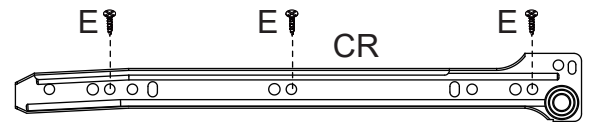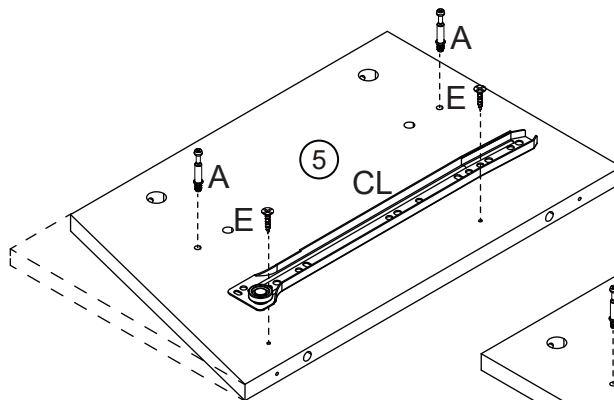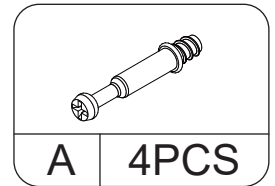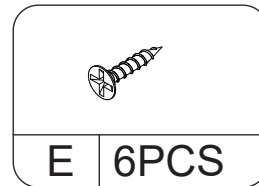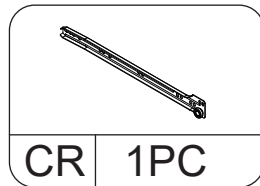
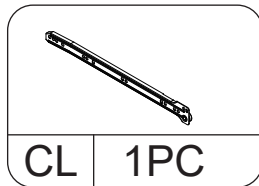


STEP 2

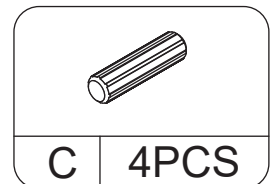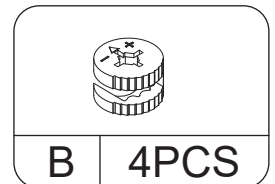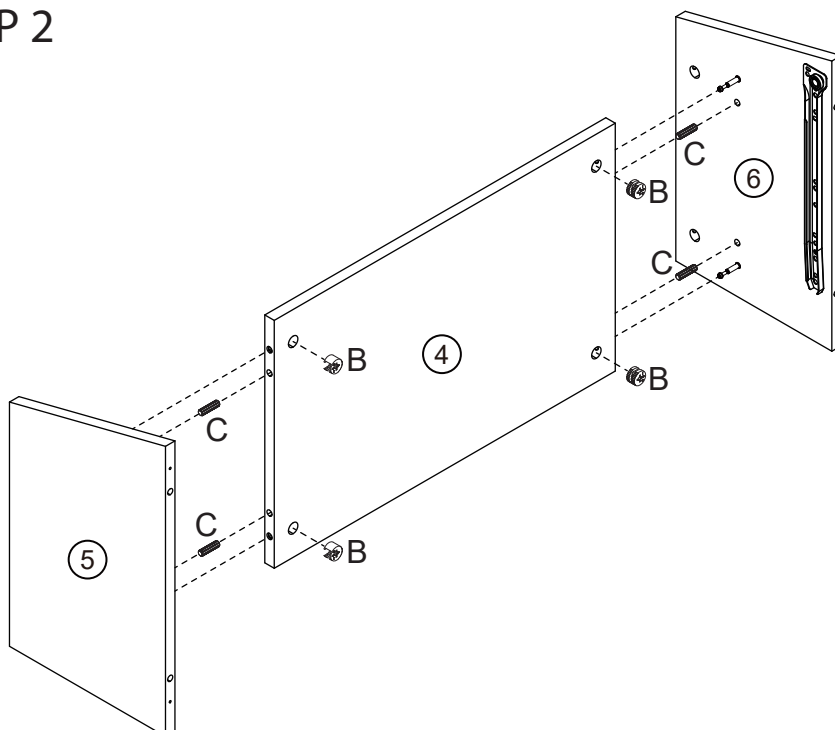


INSTALLATION STEPS

 **STEP 3**


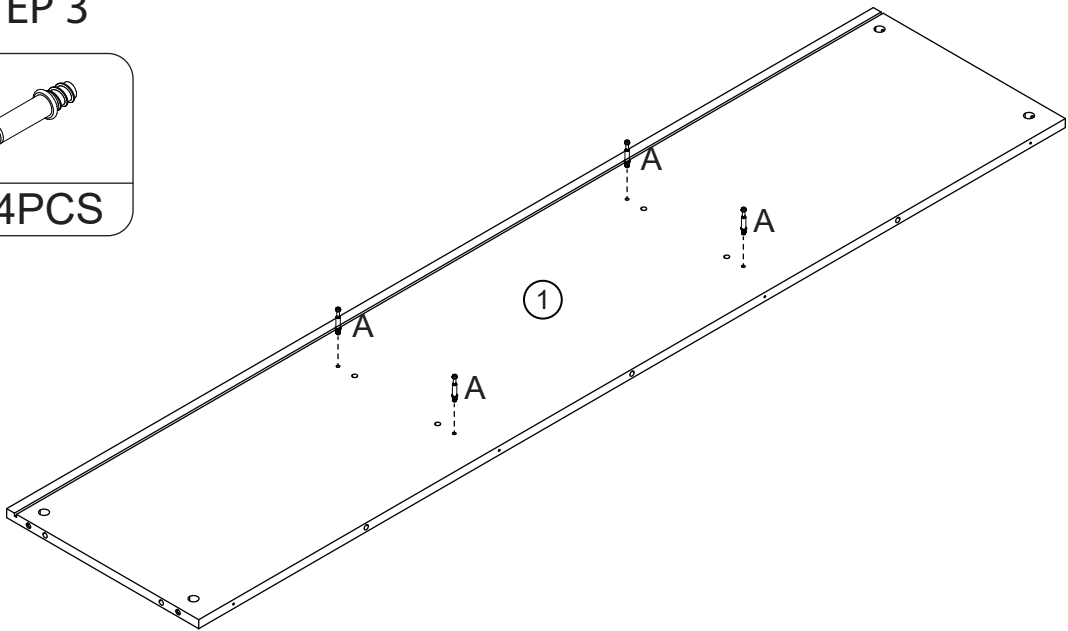
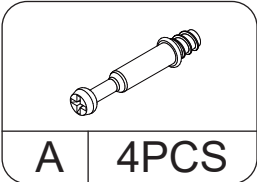


 **STEP 4**


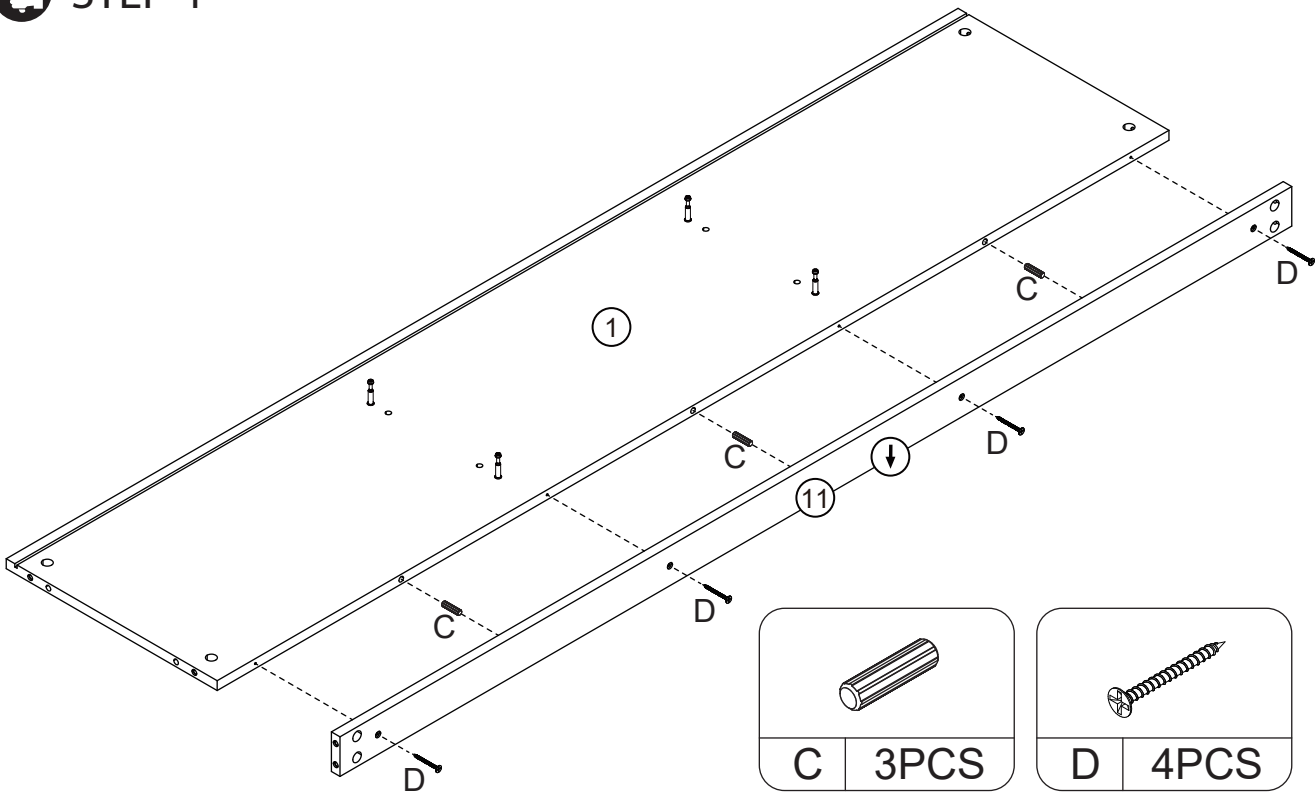


INSTALLATION STEPS

STEP 5

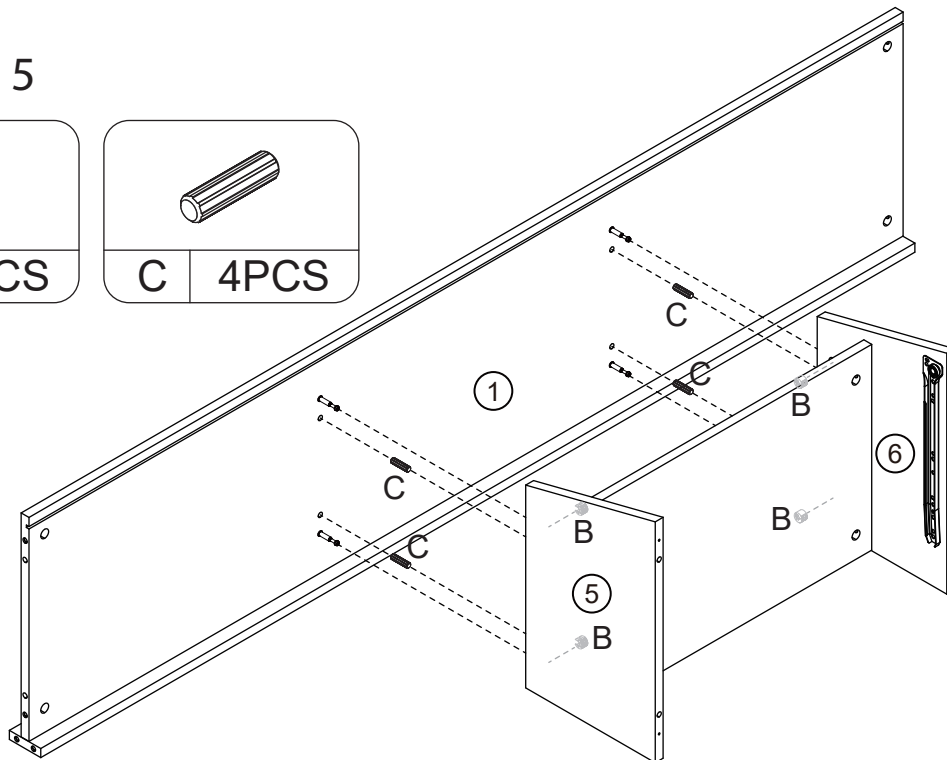
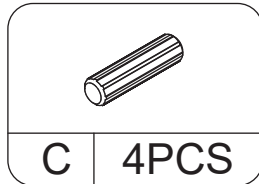
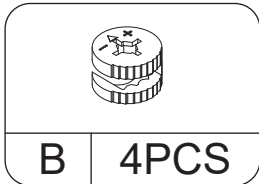


STEP 6


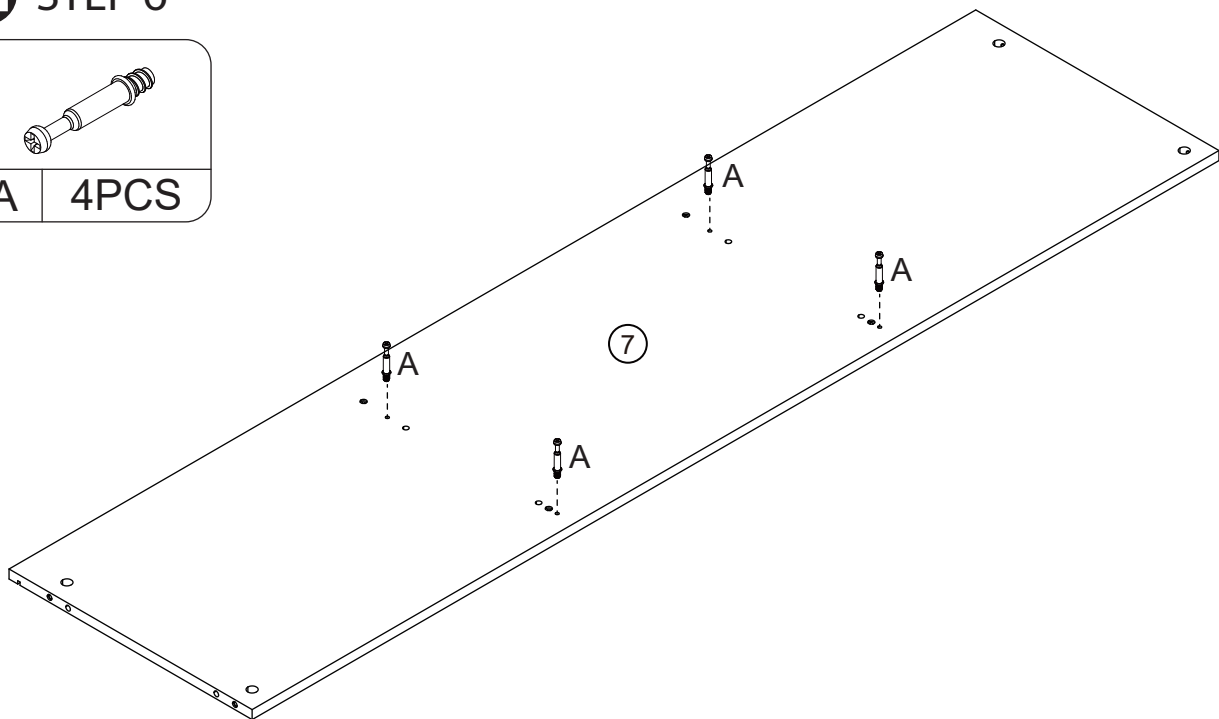
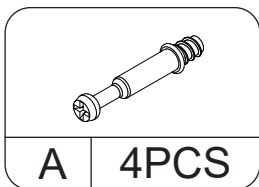


INSTALLATION STEPS

STEP 7

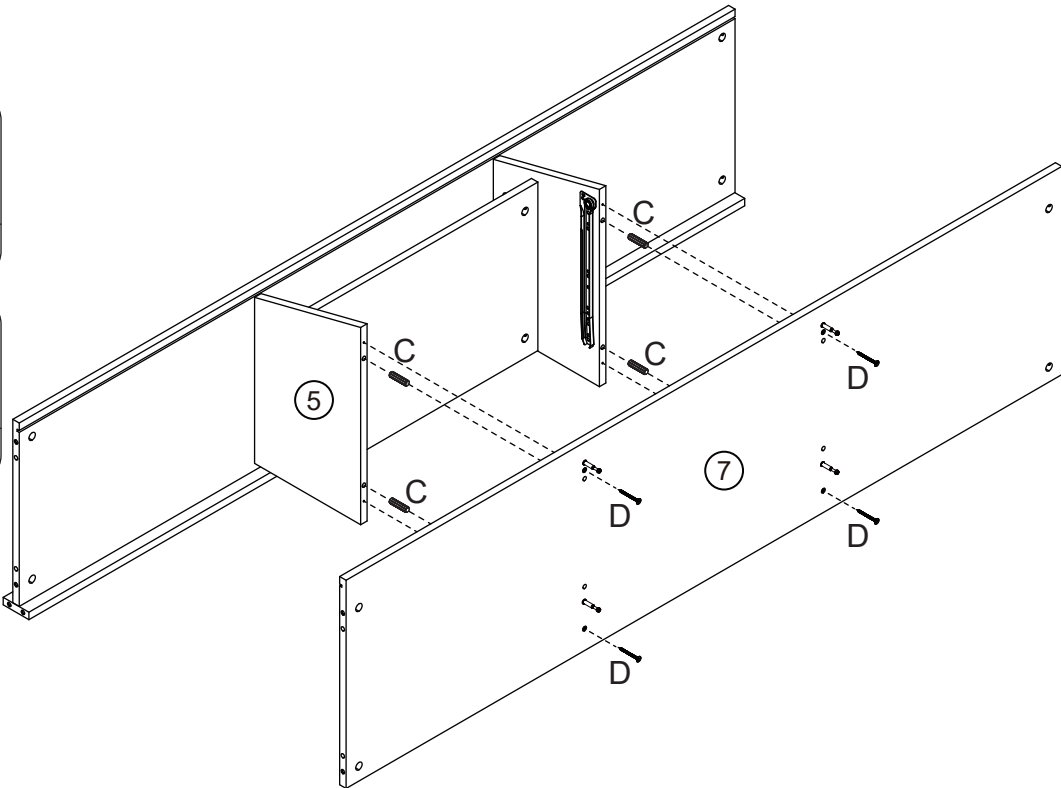
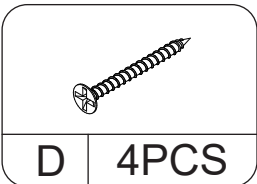
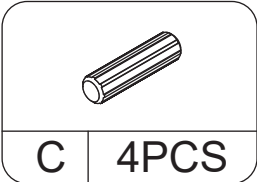


STEP 8

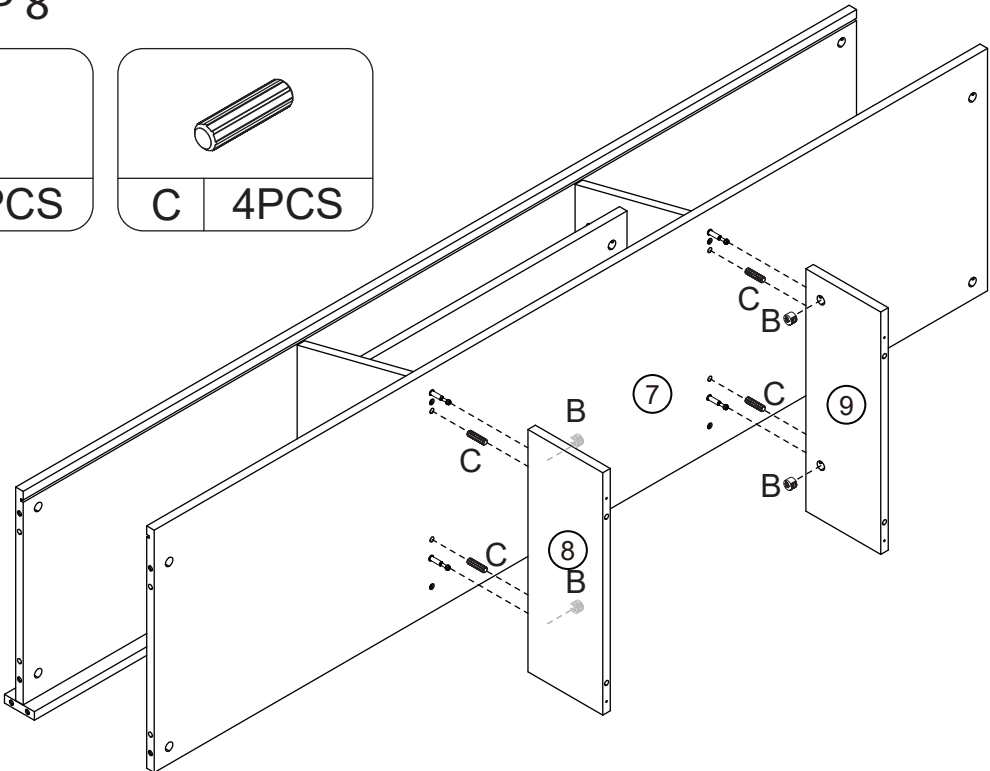
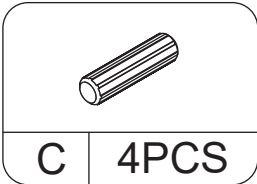
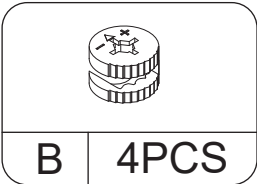


INSTALLATION STEPS

STEP 9

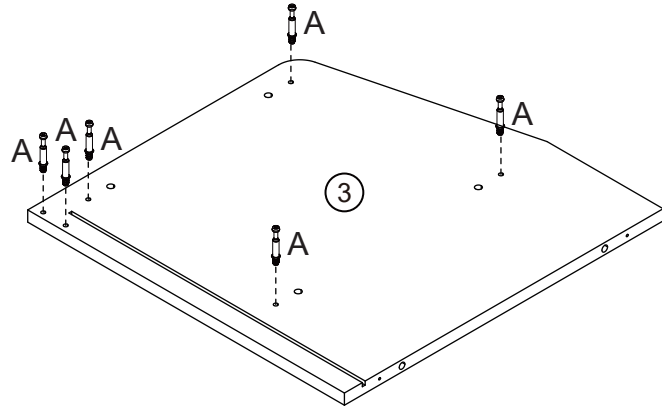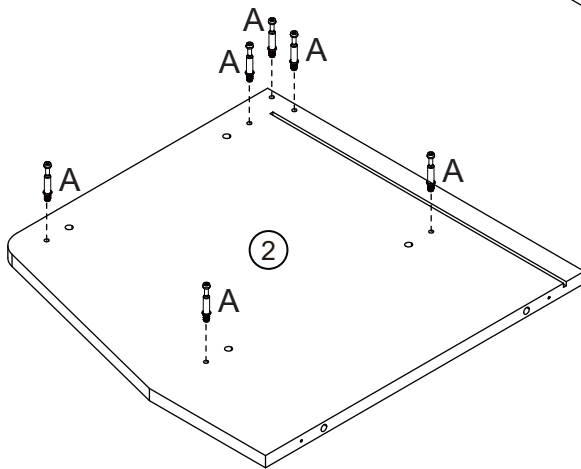
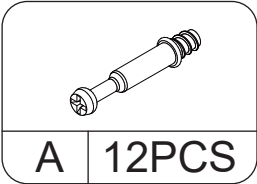


STEP 10

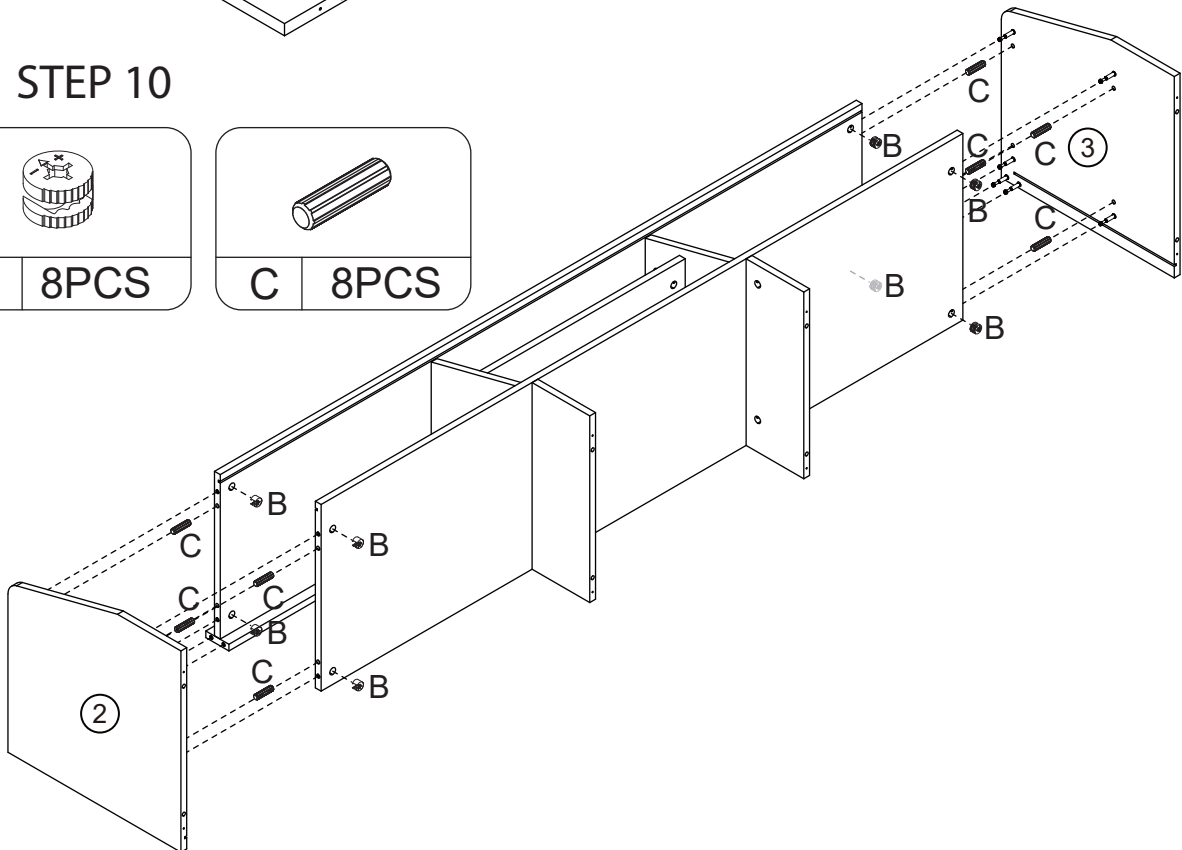
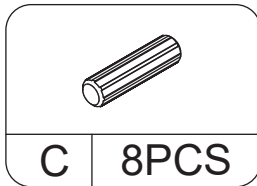
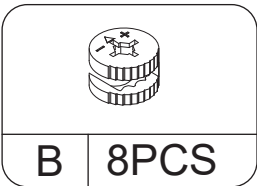


INSTALLATION STEPS

STEP 11



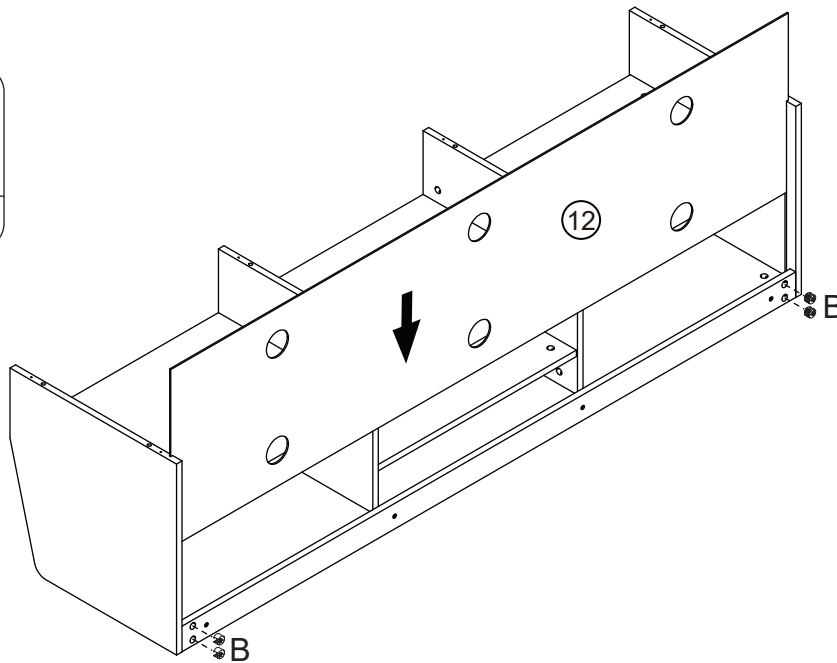
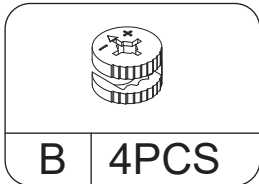


STEP 12



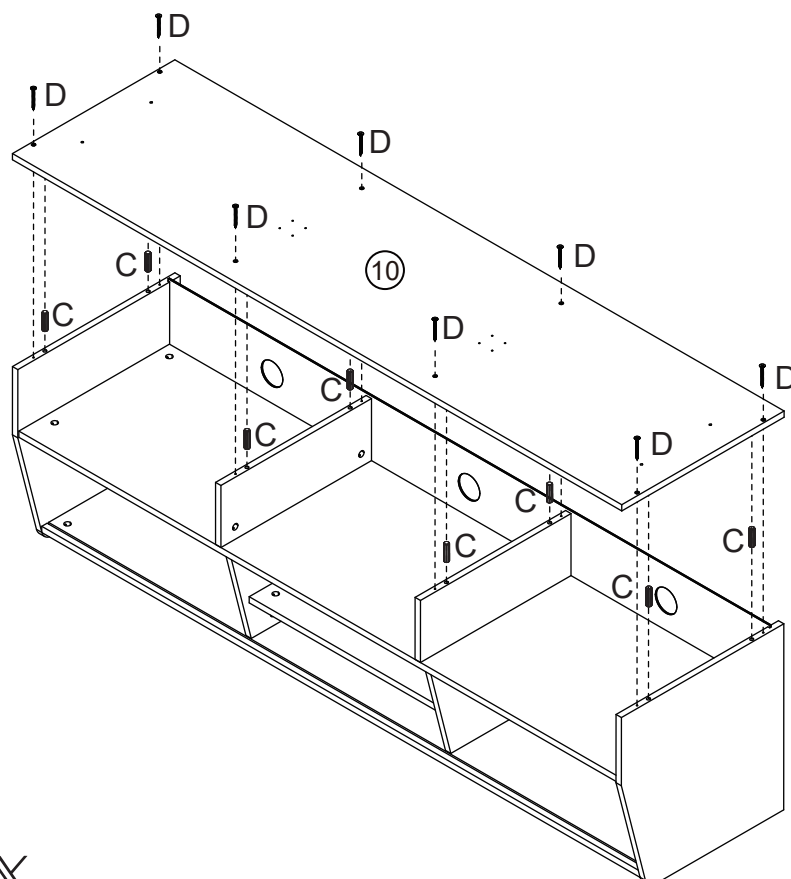
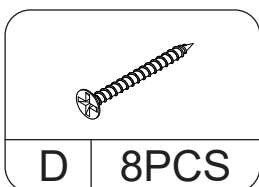
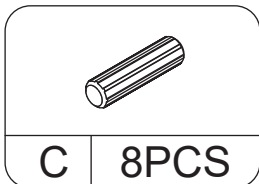


INSTALLATION STEPS

STEP 13

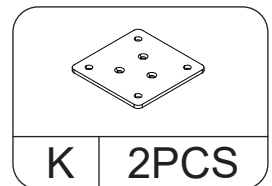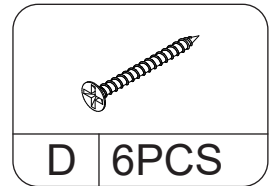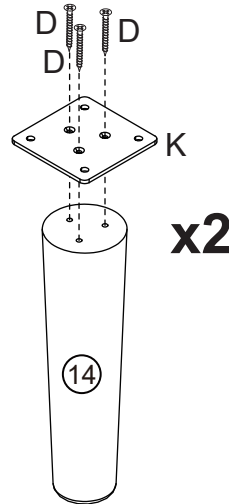
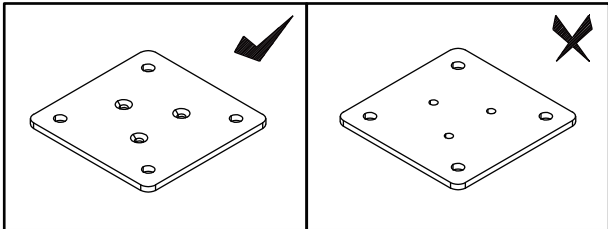


STEP 14

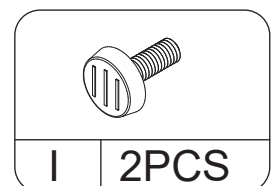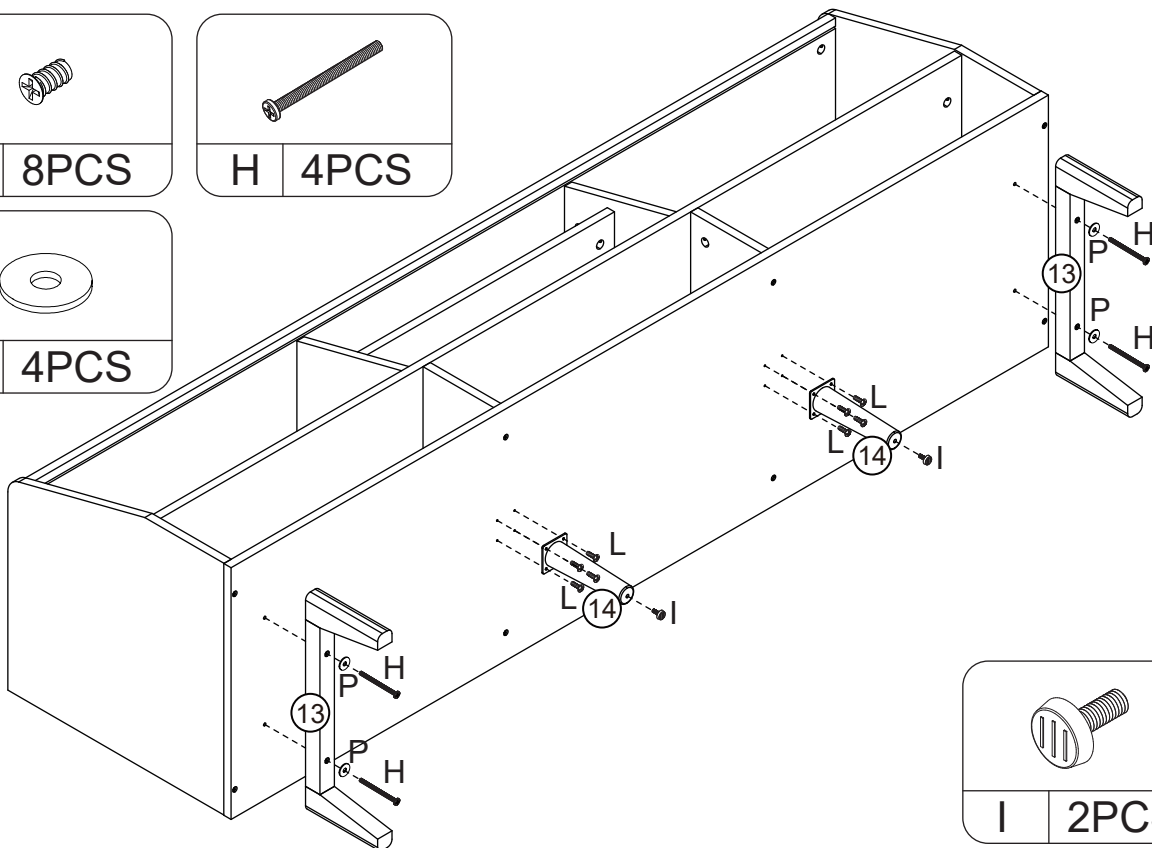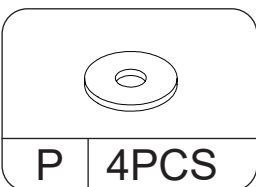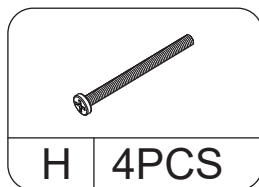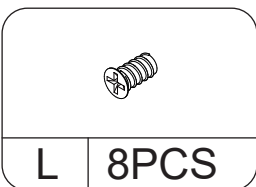


INSTALLATION STEPS

 STEP 15

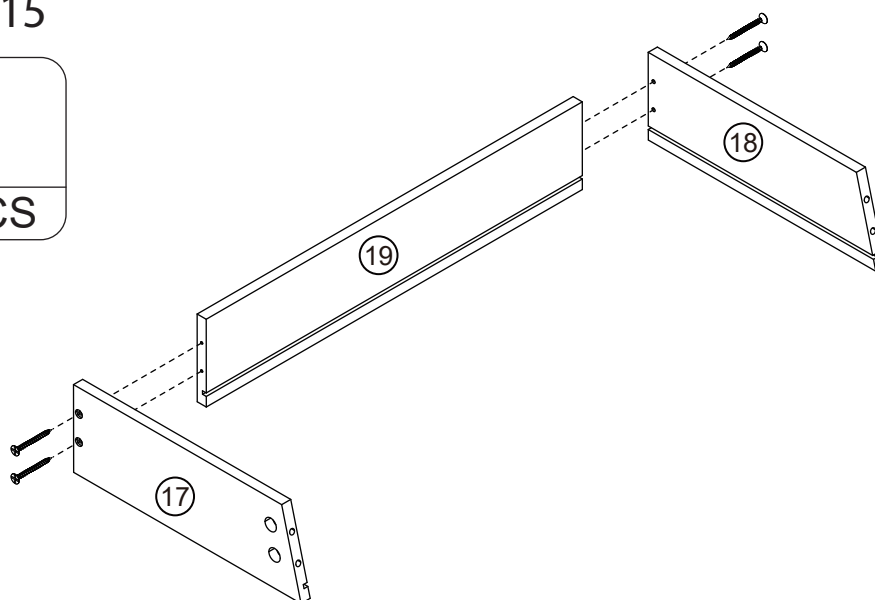
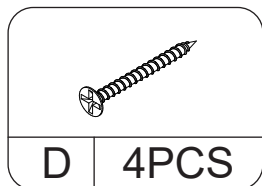


 STEP 16


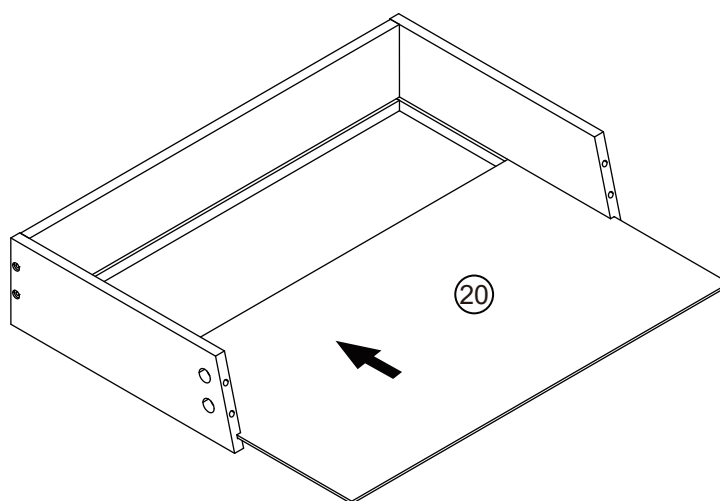


INSTALLATION STEPS

STEP 17



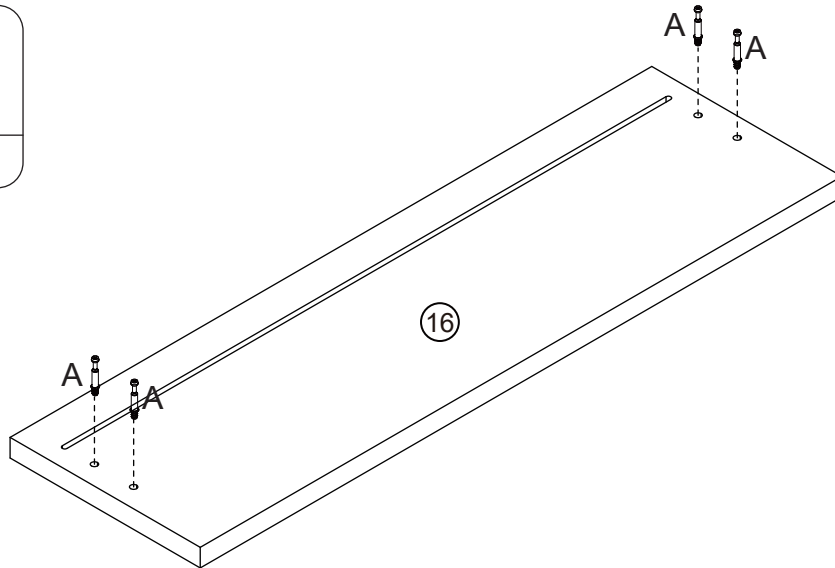
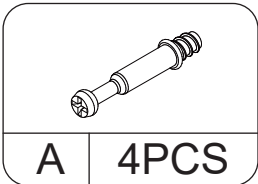


STEP 18

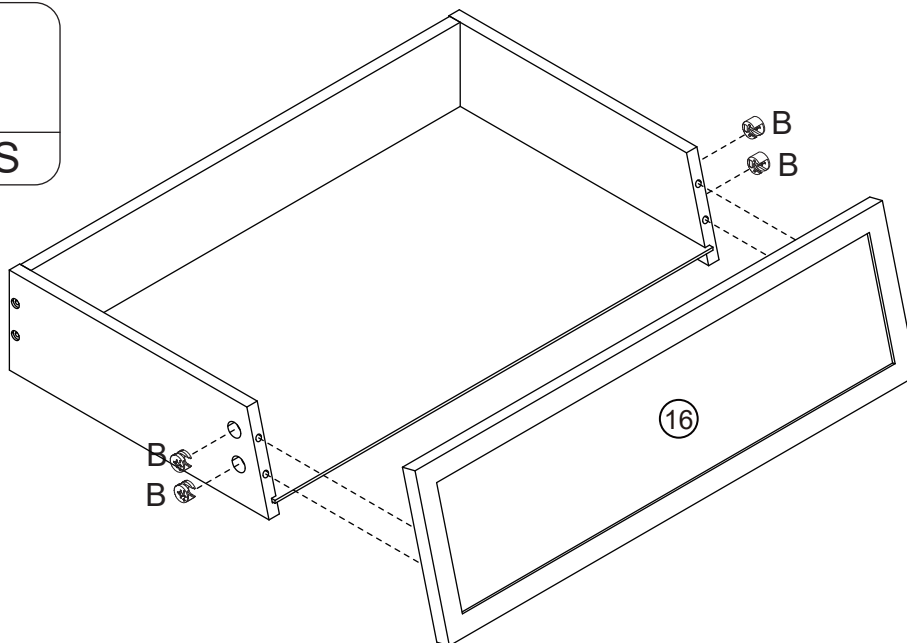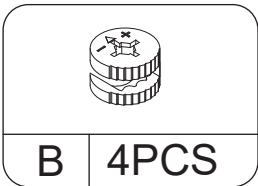


INSTALLATION STEPS

 **STEP 19**

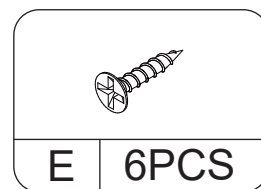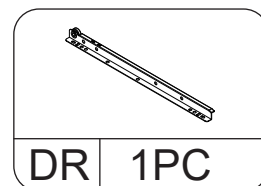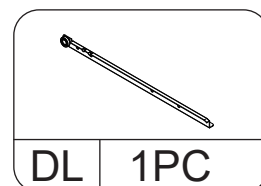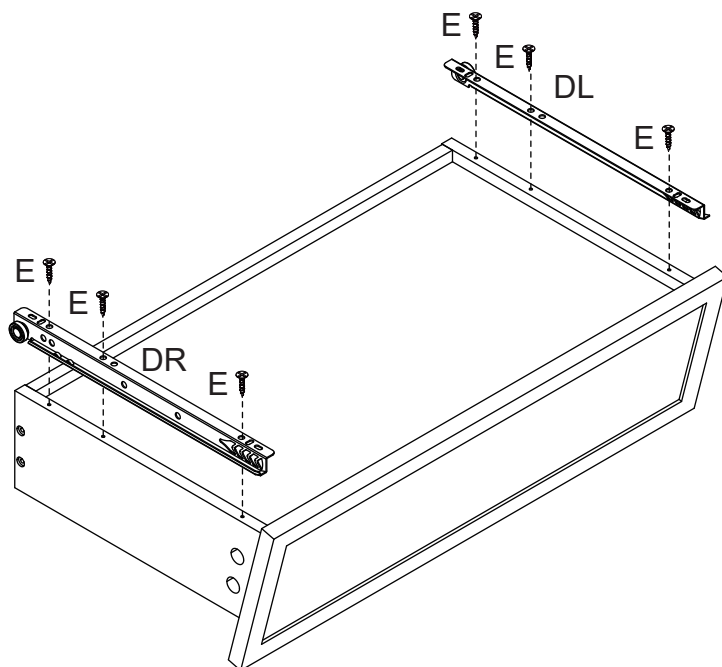



 **STEP 20**

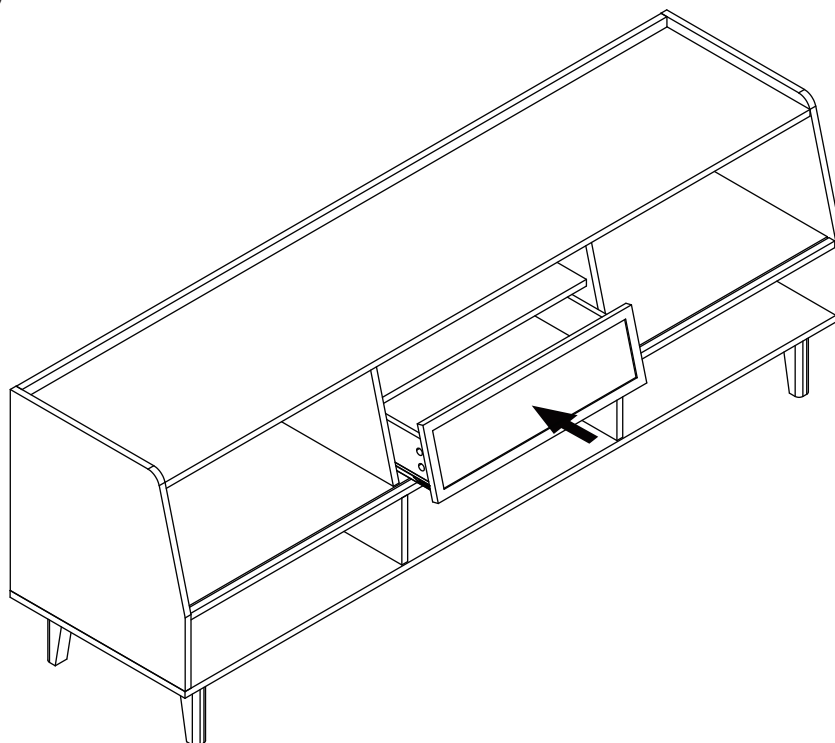



INSTALLATION STEPS


STEP 21

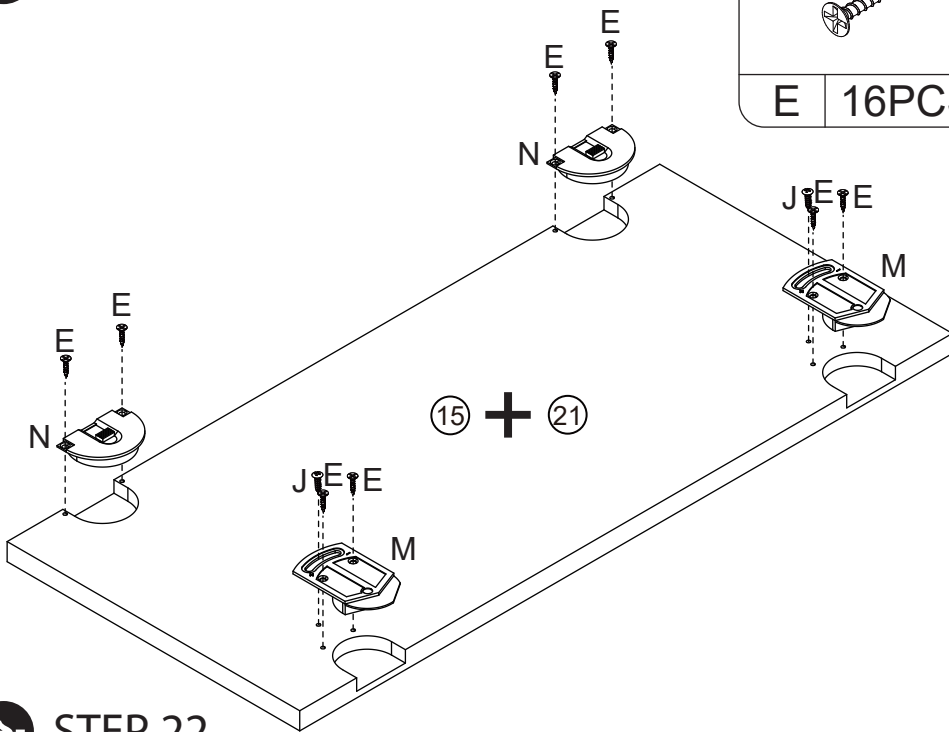


	
E	16PCS


	
M	4PCS


	
N	4PCS


	
J	4PCS

STEP 22

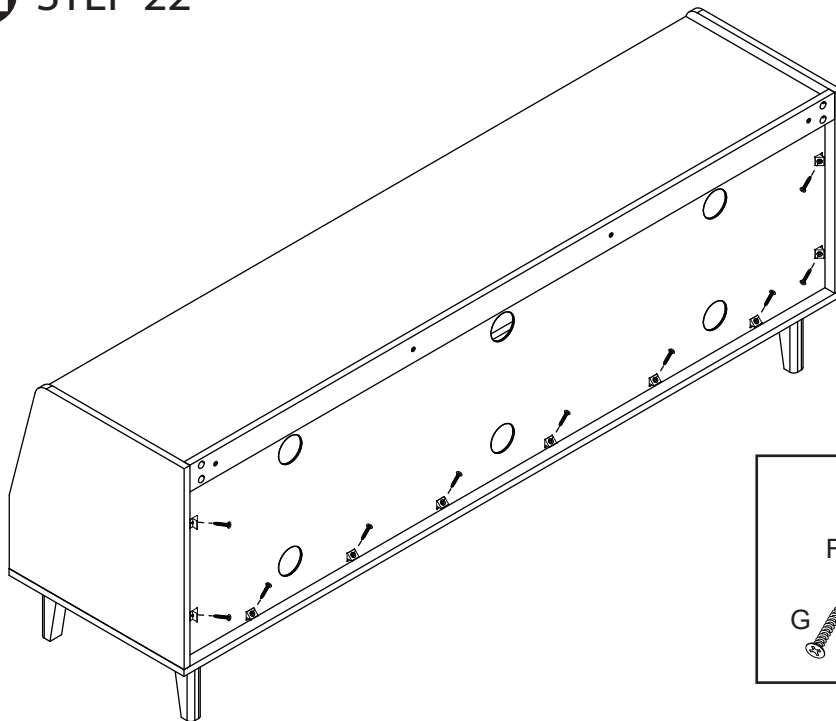



	
F	10PCS

	
G	10PCS

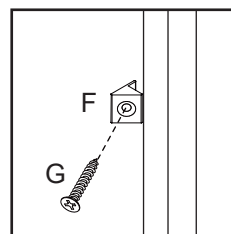

INSTALLATION STEPS

STEP 23

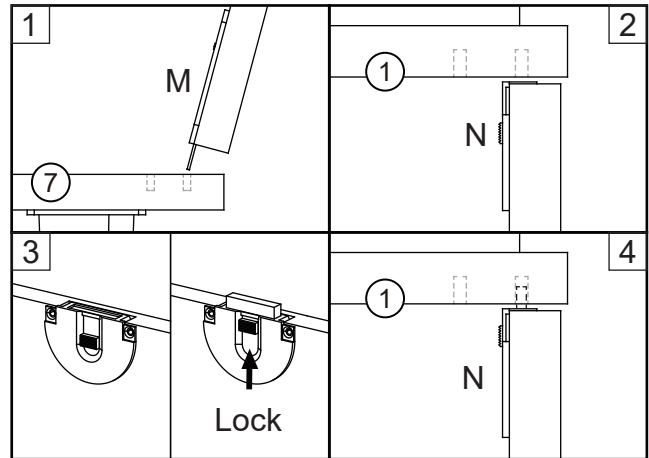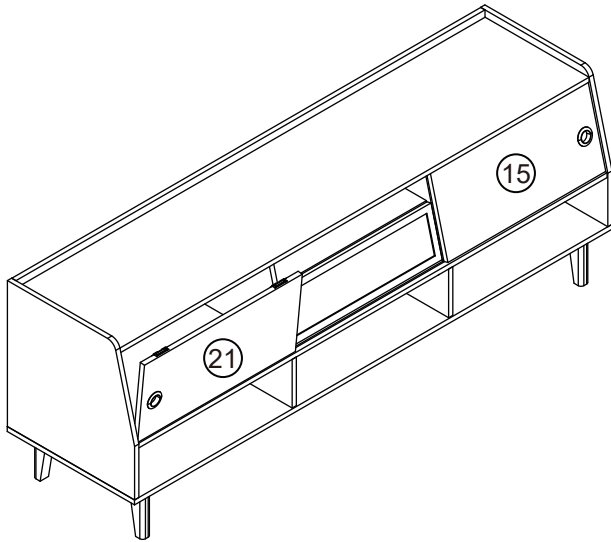

STEP 24

