



# ASSEMBLY INSTRUCTION

**SKU CODE: WF324072 / WF324073**

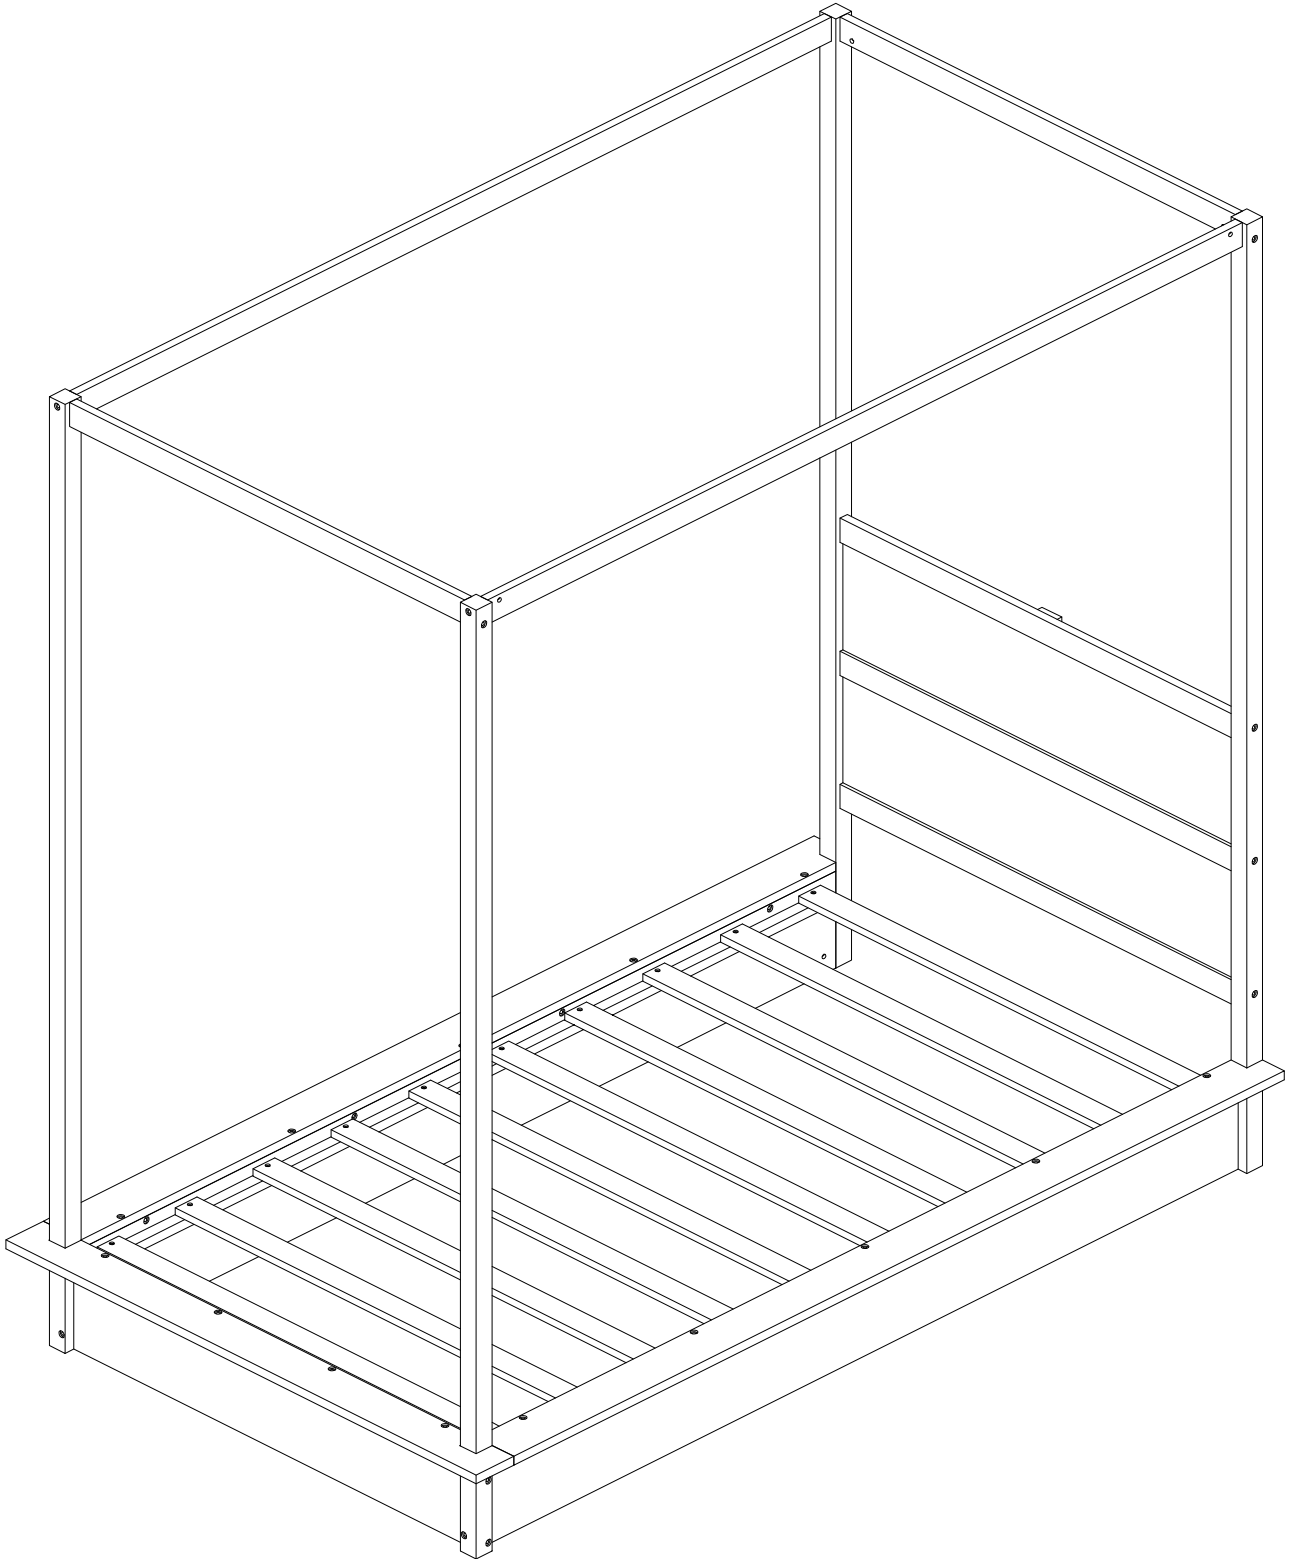


Detail:

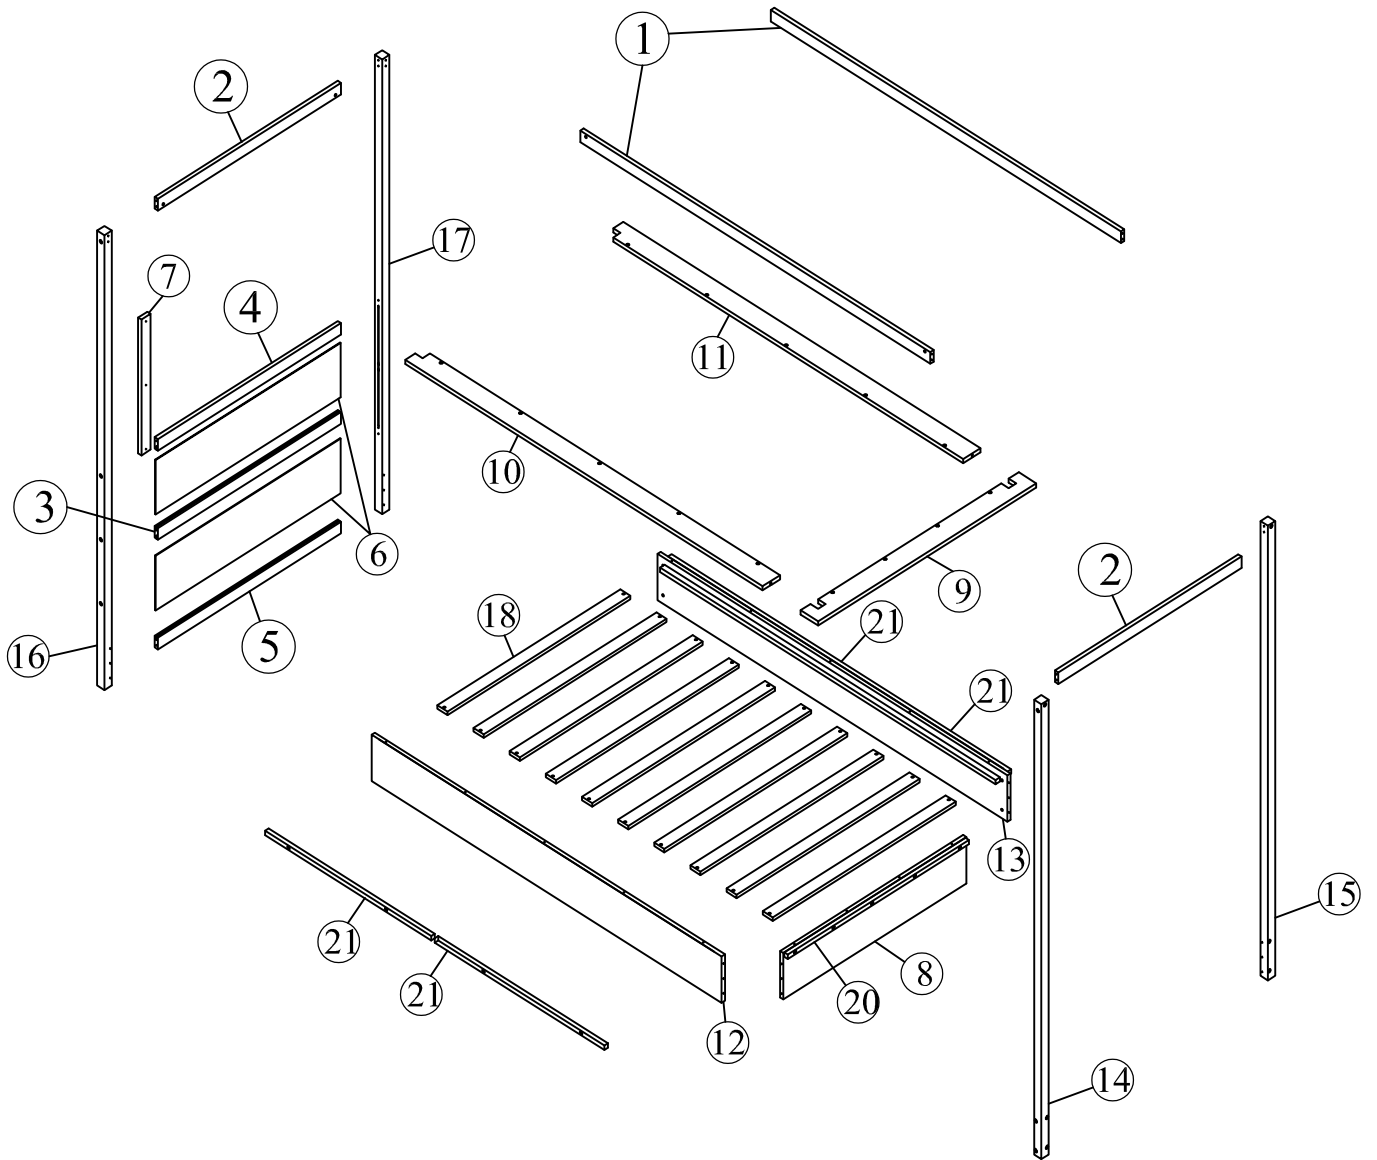


# Part List (WF324072)

② x2




**Top guard**

⑧ x1

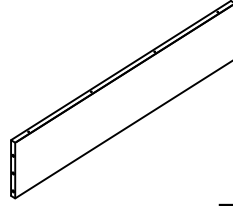


**Footboard**

⑥ x2

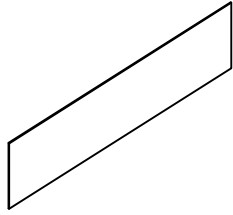

**Panel heaboard**

⑫ x1




**Back Side Rail**

⑬ x1




**Front Side Rail**

⑱ x6



**Slats**

⑳ x4
















**Wood Bar**

㉑ x1














**Wood Bar**


## Part List (WF324073)

<p>① x2</p>  <p style="text-align: center;"><b>Roof rail</b></p>	<p>③ x1</p>  <p style="text-align: center;"><b>Mid guard panel</b></p>
<p>④ x1</p>  <p style="text-align: center;"><b>Top guard panel</b></p>	<p>⑤ x1</p>  <p style="text-align: center;"><b>Bottom guard panel</b></p>
<p>⑦ x1</p>  <p style="text-align: center;"><b>Connected bar</b></p>	<p>⑨ x1</p>  <p style="text-align: center;"><b>Top Side Rail</b></p>
<p>⑩ x1</p>  <p style="text-align: center;"><b>Top Side Rail</b></p>	<p>⑪ x1</p>  <p style="text-align: center;"><b>Top Side Rail</b></p>
<p>⑭ x1</p>  <p style="text-align: center;"><b>Back (left) Leg</b></p>	<p>⑮ x1</p>  <p style="text-align: center;"><b>Front (left) Leg</b></p>
<p>⑯ x1</p>  <p style="text-align: center;"><b>Back (right) Leg</b></p>	<p>⑰ x1</p>  <p style="text-align: center;"><b>Front (right) Leg</b></p>
<p>⑱ x4</p>  <p style="text-align: center;"><b>Slats</b></p>	





## Hardware List (WF324072)


No.	OUTLOOK	DESC	QTY
A		Dowel Ø8*30mm	20pcs
B		Bolts M6*80mm	26pcs
C		Bolts M6*35mm	14pcs
D		Cross dowel M6*13mm	26pcs
E		Flat head screw #8*25mm	27pcs
G		Flat head screw #7*12mm	30pcs
H		Wooden splints	2pcs
I		Led Light	1pc
K		Plastic brace	15pcs
O		Allen key 60*22*4mm	1pc
J		Flat head screw #8*30mm	18pcs

**ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)**




# STEP 1

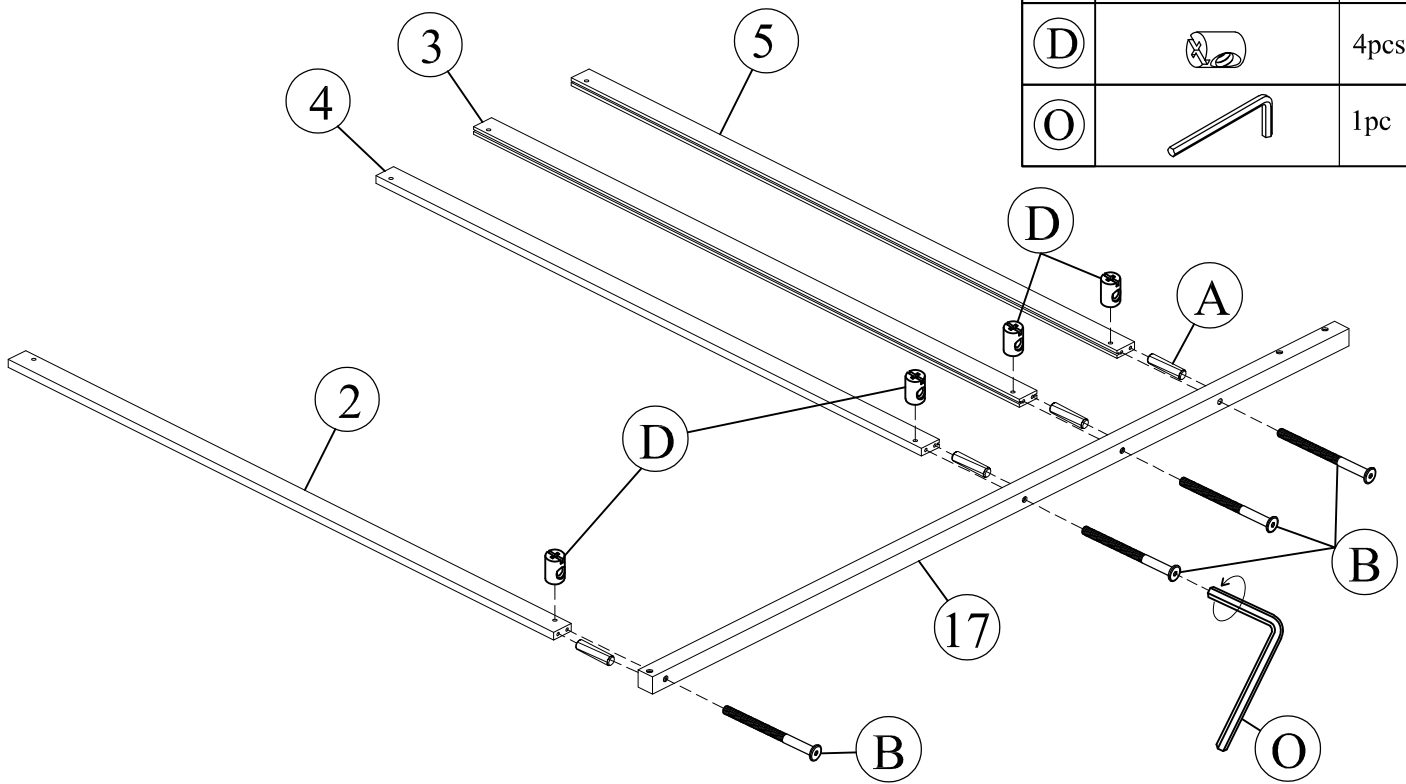



(A)		4pcs
(B)		4pcs
(D)		4pcs
(O)		1pc

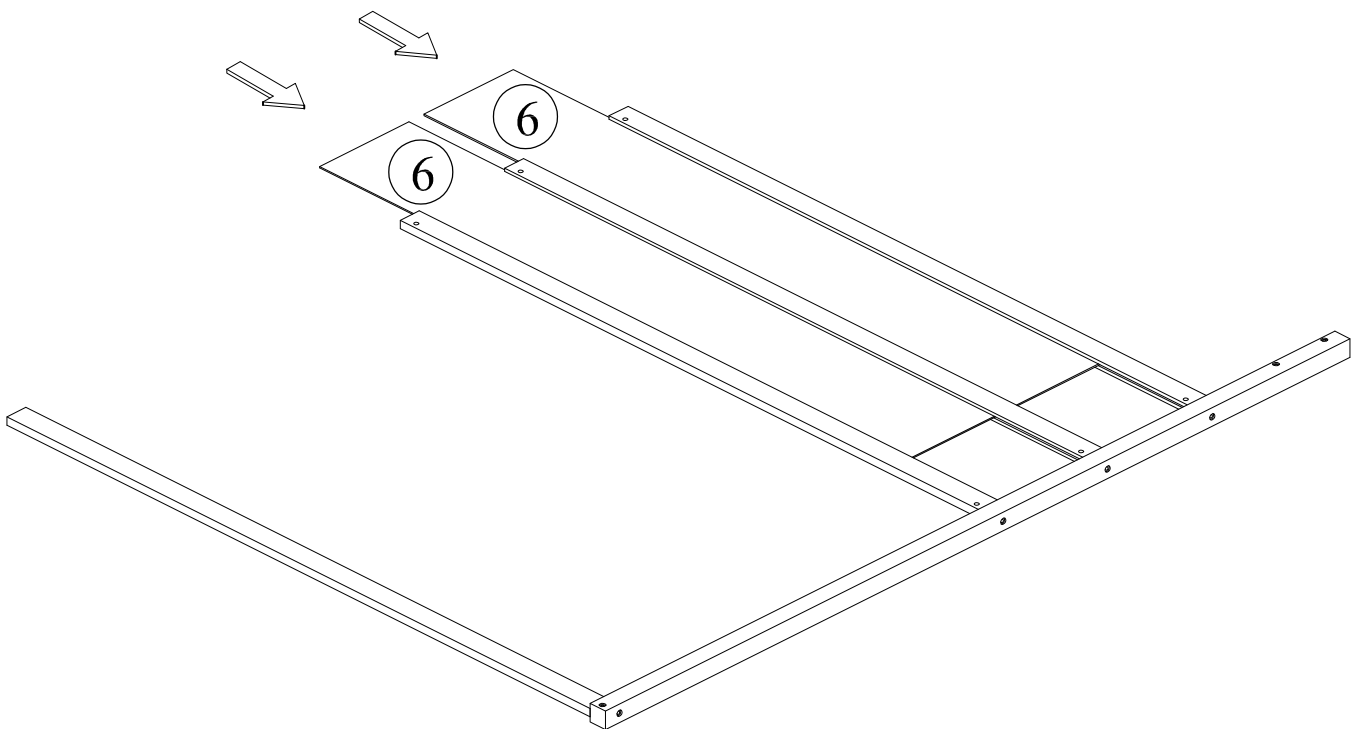


# STEP 2




### STEP 3

(A)		4pcs
(B)		4pcs
(D)		4pcs
(O)		1pc

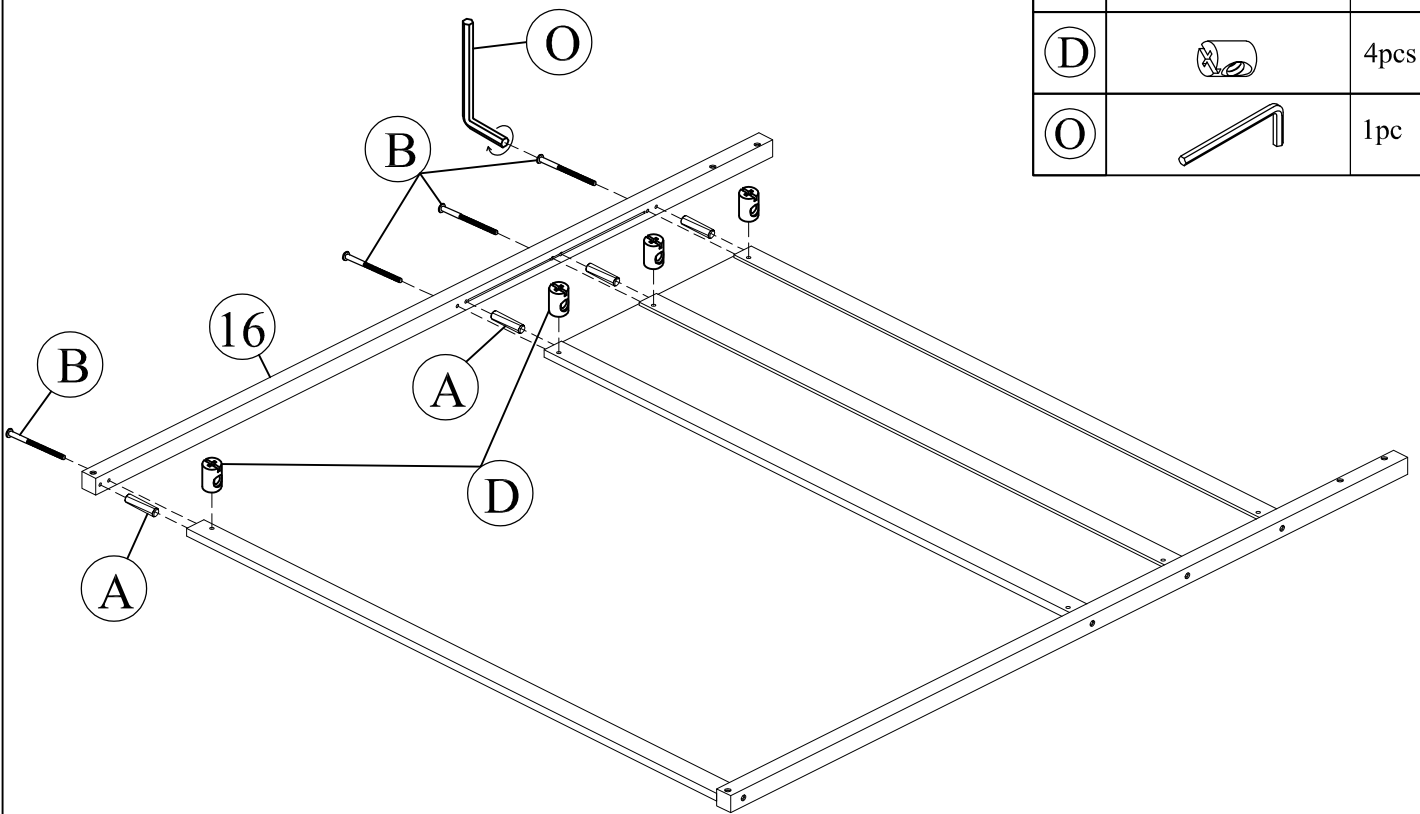


### STEP 4

(J)		12pcs
-----	-------------------------------------------------------------------------------------	-------

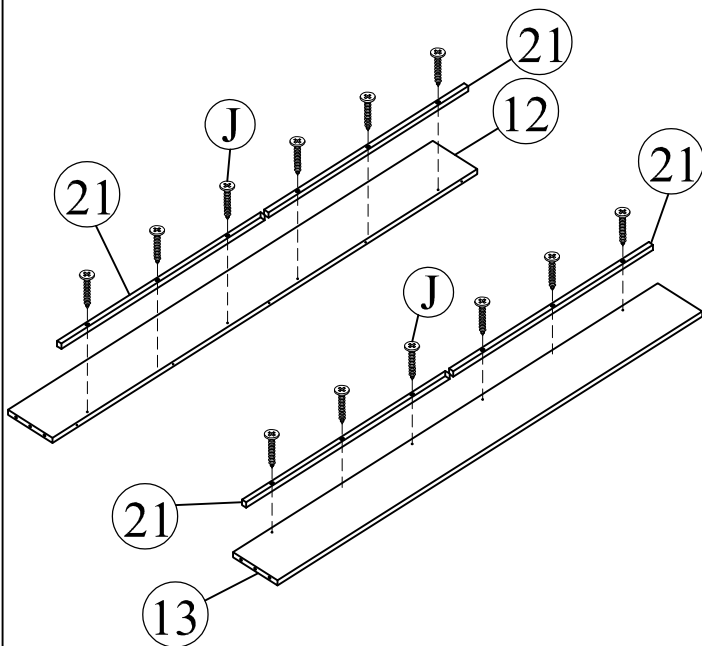


### STEP 4.1

(J)		6pcs
-----	---------------------------------------------------------------------------------------	------

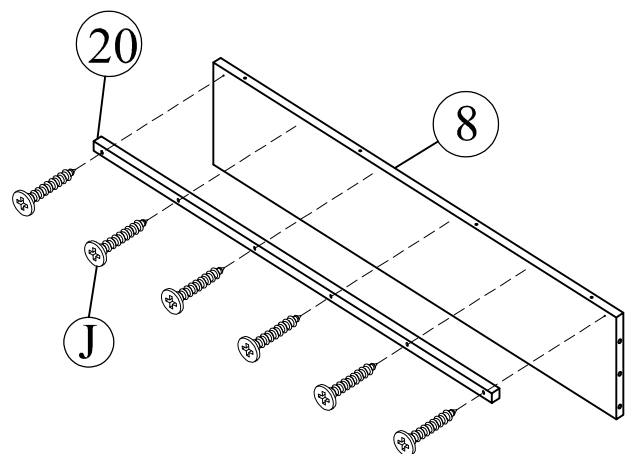





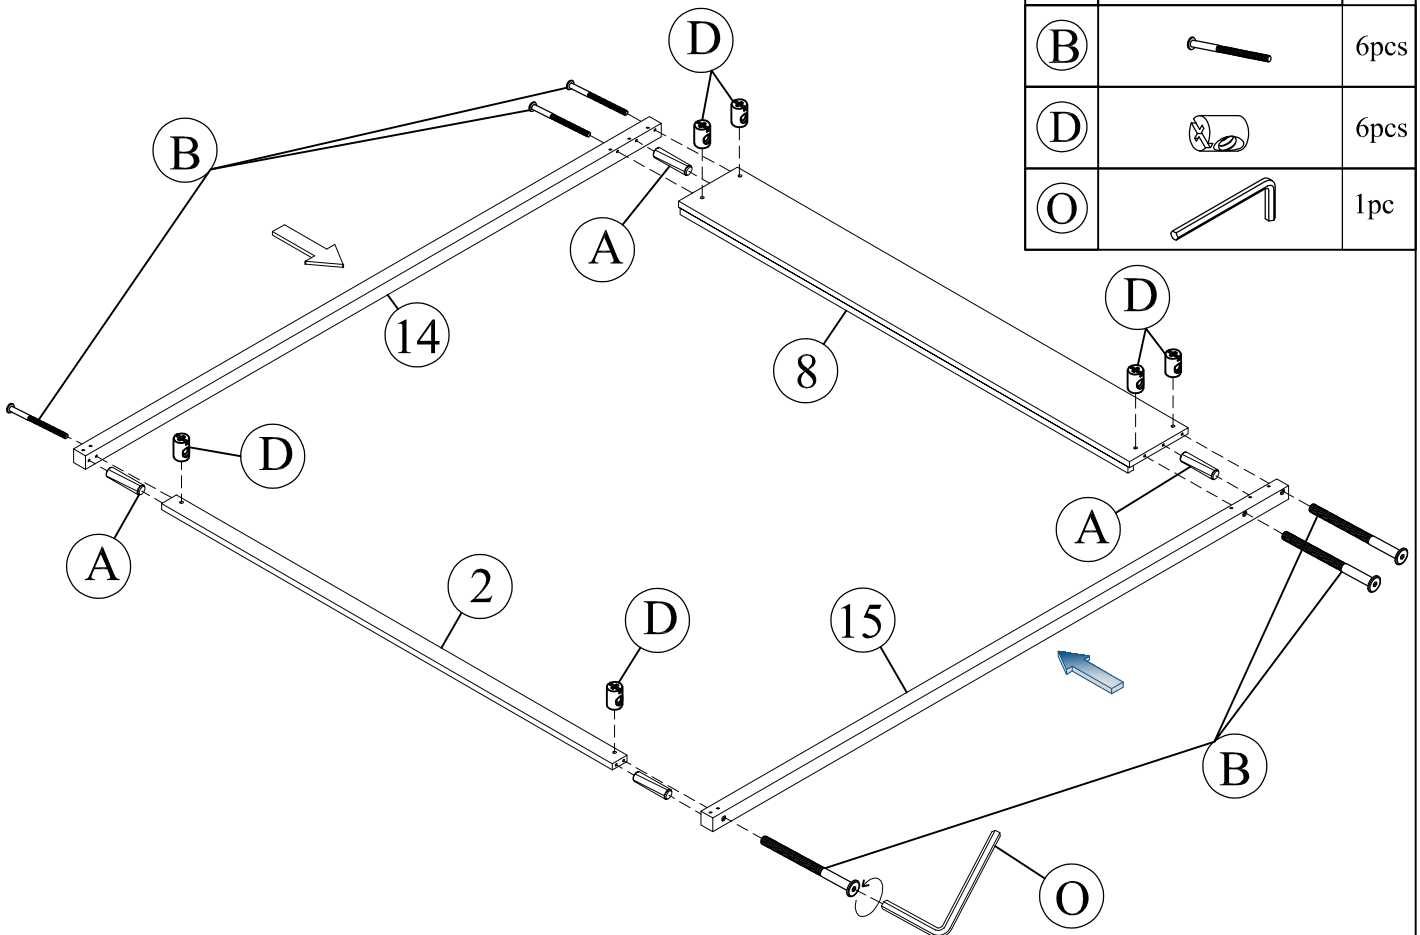
# STEP 5

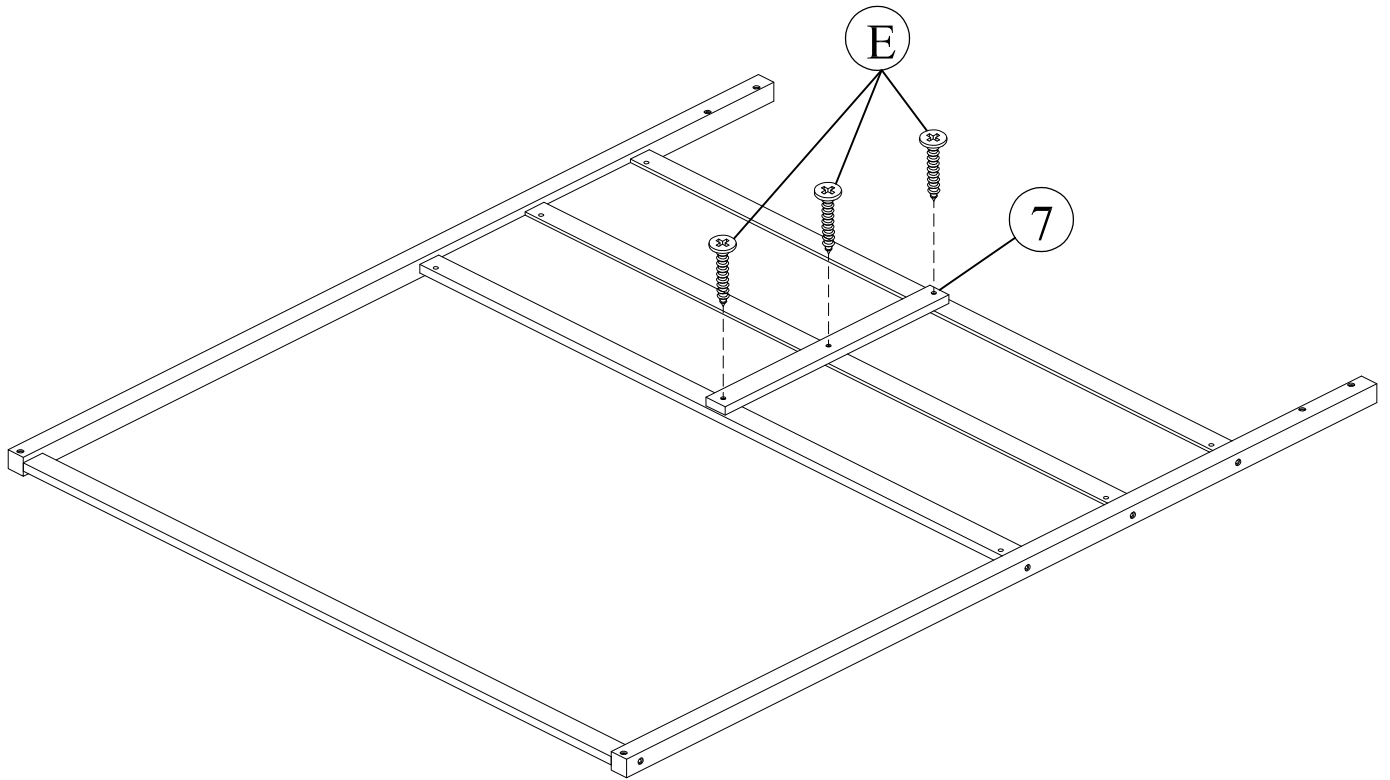E		3pcs
---	-------------------------------------------------------------------------------------	------







# STEP 6


A		4pcs
B		6pcs
D		6pcs
O		1pc






# STEP 7


(A)		8pcs
(B)		12pcs
(D)		12pcs
(O)		1pc

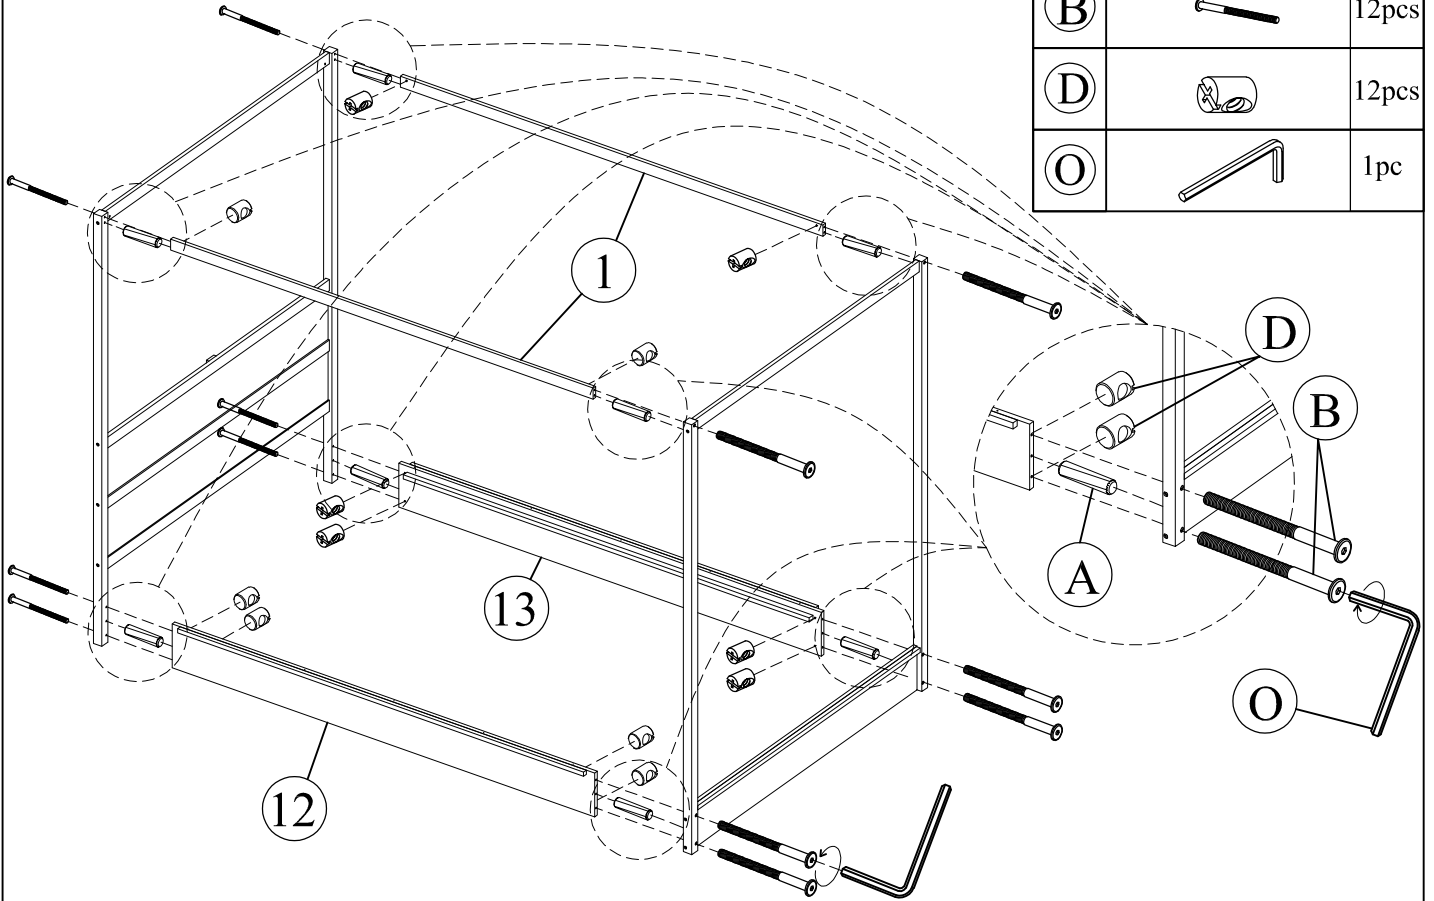

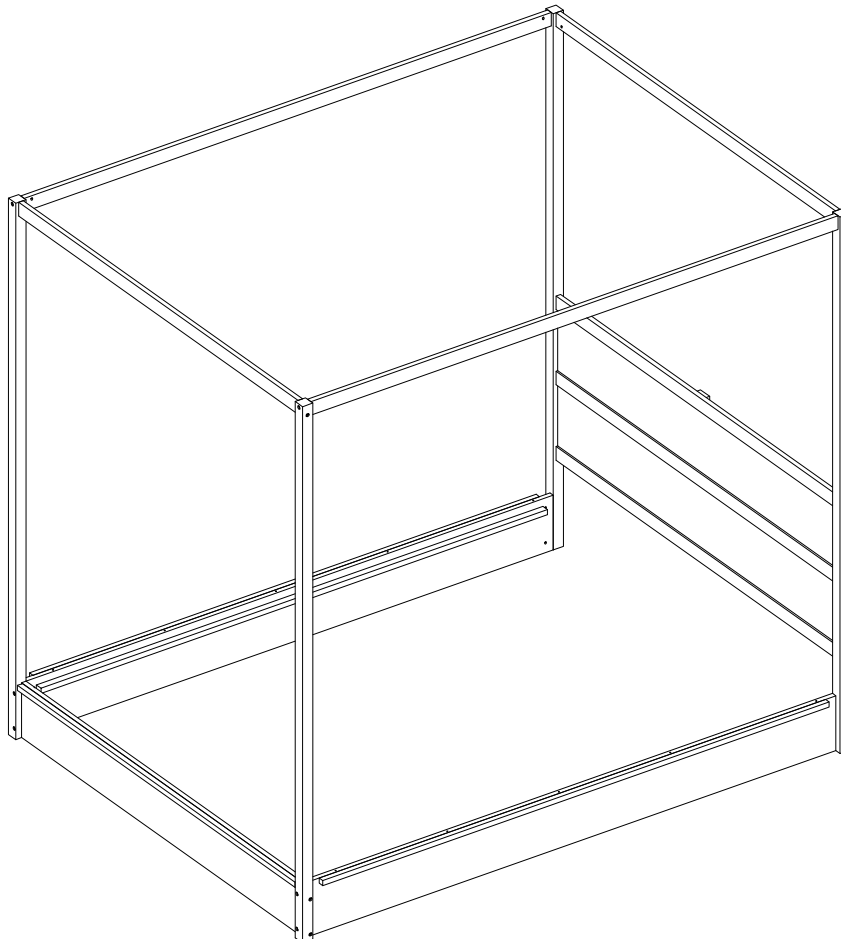

# STEP 8

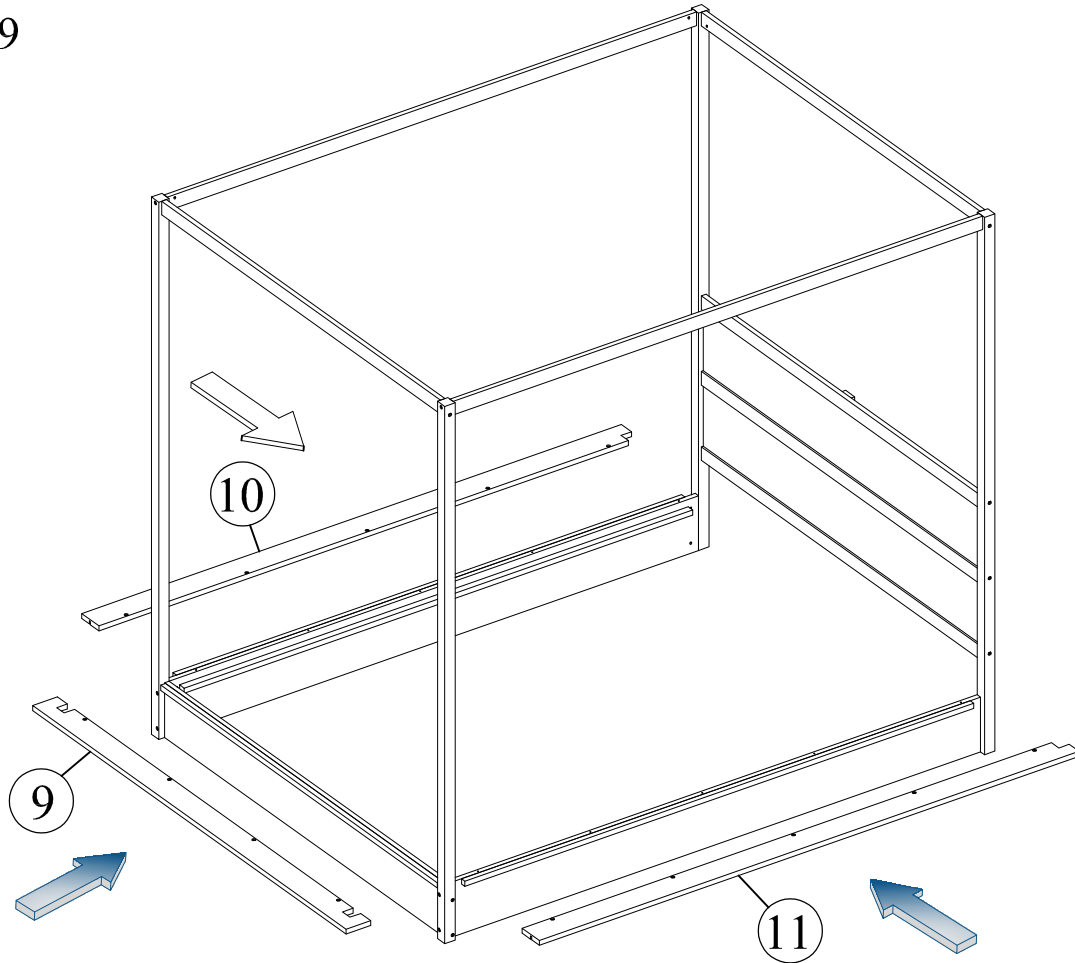


# STEP 9



# STEP 10

(C)		14pcs
(O)		1pc


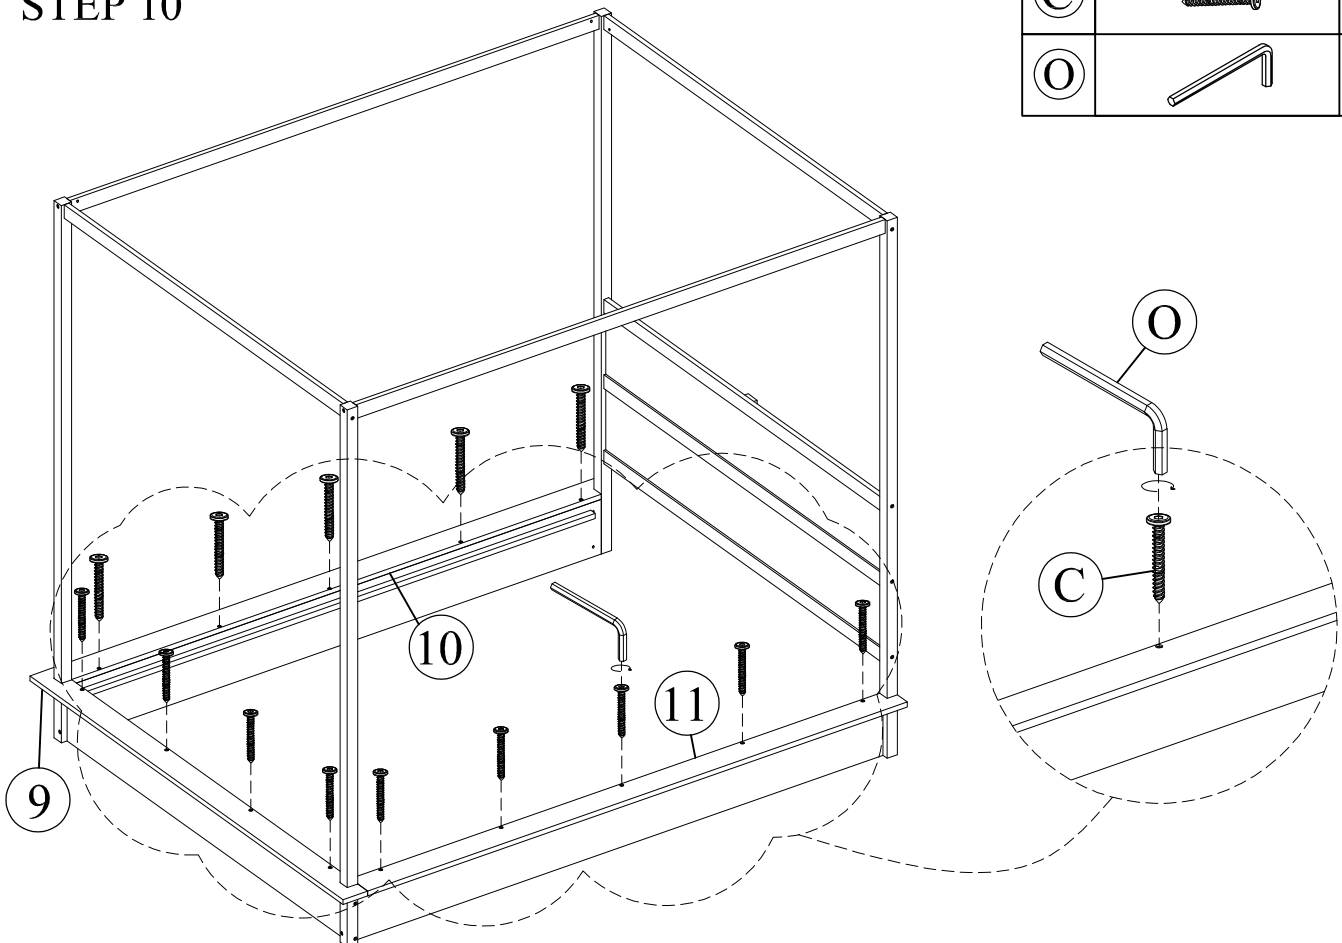


# STEP 11


(E)





20pcs

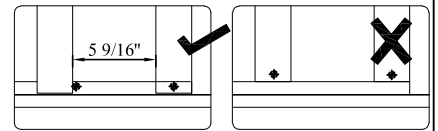
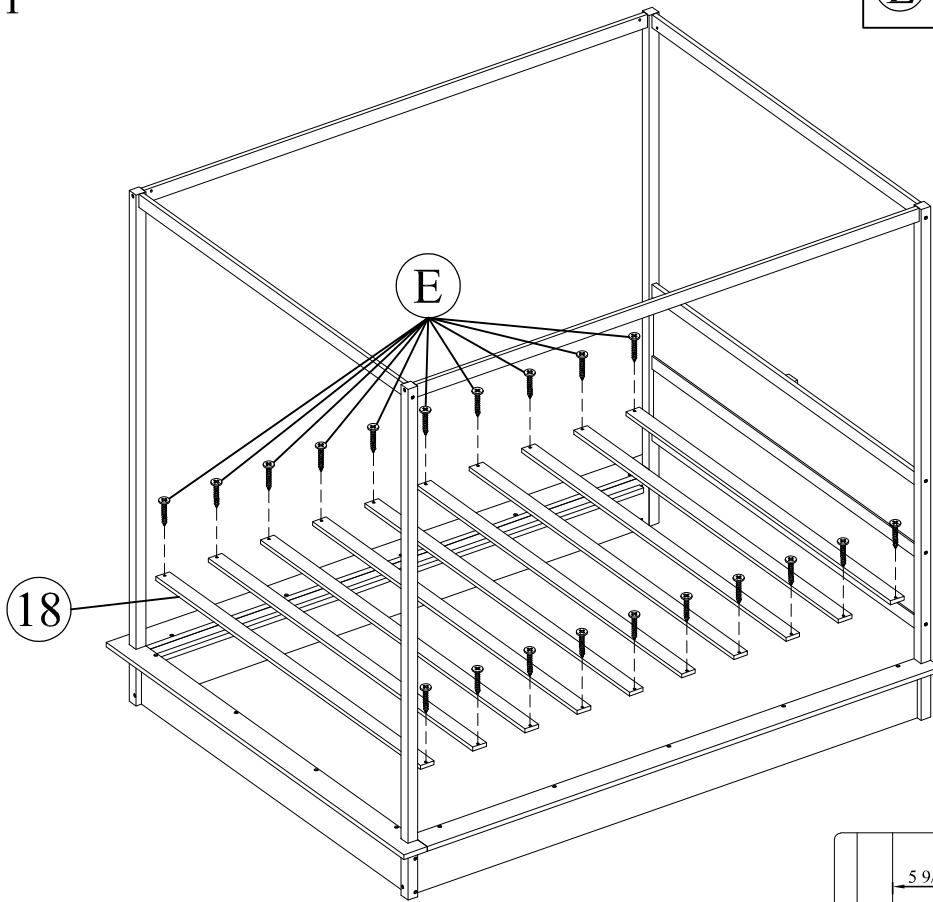


# STEP 12

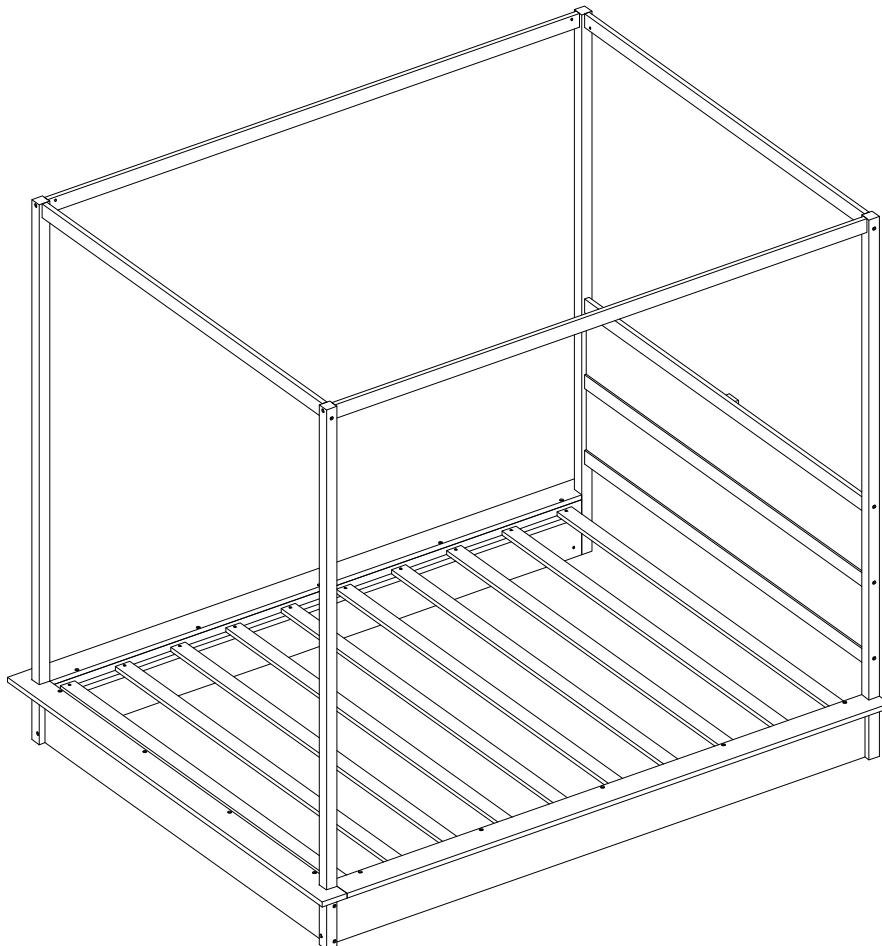


# STEP 13

E		4pcs
H		2pcs

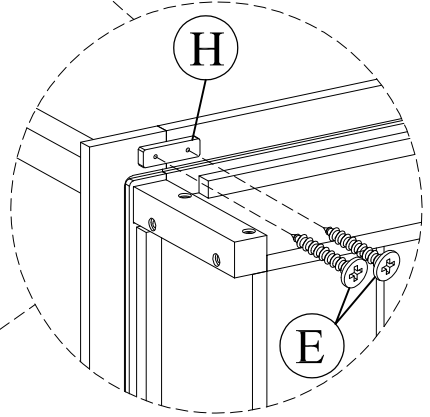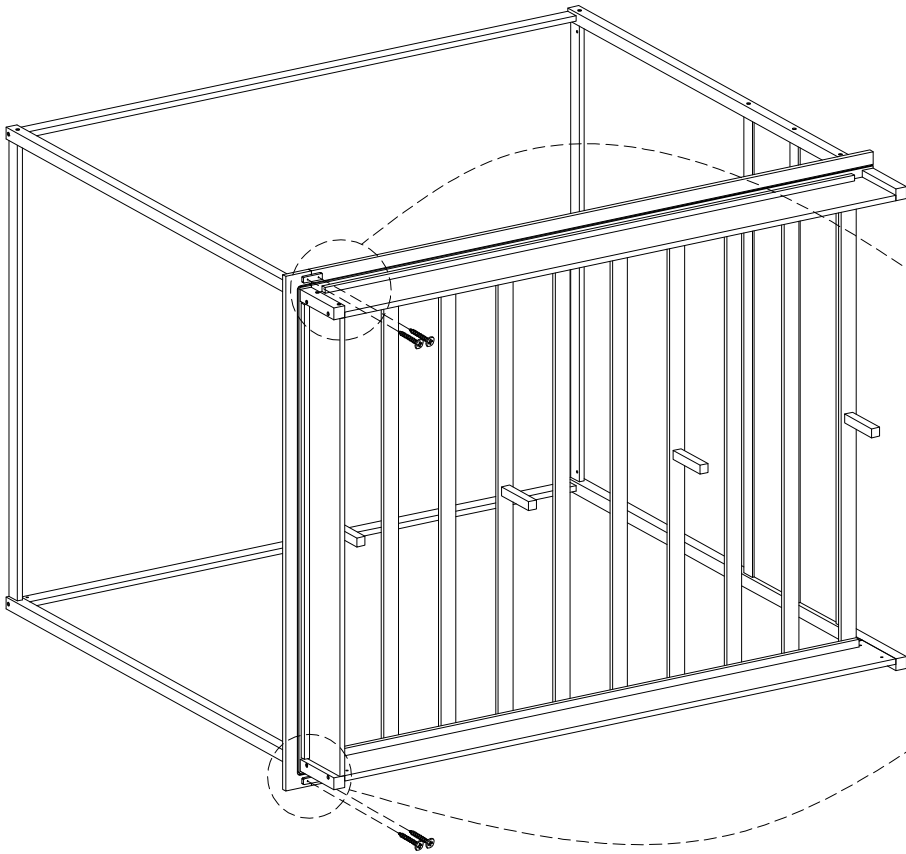




# STEP 14

I		1pc
---	---------------------------------------------------------------------------------------	-----

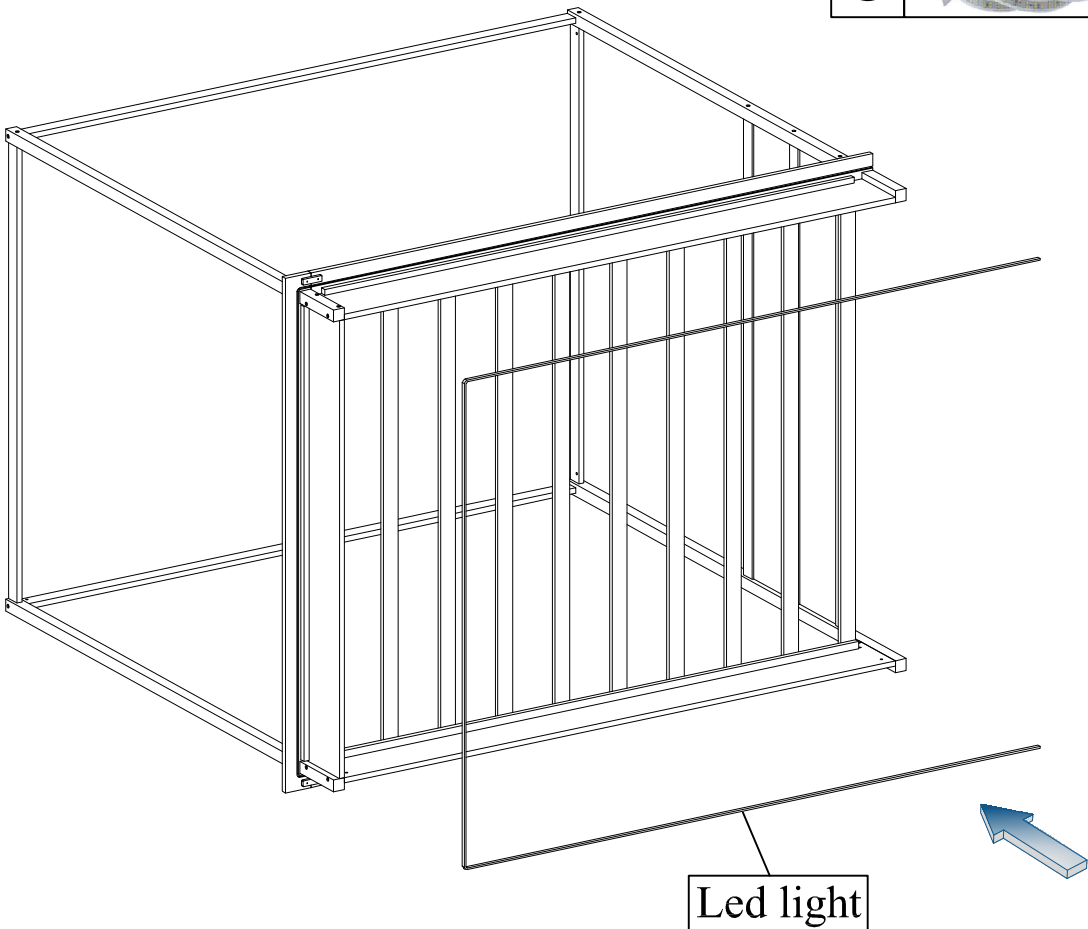

# STEP 15

G		30pcs
K		15pcs

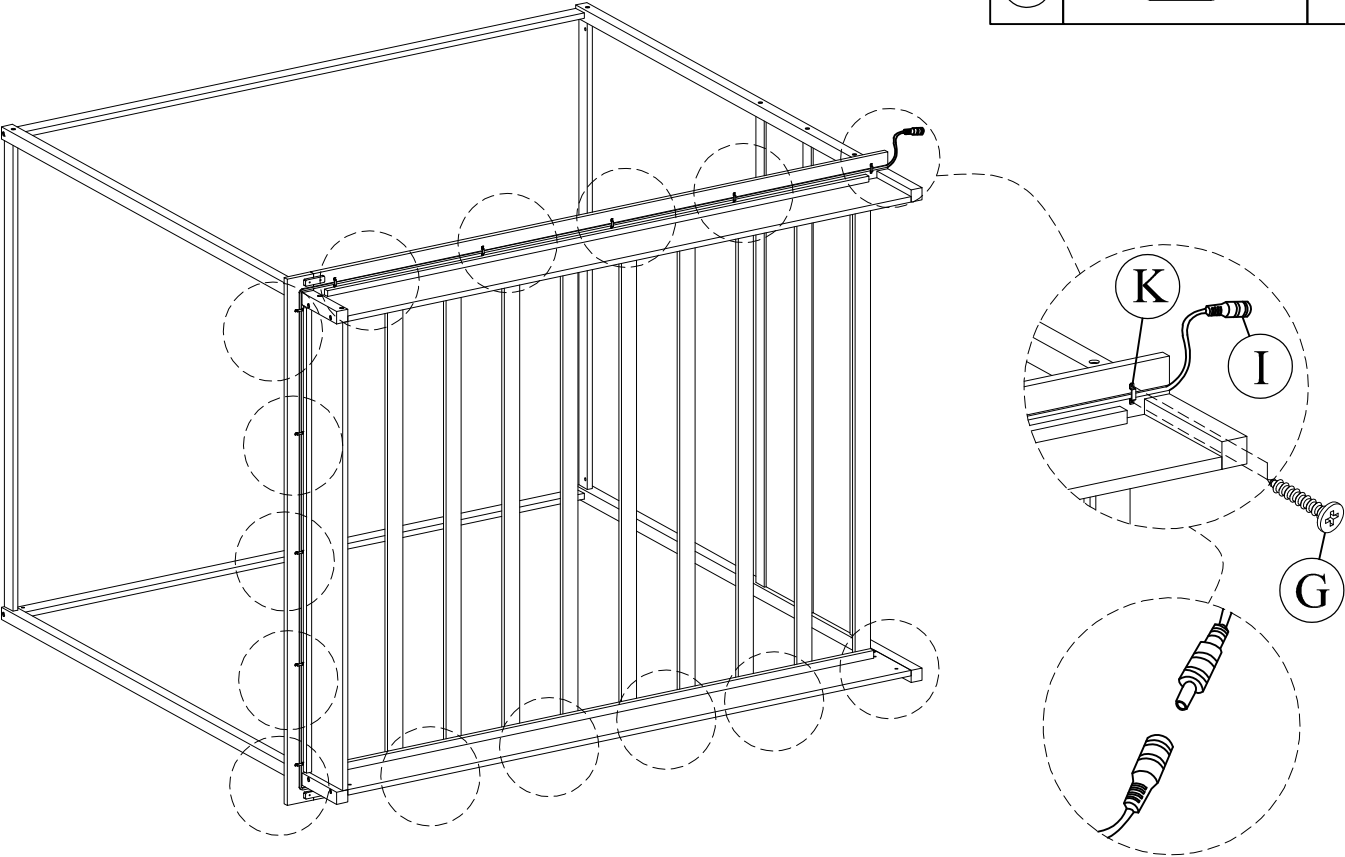

# FINAL

