
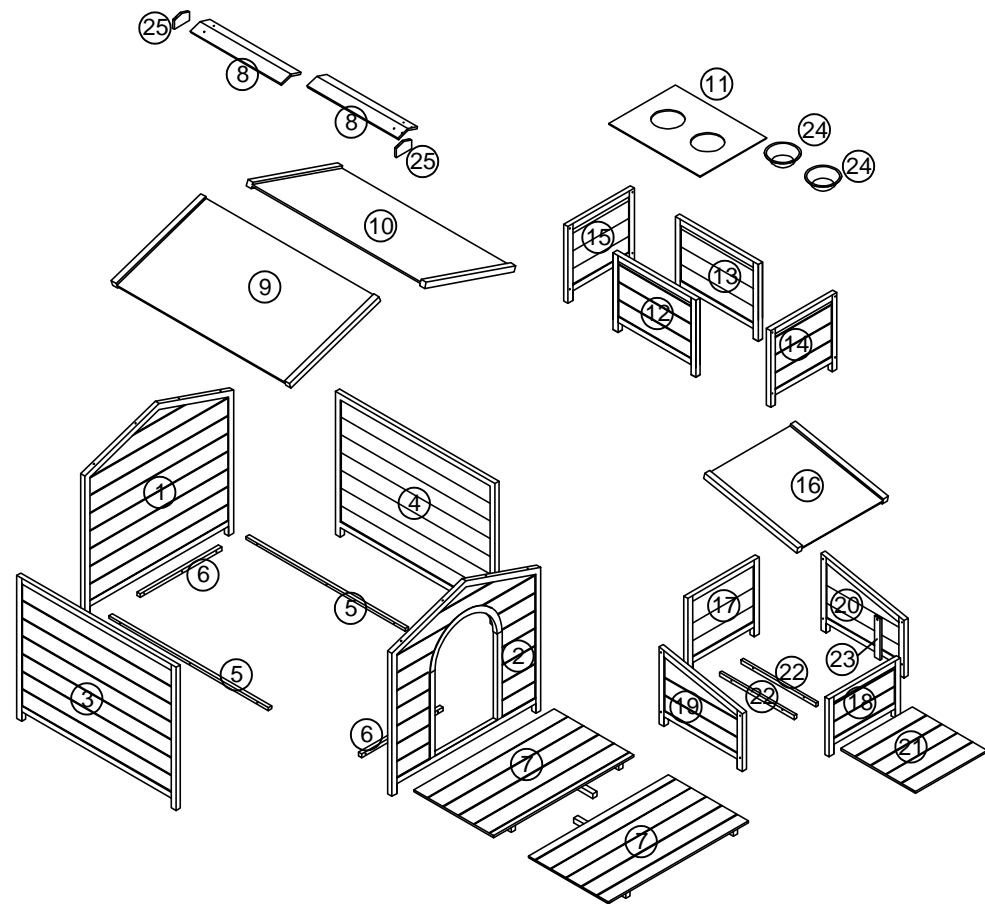
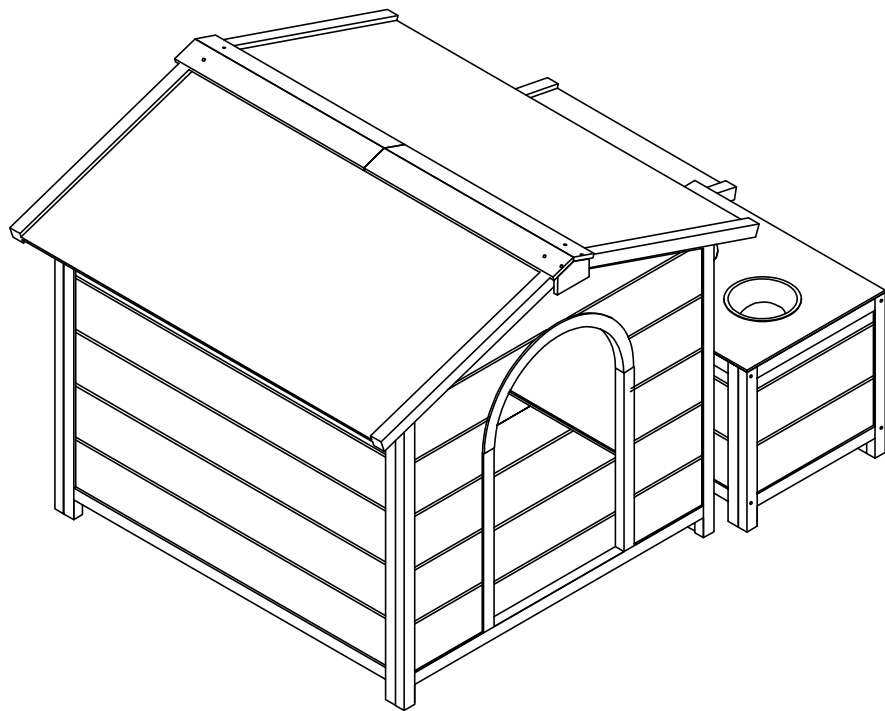










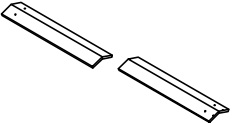



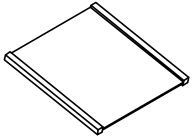




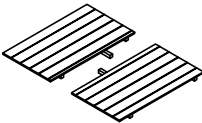
# DOG HOUSE ASSEMBLY INSTRUCTIONS

## WF318644/WF318643















<b>A</b>		M3.5x40mm	28
<b>B</b>		M3.5x35mm	18
<b>C</b>		M3.5x20mm	21
<b>D</b>		M3.5x12mm	12
<b>E</b>		1.5"	2
<b>F</b>		45mm	2
<b>G</b>			1


WF318644

<b>③</b> x1 	<b>④</b> x1 	<b>⑧</b> x2 
<b>⑫</b> x2 	<b>⑨</b> x1 	<b>⑩</b> x1 
<b>⑬</b> x1 	<b>⑭</b> x2 	<b>⑮</b> x1 
<b>①</b> x2 	<b>②</b> x1 	<b>⑦</b> x2 


WF318643
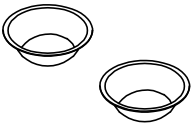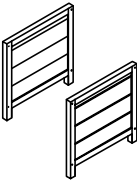
<p>② x1</p> 	<p>① x1</p> 	<p>⑥ x2</p> 
<p>②4 x2</p> 	<p>①1 x1</p> 	<p>①4 x1 ①5 x1</p> 
<p>①9 x1</p> 	<p>②0 x1</p> 	<p>①7 x1</p> 
<p>①8 x1</p> 	<p>②1 x1</p> 	<p>①3 x1</p> 


## Step1

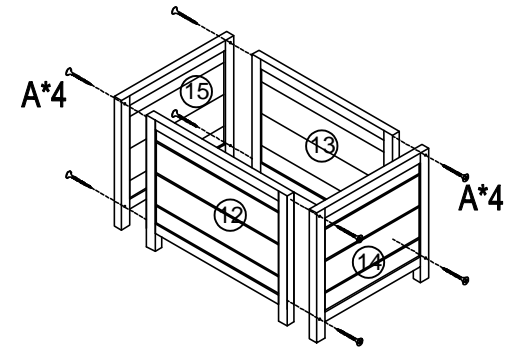






## Step2

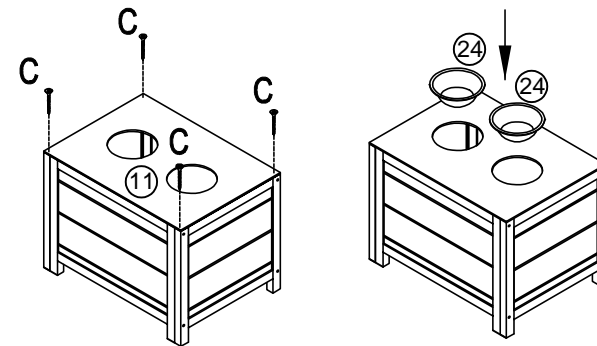


### Step3

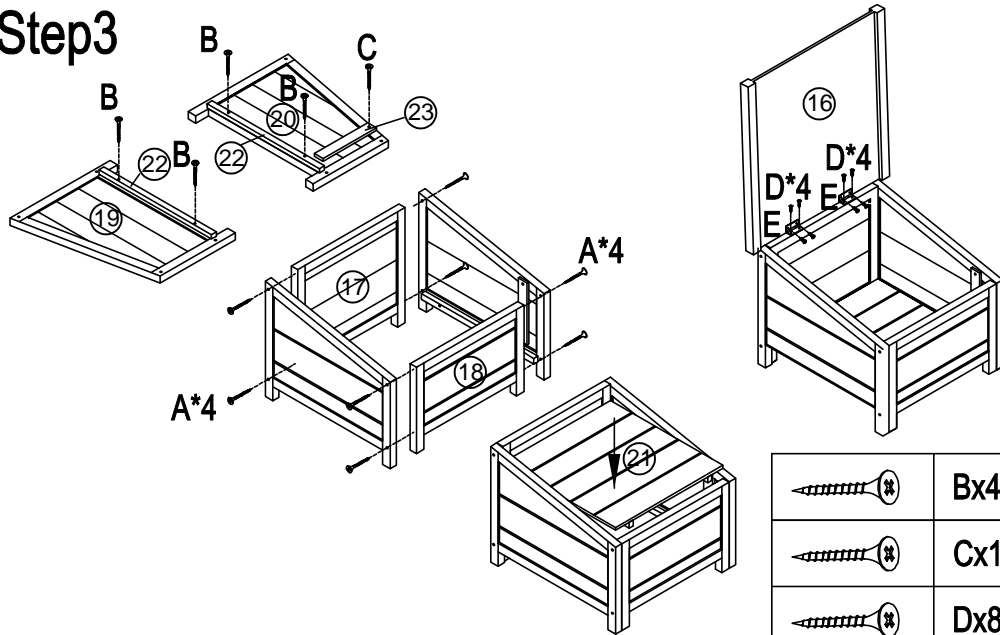


	Ax8		Ex2
	Bx4		
	Cx1		
	Dx8		

### Step5

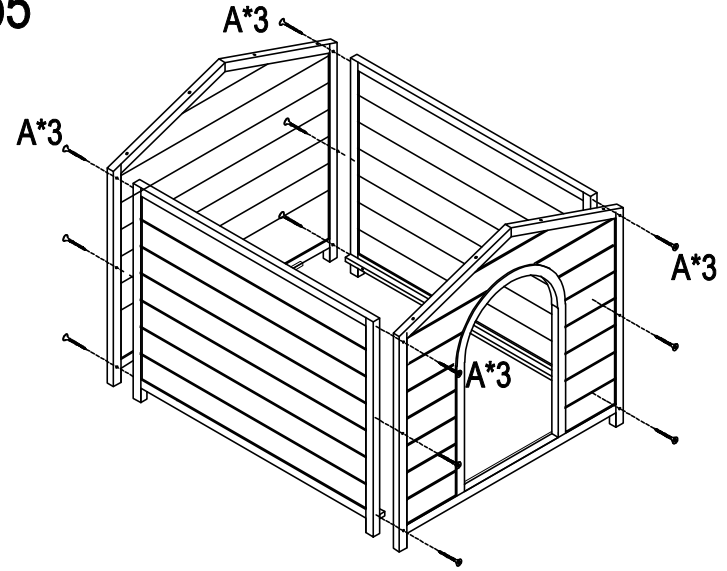


	Ax12
---	------

### Step4


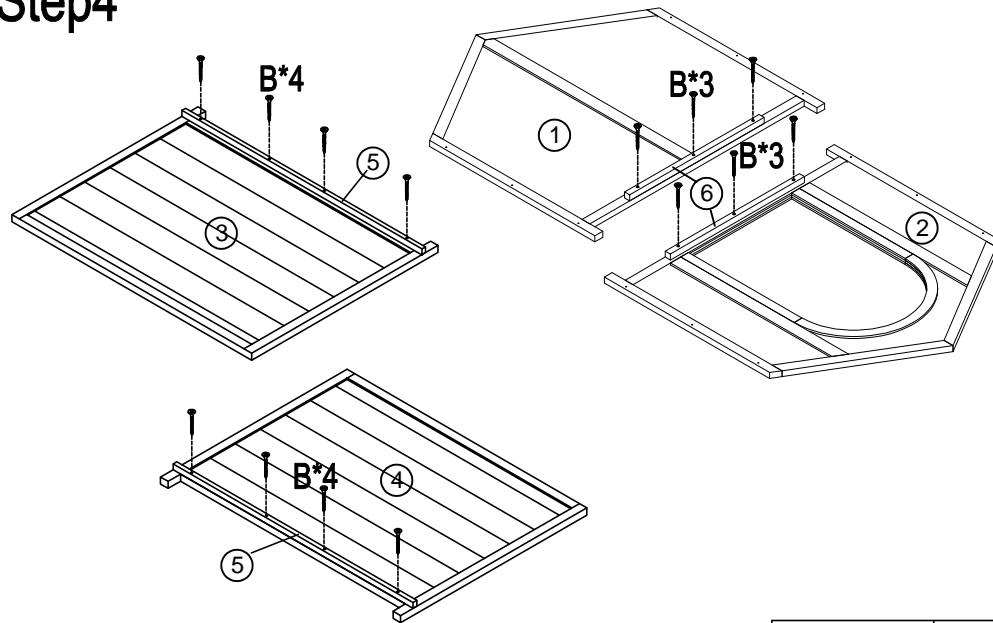


	Bx14
---	------

### Step6


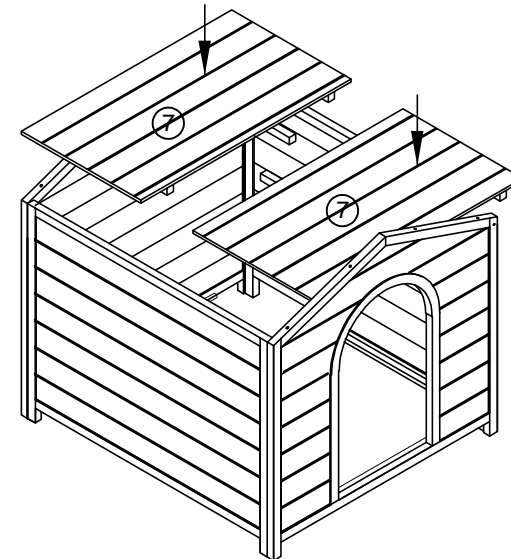


# Step7

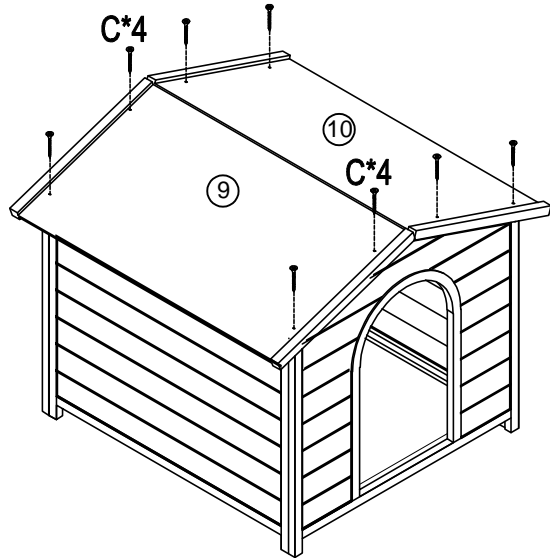



Cx8

# Step9

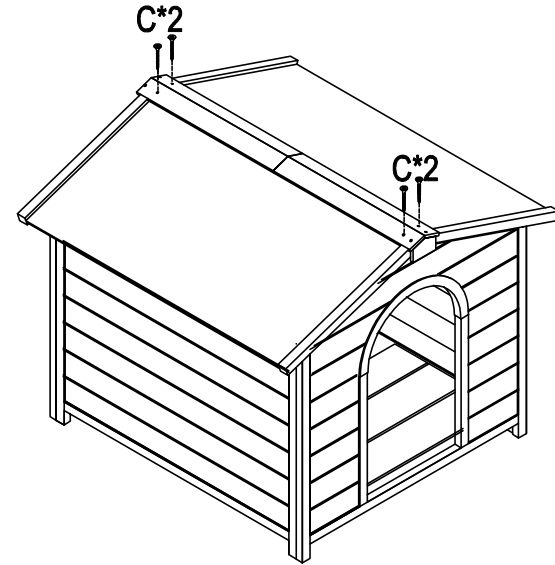

Cx4

# Step8

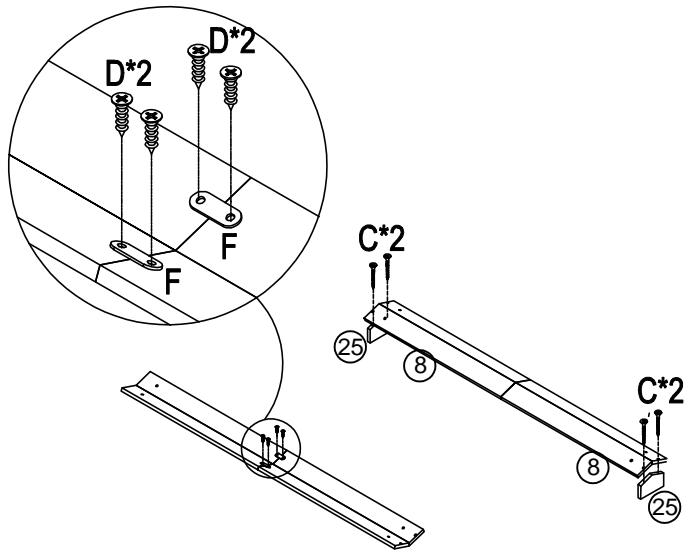

Cx4



Fx2



Dx4

# Step10

