



# ASSEMBLY INSTRUCTIONS

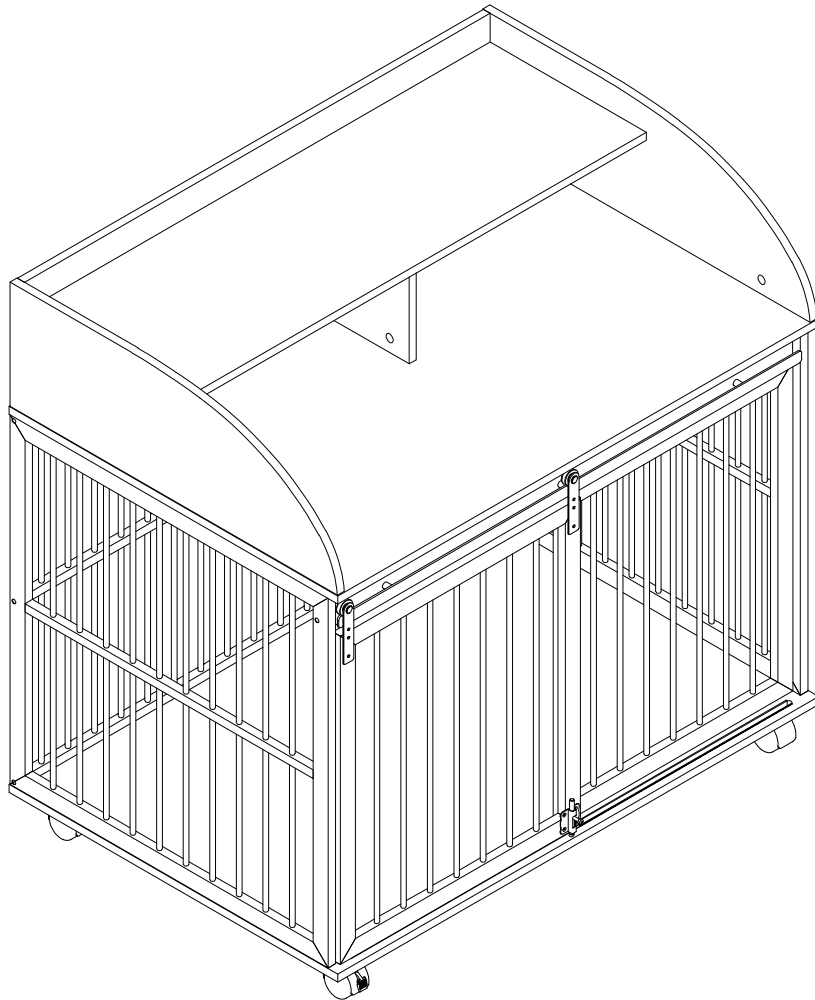

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS

**WF323361AAD**

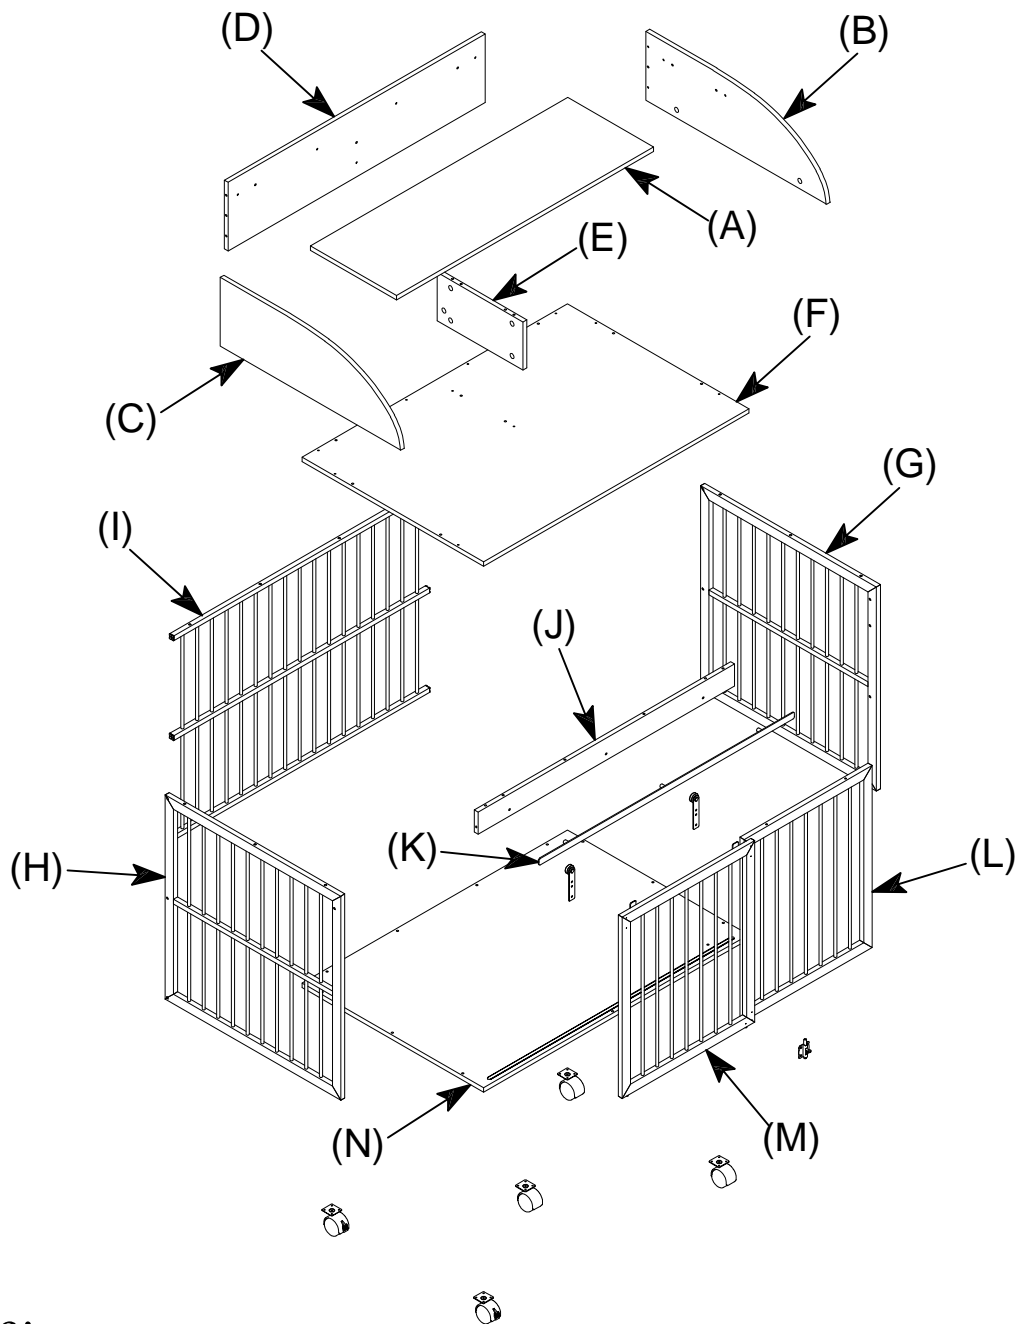


## Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


# PART LIST

A

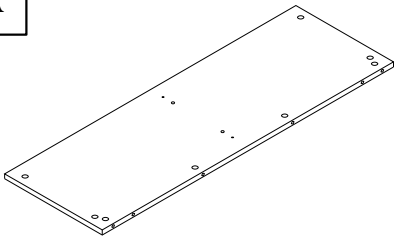


Top Shelf Panel (1PC)

B

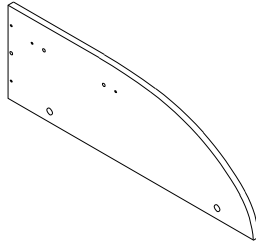


Right Panel (1PC)

C

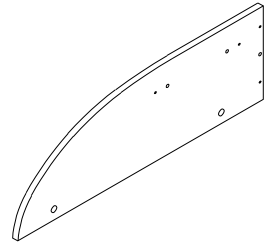


Left Panel (1PC)

D

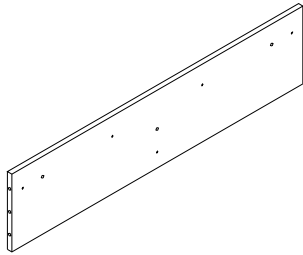


Back Panel (1PC)

E

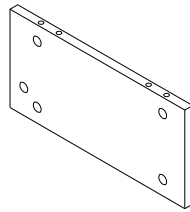


Center Panel (1PC)

F

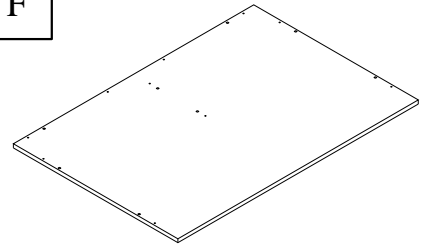


Top Panel (1PC)

G

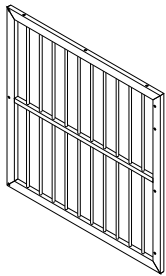


Right Frame (1PC)

H

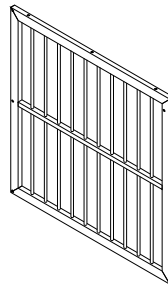


Left Frame (1PC)

I

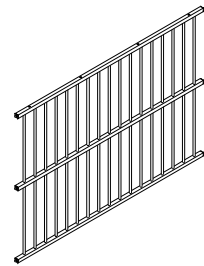


Back Frame (1PC)

J

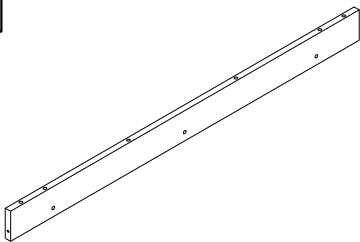


Front Rail (1PC)

K

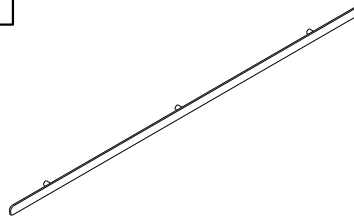


Front upper stretcher (1PC)

L

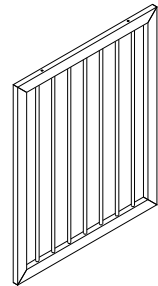


Front Right Frame (1PC)

M

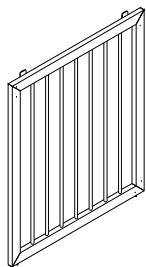








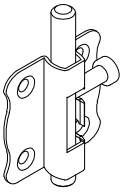






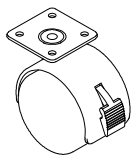
Door Frame (1PC)

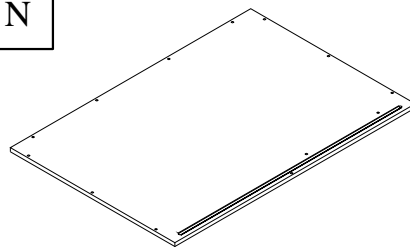N




Bottom Panel (1PC)

# HARDWARE LIST

|   |  |  |
|---|--|--|
| <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">1</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Big Cam Lock (31PCS)<br/>Extra 2pcs</b></p> </div>         | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">2</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Cam Bolt (2PCS)</b></p> </div>                                | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">3</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Cam Bolt (29PCS)<br/>Extra (2pcs)</b></p> </div>      |
| <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">4</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Ø8x30mm Wood Dowel (21PCS)<br/>Extra (2pcs)</b></p> </div> | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">5</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Ø1/4*45mm Bolt Screw (2PCS)</b></p> </div>                    | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">6</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Bolt 1/4" x 25mm (28PCS)</b></p> </div> |
| <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">7</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Bolt 1/4" x 38mm (6PCS)</b></p> </div>     | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">8</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Lock The Door (1PC)</b></p> </div>                           | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">9</div> <div style="text-align: center; margin-top: 20px;">  <p><b>M3*12mm Flat Head Screw (3PCS)</b></p> </div>       |
| <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">10</div> <div style="text-align: center; margin-top: 20px;">  <p><b>M3.5*12mm Wood Screw (4PCS)</b></p> </div>              | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">11</div> <div style="text-align: center; margin-top: 20px;">  <p><b>M4*15mm Wood Screw (20PCS)<br/>Extra (2pcs)</b></p> </div> | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">12</div> <div style="text-align: center; margin-top: 20px;">  <p><b>M4x15mm Bolt with Screw Head (2PCS)</b></p> </div> |
| <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">13</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Allen Key 4mm (1PC)</b></p> </div>                      | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">14</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Bamn door roller (2PCS)</b></p> </div>                     | <div style="border: 1px solid black; width: 30px; height: 30px; margin: 0 auto; display: flex; align-items: center; justify-content: center; font-weight: bold;">15</div> <div style="text-align: center; margin-top: 20px;">  <p><b>Locking Caster (2PCS)</b></p> </div>               |

# HARDWARE LIST


16

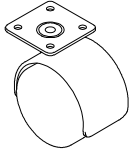


Swivel Caster (3PCS)

CARTON CONTENT:


WF323361AAD:

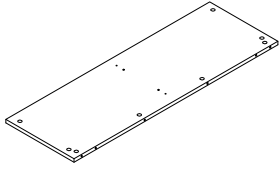


**A** Top Shelf Panel (1PC)

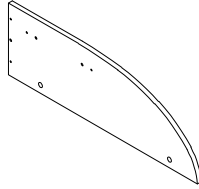


**B** Right Panel (1PC)

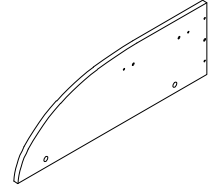


**C** Left Panel (1PC)

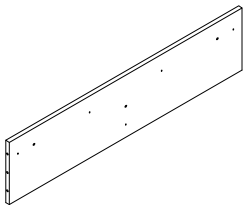


**D** Back Panel (1PC)

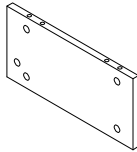


**E** Center Panel (1PC)

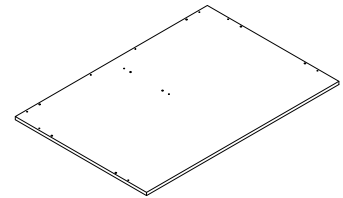


**F** Top Panel (1PC)

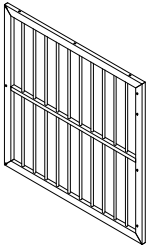


**G** Right Frame (1PC)

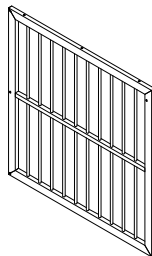


**H** Left Frame (1PC)

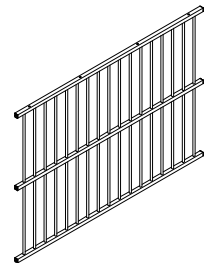


**I** Back Frame (1PC)

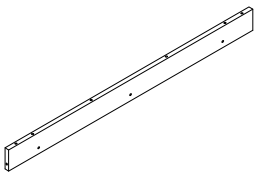

**J** Front Rail (1PC)

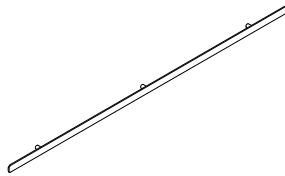


**K** Front upper stretcher (1PC)

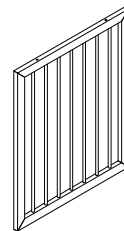


**L** Front Right Frame (1PC)

CARTON CONTENT:

WF323361AAD:




**M** Door Frame (1PC)

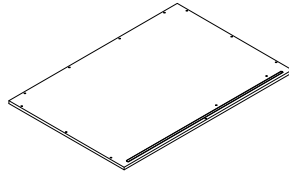


**N** Bottom Panel (1PC)


# STEP 1

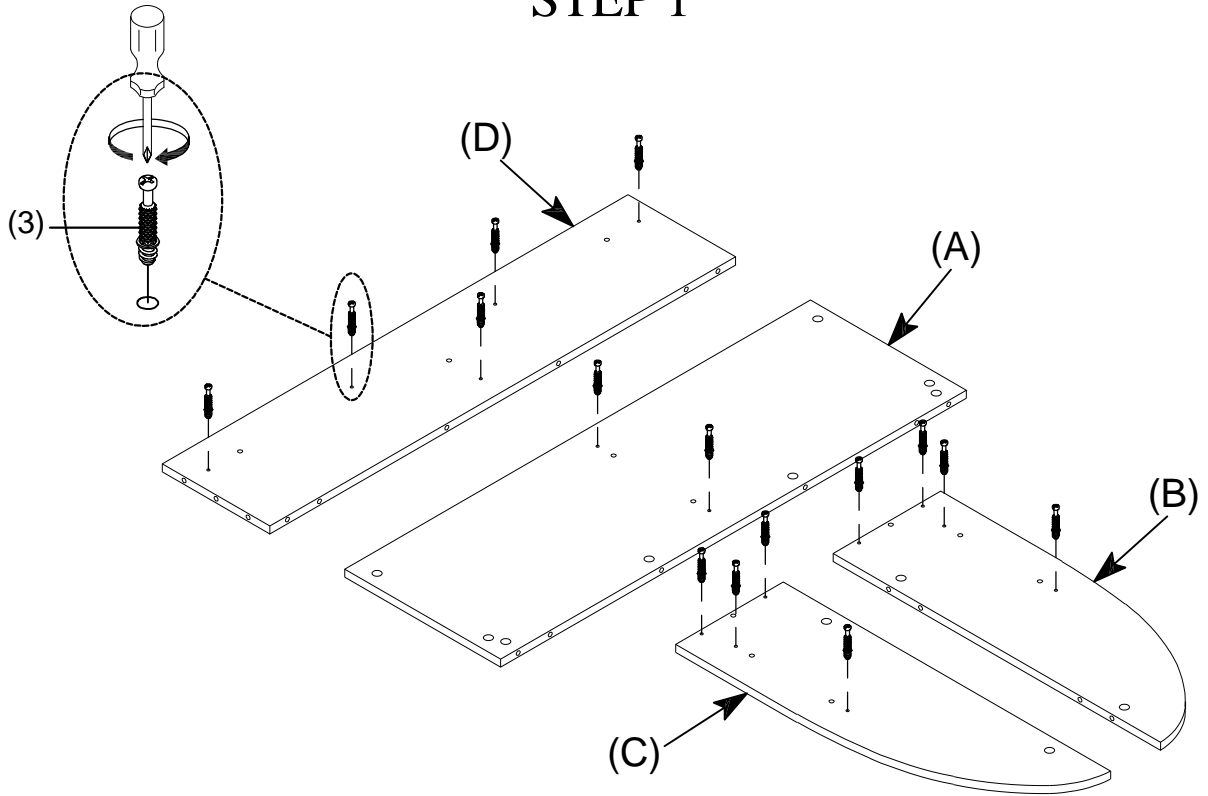

|   |   |          |        |
|---|---|----------|--------|
| 3 |  | Cam Bolt | 15 pcs |
|---|---|----------|--------|


# STEP 2

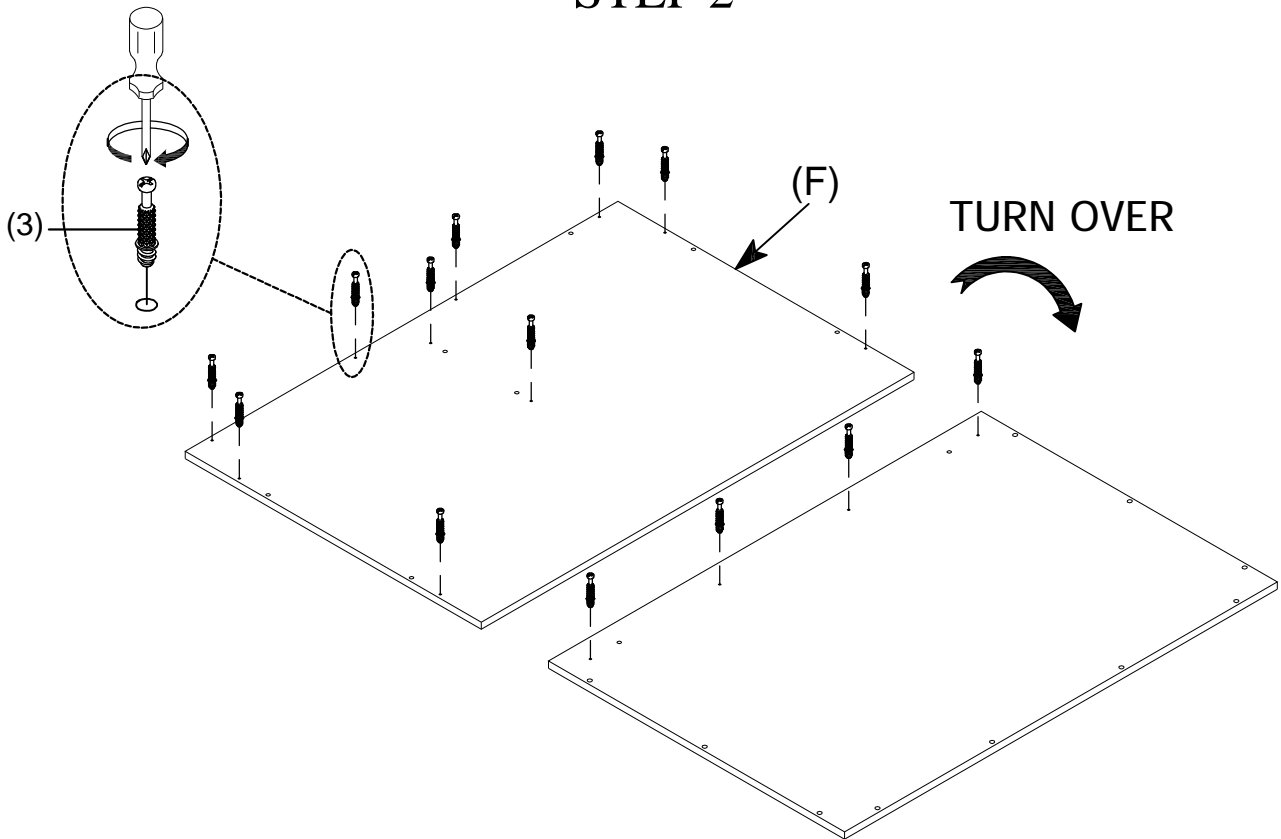

|   |   |          |        |
|---|---|----------|--------|
| 3 |  | Cam Bolt | 14 pcs |
|---|---|----------|--------|




### STEP 3

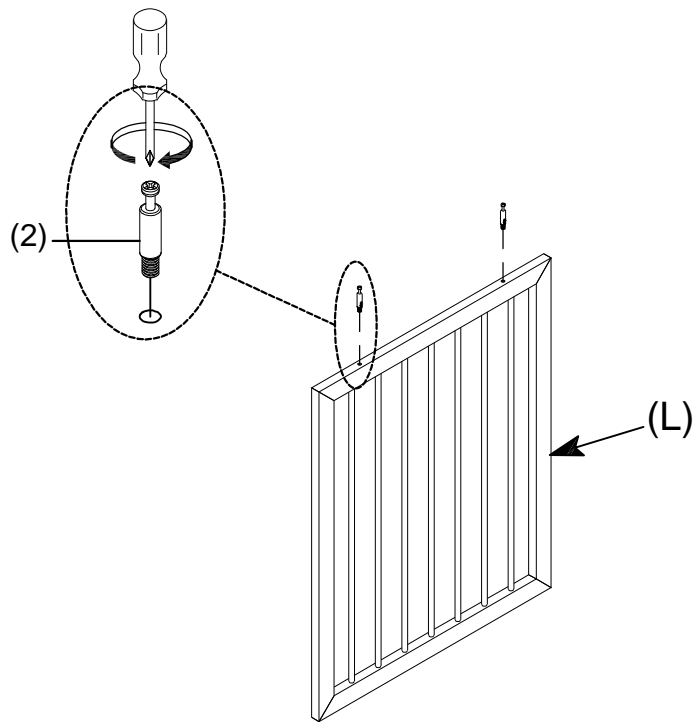


|   |   |          |       |
|---|---|----------|-------|
| 2 |  | Cam Bolt | 2 pcs |
|---|---|----------|-------|



### STEP 4

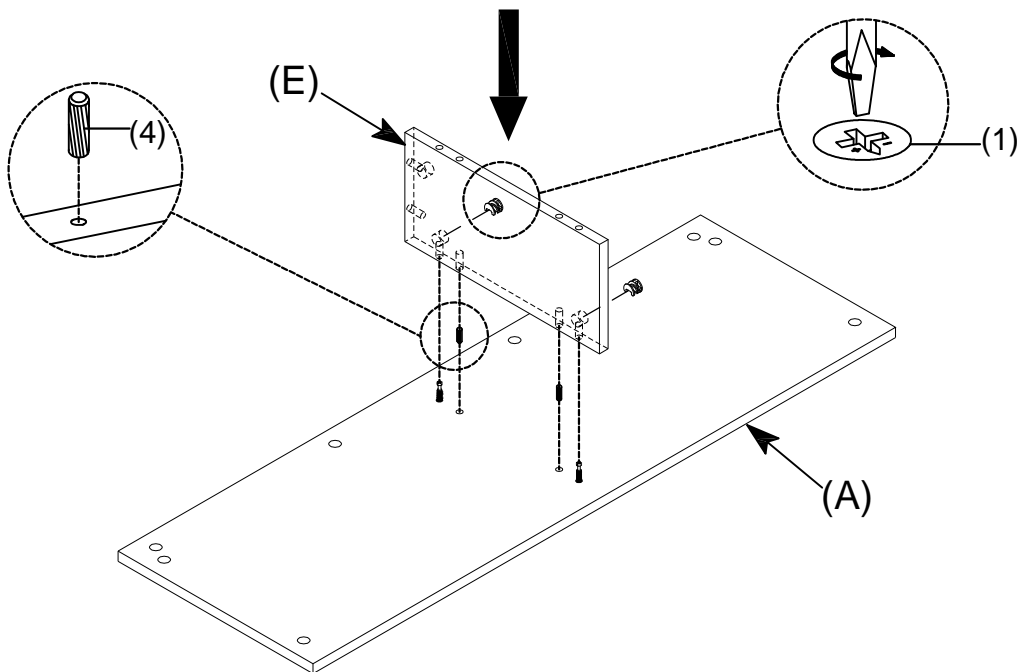


|   |   |          |       |   |   |                    |       |
|---|---|----------|-------|---|---|--------------------|-------|
| 1 |  | Cam Lock | 2 pcs | 4 |  | Ø8x30mm Wood Dowel | 2 pcs |
|---|---|----------|-------|---|---|--------------------|-------|

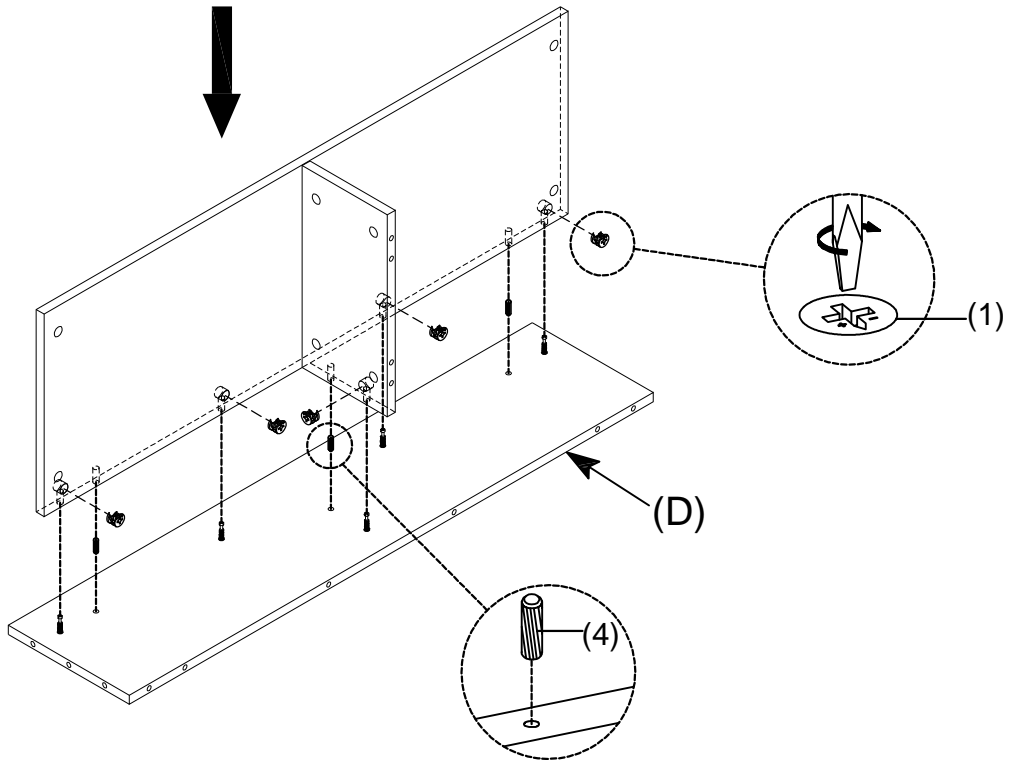

## STEP 5




|   |   |          |       |   |   |                    |       |
|---|---|----------|-------|---|---|--------------------|-------|
| 1 |  | Cam Lock | 5 pcs | 4 |  | Ø8x30mm Wood Dowel | 3 pcs |
|---|---|----------|-------|---|---|--------------------|-------|
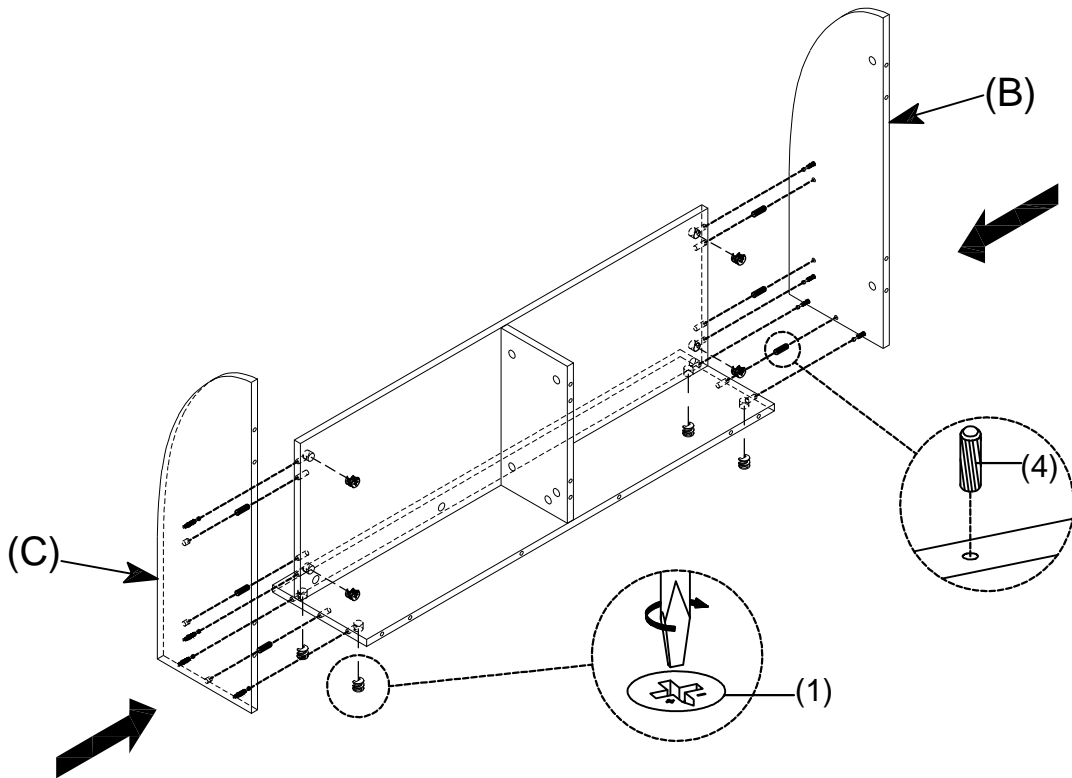
## STEP 6




|   |   |          |       |   |   |                    |       |
|---|---|----------|-------|---|---|--------------------|-------|
| 1 |  | Cam Lock | 8 pcs | 4 |  | Ø8x30mm Wood Dowel | 6 pcs |
|---|---|----------|-------|---|---|--------------------|-------|

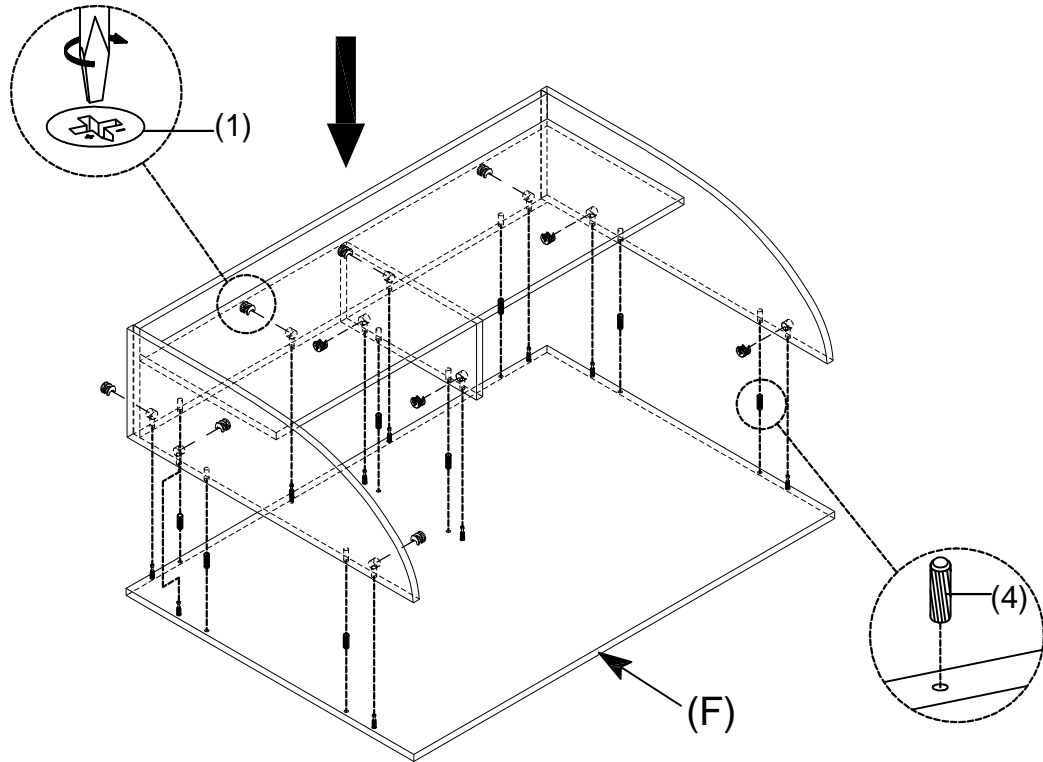

## STEP 7




|   |   |          |        |   |   |                    |       |
|---|---|----------|--------|---|---|--------------------|-------|
| 1 |  | Cam Lock | 10 pcs | 4 |  | Ø8x30mm Wood Dowel | 8 pcs |
|---|---|----------|--------|---|---|--------------------|-------|

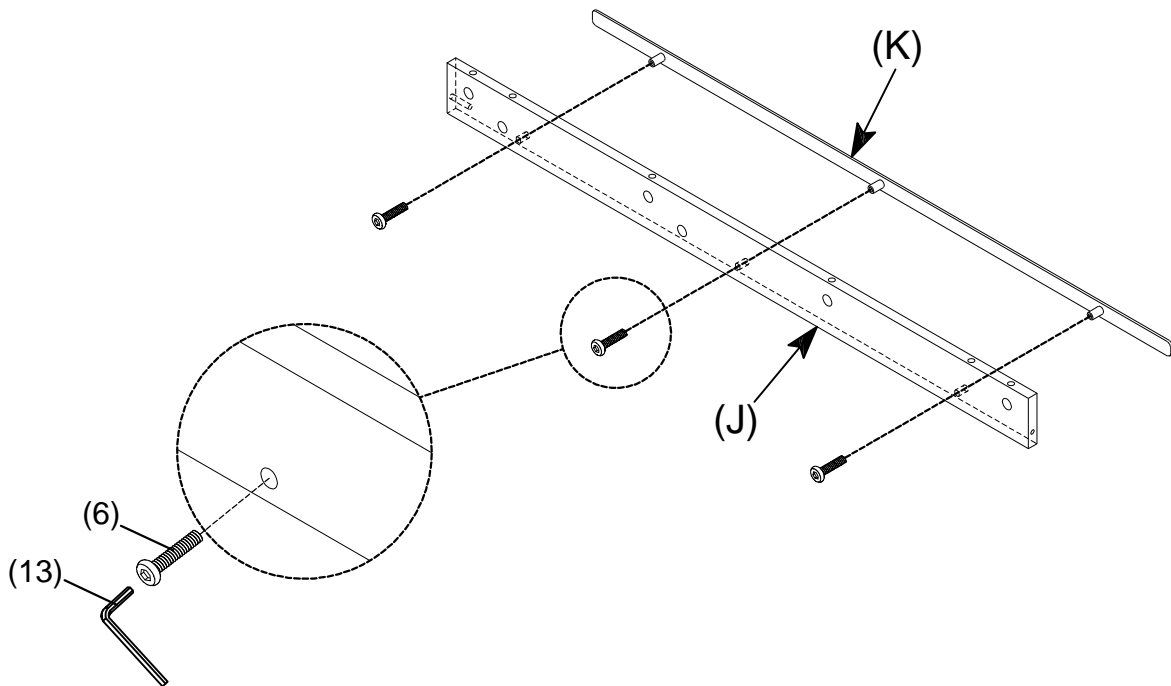

## STEP 8




|   |   |                  |       |    |   |               |      |
|---|---|------------------|-------|----|---|---------------|------|
| 6 |  | Bolt 1/4" x 25mm | 3 pcs | 13 |  | Allen Key 4mm | 1 pc |
|---|---|------------------|-------|----|---|---------------|------|

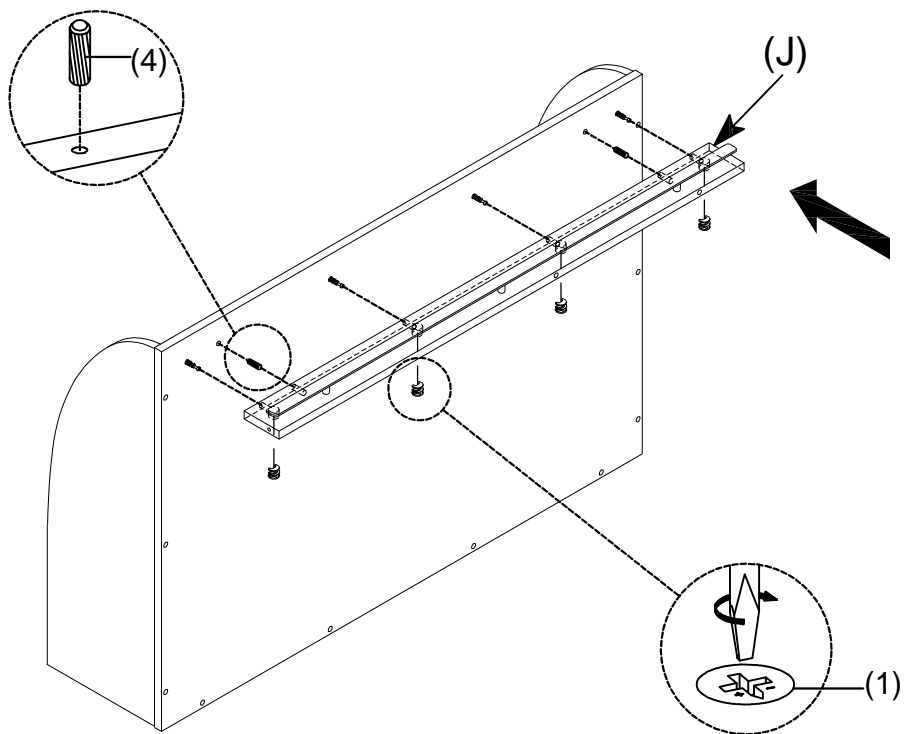

## STEP 9




|   |   |          |       |   |   |                    |       |
|---|---|----------|-------|---|---|--------------------|-------|
| 1 |  | Cam Lock | 4 pcs | 4 |  | Ø8x30mm Wood Dowel | 2 pcs |
|---|---|----------|-------|---|---|--------------------|-------|

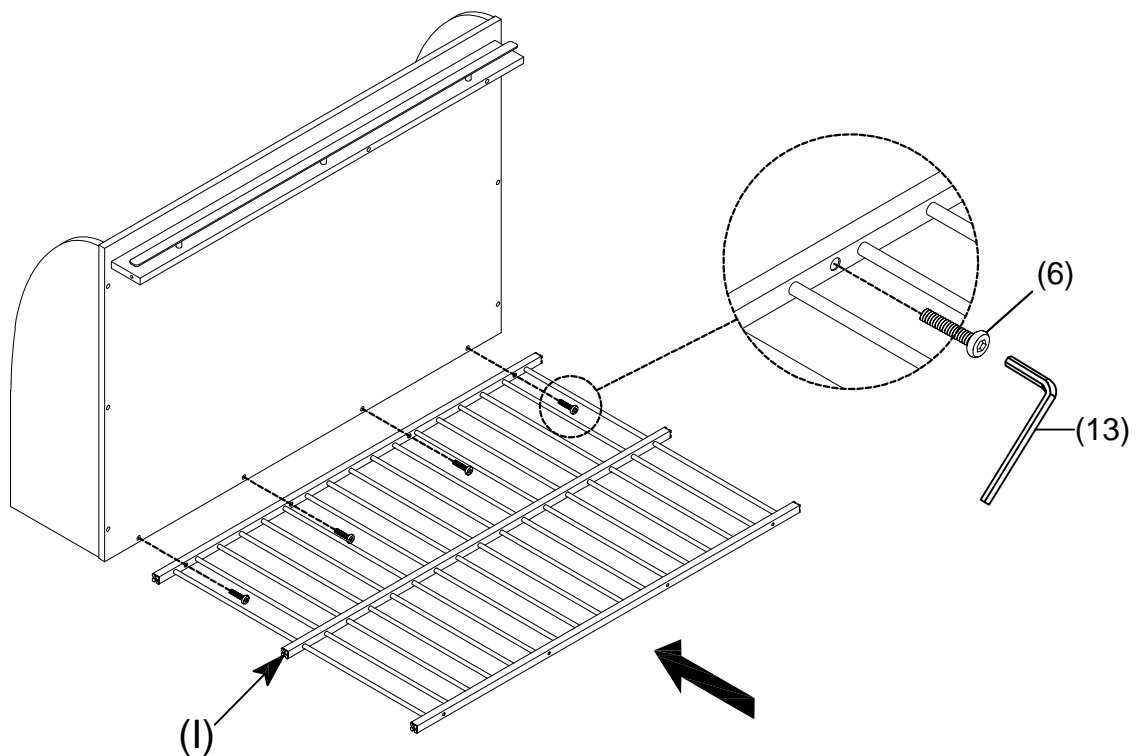

## STEP 10




|   |   |                  |       |    |   |               |      |
|---|---|------------------|-------|----|---|---------------|------|
| 6 |  | Bolt 1/4" x 25mm | 4 pcs | 13 |  | Allen Key 4mm | 1 pc |
|---|---|------------------|-------|----|---|---------------|------|

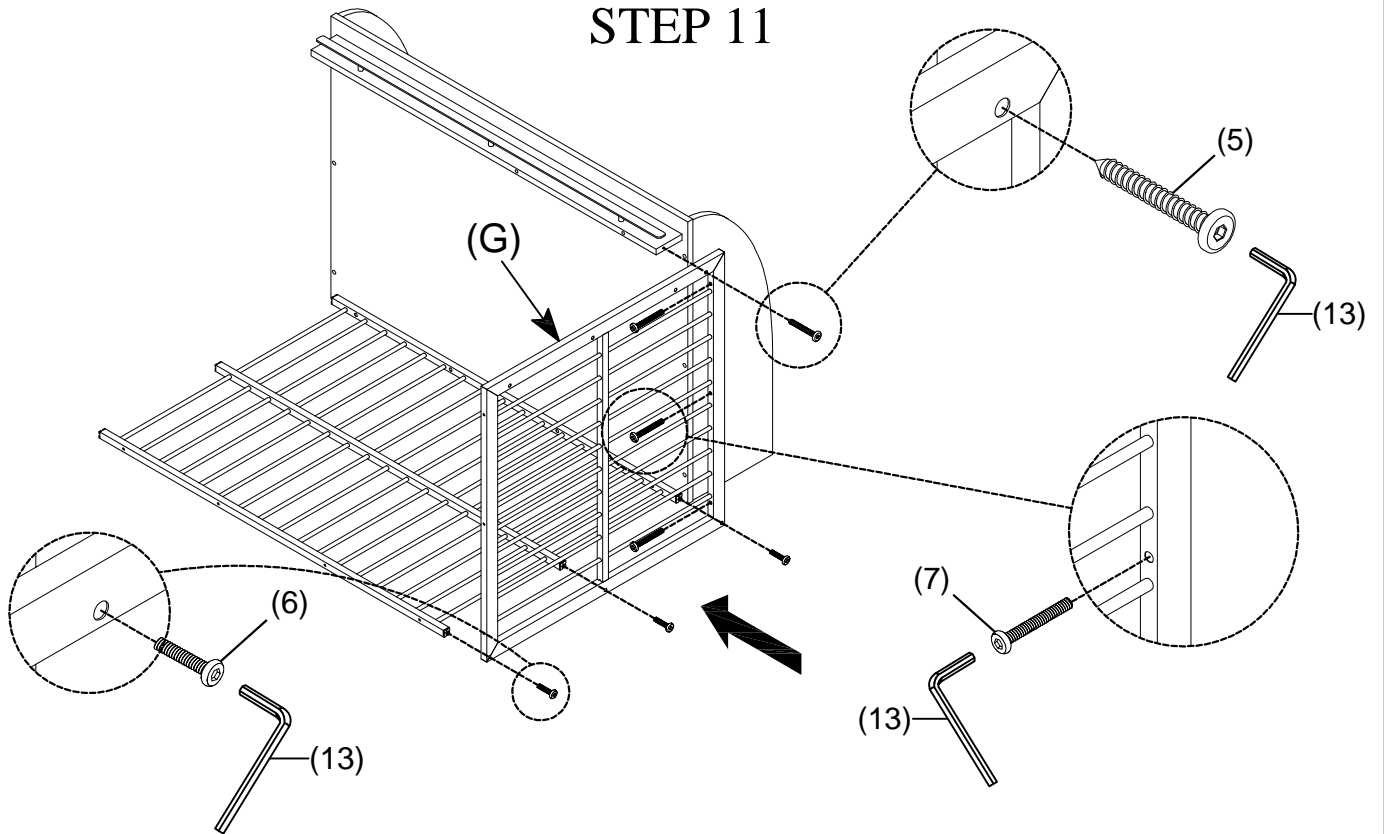

## STEP 11




|   |  |                      |       |    |   |                  |       |
|---|--|----------------------|-------|----|---|------------------|-------|
| 5 |  | Ø1/4*45mm Bolt Screw | 1 pcs | 7  |   | Bolt 1/4" x 38mm | 3 pcs |
| 6 |  | Bolt 1/4" x 25mm     | 3 pcs | 13 |  | Allen Key 4mm    | 1 pc  |

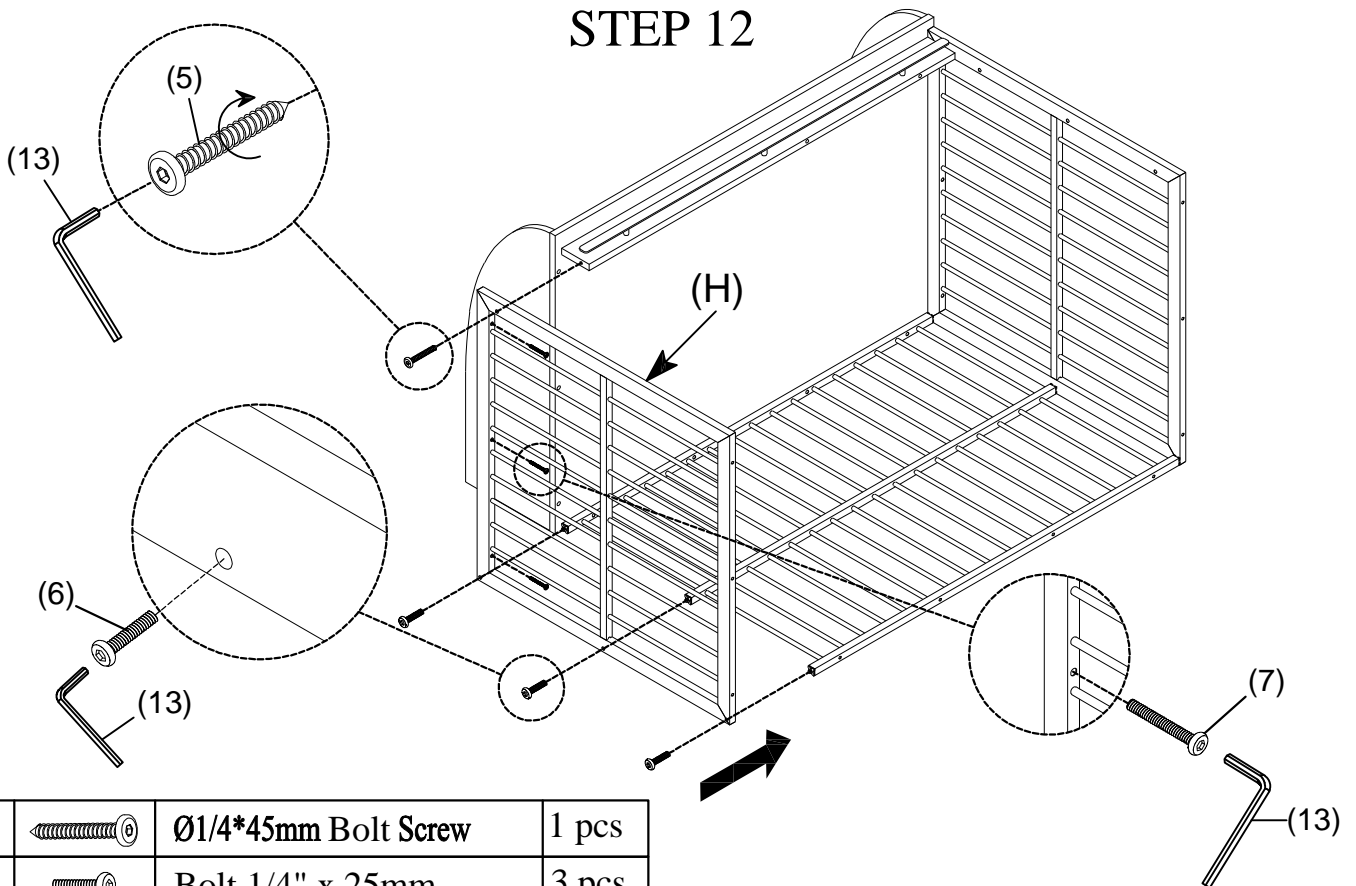


## STEP 12




|   |   |                      |       |    |   |               |      |
|---|---|----------------------|-------|----|---|---------------|------|
| 5 |  | Ø1/4*45mm Bolt Screw | 1 pcs | 13 |  | Allen Key 4mm | 1 pc |
| 6 |   | Bolt 1/4" x 25mm     | 3 pcs |    |   |               |      |
| 7 |   | Bolt 1/4" x 38mm     | 3 pcs |    |   |               |      |
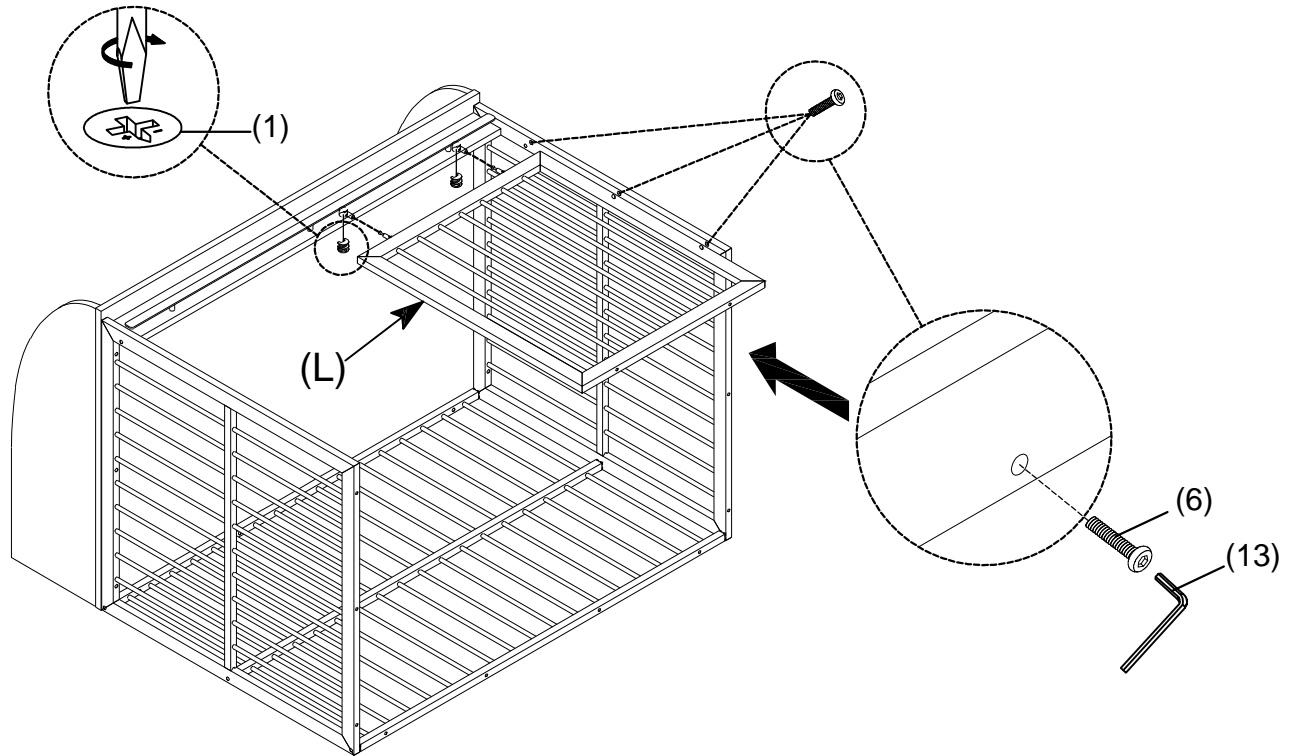
## STEP 13




|   |   |                  |       |    |   |               |      |
|---|---|------------------|-------|----|---|---------------|------|
| 1 |   | Cam Lock         | 2 pcs |    |   |               |      |
| 6 |  | Bolt 1/4" x 25mm | 3 pcs | 13 |  | Allen Key 4mm | 1 pc |

## STEP 14

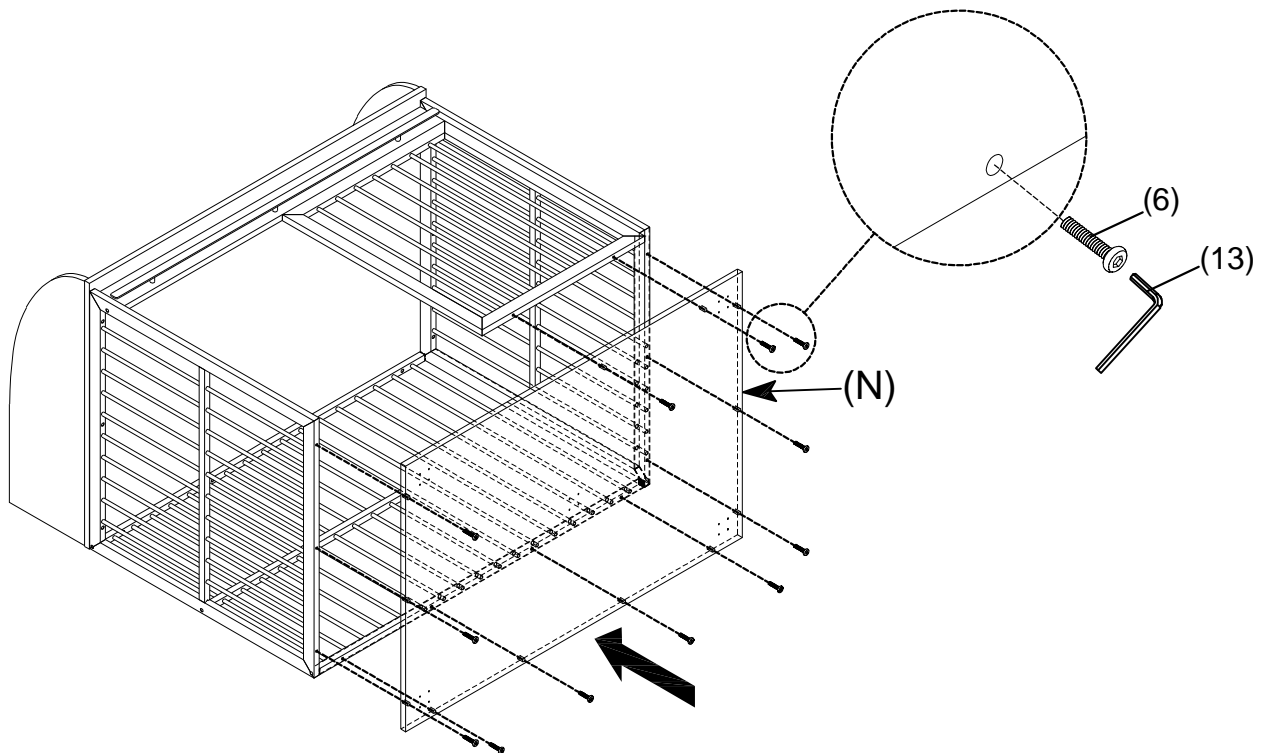


|   |   |                  |        |    |   |               |      |
|---|---|------------------|--------|----|---|---------------|------|
| 6 |  | Bolt 1/4" x 25mm | 12 pcs | 13 |  | Allen Key 4mm | 1 pc |
|---|---|------------------|--------|----|---|---------------|------|

## STEP 15

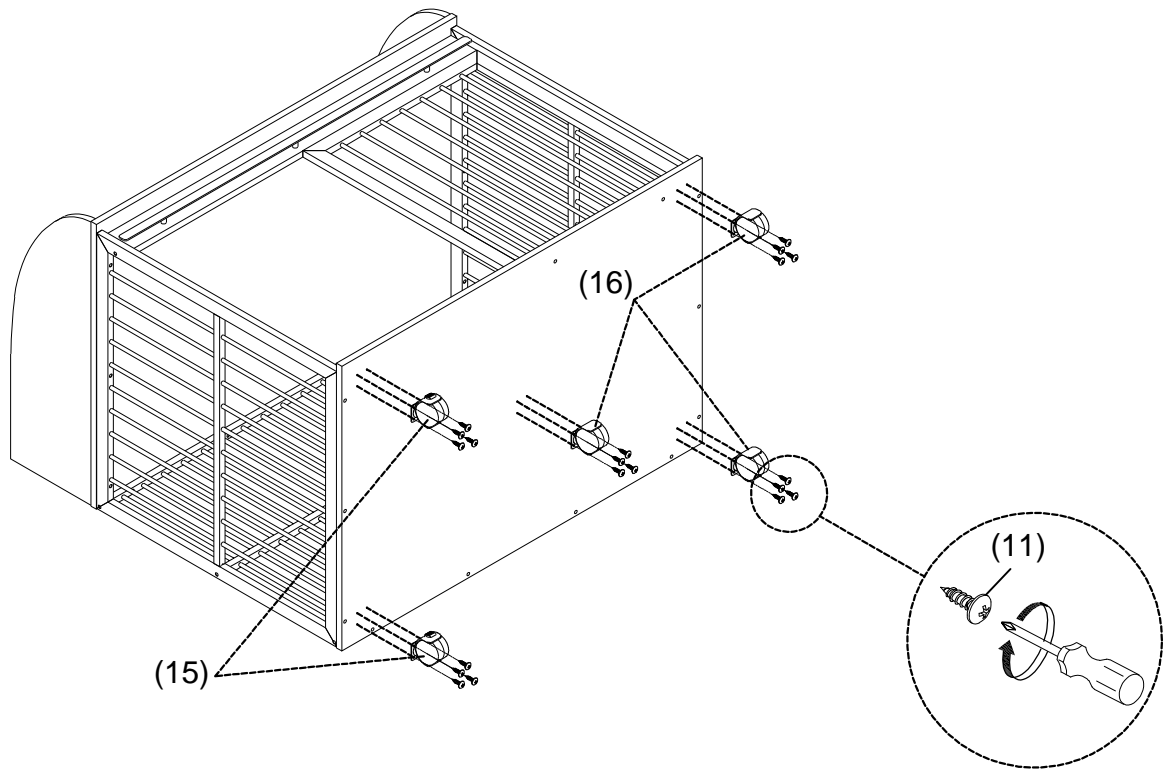


|    |   |                    |        |
|----|---|--------------------|--------|
| 11 |  | M4*15mm Wood Screw | 20 pcs |
|----|---|--------------------|--------|

## STEP 16

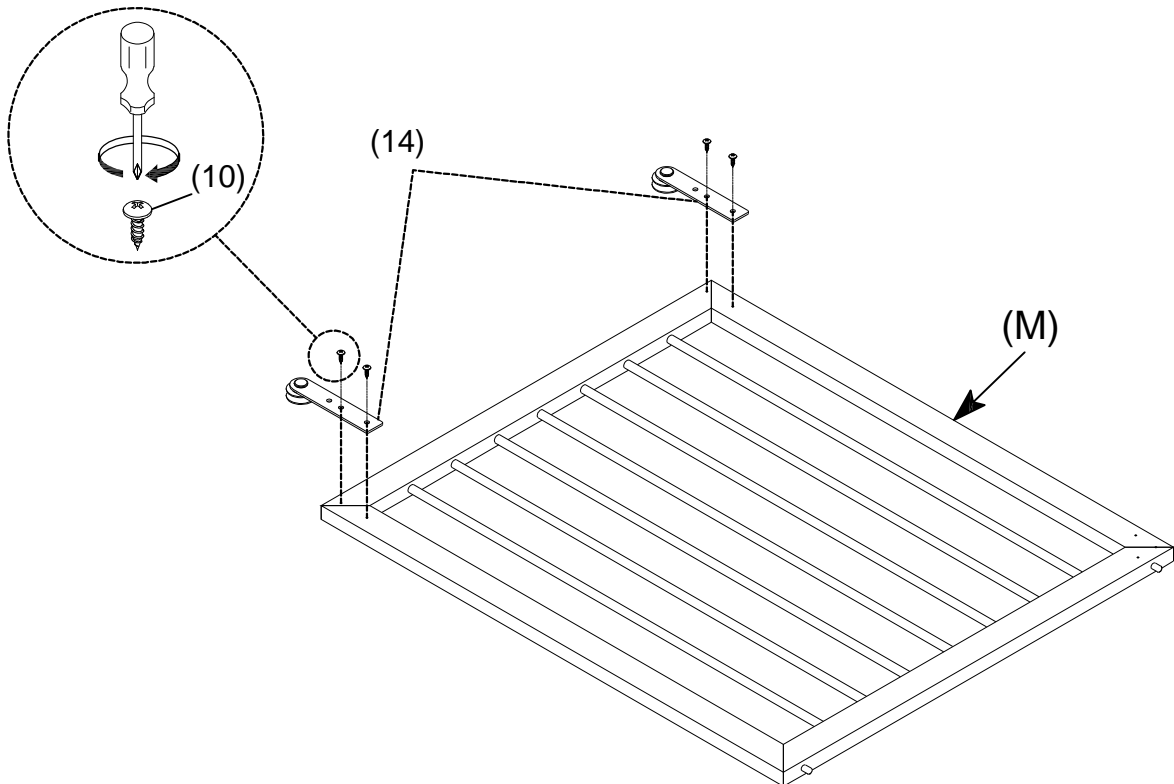


|    |   |                      |       |
|----|---|----------------------|-------|
| 10 |  | M3.5*12mm Wood Screw | 4 pcs |
|----|---|----------------------|-------|

## STEP 17

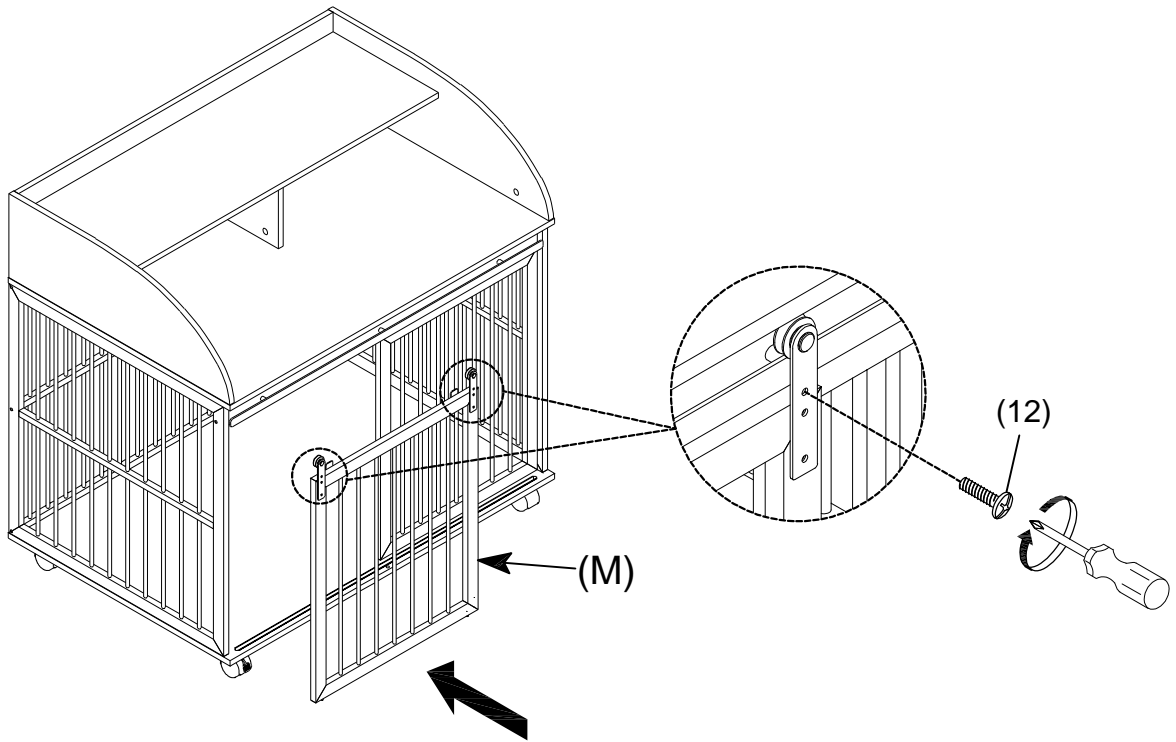

|    |   |                              |       |
|----|---|------------------------------|-------|
| 12 |  | M4x15mm Bolt with Screw Head | 2 pcs |
|----|---|------------------------------|-------|

## STEP 18

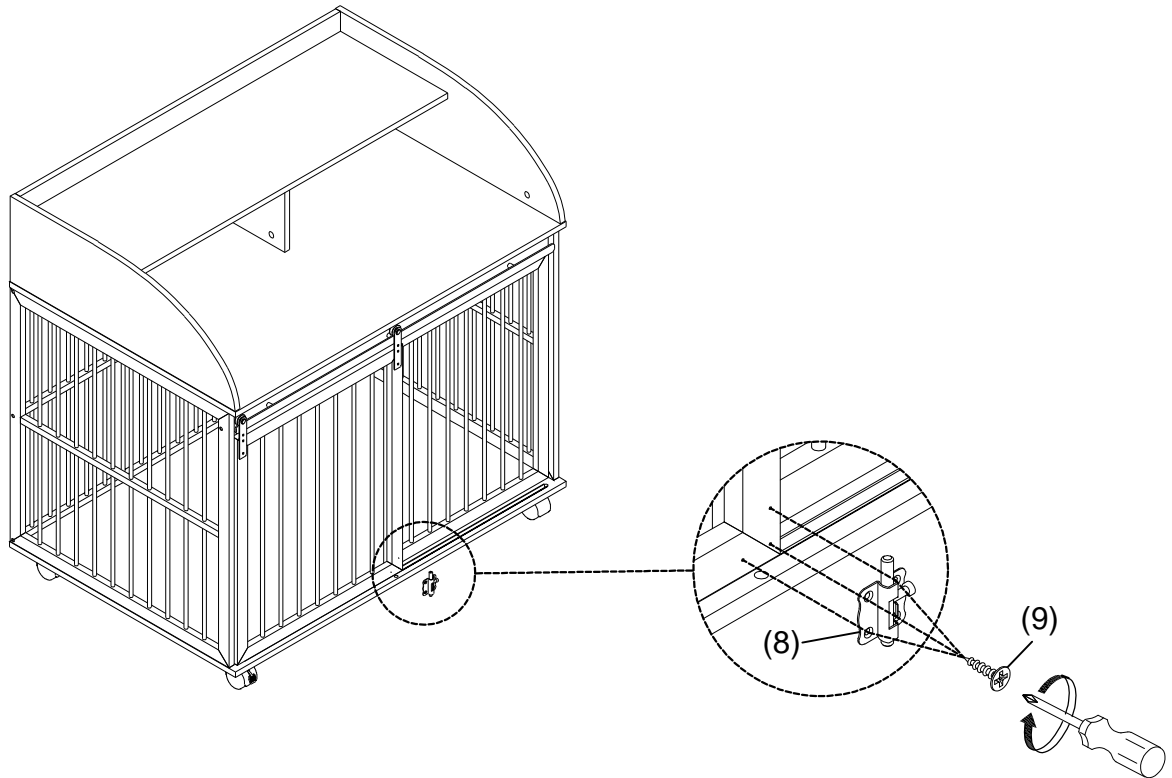

|   |   |                         |       |
|---|---|-------------------------|-------|
| 9 |  | M3*12mm Flat Head Screw | 3 pcs |
|---|---|-------------------------|-------|



COMPLETE

