
## **ASSEMBLYINSTRUCTIONS**

N704P165645 MAKEUP VANITI SET

## **IMPORTANT NOTE:**

- \*\* PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \*\* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.

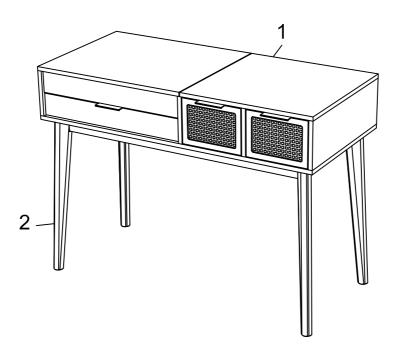


CARTONS ONLY ONE/ CARTONS SEULEMENT UN							
PART LISTS					HARDWARI		
NO.	DESCRIPTION	SKETCH	Q'TY		NO.	DESCRIPTION	
1	TOP FRAME		1 PC		А	BOLT Ø 5/16" x 60mmL	
'					В	SPRING WASHER Ø 5/16" x 12 mm	
2	LEGS		4 PCS		O	FLAT WASHER Ø 5/16" x 18 mm	
					D	ALLEN WRENCH 4 mm	

	HARDWARE LISTS					
NO.	DESCRIPTION	SKETCH	Q'TY			
Α	BOLT Ø 5/16" x 60mmL	J	8 PCS			
В	SPRING WASHER Ø 5/16" x 12 mm	0	8 PCS			
С	FLAT WASHER Ø 5/16" x 18 mm	0	8 PCS			
D	ALLEN WRENCH 4 mm		1 PC			

MADE IN VIETNAM 1 OF 2

# ASSEMBLY INSTRUCTIONS

## STEP 1:

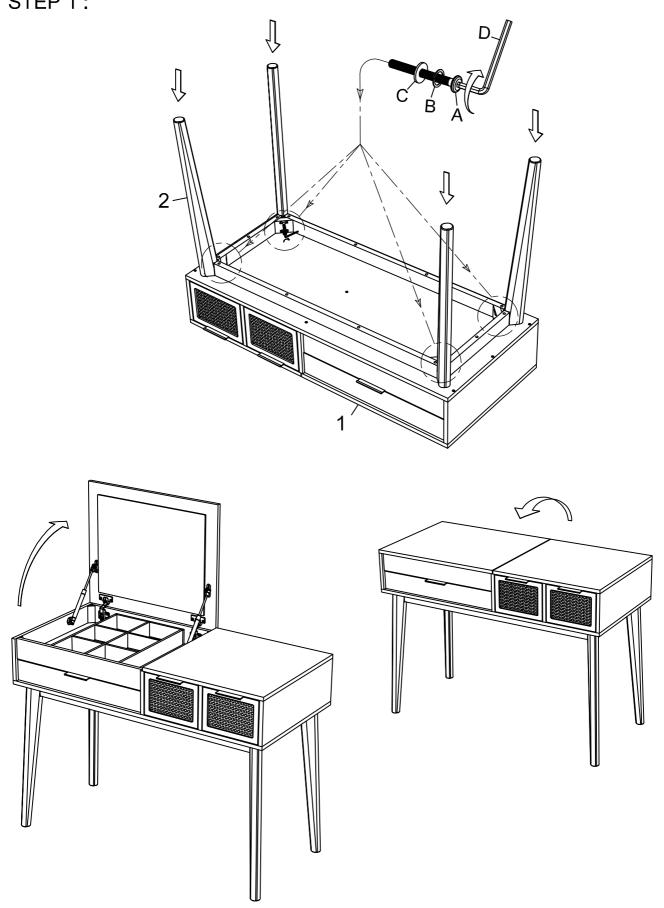


MADE INVIETNAM

## **ASSEMBLYINSTRUCTIONS**

N704P165645 MAKEUP VANITI SET

## **IMPORTANT NOTE:**

- \*\* PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- \*\* BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- \*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE STOOL IS FULLY SET-UP.

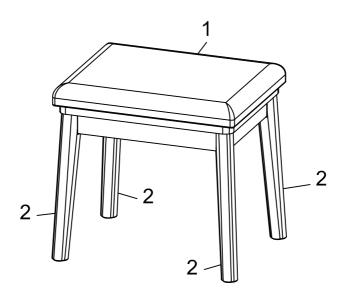



CARTONS ONLY ONE/ CARTONS SEULEMENT UN							
PART LISTS					HARDWARE		
NO.	DESCRIPTION	SKETCH	Q'TY		NO.	DESCRIPTION	
1	TOP FRAME		1 PC		Α	BOLT Ø 1/4" x 60mmL	
					В	SPRING WASHER Ø 1/4" x 12 mm	
2	LEGS		4 PCS		O	FLAT WASHER Ø 1/4" x 18 mm	
					D	ALLEN WRENCH 4 mm	

	HARDWARE LISTS						
NO.	DESCRIPTION	SKETCH	Q'TY				
Α	BOLT Ø 1/4" x 60mmL	J	8 PCS				
В	SPRING WASHER Ø 1/4" x 12 mm	0	8 PCS				
С	FLAT WASHER Ø 1/4" x 18 mm	0	8 PCS				
D	ALLEN WRENCH 4 mm		1 PC				

MADE IN VIETNAM 1 OF 2

# ASSEMBLY INSTRUCTIONS

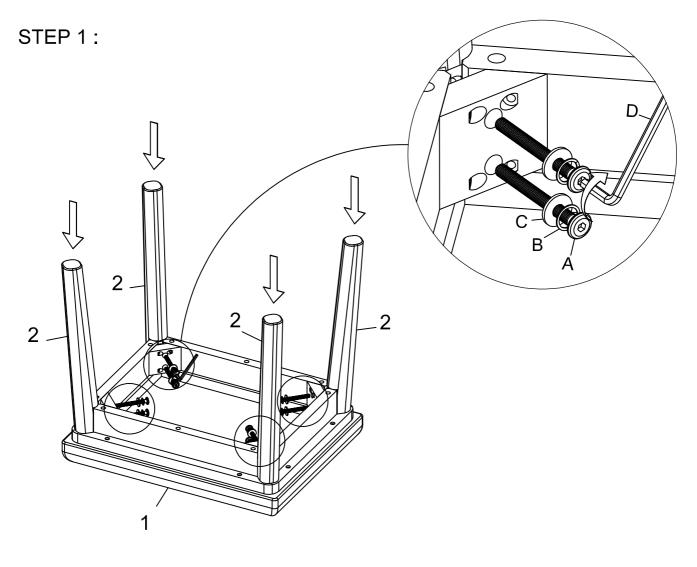

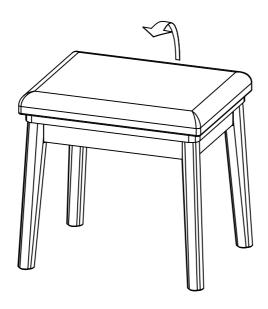

MADE INVIETNAM 2 OF 2