


1. Remove the water spray hood pipe, then remove the original engine hood, and install the latch lock bracket, side hood latch bracket and hood support rod on the original hood to the corresponding positions on the new hood



2. ① Tear off the 3M tape and stick the vents on the left and right sides on the hood
② Fix the air intake shield with screws

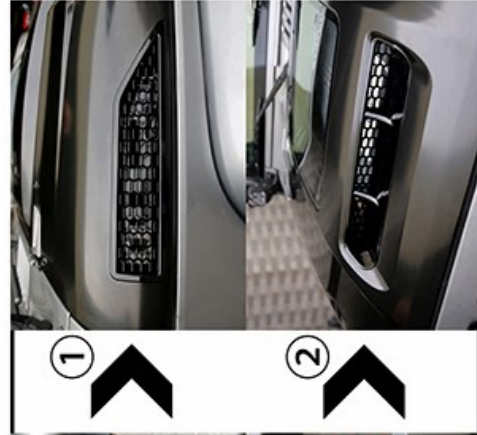

3. Install the capsule cover on the JEEP and tighten the fixing screws



4. Install the water spray hood pipes



5. Installation completed