



Assembly Instruction

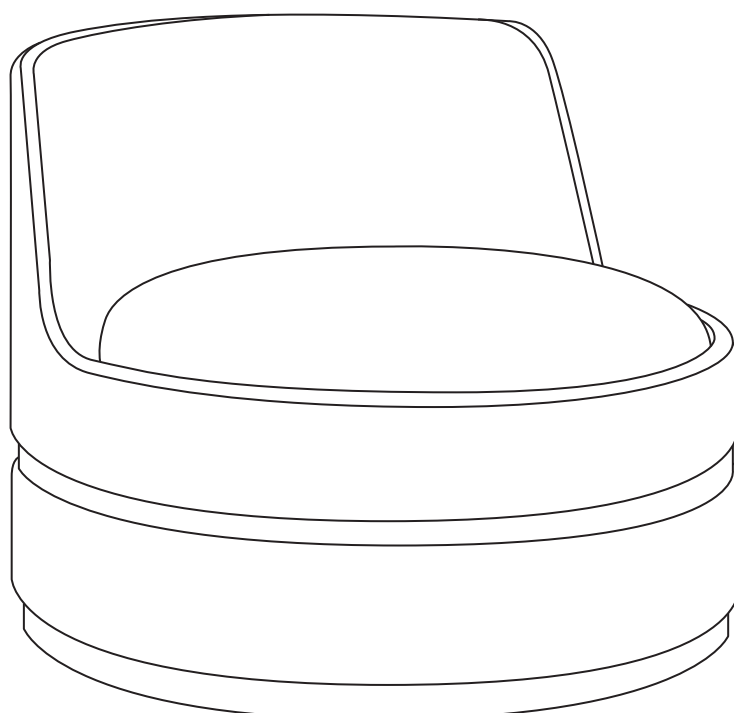

WF306867


PARTS LIST

(1)

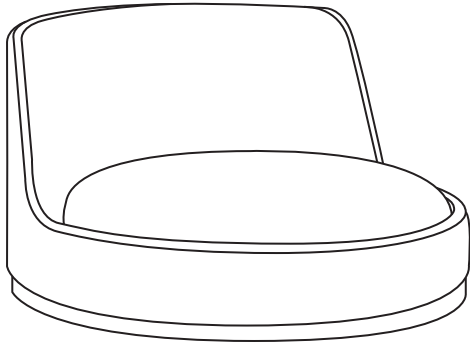


Seat cushion×1

(2)

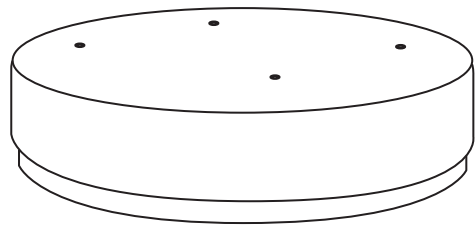

Base×1


(3)



M6×30mm

Screw×4


(4)



M6

Gasket×4

(5)




M6

Allen wrench×1

Step 1: Align the holes of the seat cushion (1) and the base (2), and then connect with screws (3) gaskets (4).

Note: Align the holes corresponding to the letters on the backrest and seat cushion

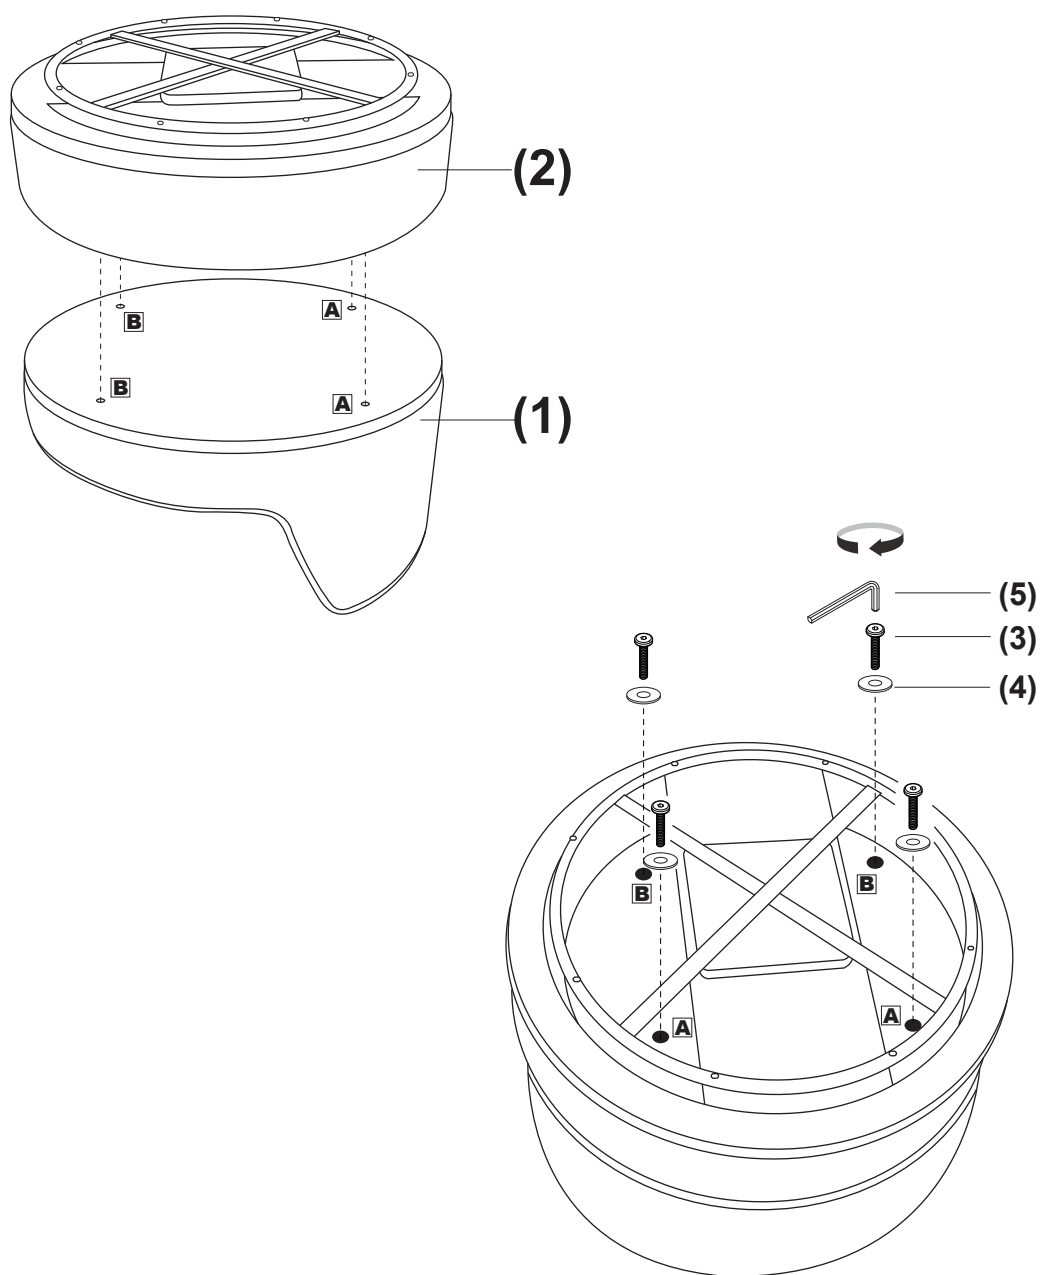

Step 2: Complete installation

