


Email: service@bosmiller.shop

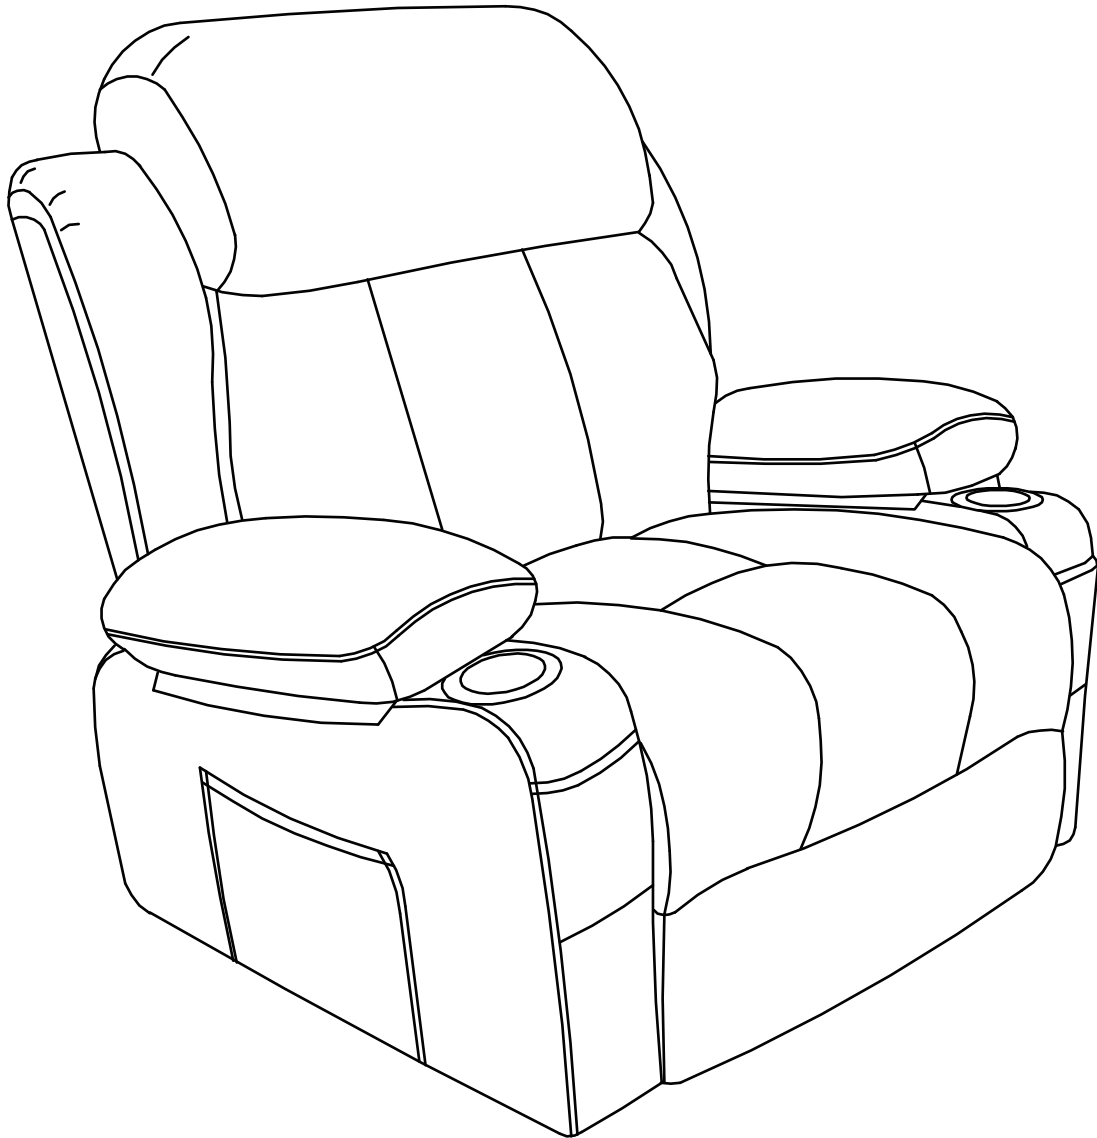

INSTRUCTION MANUAL

MODEL: 1218-2LM

Edition: 20230837446Z

ASSEMBLY GUIDE

Congratulations, you now have a new function sofa with massage.



















Before enjoy the comfort chair, you have to put it together. This Assembly Guide will take you through the basic assembly process. To make sure your assembly goes smoothly, please follow the assembly instructions, **and especially the important safety information.**

Also, while it is possible to assemble the chair on your own, **having a second person to help you makes it even easier.**

Before you begin, please check if there are any missing parts from the package. Should there be any issues, please don't hesitate to drop us an email and we'll help you out ASAP.


PACKAGE LIST

02

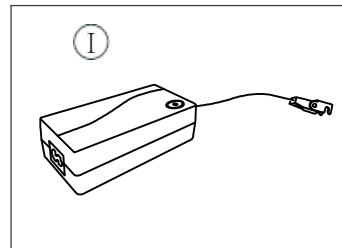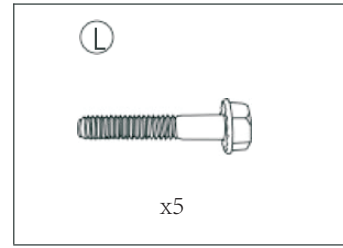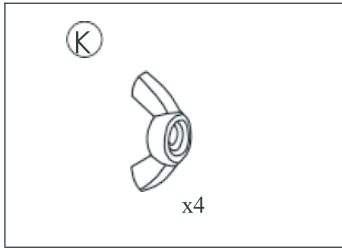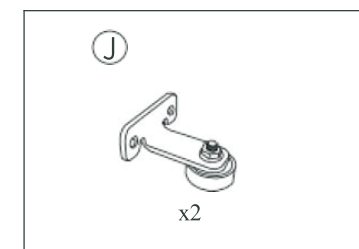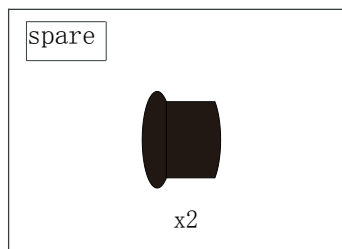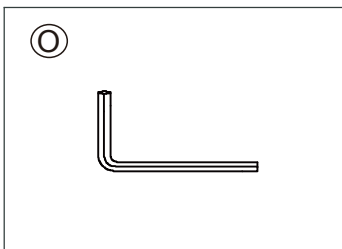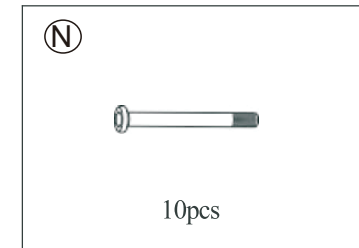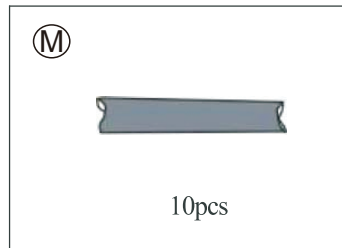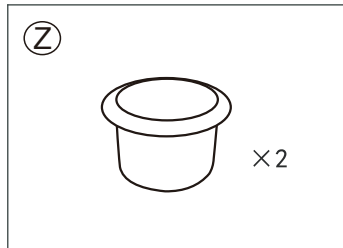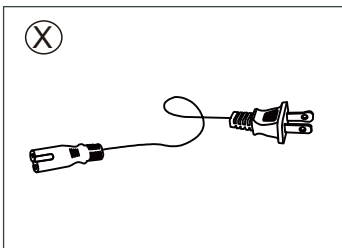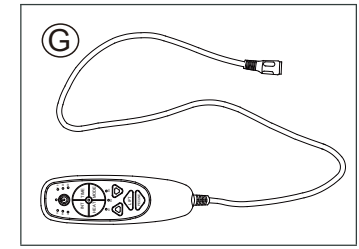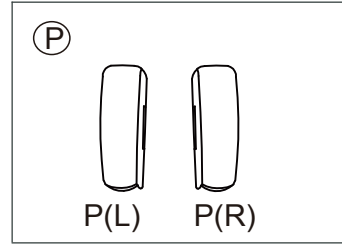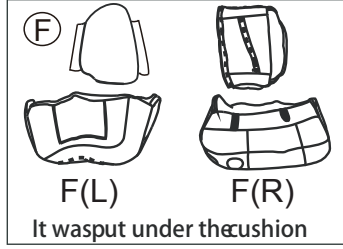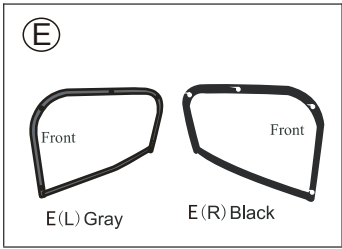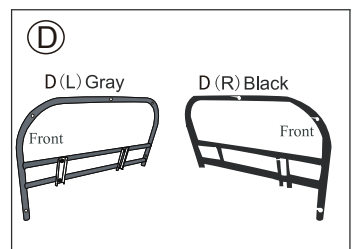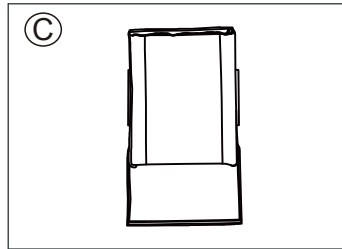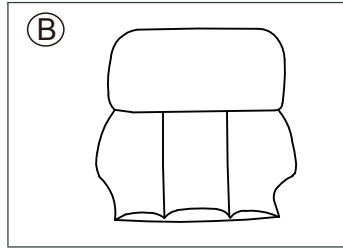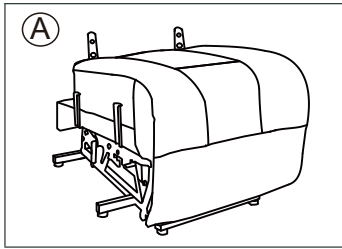


ASSEMBLY INSTRUCTION

STEP 1: Use spanner O and screw N to pin through the inner iron frame D and the armrest pillar M to the outer frame E of the armrest. Tight all screws, please pay attention to distinguish the front and back of the armrest frame.

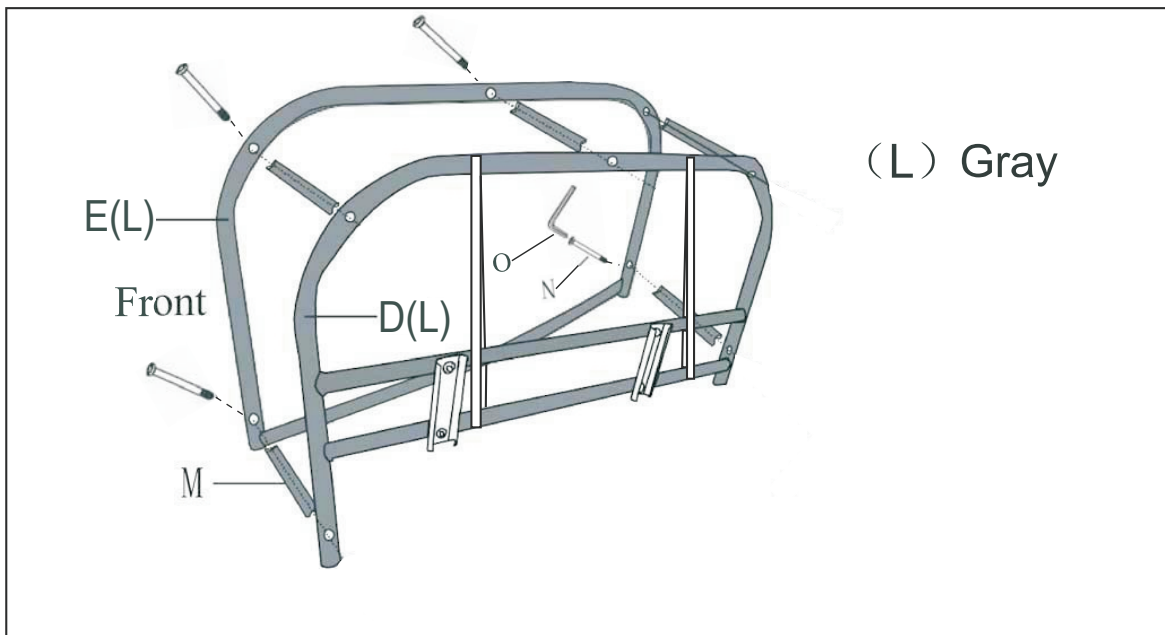


STEP 2: Align the armrest cover to armrest-assembled iron frame in sequence of left and right, back and forward, so that the cloth cover hole is aligned with the insert hole. Pull the zipper after all is OK.

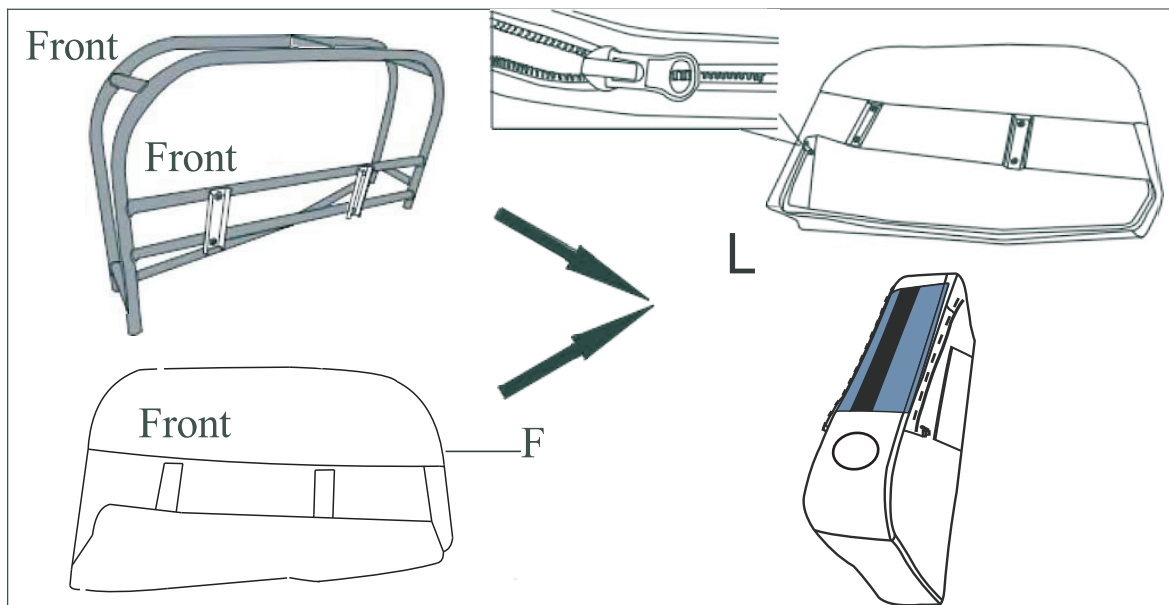


ASSEMBLY INSTRUCTION

04

STEP 3: Repeat Step 1.

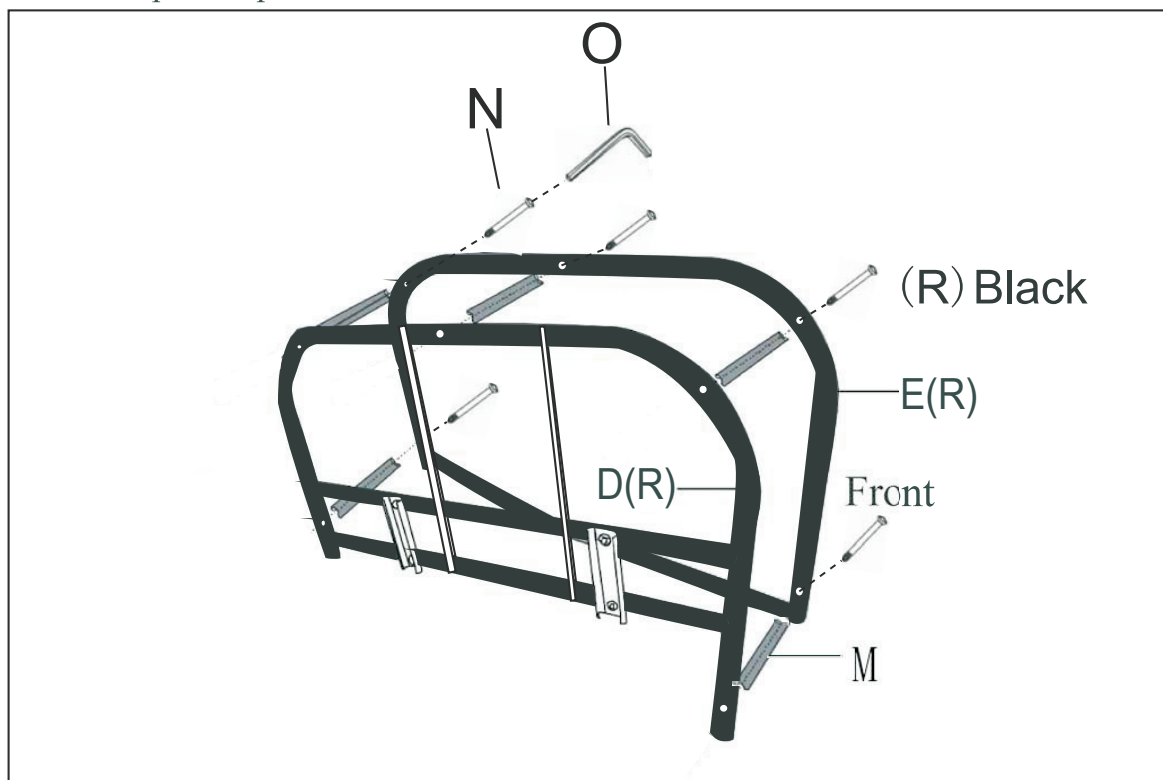


STEP 4: Repeat Step 2.

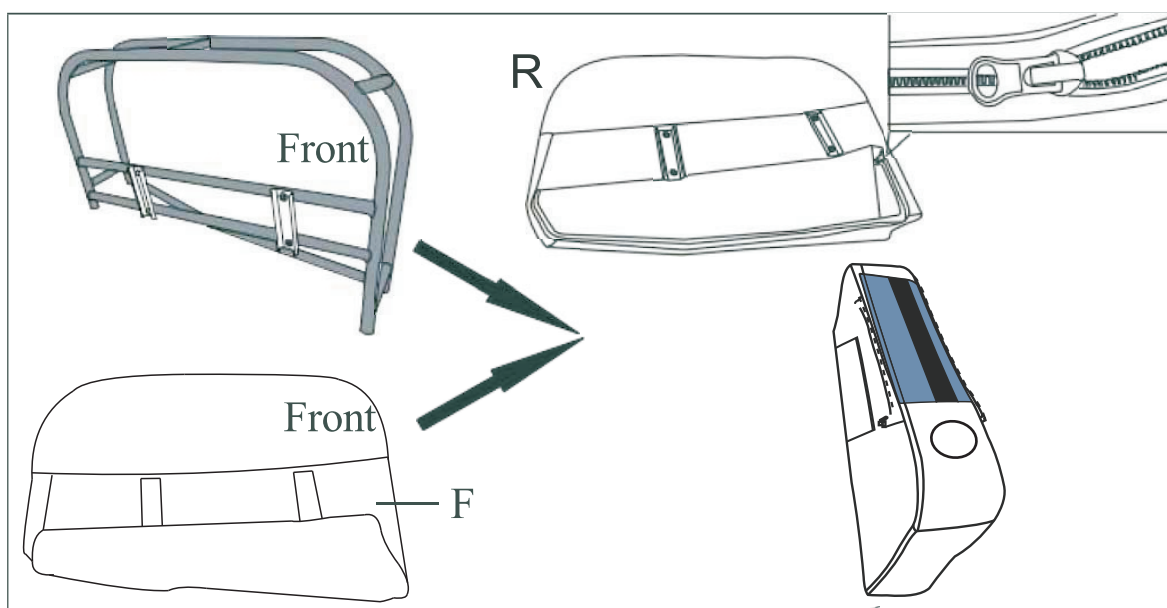

ASSEMBLY INSTRUCTION

05


Please zip up both sides of the arm cushion

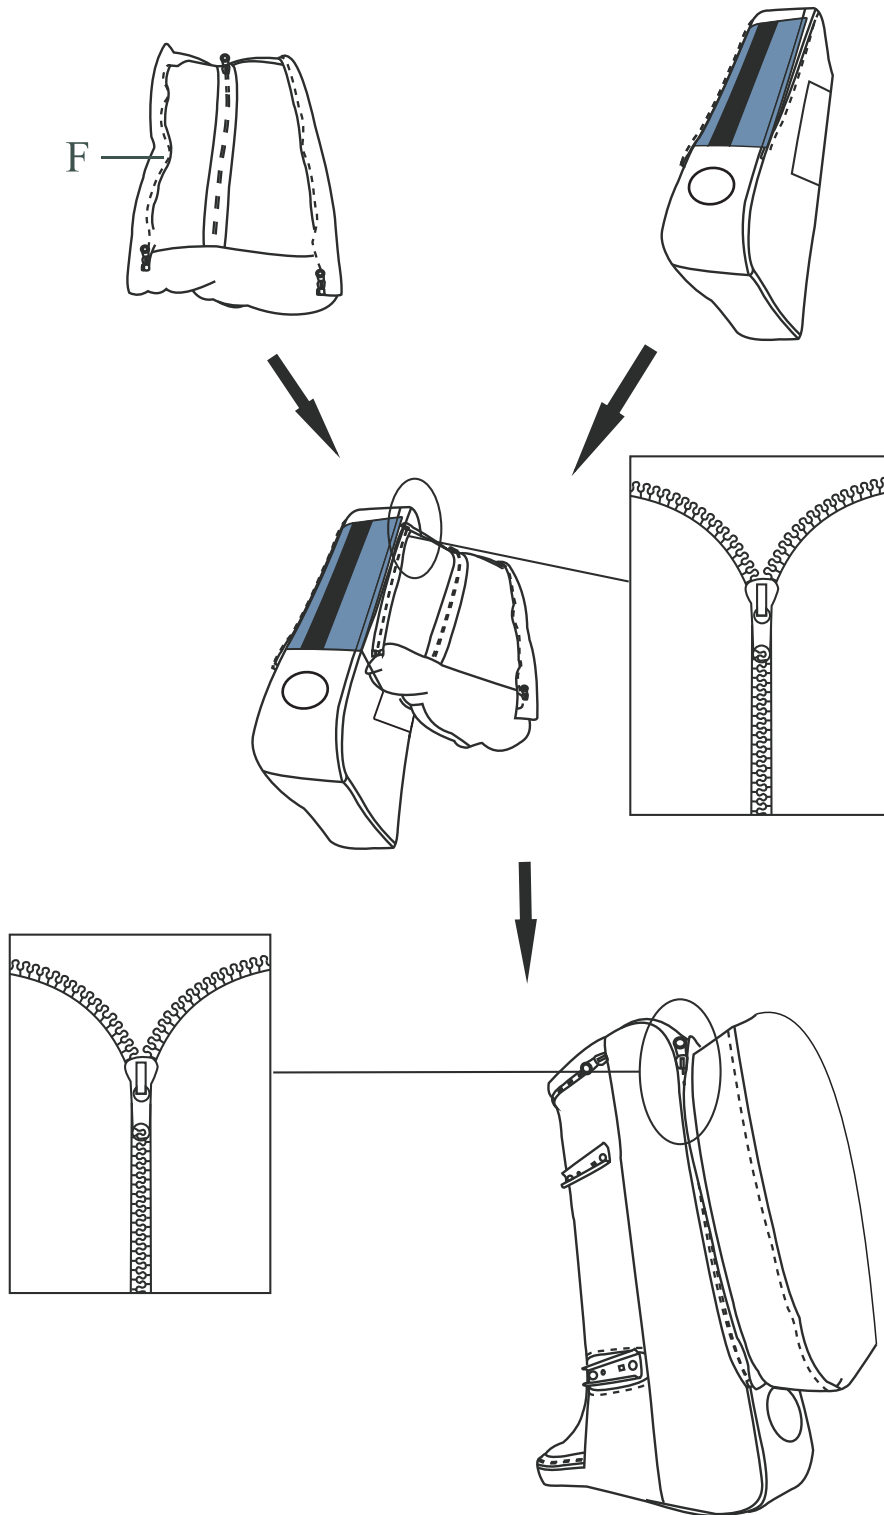


ASSEMBLY INSTRUCTION

06

STEP 5

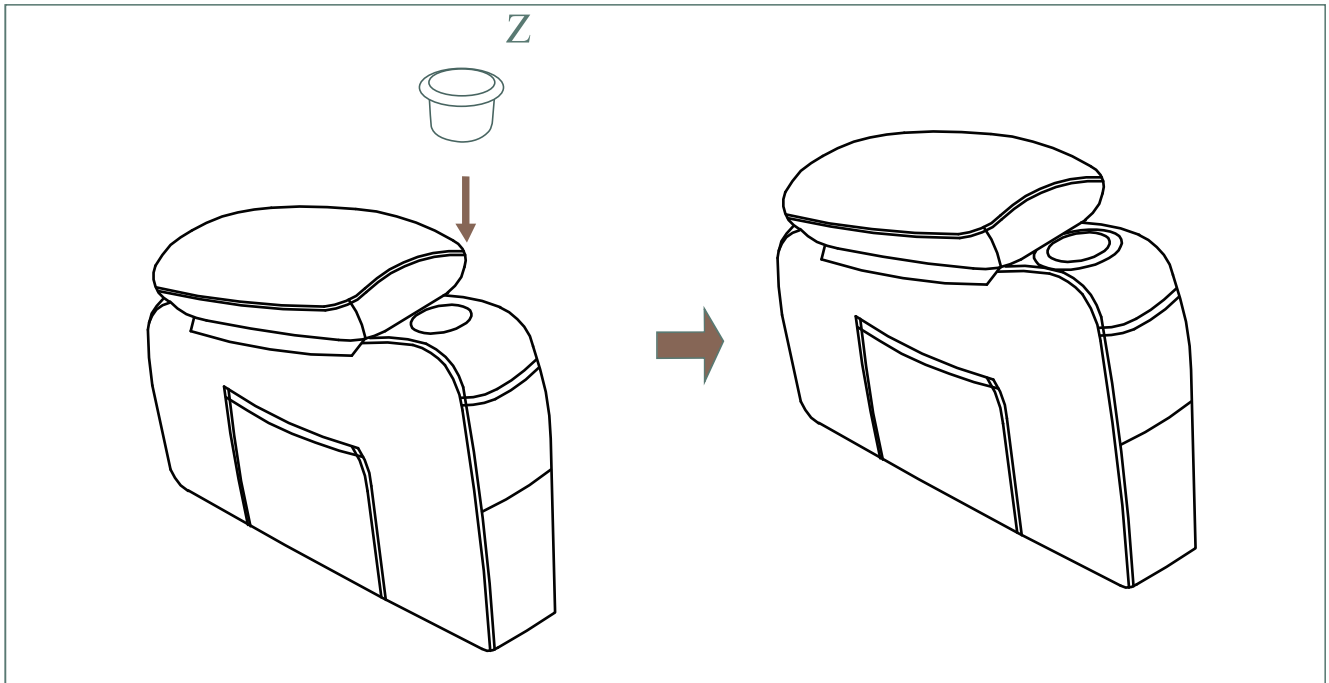


STEP 6: Thread screw L through the support frame, place J in sequence on the support frame, and then lock with nut K and screw L.

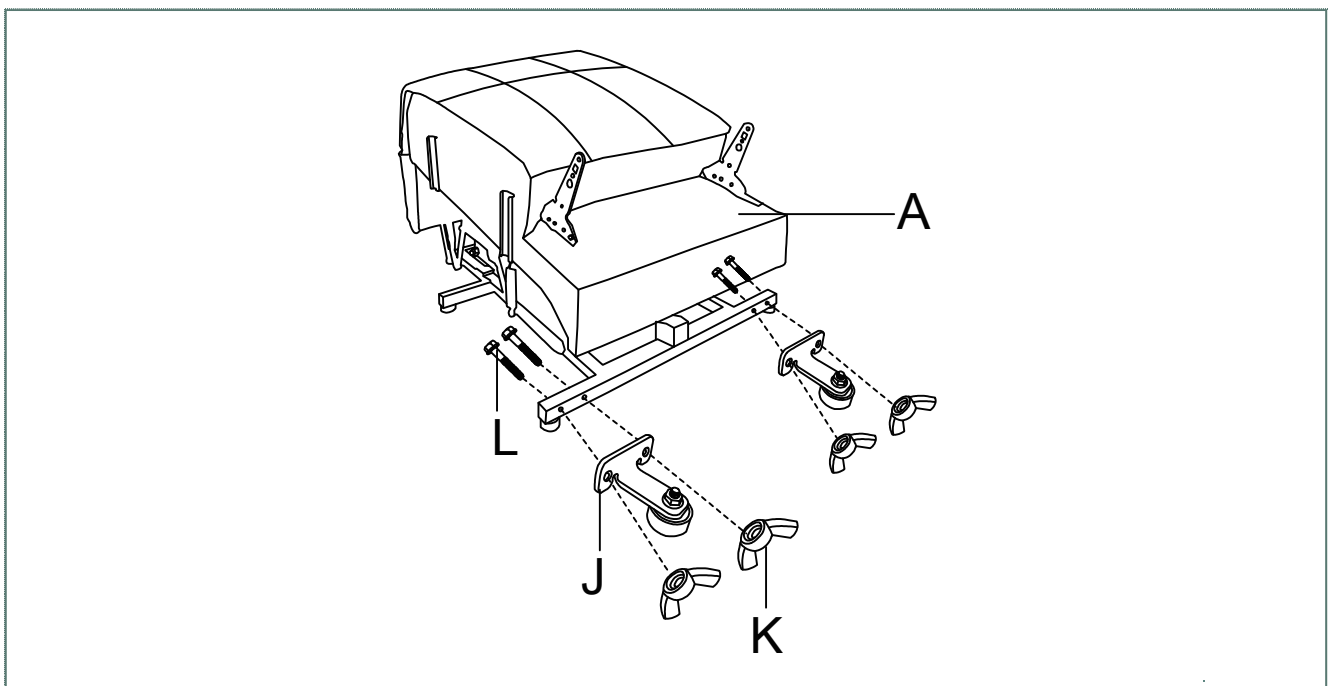


ASSEMBLY INSTRUCTION

07

STEP 7 :Insert arms so that they can fit into the seat,you will hear a"click"when they are engaged.

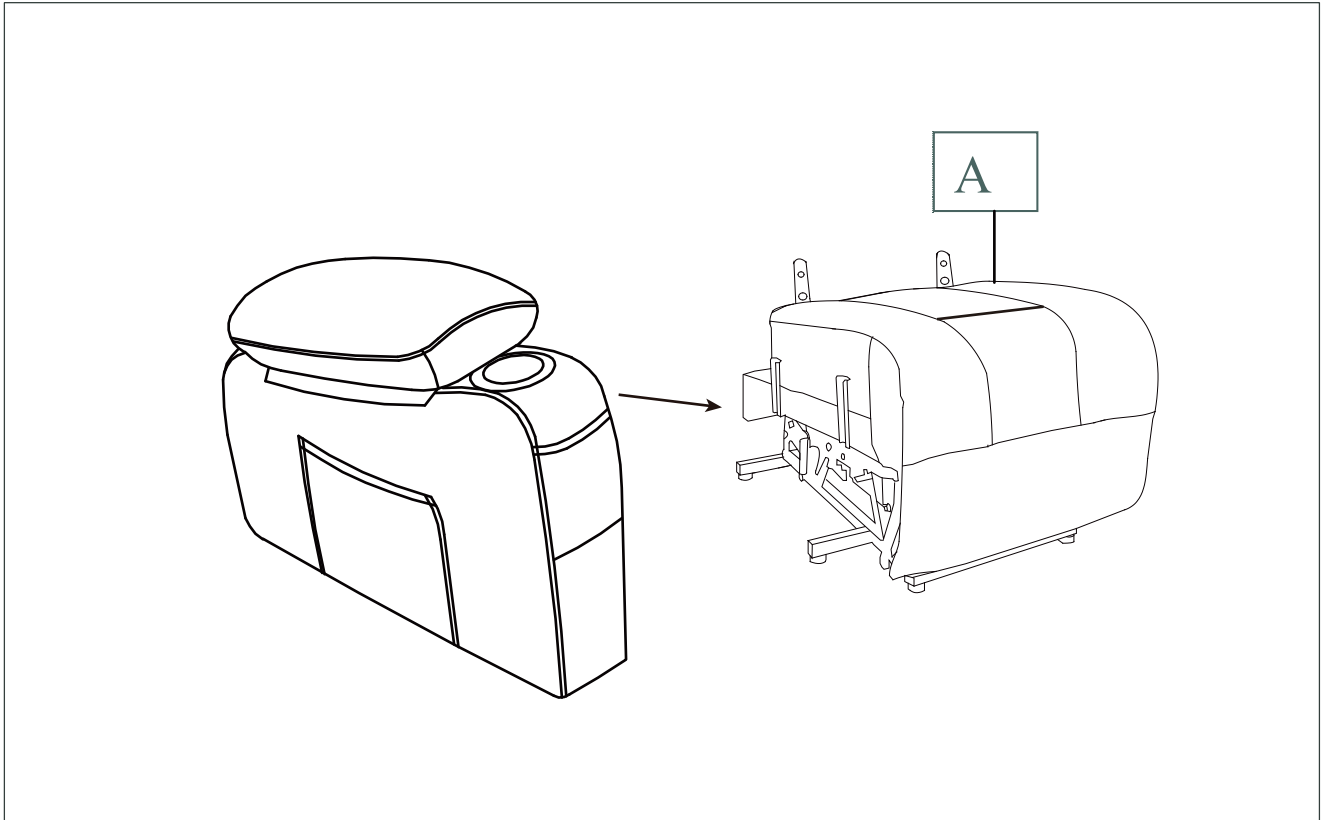


STEP 8 :Insert arms so that they can fit into the seat,you will hear a“ click” when they are engaged.

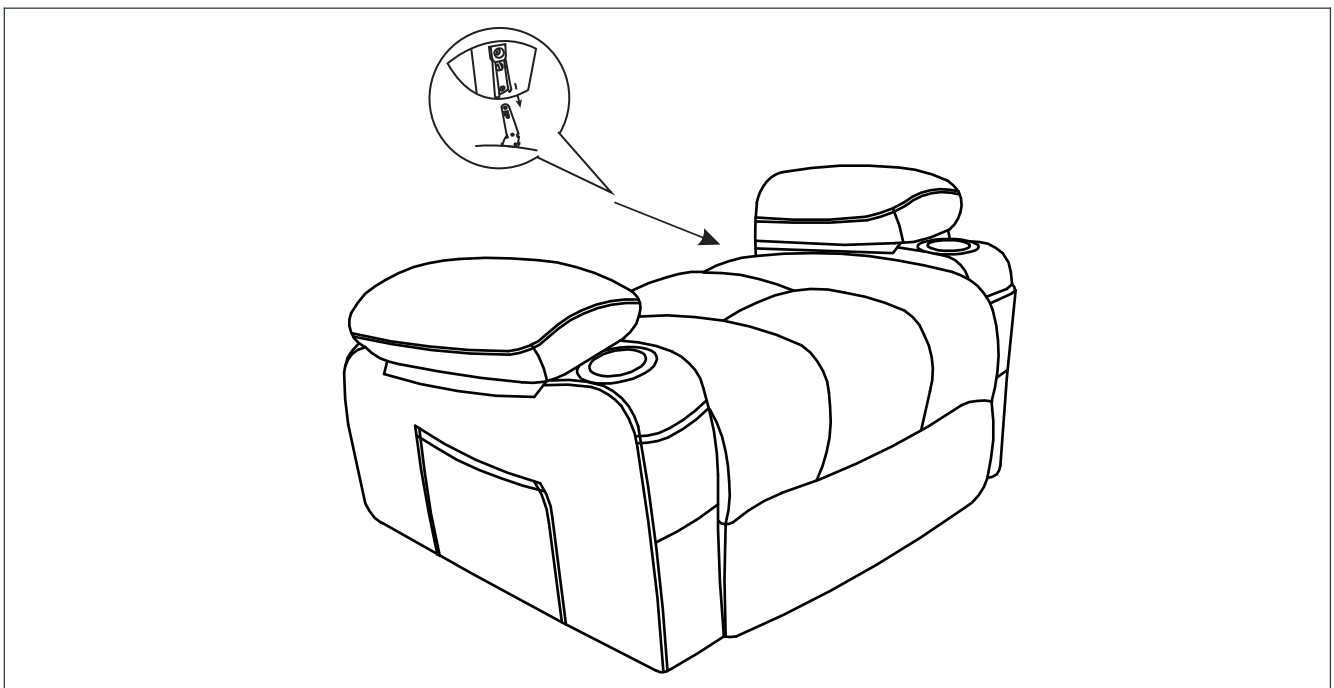


ASSEMBLY INSTRUCTION

08

STEP 9 :Zip the backpack and back frame, and then connect the backpack and backframe with velcro.

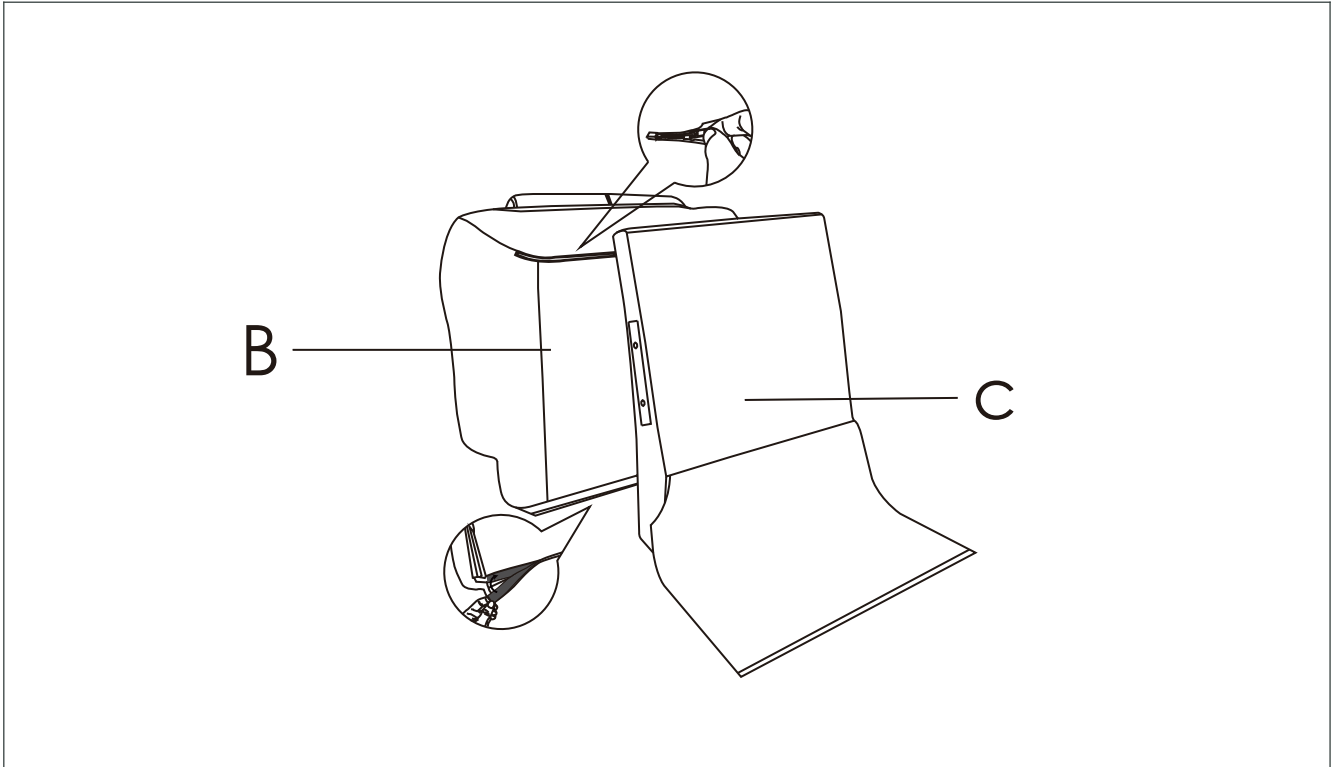


STEP 10 :Plug the back pad into the seat frame, and then connect the massager line white and white, red and red, black and black, and the massager line with the hand controller.

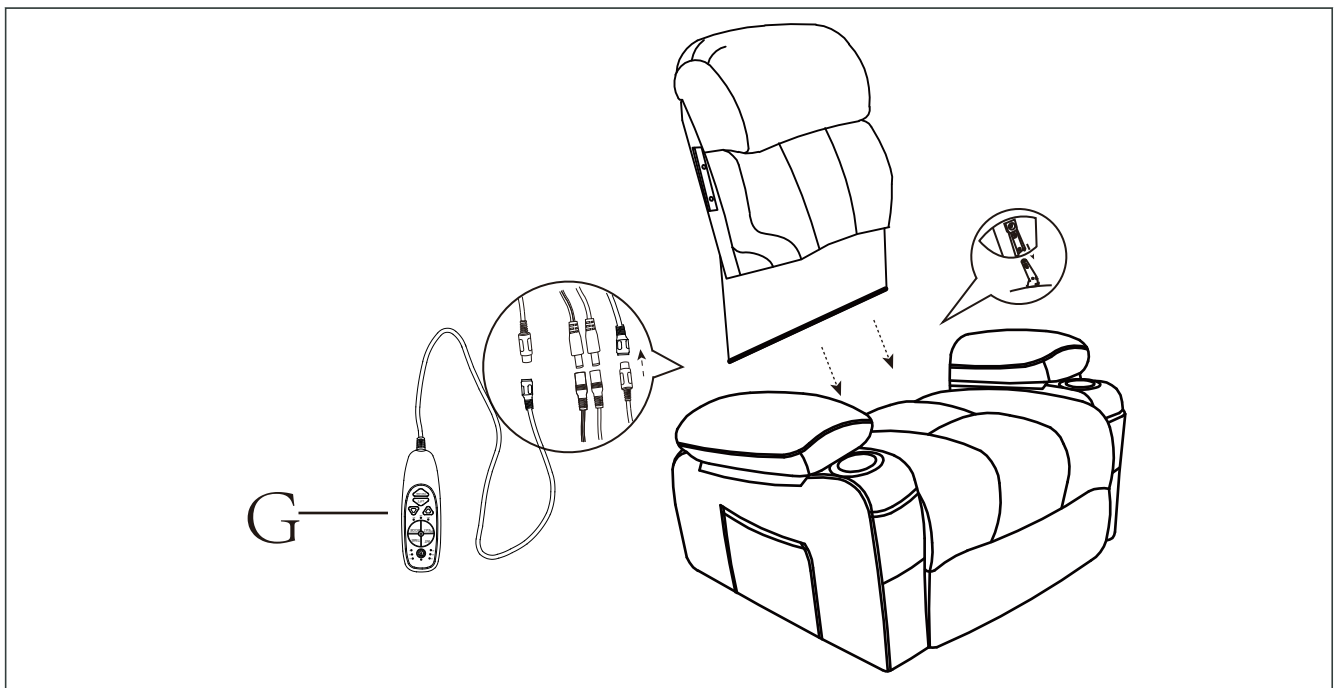


ASSEMBLY INSTRUCTION

09


STEP 11: Insert the back ear so that it can be installed into the back side. When they engage, you will hear a "click" sound.

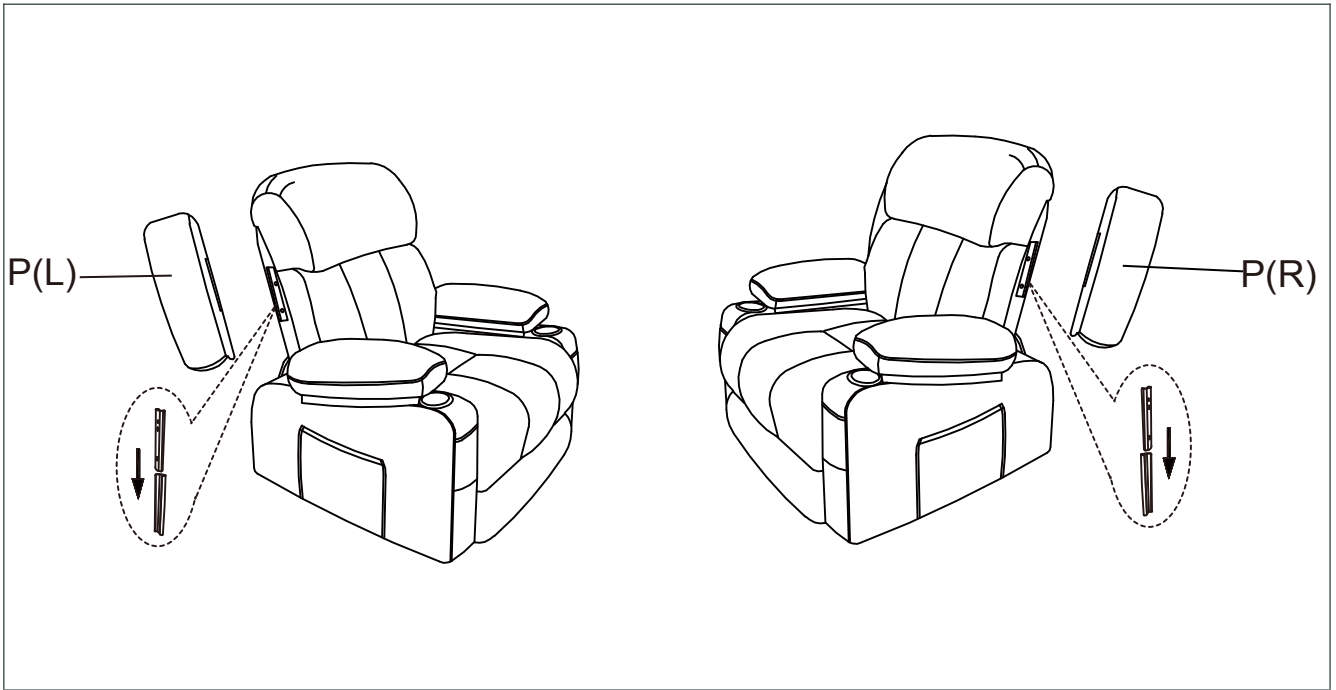

STEP 12: Connect the power adapter and power cord, and then insert the adapter into the cable behind the seat. Stick the lower back curtain from the rear frame to the seat frame.

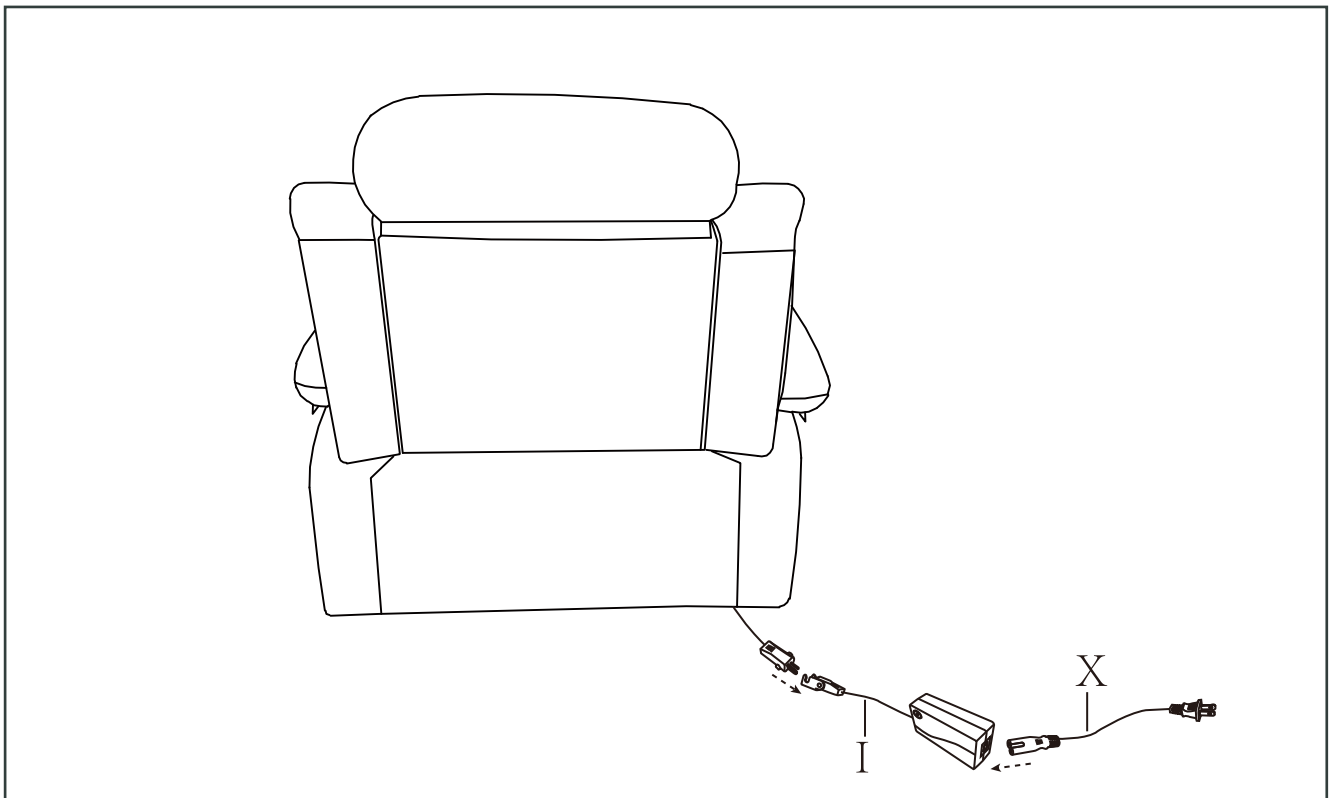


*Congratulations! You've assembled
Your sofa!*

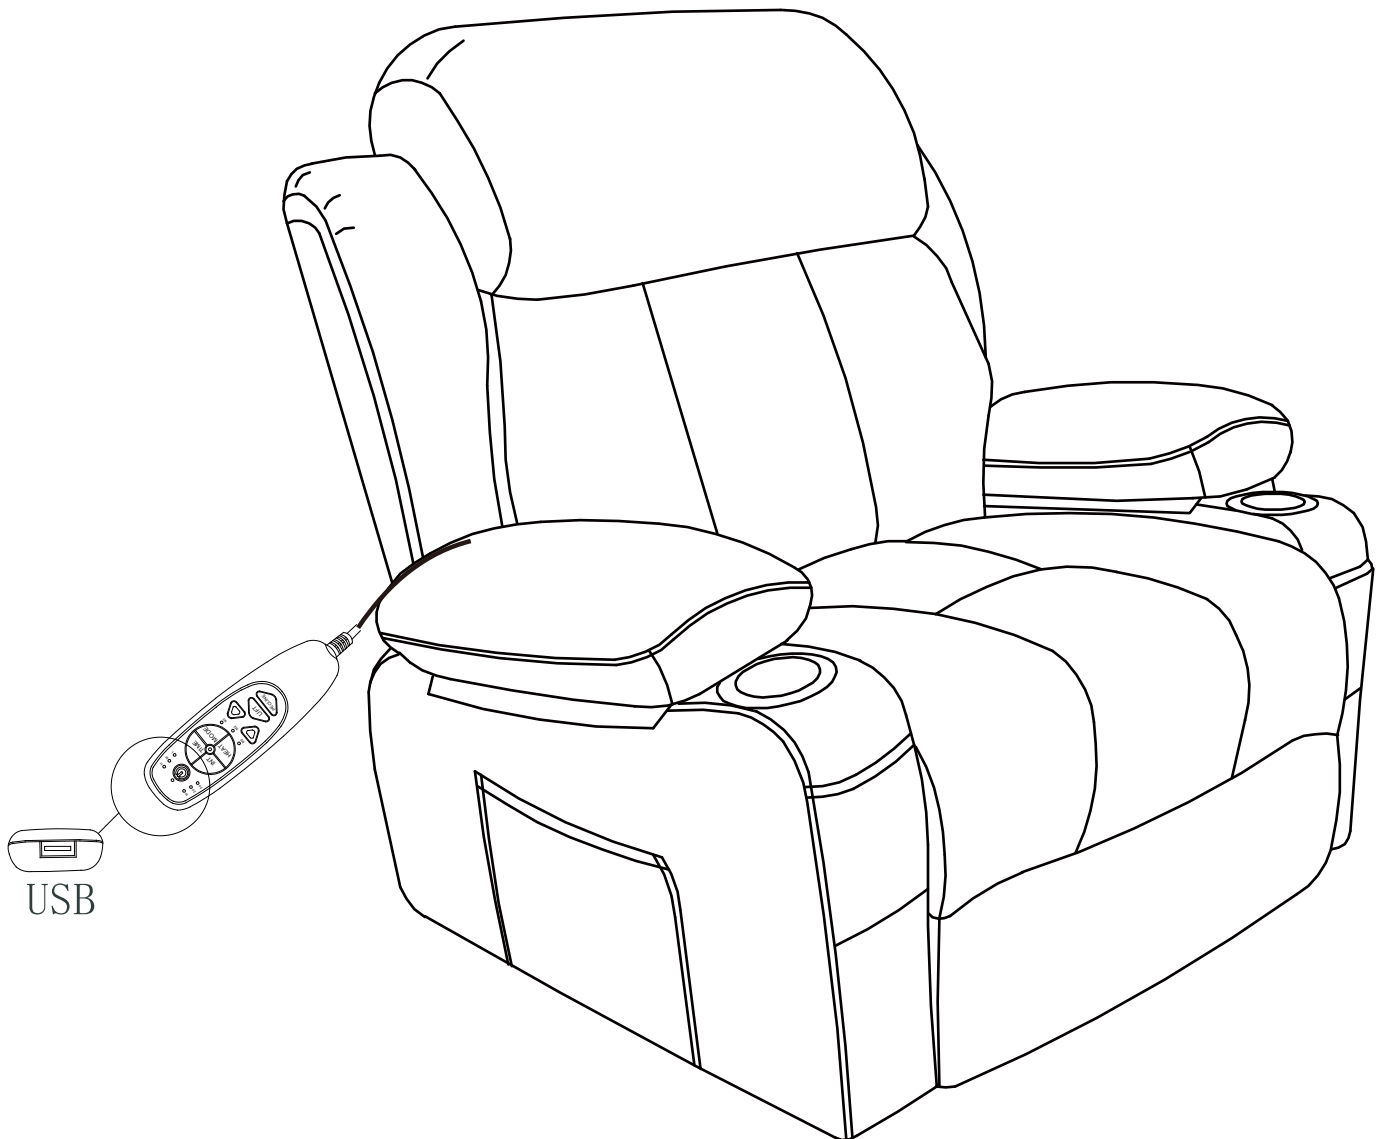


Note: Since the backrest is packed in compression, after the product is installed, you need to tap and adjust the backrest which can help restore fullness. After two days, you will get a Overstuffed Recliners as picture shows.

**READ ALL INSTRUCTIONS
BEFORE USING THE ITEM**

REMOTE CONTROL **Function of remote**

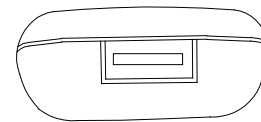

USB

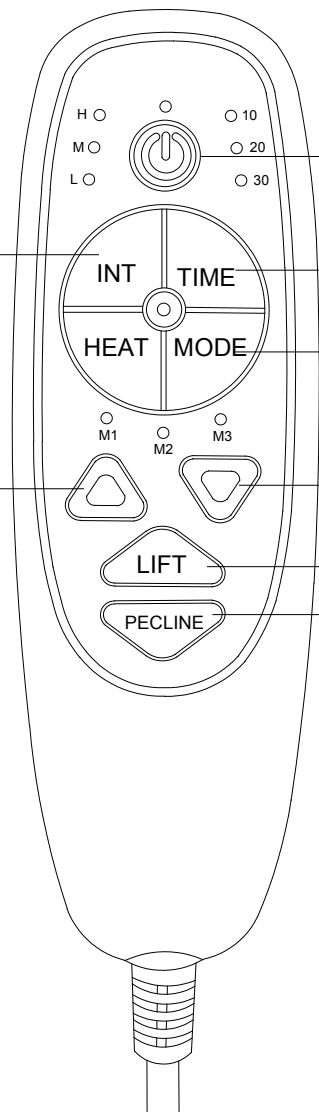

Vibration intensity key: Click on the cycle to switch vibration intensity, and when turned on, the default M gear is selected;

Push rod up button: Long press and hold the push rod up;

Vibration on key: Click to turn on the vibration function, then click again to turn off the vibration function (cycle);

Timed shutdown button: Press and cycle to switch the timed shutdown time, with a default of 10 minutes when turned on;

Vibration mode key: Click to cycle to switch vibration mode, and the default mode for startup is M1;

Push rod down button: Long press and hold the push rod down;

Push rod up button: Click the push rod up button;

Push rod down button: Press the push rod down button;

I 、 Specifications of power adapter

Insert the adapter socket into the socket on the back of the massage chair, and then insert the adapter into the wall socket. Power adapter specifications:
Input: AC 100-240V, 50/60HZ 1.5A; Output: DC29V, 2.0A.

II 、 Product features

- 1、 4 parts 8 motor vibration
- 2、 1-way electric push rod
- 3、 1 heating plate
- 4、 Supports USB charging 5V 2.0A
- 5、 3-segment timed shutdown duration selection
- 6、 Selection of 3rd gear vibration intensity
- 7、 3 vibration modes selection
- 8、 Default scheduled shutdown time 10Min

III、 Function details

- 1、 Vibration on key: Click to turn on the vibration function, then click again to turn off the vibration function (cycle);
- 2、 Vibration intensity key: Click on the cycle to switch vibration intensity, and when turned on, the default M gear is selected;
- 3、 Timed shutdown button: Press and cycle to switch the timed shutdown time. The default time for powering on is 10 minutes;
- 4、 Vibration mode key: Click to cycle to switch vibration mode, and the default mode for startup is M1;
- 5、 Push rod up button: Long press and hold the push rod up;
- 6、 Push rod down button: Long press and hold the push rod down;
- 7、 Push rod up button: Click the push rod up button;
- 8、 Push rod down button: Press the push rod down button;

Warnings

- Sit down in the chair gently. To avoid tipping over, do not throw yourself into the chair. Move the chair into the reclining position slowly, making sure that no children or pets are in close proximity. Do not allow children to play on or around the chair, particularly when it is in an open position.
- Close the recliner completely before getting out of it.
- Never sit on the footrest when it is open, even if it is a child.
- To eliminate the risk of tipping over, do not sit on the arms or footrest of the chair.
- This chair is designed to be used by 1 adult at a time.
- Maximum weight capacity is 300 LBS, Do not allow any person who over 300 LBS to sit on the recliner.
- Please forbid people with the following ailments from using this sofa: Those people with severe symptoms of heart disease, high blood pressure, cerebral thrombosis and others who are sensitive to heat or completely insensitive to heat, those with brittle bones or have issues with waist support pregnant women, children and others where it has been determined they are not suitable to use this product under the guidance of doctors.
- To fully recline the sofa, ensure the sofa well, you need to put the sofa at least 19 inches away from the wall or any other obstacle.
- Product cannot touch water, fire, etc. Product can also not come in contact with sharp objects (knives, nails, etc.)

Maintenance Manual Instructions

- To avoid dropping, you should carry the sofa carefully.
- If you find dirt and or stains on the chair, spray the sofa with a sofa specific cleaner then use a sponge or cloth to wipe the dirt away. Do not use water, soapy water or cleaner with waxed wooden areas. Take care to wipe the sofa carefully and gently.
- Do not put the sofa in an area with direct sunlight and do not put the sofa directly in front of an air conditioner, this will fade the upholstery and make it brittle.

How to Disassemble

Please find a strong tool to prod the small piece of metal grooves, then the backrest will be pulled out. The tool is not included.