
Assembly Instructions

Warnings: You must read this before you proceed.

Please look in the bottom of seat frame for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart

Dining Chair

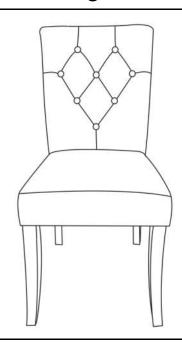


Parts List

-	140	1/2	
Label	Picture	Description	QTY
Α	000000000000000000000000000000000000000	Chair Back	1
В		Chair Seat	1
С		Front Leg	2
D		Seat Base Cover	1

Hardware				
Label	Picture	Description	QTY	
а		Bolt M8X75	5	
b		Bolt M8X55	6	
С		Spring Washer	10	
d		Flat Washer	10	
е		Allen Key	1	

Assembly Preparation

Before Beginning Assembly:

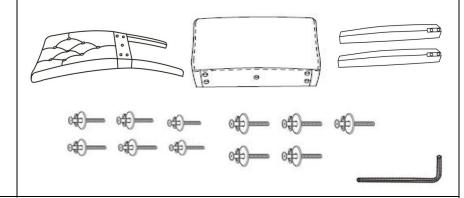



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-

Assembly Steps

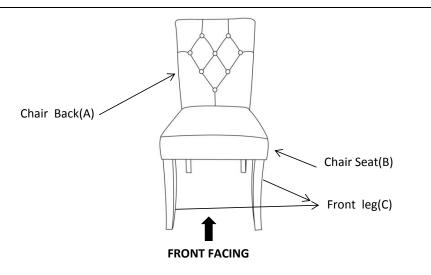


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

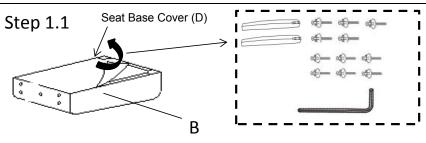

Place the Chair Seat(B) Face down on a soft surface to avoid any scratches or damages to the product.

Carefully peel away the Seat Base Cover from the edge,take out the legs and hardwares from the Bottom of the Chair Seat (B).

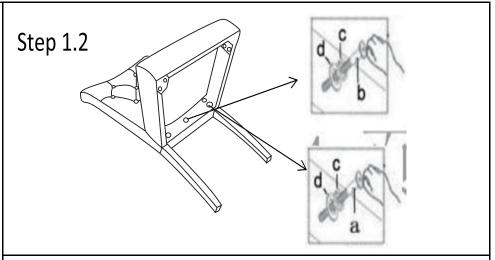

Put the Chair Back(A) onto a flat table or panel.

Align the positioning dowels on the Chair Seat with the mounting position located on the Chair Back-panel and Chair-Seat panel.

Use your left hand to push the seat frame floorwards, depicted by Arrow 1.

This action helps to ensure the Chair Seat(B) is pressed towards to the Chair Back(A) with no gap between these. Then, lock the middle mounting position first and the corner mounting position later.

The hardware for these are: use 4 Bolts (a)+ 1 Bolt (b)+5 Spring Washers (c) + 5 Flat Washers (d) with the Allen key(e). At this point of assembly, DO NOT overfasten the connections. WARNING!! Bolts(a) longer than Bolts(b), Two sides position using the Bolts(a), the middle position using Bolts (b)

At this stage, Do not fully tighten Bolts..

Step 2 (1) (2)

Next, place the chair onto the side of a table as seen in Picture 1. You will now have the chair bottom and all 4-legs facing skywards. Insert each front leg completely vertically into each seat frame corner. PRESS FIRMLY DOWN with your hand until there is no gap.

WARNING!! DO NOT POSITION THE FRONT LEG AS SHOWN IN PICTURE 2. THIS PICTURE SHOWS THE CHAIR BACK STAYS AGAINST THE GROUND and THE FRONT LEGS HORIZONTAL IN MIDAIR.

Now tighten the bottom bolt first, then the bolt on the top by using 4 Bolts (b) and 4 Spring Washers (c) and 4 Flat Washers (d). DO NOT tighten the top bolt first.

WARNING!! DO NOT OVER TIGHTEN. OVER TIGHTENING COULD LEAD TO DAMAGE OF THE PRODUCT.

TIGHTEN ONLY UNTIL SECURE AND STABLE.

Step 3 If wobble Test again 30cm - 50cm

Place the chair on a LEVEL SURFACE to see if it wobbles.

If it wobbles, lift the chair to some 30cm to 50cm height from the ground.

Keep your feet and toes well away from the drop zone.

Drop the chair freely and vertically with the four legs, hitting the ground, at the same time.

This Drop Test will help to ensure that all the bolts and gaps to all reach full alignment status.

Test again for evenness on a LEVEL SURFACE.

If no wobbles found, proceed to tighten all the bolts.


CAUTION: When tightening these bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one.

This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute this same drop tests.

WARNING!! IF CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.

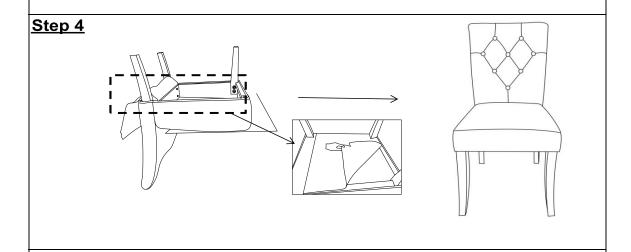

Place the Seat Base Cover back as shown in picture.

Smooth the Magic Tape down with your hand on all four sides at the edge of the seat.

Make sure all parts are connected and securely locked into position.

Then stang the Dining Chair up.

Your Dining Chair is ready for use.

This Dining Chair can only be used on a flat, level surface.

Care & Maintenance			
1 1	•	Furniture may scratch floors. We recommend using furniture pads to protect your floors.	
Ø <u></u>	•	Do not put hot items directly on furniture surface.	
Ø 🛅	•	Do not clean furniture with harsh cleansers or polish.	
Ø 🔅	•	Do not place furniture under direct sunlight.	
0	•	Do not place furniture near heating or cooling vents.	
0 1	•	Do not write on furniture without a padded barrier to protect the surface.	
Ø 💭	•	Do not place furniture outside . For indoor use only.	
Ø 	•	Not for commercial use. For residential use only.	
o •	•	Stains may be removed with mild soap solution and damp cloth.	
Ø 🟋	•	Children should not climb or jump on the furniture.	
10	•	Dust and pick-up spills using a clean, non-colored, lint-free cloth.	

Questions & Answers about Proposition 65

What is Proposition 65?

Proposition 65 requires businesses to provide warnings to Californians about significant exposures to chemicals that cause cancer, birth defects or other reproductive harm. These chemicals can be in the products that Californians purchase, in their homes or workplaces, or that are released into the environment. By requiring that this information be provided, Proposition 65 enables Californians to make informed decisions about their exposures to these chemicals.

Proposition 65 also prohibits California businesses from knowingly discharging significant amounts of listed chemicals into sources of drinking water.

Proposition 65 requires California to publish a list of chemicals known to cause cancer, birth defects or other reproductive harm. This list, which must be updated at least once a year, has grown to include approximately 900 chemicals since it was first published in 1987.

What types of chemicals are on the Proposition 65 list?

The list contains a wide range of naturally occurring and synthetic chemicals that include additives or ingredients in pesticides, common household products, food, drugs, dyes, or solvents. Listed chemicals may also be used in manufacturing and construction, or they may be byproducts of chemical processes, such as motor vehicle exhaust.

What does a warning mean?

If a warning is placed on a product label or posted or distributed at a workplace, a business, or in rental housing, the business issuing the warning is aware or believes that it is exposing individuals to one or more listed chemicals.

By law, a warning must be given for listed chemicals unless the exposure is low enough to pose no significant risk of cancer or is significantly below levels observed to cause birth defects or other reproductive harm.

Where can I get more information on Proposition 65?

If you have specific questions on the administration or implementation of Proposition 65, you can contact OEHHA's Proposition 65 program at P65.Questions@oehha.ca.gov, or by phone at (916) 445-6900.