
VTSJ0335 Argolis 24" Single Bathroom Vanity Set










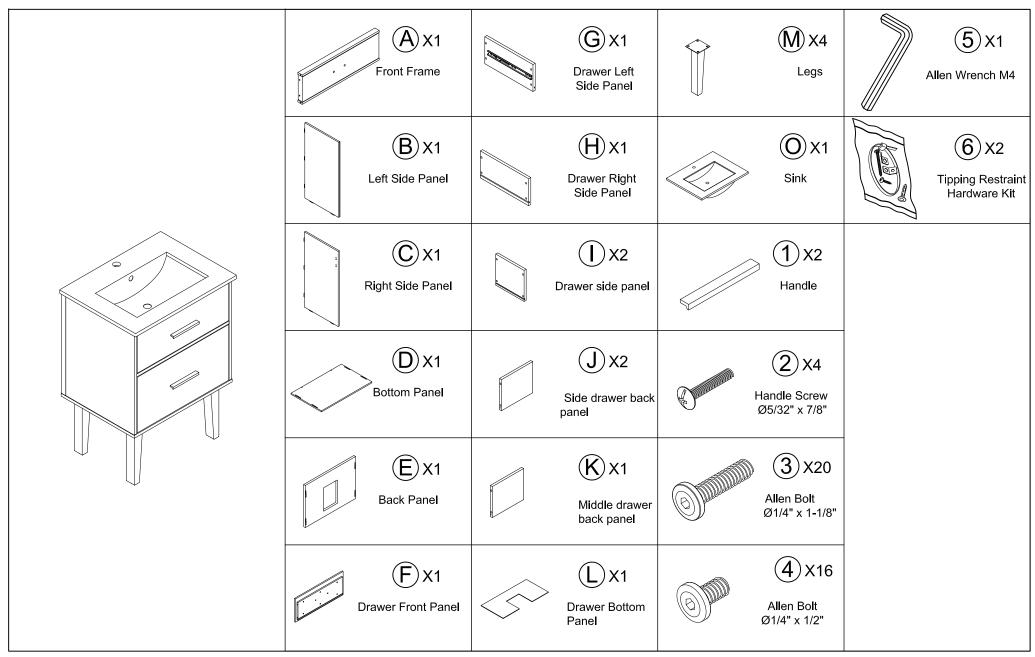




Step 1. Attach the legs (M) to the bottom panel (D) by using Step 2. Attach the front frame (A) to the side panels (C) by the Allen bolts Ø1/4"*1/2" (4) and the Allen wrench (5). using the Allen bolts (3) and the Allen wrench (5). **94**

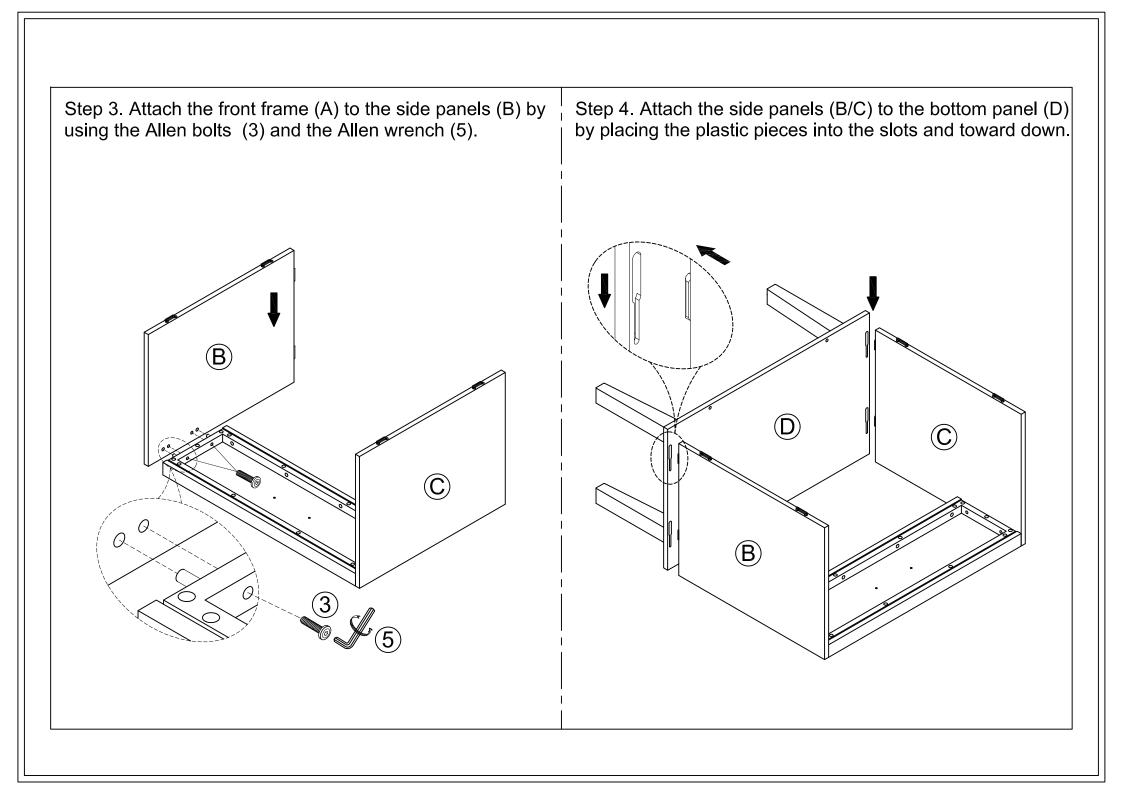



Step 5. Attach the back panel (E) to the side panels (B,C) Step 6. Attach the left/right side panel (G,H) to the drawer by placing the plastic pieces into the slots and toward front panel (F) by using the Allen bolts Ø1/4"*1-1/8" (3) and down. the Allen wrench (5). **B** \bigcirc

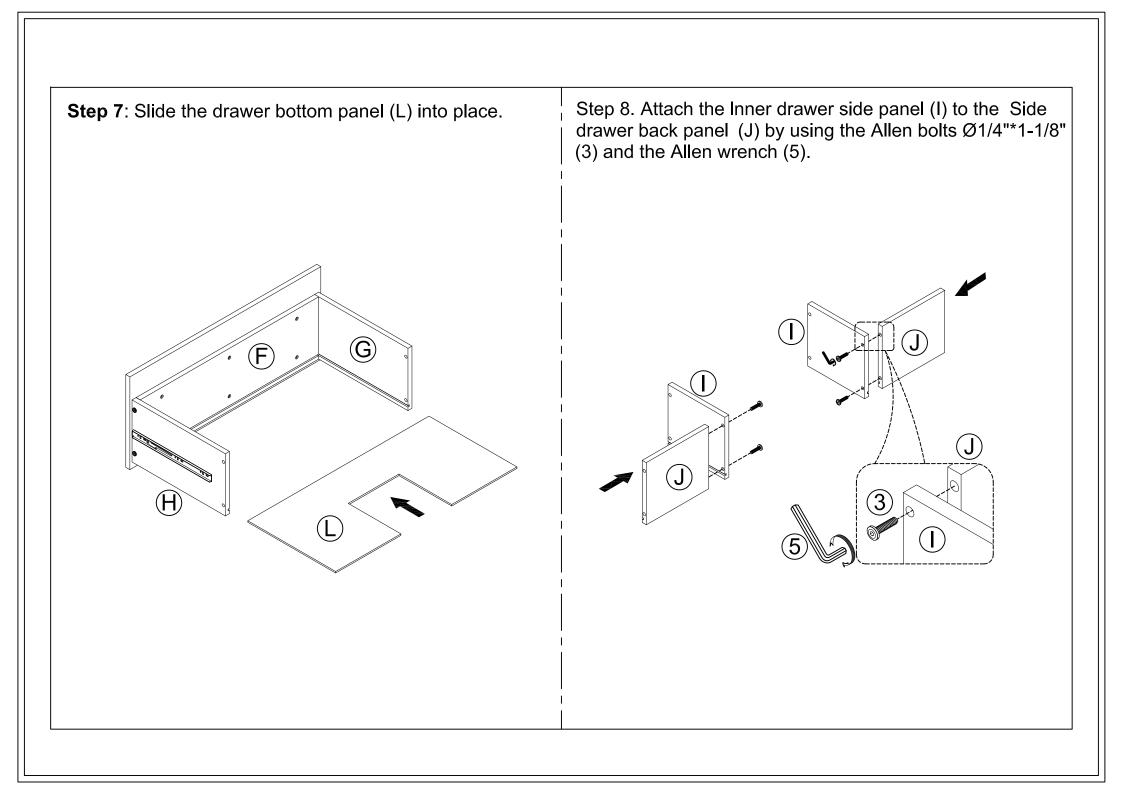


Step 9. Attach the Inner drawer side panel (I) to the Middle drawer back panel (K) by using the Allen bolts Ø1/4"*1-1/8" (3) and the Allen wrench (5).

Step 10. Attach the left/right side panel (G,H) to the Side drawer back panel (J) by using the Allen bolts Ø1/4"*1-1/8" (3) and the Allen wrench (5).

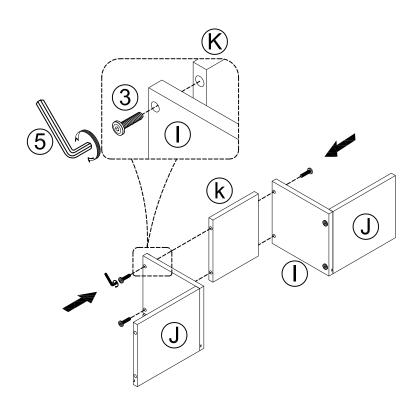


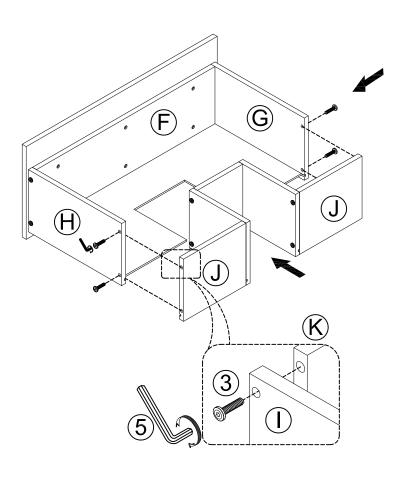

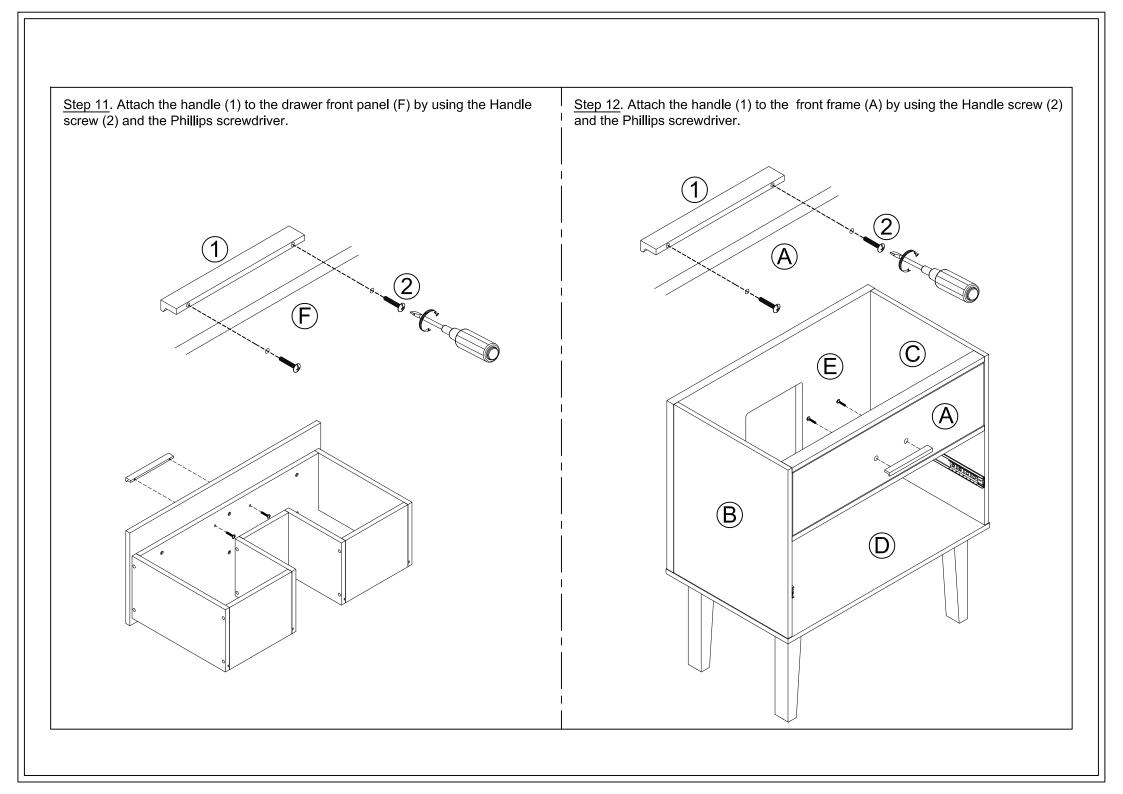


Step 13. Place the drawers into the vanity frame on the metal tracks and slowly work the drawer into place until fully closed.

To remove the drawers, use the lever release. Pull the drawer out as far as possible, and you'll see a plastic lever on each side. Pull one lever up and push the other down to remove the drawer.

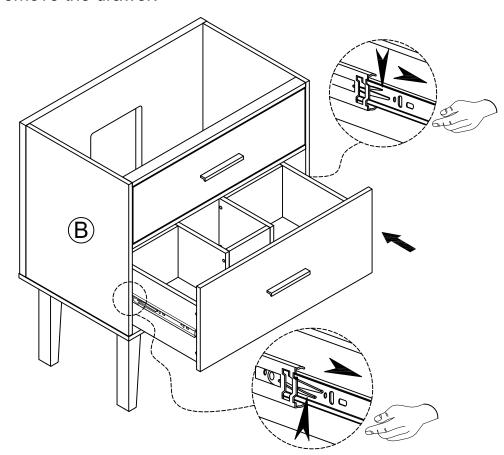

Step 14. Secure the sink (O) to the mounting blocks by using the caulking gun.

Note: make sure the sink is securely mounted.

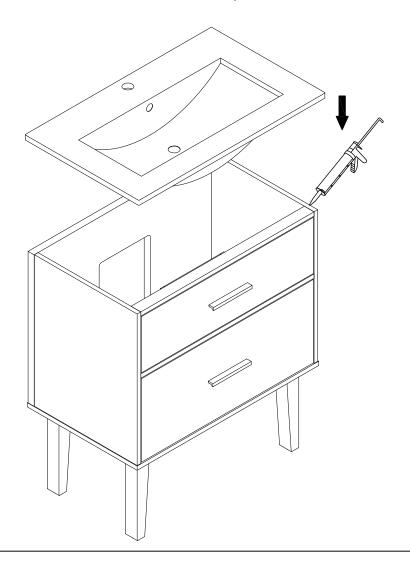

<u>Step 15</u>. Attach a bracket securely to the back top rail of the Single Bathroom Vanity Set using the 3/4" screw provided, through the smaller hole.

Locate the other bracket on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach the wall stud using the 2" screw provided, through the smaller hole.

Place the Single Bathroom Vanity Set into position so both mounting brackets are vertically inline.

Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slice the flat end through the locking end and draw it through until all slack is removed.

Confirm that the strap is securely laced and locked.

