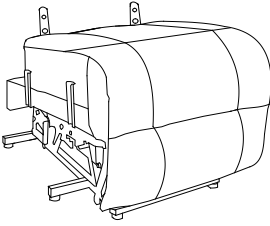
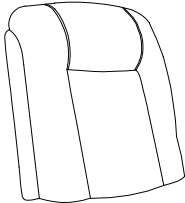
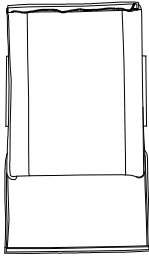
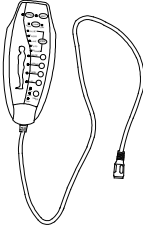
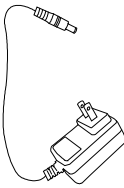

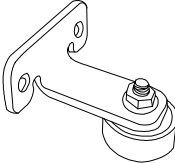



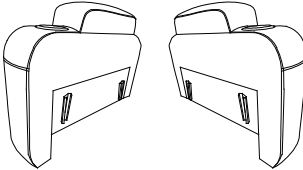
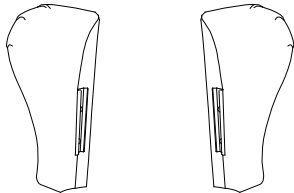


INSTRUCTION MANUAL
MODEL:1240-2LM


Edition:202311131651S

Assembly Instruction


PART LIST (Box of 1240)

<p>Ax1</p>  <p>Seat</p>	<p>Bx1</p>  <p>Back</p>	<p>Cx1</p>  <p>Backrest</p>	<p>Gx1</p>  <p>Massager remote control board</p>
<p>Hx1</p>  <p>Massager power supply</p>	<p>Ix1</p>  <p>Motor power supply</p>	<p>Jx2</p>  <p>Foot support frame</p>	<p>Kx4</p>  <p>M6 claw nut</p>
<p>Lx5</p>  <p>screw M6 * 40mm</p>	<p>X x1</p>  <p>Power line</p>	<p>Fx2</p>  <p>F(L) F(R) handrail</p>	<p>Px2</p>  <p>P(L) P(R) Dorsal ear</p>


Step 1 Turn the screw L through the support frame J and seat cushion frame in succession, then secure it with the nut K and the screw L.

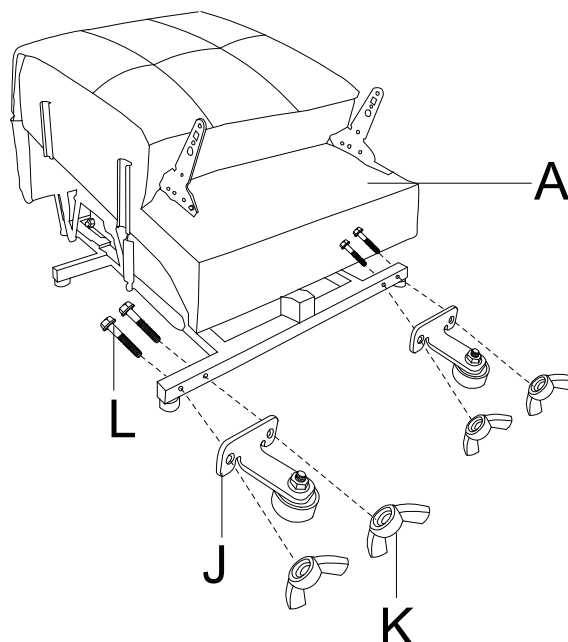


Step 2 Zip the backpack and back frame, and then connect the backpack and backframe with velcro.

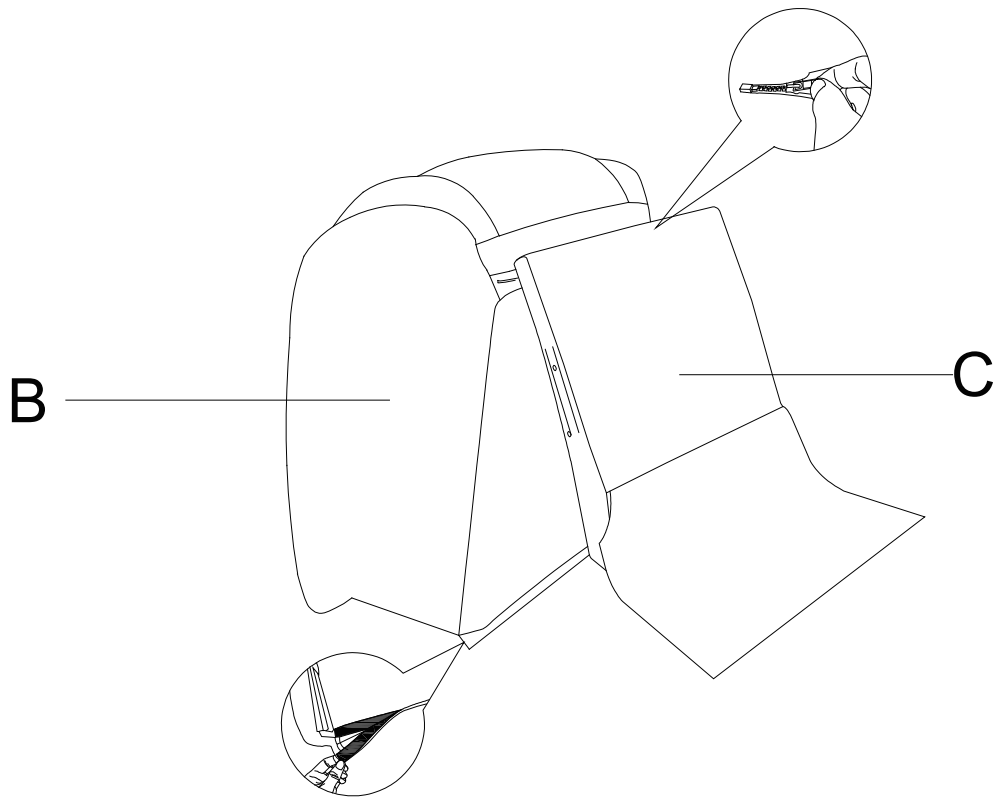


Step 3 Insert the arms into the seat in a way that they fit properly .
You will hear a click when they are securely engaged.

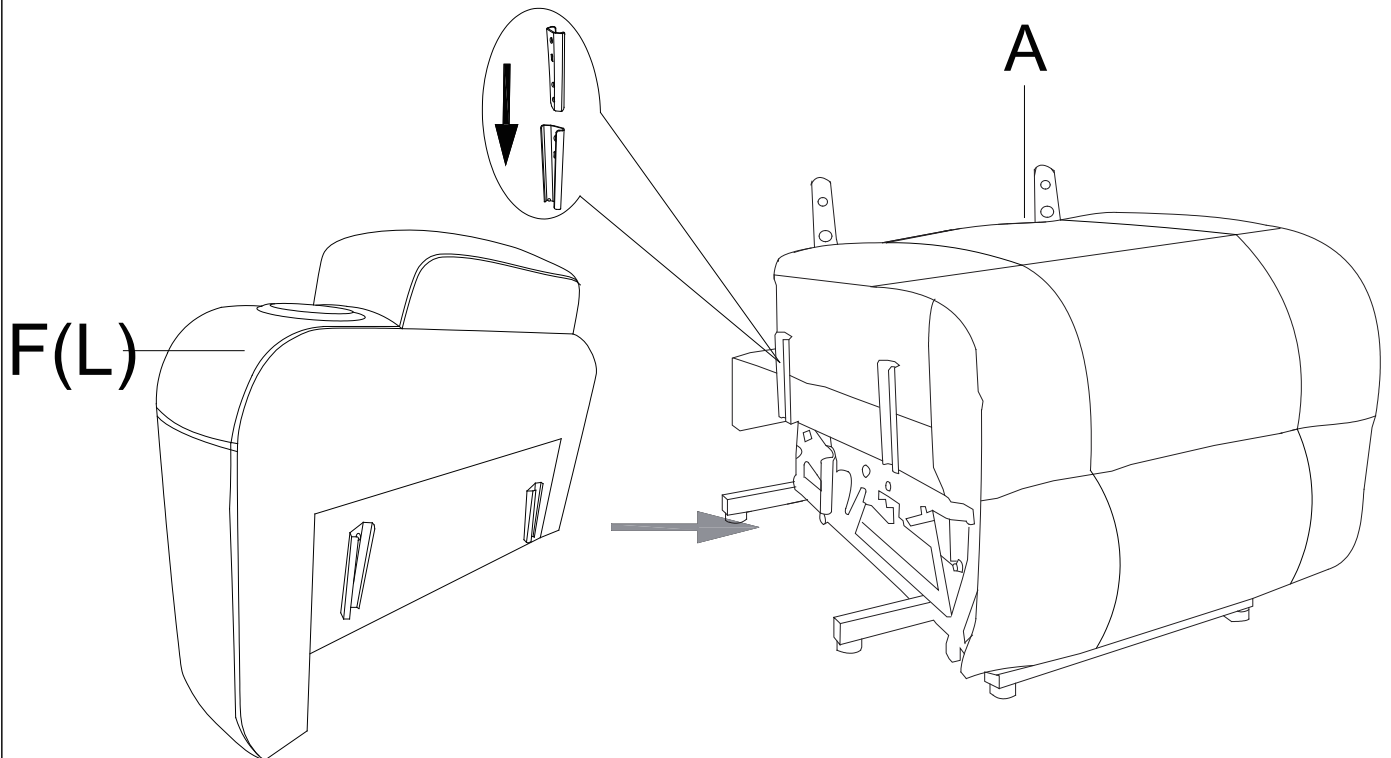


Step 4 Repeat Step 3.

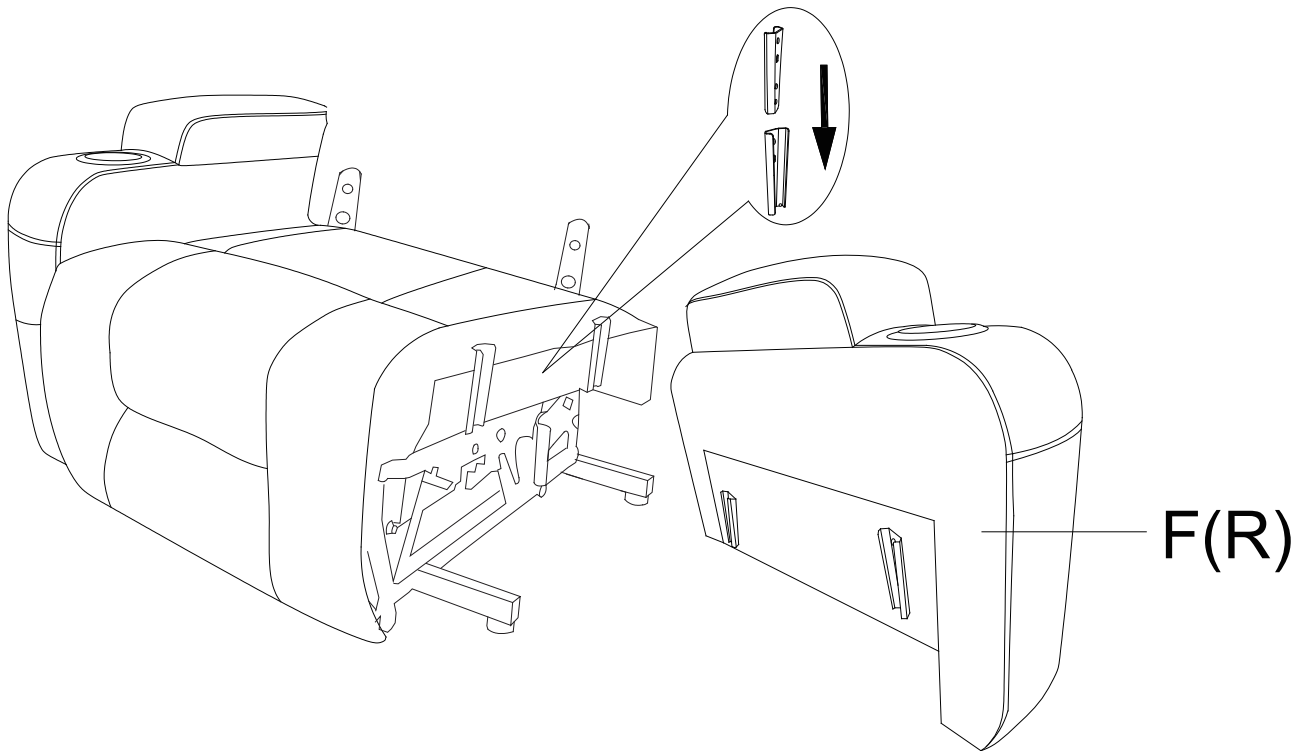


Step 5 Plug the back pad into the seat frame , then connect the massager lines: white with white , red with red , black with the power lines , connect the massage line with the hand controller.

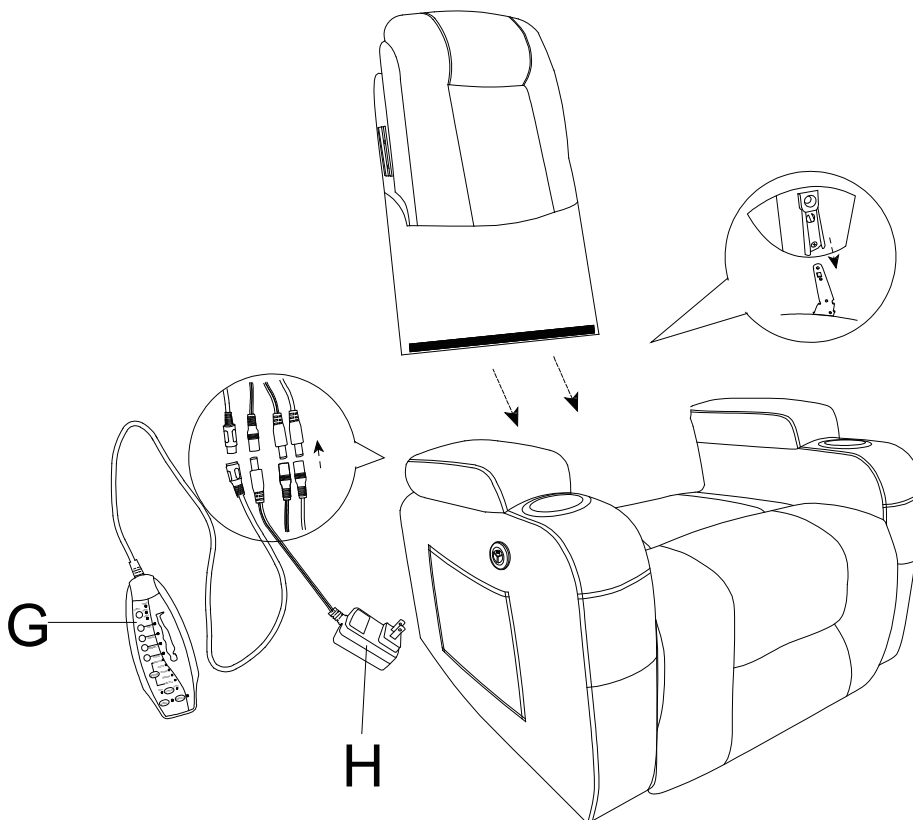


Step 6 Install the back ears on both sides of the backrest.

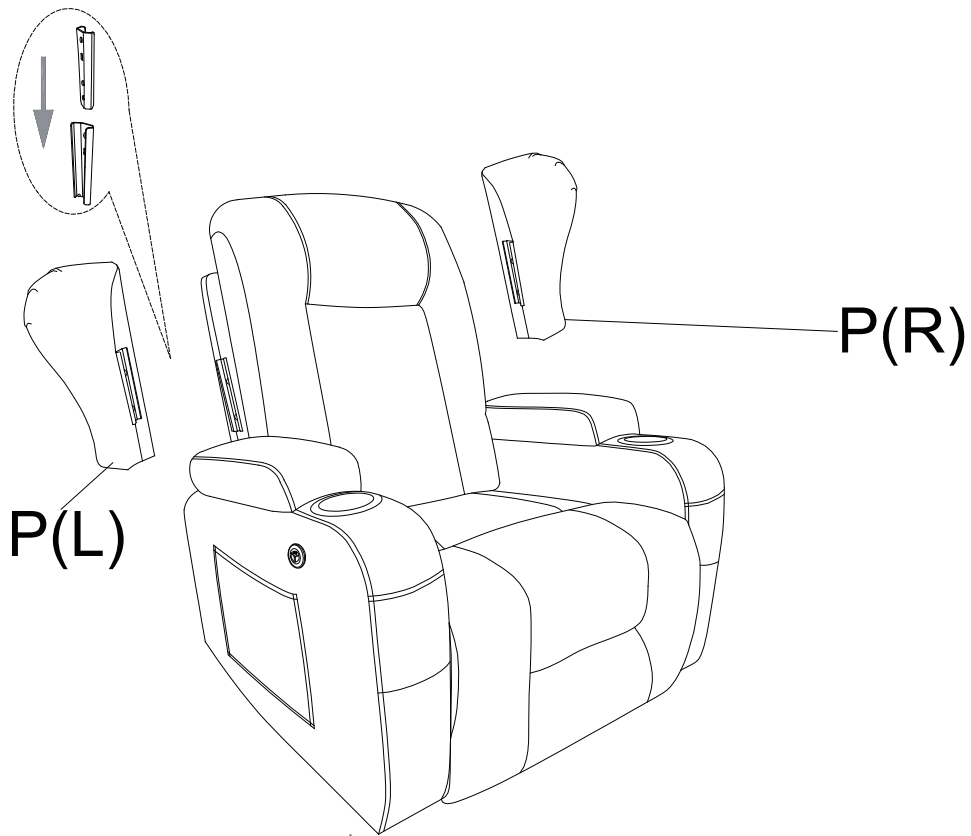


Step 7 Connect the power adapter to the motor cable, connect the cable on the armrest side to a suitable plug, connect the backrest power cable to the remaining plug, and lock all locking cables. Finally, connect the power cord to the power adapter.

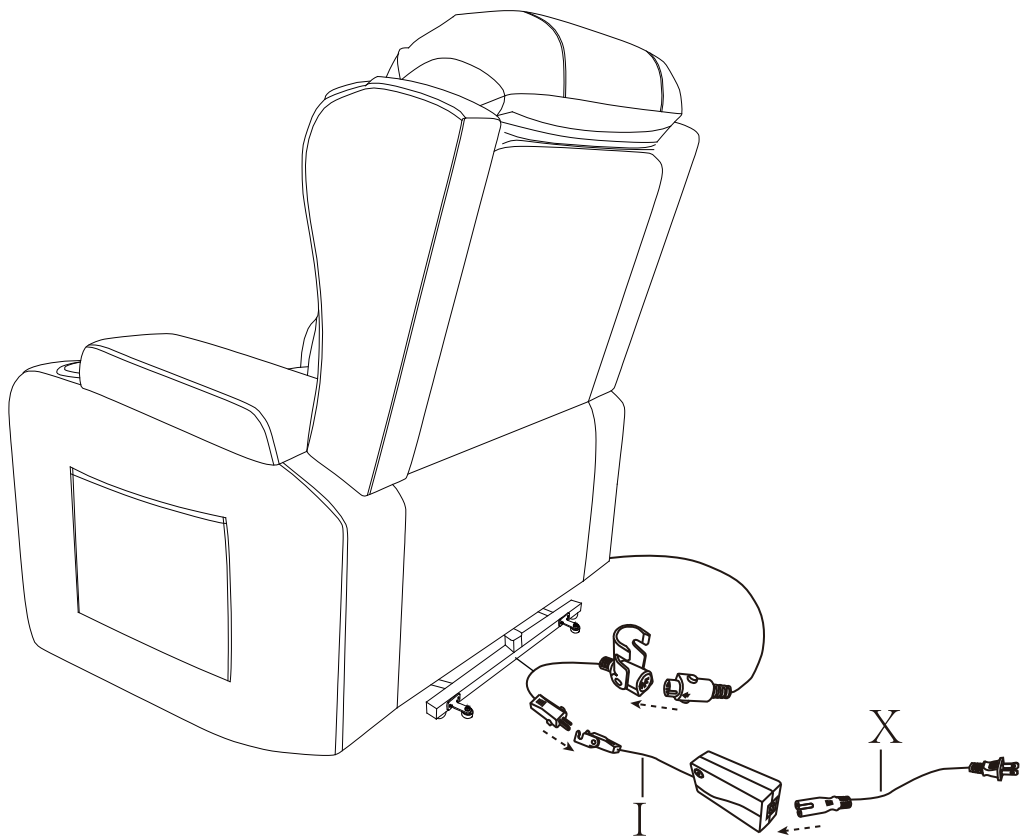


Step 8 Stick the Velcro on the back tightly under the seat.

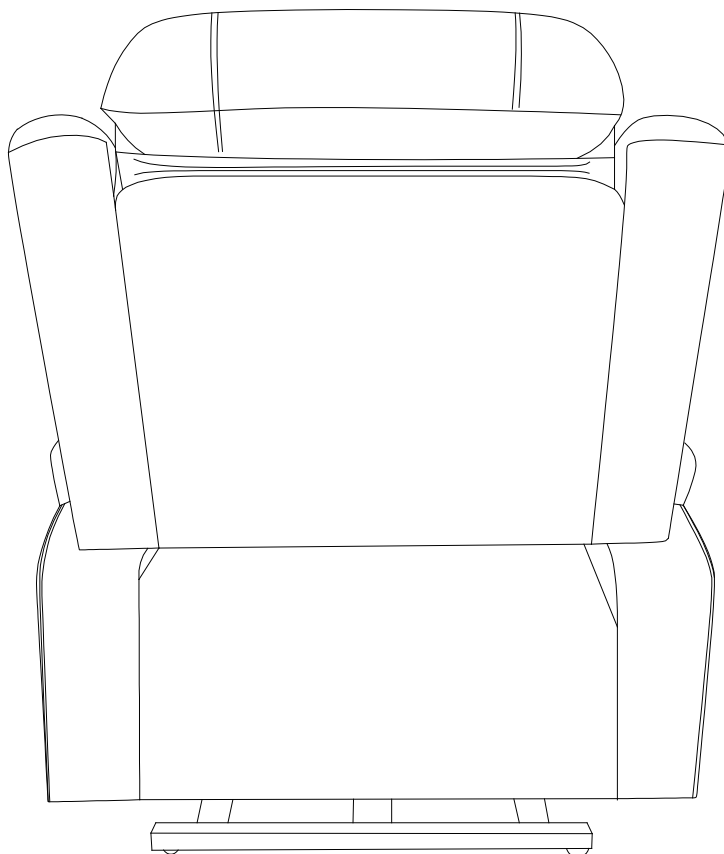

Step 9 Recline the chair.

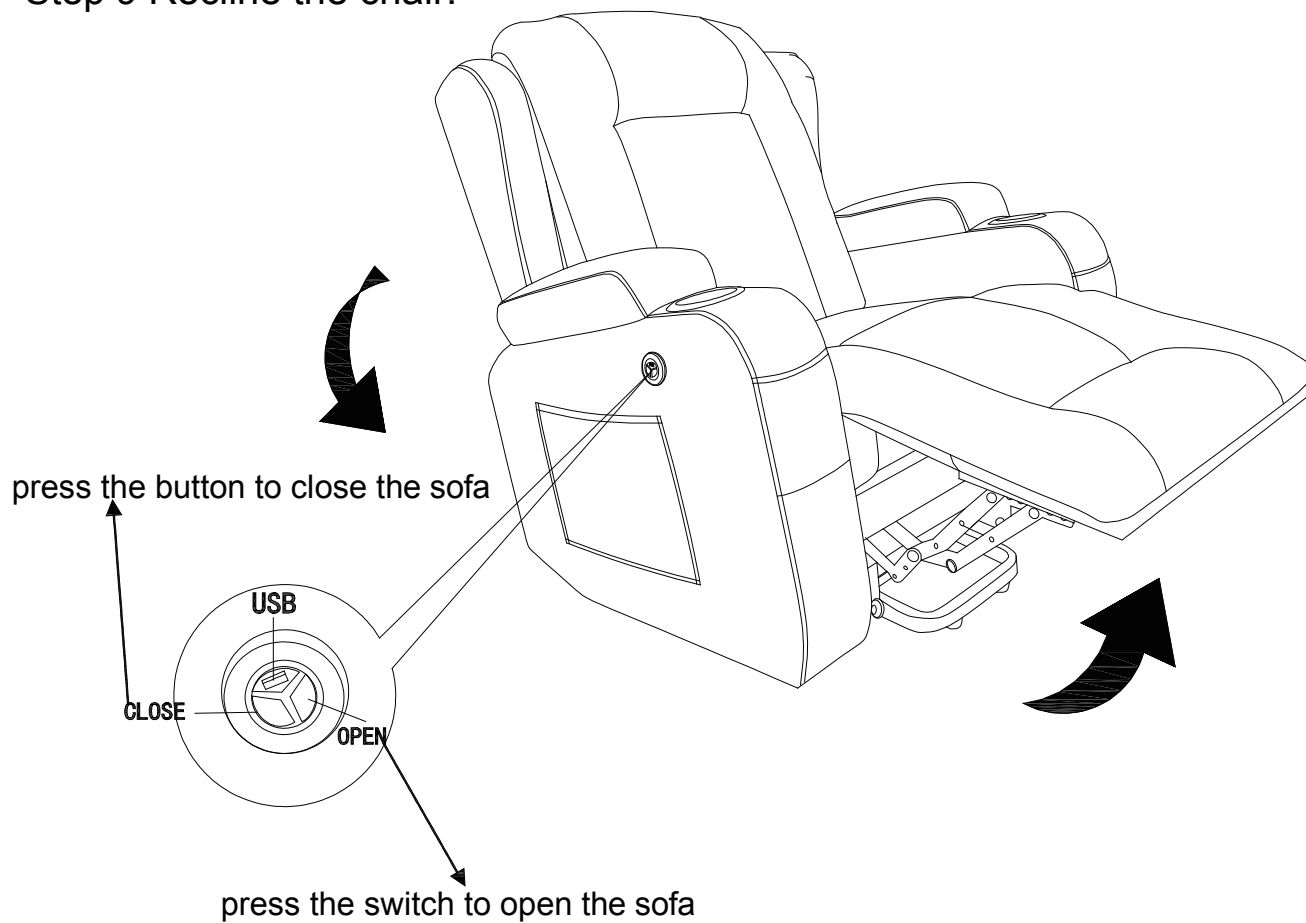


Step 10 Foot rest retraction

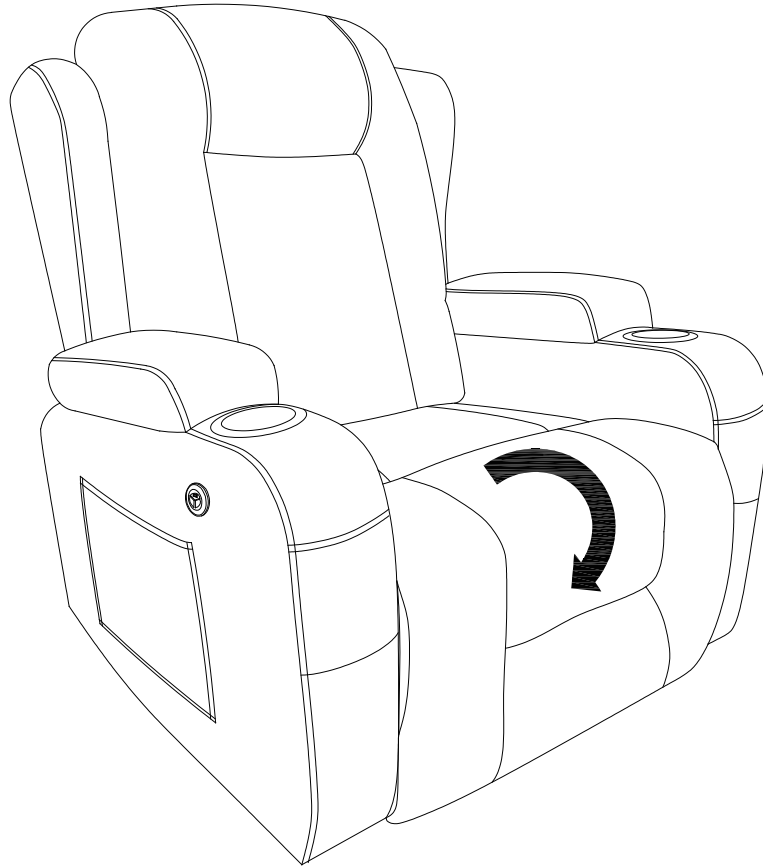


Step 11 Recline the chair.


Press the switch to lift the sofa

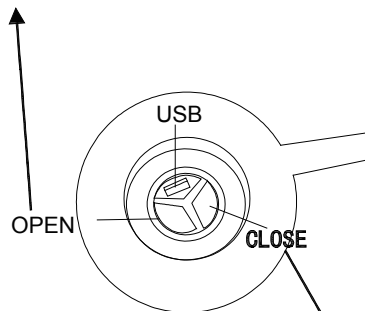

press the button to close the sofa

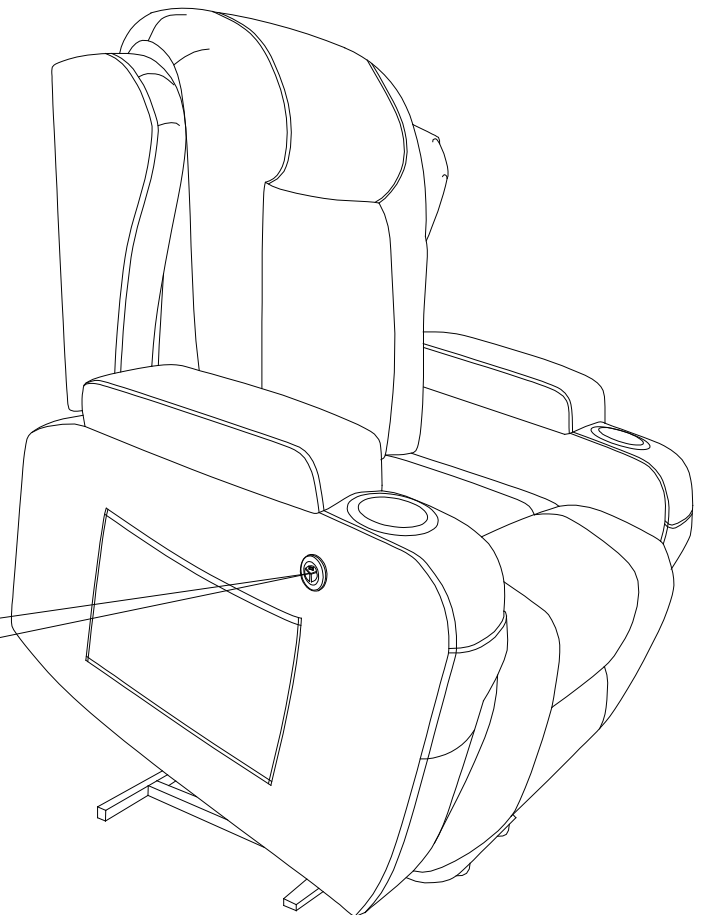


Done!

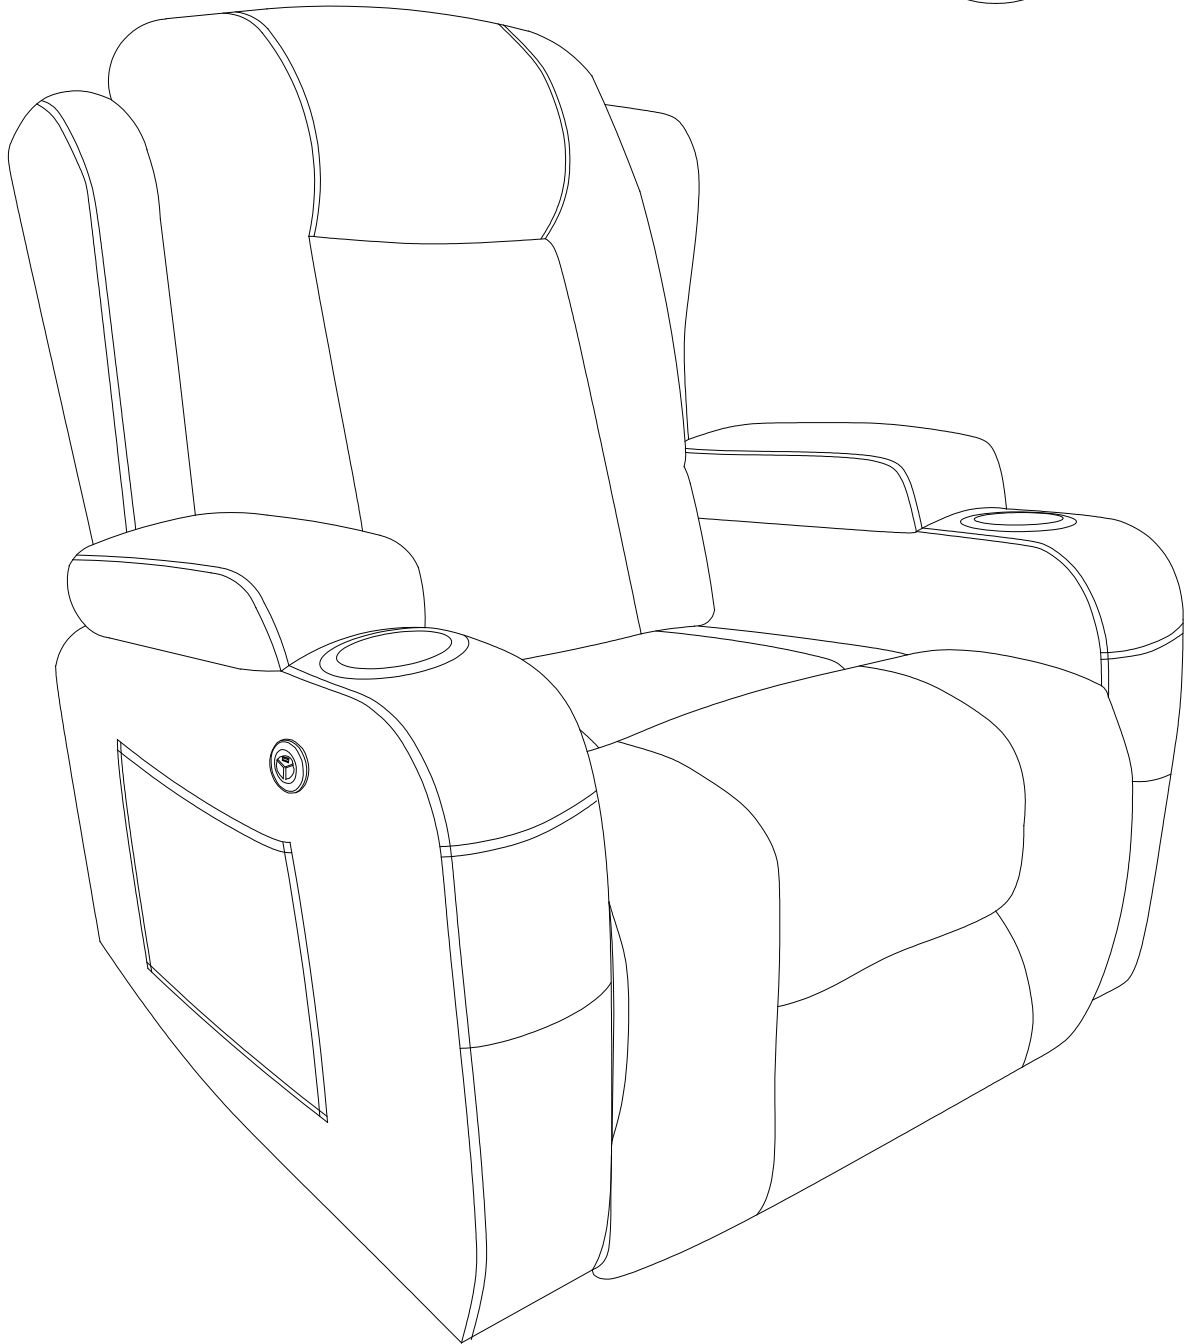

MASSAGE CHAIR

READ ALL INSTRUCTIONS
BEFORE USING THE ITEM

REMOTE CONTROL Function of remote

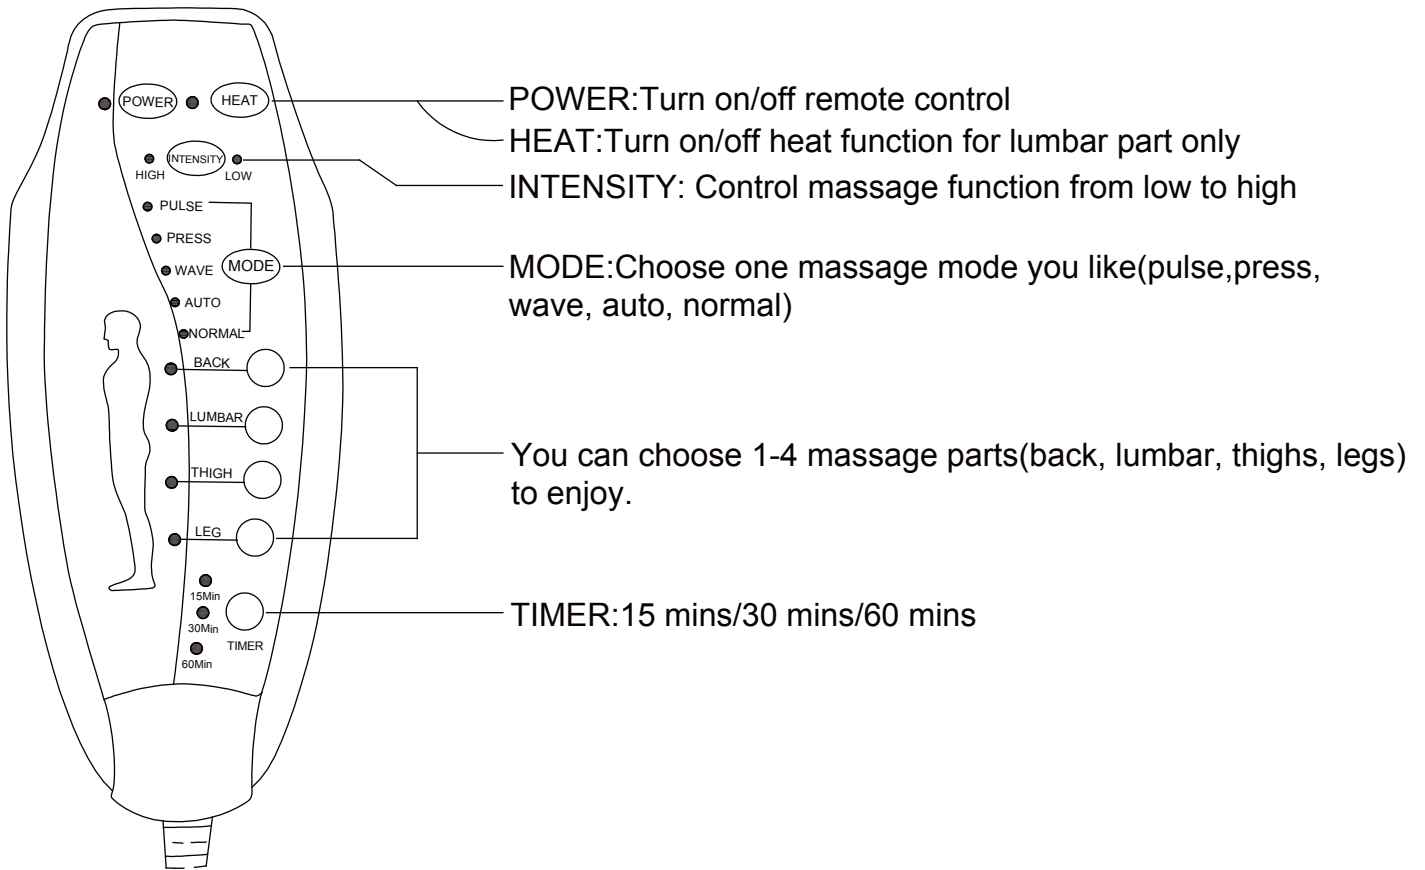

I 、 Specifications of the Power Adapter

The power is on in the standby state . The user can activate the function via the hand controller.

Input : AC 100-240V , 50HZ / 60HZ ; Output:DC12VIA.

II 、 Product features

- 1、 Four-way vibration motor
- 2、 Five vibration modes
- 3、 Two levels of vibration intensity
- 4、 Three preset durations for timed shutdown
- 5、 One-way switch for independent heating plate operation

III、 Function details

- 1、 Click to cycle through the switch options
- 2、 Adjust the vibration intensity switch (strong/weak)
- 3、 Click to cycle through the heating switch options
- 4、 Tap to switch between the five vibration modes (Pulse / Press/ Wave / Auto / Normal)
- 5、 Back massage switch
- 6、 Lumbar massage switch
- 7、 Thigh massage switch
- 8、 Leg massage switch
- 9、 Cycle through massage times by positioning (10 /30 / 60 min)