




Parts List			
Label	Picture	Description	QTY
A		Chair Back	1
В		Chair Seat	1
С		Wooden Leg	2
D		Seat Base Cover	1
Hardware			
Label	Picture	Description	QTY
а		Bolt M8X90	5
b		Bolt M8X60	7
d		Flat Washer Ring	11
е		Spring Washer Ring	11
f		Allen Key	1

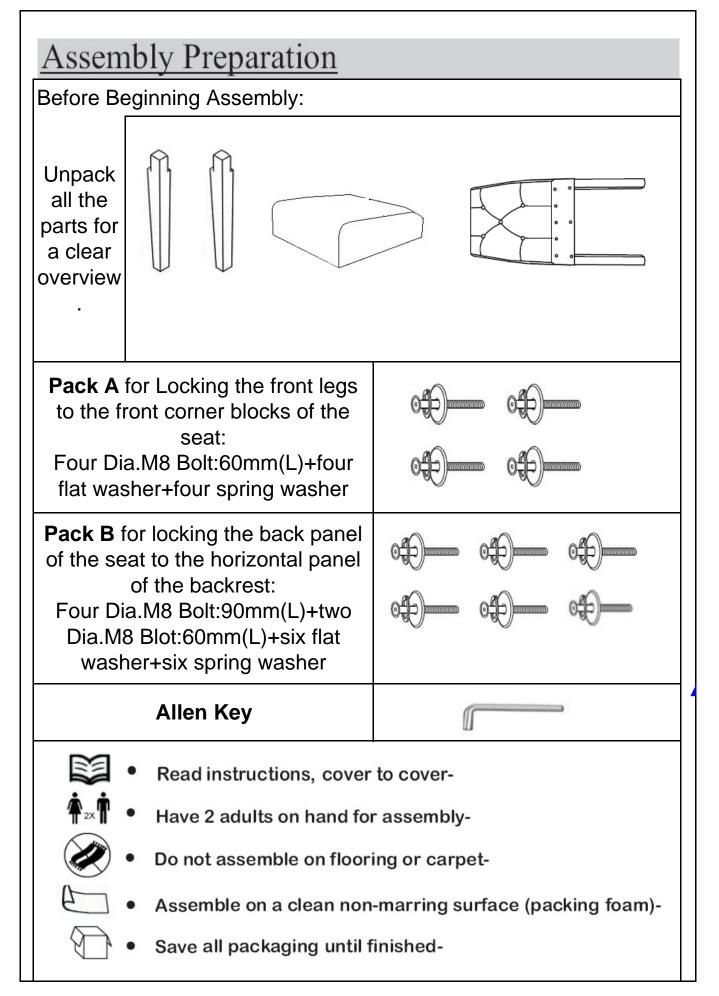

## Assembly Steps Step 1 Place the Chair Back(A) on a soft surface to avoid any scratches or damages to the product. REMOVE the Seat Base Cover from the Chair Seat(B), take out the front legs and hardware accessories. Step 2 а b Arrow 1 Put the chair back( A) onto a flat table or panel. Align the mounting positions on chair back(A) to the mounting positions on chair seat frame. Use your left hand to push the seat frame floorwards, depicted by Arrow 1. This action helps to ensure the chair seat(B) is pressed towards to the chair back(A) with no gap between these. Then, lock the middle mounting positions(use Blot b) and the corner mounting positions(use Bolt a). The hardware for these are : use 4 Bolts (a)+ 2 Bolts (b)+6 Flat Washers (d) + 6 Spring Washers (e) with the Allen key(f). At this point of assembly, DO NOT overfasten the connections.

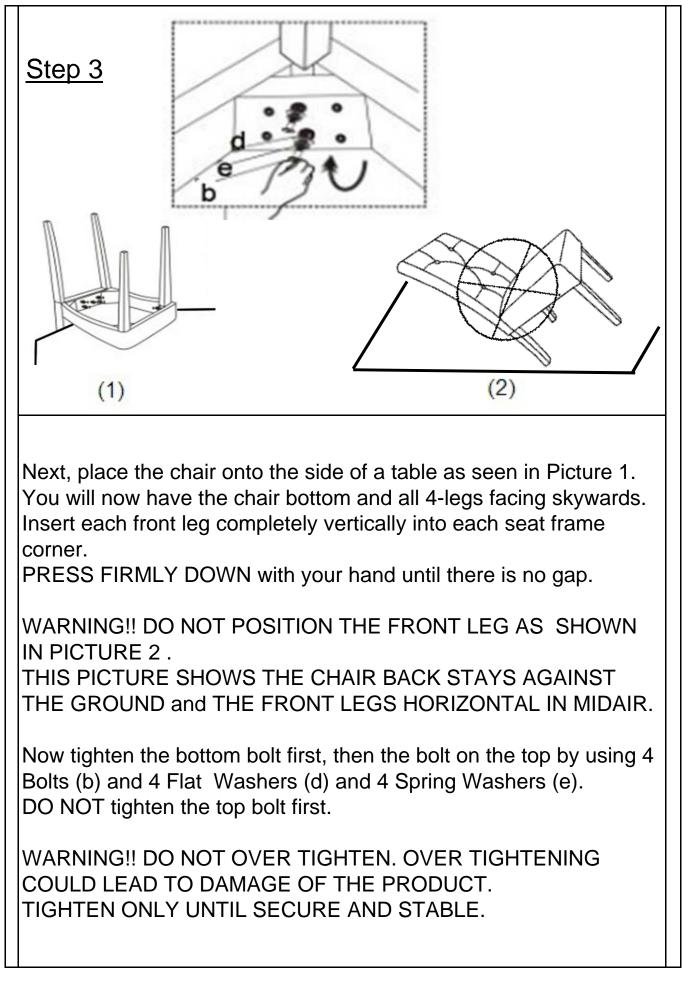

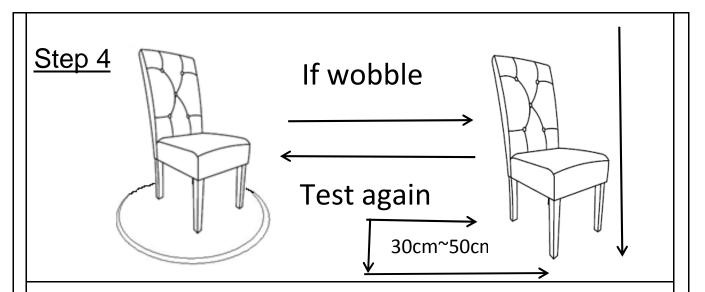

Place the chair on a LEVEL SURFACE to see if it wobbles. If it wobbles, lift the chair to some 30cm to 50cm height from the ground.

Keep your feet and toes well away from the drop zone.

Drop the chair freely and vertically with the four legs, hitting the ground, at the same time.

This Drop Test will help to ensure that all the bolts and gaps to all reach full alignment status.

Test again for evenness on a LEVEL SURFACE.

If no wobbles found, proceed to tighten all the bolts.


CAUTION : When tightening these bolts, tighten sequentially.

DO NOT tighten any screw fully and then towards the next one. This would cause the frame to warp.

If there is still wobbles, loosen the bolts and execute this same drop tests.

WARNING!! IF CHAIR IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.

<u>Step 5</u>

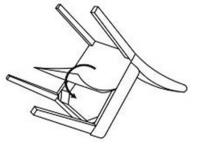

Finally, seal the Seat Base Cover back on to the underside of the chair seat . Turn it the right side up. The chair is ready for use.

