

115V MINI UTILITY PUMP



Please read and understand all instructions before use. Retain this manual for future reference.

SPECIFICATIONS

Max. Flow Rate	330 GPH
Horsepower	1/10 HP
Frequency Rating	60Hz
Current Rating	2.2A
Discharge	3/4 in. GHT
Max. Suction Lift	3 ft
Max. Discharge Head	27 ft
Operating Temperature Range	0 to 45°C
Housing Material	Powder Coated Carbon Steel
Impeller Material	NBR Rubber
Flow Rate @ 5 Ft	300 GPH
Flow Rate @ 10 Ft	280 GPH
Flow Rate @ 15 Ft	240 GPH
Cord Length	6 ft
Contents	Suction Strainer with 6 ft Water Hose Service Kit with Impeller and Gasket

HAZARD DEFINITIONS

Please familiarize yourself with the hazard notices found in this manual. A notice is an alert that there is a possibility of property damage, injury or death if certain instructions are not followed.

- DANGER!** This notice indicates an immediate and specific hazard that **will** result in **severe personal injury or death** if the proper precautions are not taken.
- WARNING!** This notice indicates a specific hazard or unsafe practice that **could** result in **severe personal injury or death** if the proper precautions are not taken.
- CAUTION!** This notice indicates a potentially hazardous situation that may result in minor or moderate injury if proper practices are not taken.
- NOTICE!** This notice indicates that a specific hazard or unsafe practice will result in equipment or property damage, but not personal injury.

INTRODUCTION

The 115V Mini Utility Pump is a self-priming, portable pump with a convenient carry handle. It features slip resistant rubber bumpers that keep the pump in place during use. It can be used for various water transfer applications and is ideal for homeowners, RV owners, boaters, ranchers, campers and contractors.

SAFETY

WARNING! Read and understand all instructions before using this tool. The operator must follow basic precautions to reduce the risk of personal injury and/or damage to the equipment.

Keep this manual for safety warnings, precautions, operating or inspection and maintenance instructions.

WORK AREA

1. Operate in a safe work environment. Keep your work area clean, well-lit and free of distractions. Place lights so you are not working in a shadow.
2. Keep anyone not wearing the appropriate safety equipment away from the work area.
3. Store unused tools properly in a safe and dry location to prevent rust or damage. Lock tools away and keep out of the reach of children.

PERSONAL SAFETY

WARNING! Wear personal protective equipment approved by the Canadian Standards Association (CSA) or American National Standards Institute (ANSI).

PERSONAL PROTECTIVE EQUIPMENT

1. Always wear impact safety goggles that provide front and side protection for the eyes. Eye protection equipment should comply with CSA Z94.3-07 or ANSI Z87.1 standards based on the type of work performed.
2. Wear gloves that provide protection based on the work materials or to reduce the effects of tool vibration.
3. Wear protective clothing designed for the work environment and tool.
4. Non-skid footwear is recommended to maintain footing and balance in the work environment.

PERSONAL PRECAUTIONS

Control the tool, personal movement and the work environment to avoid personal injury or damage to tool.

1. Do not operate any tool when tired or under the influence of drugs, alcohol or medications.
2. Avoid wearing clothes or jewelry that can become entangled with the moving parts of a tool. Keep long hair covered or bound.
3. Do not overreach when operating a tool. Proper footing and balance enables better control in unexpected situations.

SPECIFIC SAFETY PRECAUTIONS

WARNING! DO NOT let comfort or familiarity with product (gained from repeated use) replace strict adherence to the tool safety rules. If you use this tool unsafely or incorrectly, you can suffer serious personal injury.

1. Use the correct tool for the job. This tool was designed for a specific function. Do not modify or alter this tool or use it for an unintended purpose.
2. Do not use the tool if any parts are damage broken or misplaced. Repair or replace the parts.
3. Do not insert a finger or any object into the pump or motor openings.
4. Do not pump hot liquids. This will overheat the pump and damage the pump system. The temperature of pumped liquids must be between 40 to 130°F (4 to 54°C).
5. This pump is designed to handle clear water. Any of the following can clog the pump or damage the pump system:
 - a. Physical obstruction such as sand, dirt, debris or water scale/rust.
 - b. Caustic liquids like salt water, brine, laundry discharge or any other liquid containing caustic chemicals and/or foreign materials.
 - c. Flammable or explosive fluids such as gasoline, fuel oil, kerosene, etc.
6. Do not allow the pump or any other system component to freeze, as this can damage the pump during operation.
7. Do not run the pump dry. This will cause cavitation in the pump mechanism and can damage the pump beyond repair.
8. Protect the pump from extreme temperatures and humidity to prevent personal injury and/or equipment damage.
 - a. This unit is not waterproof and is not intended for use in damp locations such as showers, saunas or swimming pools.

115V Mini Utility Pump

- b. Do not submerge in liquids.
 - c. Ambient temperature around the motor should not exceed 104°F (40°C).
 - d. Do not block the motor openings to prevent overheating.
9. Secure the discharge hose before starting the pump to prevent it from whipping and causing personal injury and/or property damage.
 10. Do not touch a hot or operating motor to prevent burn injuries.
 11. Release pressure and drain liquid from the system completely before servicing to prevent personal injury and/or equipment damage.

ELECTRICAL SAFETY

WARNING! Do not touch or handle a live device with any part of your body that is wet or damp. Wet skin reduces resistance to electrical current, increasing the danger of a serious or fatal shock.

WARNING! To reduce risk of electric shock, be certain that the plug is connected to a properly grounded receptacle.

1. Disconnect device from power source before cleaning, servicing, changing parts/accessories or when not in use.
2. Protect yourself against electric shocks when working on electrical equipment. Avoid body contact with grounded surfaces. There is an increased chance of electrical shock if your body is grounded.
3. Do not expose the device to rain or wet conditions. Water entering a device will increase the risk of electric shock.
4. Do not alter any parts of the device or accessories. All parts and accessories are designed with built-in safety features that may be compromised if altered.
5. Make certain the power source conforms to requirements of your equipment (see Specifications).
6. When wiring an electrically driven device, follow all electrical and safety codes, as well as the most recent Canadian Electrical Code (CE) and Canadian Centre for Occupational Health and Safety (CCOHS).
7. Grounded devices must be plugged into an outlet that is properly installed and grounded in accordance with all codes and ordinances. Check with a qualified electrician if you are in doubt as to whether the outlet is properly grounded. If the device should electronically malfunction or break down, grounding provides a low resistance path to carry electricity away from the user.

115V Mini Utility Pump

- a. Never remove the grounding prong or modify the plug in any way, as this will render the device unsafe.
- b. Do not use any adapter plugs.

WARNING! All wiring should be performed by a qualified electrician.

POWER CORD


1. Insert the power cord plug directly to the power supply whenever possible. Use extension cords or surge protectors only when the device's power cord cannot reach a power supply from the work area.
 - a. When operating a device outside, use an outdoor extension cord marked W-A or W. These cords are rated for outdoor use and reduce the risk of electric shock.
 - b. Use in conjunction with a Ground Fault Circuit Interrupter (GFCI). If operating a device in a damp location is unavoidable, the use of a GFCI reduces the risk of electric shock. It is recommended that the GFCI should have a rated residual current of 30 mA or less.
2. Do not operate this device if the power cord is frayed or damaged as an electric shock or surge may occur, resulting in personal injury or property damage.
 - a. Inspect the device's power cord for cracks, fraying or other faults in the insulation or plug before each use.
 - b. Discontinue use if a power cord feels more than comfortably warm while operating the device.
 - c. Have the power cord replaced by a qualified service technician.
3. Keep all connections dry and off the ground to reduce the risk of electric shock. Do not touch plug with wet hands.
4. Prevent damage to the power cord by observing the following:
 - a. Do not pull on the cord to disconnect the plug from an outlet.
 - b. Keep cord away from heat, oil, sharp edges or moving parts.
 - c. Never use the cord to carry the device.
5. Do not allow people, mobile equipment or vehicles to pass over unprotected power cords.
 - a. Position power cords away from traffic areas.
 - b. Place cords in reinforced conduits.
 - c. Place planks on either side of the power cord to create a protective trench.

UNPACKING

WARNING! Do not operate the tool if any part is missing. Replace the missing part before operating. Failure to do so could result in a malfunction and personal injury.

Remove the parts and accessories from the packaging and inspect for damage. Make sure that all items in the Identification Key are included.

IDENTIFICATION KEY

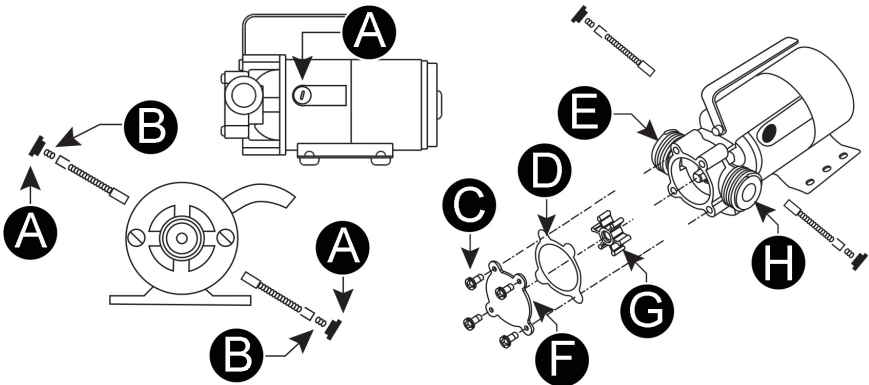

A Brush Cap

B Spring Assembly

C Face Plate Screw

D Gasket

E Outlet

F Face Plate

G Impeller

H Inlet

ASSEMBLY & INSTALLATION

Letter references in parenthesis (A) refer to the included Identification Key.

Dashed numbers in parenthesis (Fig. 1-1) refer to a specific point in an illustration or image.

115V Mini Utility Pump

1. Connect the supplied inlet hose (Fig. 1-2) to the pump's inlet (H). Connect a 5/8 in. discharge hose (Fig. 1-1) (sold separately) to the pump's outlet (E). The discharge hose should be as short as possible and should not exceed 25 ft.

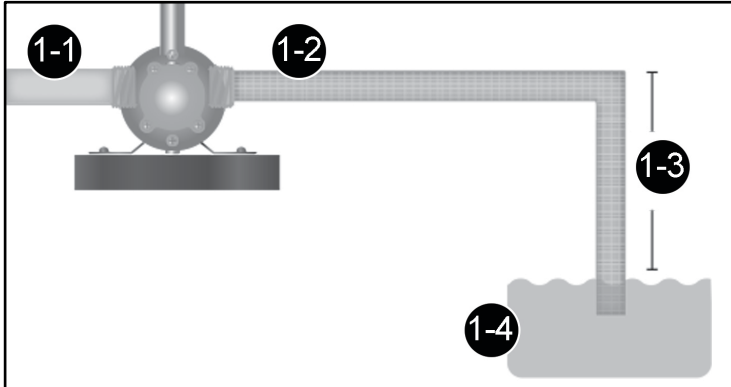


Fig. 1

2. Position the pump on a surface that is stable, level, dry and not slippery. Ensure that the inlet hose can reach the water source (Fig 1-4). Do not exceed the pump's maximum suction lift (Fig 1-3) of 3 ft.

OPERATION

NOTICE! The pump must be primed before use to prevent damage to its mechanism.

1. Prime the pump by filling the pump cavity with water through the inlet (H). Ensure that the impeller (G) is fully submerged.
2. Dip the inlet hose into the water source. For best results, do not kink or coil the hoses.
3. Plug the power cord into an electrical outlet to turn the unit on.
4. Unplug the unit once the water transfer is nearly complete. Do not fully deplete the water source to prevent the pump from running dry.

CARE & MAINTENANCE

1. Maintain the device with care. A device in good condition is efficient, easier to control and will have fewer problems.
2. Inspect the device fittings, alignment, hoses and power supply cord periodically. Have damaged or worn components repaired or replaced by

115V Mini Utility Pump

an authorized technician. Only use identical replacement parts when servicing.

3. Only use accessories intended for use with this device.
4. Maintain the device's labels and name plates. These carry important information. If unreadable or missing, contact Princess Auto Ltd. for replacements.

WARNING! Only qualified service personnel should repair the device. An improperly repaired device may present a hazard to the user and/or others.

REPLACING THE MOTOR BRUSHES

IMPORTANT! Motor brushes (sold separately) wear out during regular use and must be replaced periodically.

1. Unscrew the brush caps (A) at the motor's sides.
2. Remove the brushes and spring assemblies (B) by pulling them away from the brush holders.
3. Install the new brushes. Ensure they are properly aligned.
4. Reinstall the spring assemblies and caps.

REPLACING THE IMPELLER

1. Remove the face plate screws (C), face plate (F) and gasket (D).
2. Remove the damaged or worn impeller (G).
3. Clean the interior surface of the pump cavity. Remove any foreign objects to allow the impeller to turn freely.
4. Apply a thin coat of light lubricant on the interior surface of the pump cavity and the exterior surface of the new impeller.
5. Align the impeller with the motor shaft. Push into place while rotating the blades in a clockwise direction.
6. Reinstall the gasket, face plate and face plate screws.

CLEANING

Flush the pump with running water to remove debris or buildup.

LUBRICATION

Inspect and lubricate the device when required. Only use light oil to lubricate the device. Other lubricants may not be suitable and could damage the device or cause a malfunction during use.

NOTICE! NEVER use a penetrating oil to lubricate the device. Penetrating oil may act as a solvent that can break down the grease and cause the device to seize up.

STORAGE

Drain liquid from the system before storing. When storing for an extended period, apply a thin coat of lubricant on the pump cavity and impeller.

DISPOSAL

Recycle a device damaged beyond repair at the appropriate facility.

TROUBLESHOOTING

Visit a Princess Auto Ltd. location for a solution if the device does not function properly or parts are missing. If unable to do so, have a qualified technician service the device.

Problem(s)	Possible Cause(s)	Suggested Solution(s)
Pump does not prime or does not retain prime during operation.	<ol style="list-style-type: none"> 1. Suction lift is too high. 2. Hose is kinked. 3. Hose fitting is loose. 4. Hose is leaking air. 	<ol style="list-style-type: none"> 1. Adjust pump position. 2. Straighten. 3. Tighten. 4. Repair or replace.
Pump runs but water is not discharged.	<ol style="list-style-type: none"> 1. Pump is not primed. 2. Suction lift or discharge height is too high. 3. Hose is kinked. 4. Impeller is faulty. 5. Inlet is clogged. 	<ol style="list-style-type: none"> 1. Prime. 2. Adjust pump position. 3. Straighten. 4. Replace. 5. Remove obstruction.
Motor runs too hot.	<ol style="list-style-type: none"> 1. Voltage is incorrect. 2. Discharge hose diameter is too small. 3. Impeller is faulty. 4. Outlet is clogged. 5. Liquid is too viscous. 6. Motor openings are obstructed. 	<ol style="list-style-type: none"> 1. Ensure power source conforms to device requirements. 2. Increase hose diameter to 3/4 in. 3. Replace. 4. Remove obstruction. 5. Thin out liquid. 6. Clear area around motor.

115V Mini Utility Pump

Flow rate is low.	<ol style="list-style-type: none">1. Hose is kinked.2. Impeller is clogged or faulty.3. Hose is too long.	<ol style="list-style-type: none">1. Straighten.2. Remove obstruction or replace.3. Reduce length.
Pump does not run.	<ol style="list-style-type: none">1. Pump has no power.2. Impeller is clogged or faulty.3. Motor has overheated and thermal protection system has tripped.	<ol style="list-style-type: none">1. Check power source.2. Remove obstruction or replace.3. Wait 15 minutes for motor to cool.